


Ground Distribution

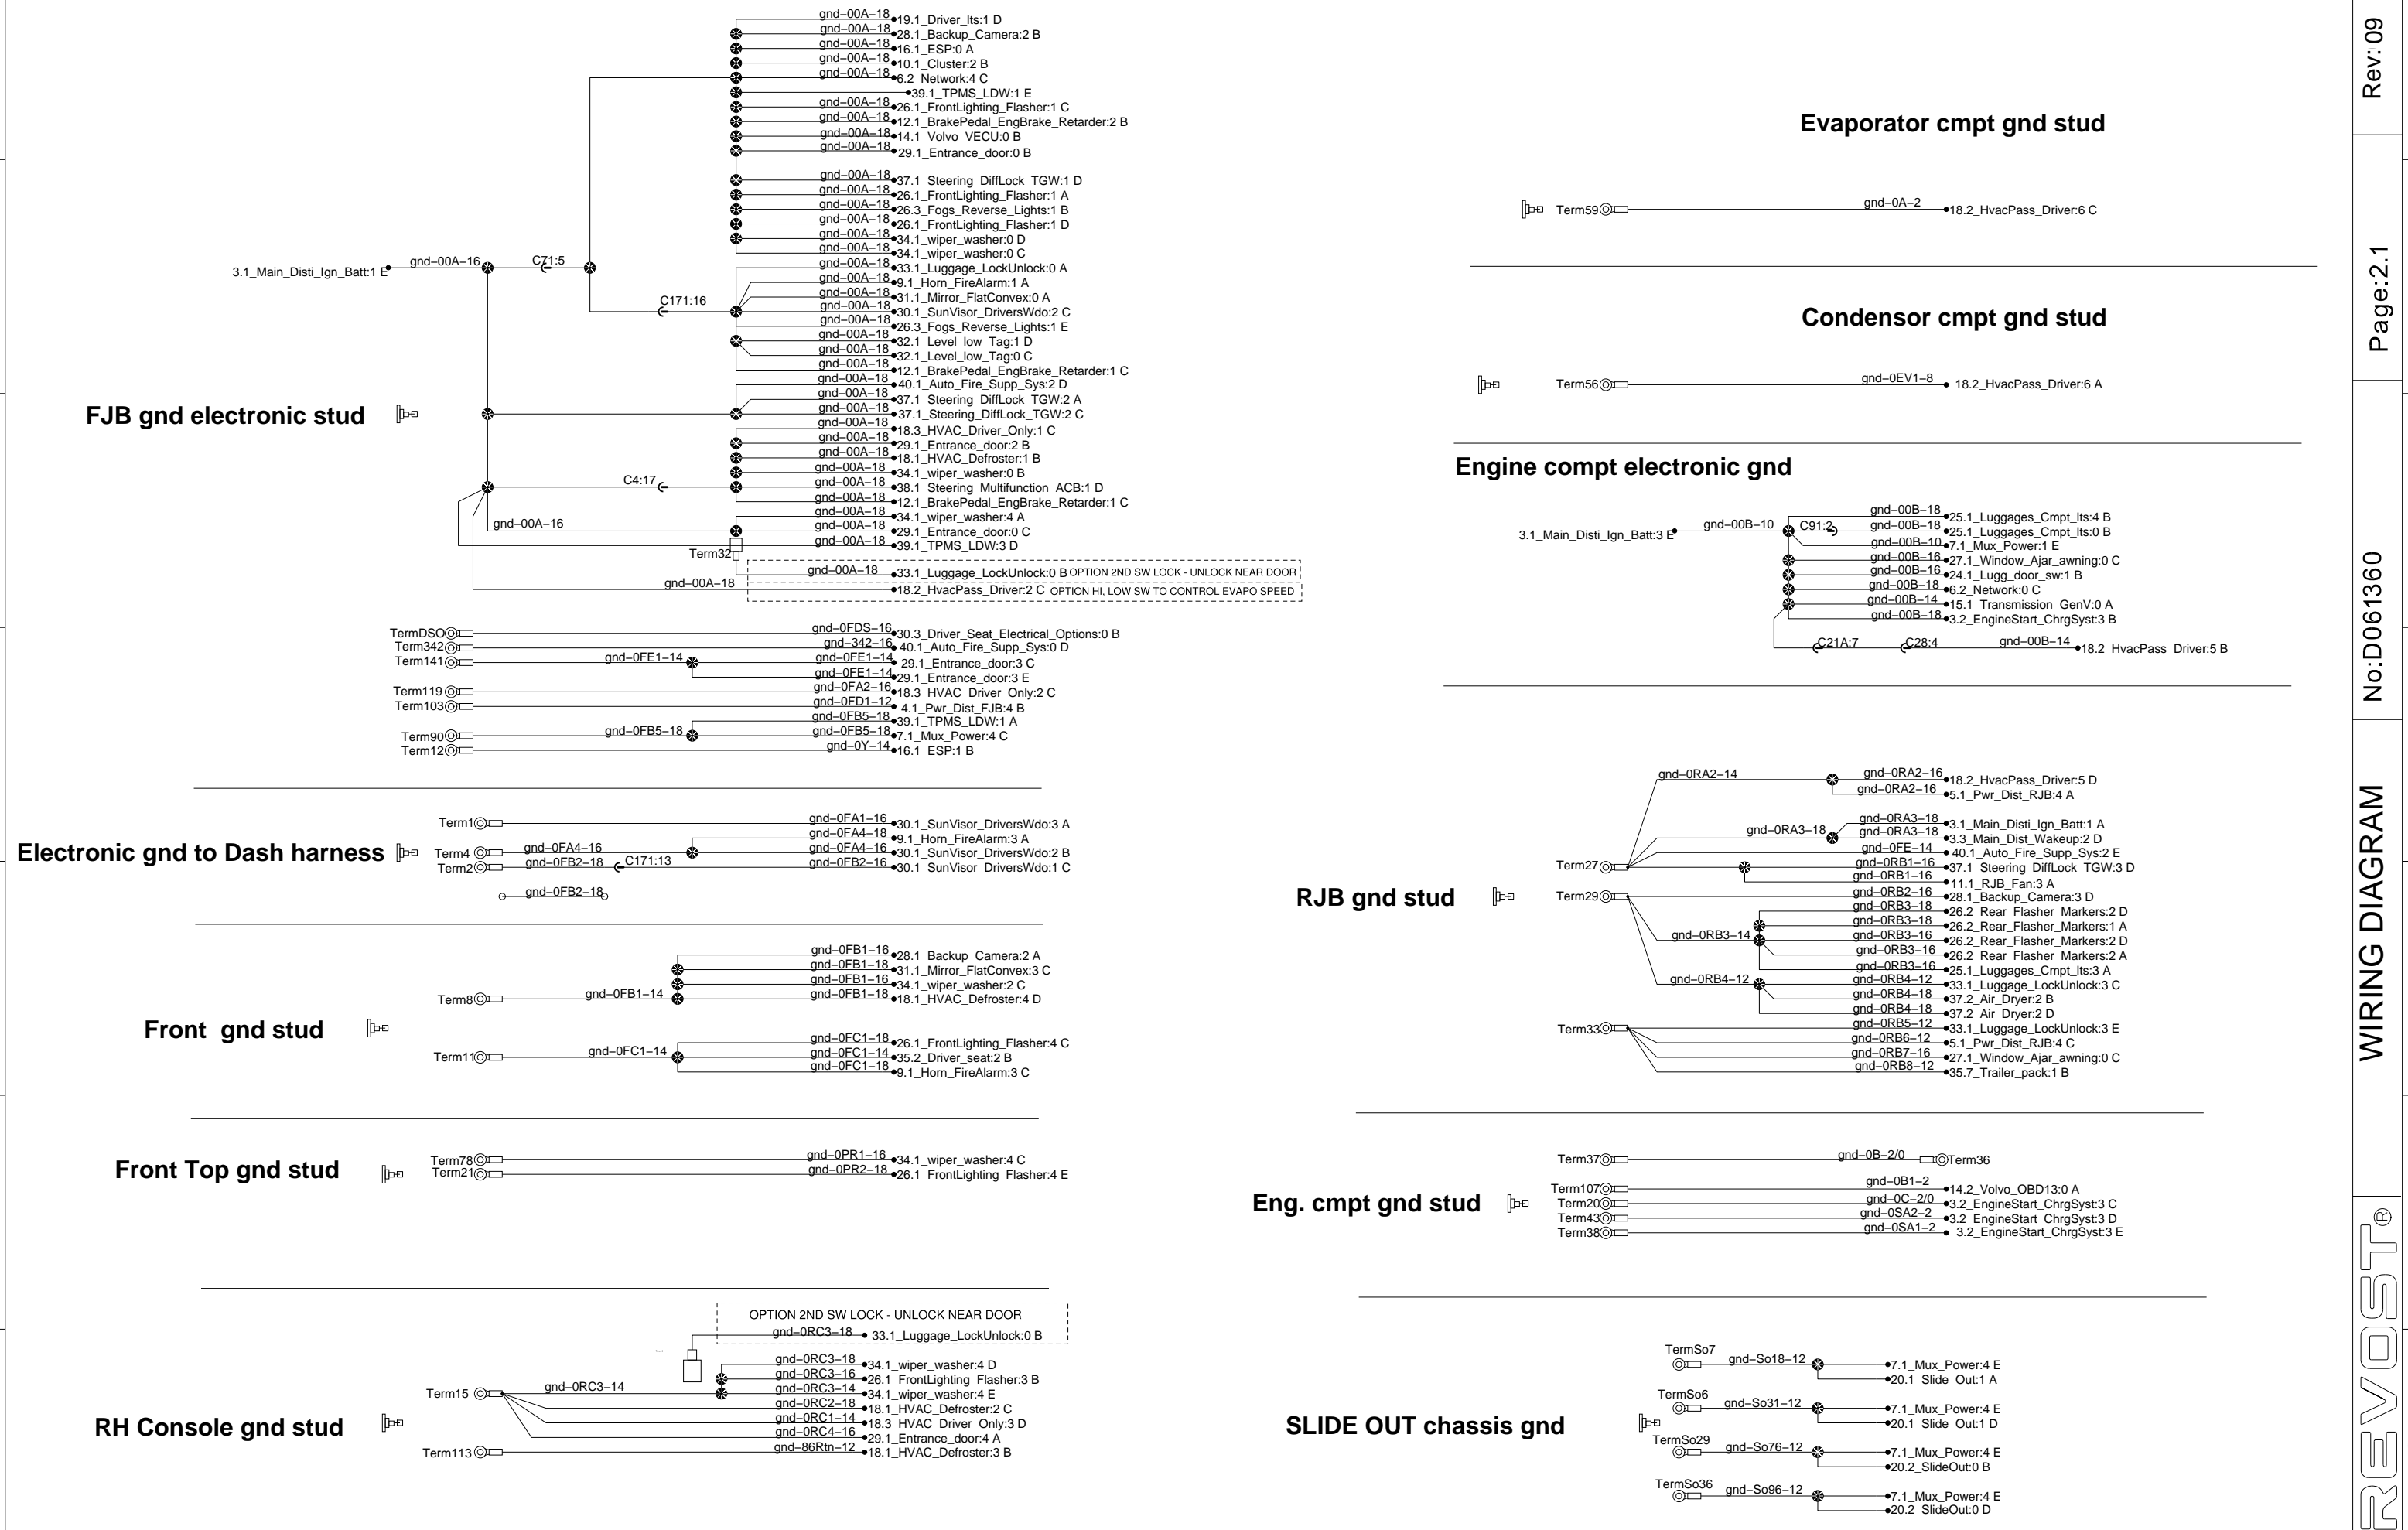

Rev: 09

Page: 2.1

No: D061360

WIRING DIAGRAM

PREVOST®