

WIRING DIAGRAM INDEX

| | | | | | |
|--|--|--|--|---|--|
| Information Pages Multiplexed Devices Index Arrangement – Harness Glossary Circuit Number Listing Circuit Breaker code Connectors code Diode Number Code Resistors Number Code Fuses Code Relay Code Functions A ACB AFSS Air Dryer B Back-up Camera Back-up lights and alarm Battery and Equalizer Brake C Charging System Clearance lights rear & front Cluster Converter interface Cornering Lights Cruise control D Dash Lights Differential lock Docking Lights Driver's Light and Backlight Driver's Power Window Driver's seat | B1 – B25 C1 D E F G H J L K | E Engine block Heater Engine brake and Retarder Engine compt lighting Engine Start Engine ECM Engine Override Entrance door Engine bloc heater ESP F Fast Idle Fire Alarm Flashers Fog lights Fuel Sender Fuel Filter Preheater G Grounds H Hazard Head Lights Horn Hvac Defroster Hvac Passenger Hvac Driver only K Keyless keypad L Lane Departure Warning Level low Luggage compt lighting Luggage door Lock/Unlock Luggage door switches M Main Distribution Ignition & Batt. Main Distribution Wake-Up Marker Lights | 11.1 12.1 25.1 3.2 14.1 14.1 29.1 11.1 16.1 14.1 9.1 26.1,26.2 26.3 10.1 13.1 2.1 26.1 26.1 9.1 18.1 18.2 18.3 29.1 39.1 32.1 25.1 33.1 24.1 3.1 3.3 26.1,26.2 | Mirror Ramco Multiplexing power distribution Multiplexing Network Network P Park Brake Sensor Trailer Brake Sensor Power Distribution FJB Power Distribution RJB Power Outlet Pneumatic Cut-Out Acc sol R Radiator Fan Clutch Rear junction box door fan S Service Brake Relay Slide out (1-2) Slide out (3-4) Spare Wires Stop lights Sun Visor Steering Control ZF Steering Multi-functions T Tag Tail and Licence Lights Transmission ECU Trailer Package TPMS W Window Ajar &Awning Wiper & Washer | 31.1 7.1 6.1 6.2 12.1 12.1 4.1 5.1 30.1 9.1 13.1 11.1 12.1 20.1 20.2 8.1 26.2 38.1 37.1 38.1 32.1 26.2 15.1-15.2 26.4 39.1 27.1 34.1 |
|--|--|--|--|---|--|