

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
L 8	ENG. BLK HEATER	SP 94	SPARE-RJB TO RR ROOF	0 K	RS - RR ROOF ACCES. GRD	0 Y 6	
L 9	ENG. BLK HEATER	SP 95	SPARE-RJB TO RR ROOF	0 K	RS - RJB A/C JCT PANEL GRD	0 Z	RR JCT BOX CPT GRD STUD
SP 2	SPARE-FJB TO FR SERV CPT	SP 96	SPARE-RJB TO LUGG CPT #2	0 L	FS - FR SERVICE CPT LTS GRD	0 0	FJB & RJB BATT. GRD
SP 3	SPARE-FJB TO CENTER DASH	SP 97	SPARE-RJB TO LUGG CPT #3	0 L 1	FS - FR SERVICE CPT LTS GRD	0 0 A	FBG - T.T.LT. MODULES BATT. GRD
SP 4	SPARE-FJB TO CENTER DASH	SP 98	SPARE-RJB TO LUGG CPT #3	0 L 2	FS - FR SERVICE CPT LTS GRD	0 0 Y	FS - ABS MODULE BATT. GRD
SP 5	SPARE-RJB TO LUGG CPT #2	SP 104	SPARE-RJB TO ENGINE CPT	0 L 3	FS - FJB GRD	0 0 SS	SOUND SYSTEM BATT. GRD
SP 6	SPARE-RJB TO LUGG CPT #1	SP 105	SPARE-FJB TO ENGINE	0 L 4	FS - FJB GRD	1	TACHO SYSTEM - RPM SIGNAL +
SP 7	SPARE-RJB TO LUGG CPT #1	SP 106	SPARE-RJB TO BATT. CPT.	0 L 5	FS - CIGAR LIGHTER	2 B	A/C & HEAT SYSTEM-COOL SIGN
SP 8	SPARE-RJB TO LUGG CPT #1	SP 107	SPARE-RJB TO BATT. CPT.	0 L 6	FS - FR SERVICE CPT LTS GRD	2 E	A/C & HEAT EVAP. CONTROL
SP 9	SPARE-RJB TO LUGG CPT #2	SP 108	SPARE-RJB TO BATT. CPT.	0 L	RS - ENGINE CPT ACCES. GRD	2 F	A/C & HEAT EVAP. CONTROL
SP 10	SPARE-RJB TO LUGG CPT #1	SP 109	SPARE-RJB TO ENGINE CPT.	0 L	ENTRANCE DOOR GRD	5 NC	SPEED SIGNAL LOWER 5MPH
SP 11	SPARE-FJB TO RJB	SP 110	SPARE-RJB TO ENGINE CPT.	0 L H	RS - RR END LAMPS LH GRD	5 NO	SPEED SIGNAL HIGHER 5MPH
SP 12	SPARE-RJB TO ENGINE	SP 111	SPARE-RJB TO ENGINE CPT.	0 M	FS - ELECTRICAL MOTOR GRD	9	INTERIOR LTS-ENGINE CPT
SP 13	SPARE-RJB TO ENGINE	SP 112	SPARE-RJB TO ENGINE CPT.	0 M 3	FS - ELECTRICAL MOTOR GRD	9 A	INTERIOR LTS-ENGINE CPT
SP 14	SPARE-FJB TO RJB	SP 114	SPARE-FJB TO U/DASH WIPER	0 M 4	FS - ELECTRICAL MOTOR GRD	9 B	INTERIOR LTS-ENGINE CPT
SP 15	SPARE-RJB TO ENGINE	SP 115	SPARE-FJB TO U/DASH WIPER	0 M 5	FS - ELECTRICAL MOTOR GRD	9 E	INTERIOR LTS-FR SERVICE CPT
SP 16	SPARE-RJB TO ENGINE	SP 116	SPARE-FJB TO U/DASH FLOOR	0 M 6	FS - FJB GRD	9 F	INTERIOR LTS-FR SERVICE CPT
SP 17	SPARE-RJB TO ENGINE	SP 117	SPARE-FJB TO U/DASH FLOOR	0 M 7	FS - ELECTRICAL MOTOR GRD	1 0	INTERIOR LTS-LUGGAGE CPT
SP 18	SPARE-FJB TO RJB	W C	A/C & HEAT SYST-EVAP CTR SIGN	0 M 8	FS - AUX. A/C UNIT	1 0 A	INTERIOR LTS-LUGGAGE CPT
SP 24	SPARE-RJB TO LAVATORY ROOF	0	RJB - BAT. CPT CHASSIS GRD	0 M 9	FS - WATER PUMP DRIVER	1 0 B	INTERIOR LTS-LUGGAGE CPT
SP 25	SPARE-RJB TO LAVATORY ROOF	0	CONDENSER CPT GRD	0 M	RS - ENGINE CPT ACCES. GRD	1 0 C	INTERIOR LTS-LUGGAGE CPT
SP 26	SPARE-RJB TO LAVATORY ROOF	0	RS - RR JCT BOX RLY GRD	0 MR	24V DISC. SW. RLY GRD SIGNAL	1 0 D	INTERIOR LTS-LUGGAGE CPT
SP 27	SPARE-RJB TO LH HAT RACK	0 A	RJB - SHIELD GRD	0 MS	24V DISC. SW. RLY GRD SIGNAL	1 0 E	INTERIOR LTS-EVAP. CPT
SP 28	SPARE-RJB TO LH HAT RACK	0 A	RS - RR JCT BOX RLY GRD	0 N	RS - ENGINE CPT ACCES. GRD	1 0 F	INTERIOR LTS-LUGGAGE CPT
SP 31	SPARE-RJB TO RH HAT RACK	0 A	FRS - FR ROOF ACCES. GRD	0 P	RS - ENGINE CPT ACCES. GRD	1 0 H	INTERIOR LTS-LUGGAGE CPT
SP 32	SPARE-RJB TO RH HAT RACK	0 A	RS - LUG. CPT ACCES. GRD	0 R	RS - RJB GRD	1 0 R	INTERIOR LTS-LUGGAGE DOOR AJAR
SP 33	SPARE-FJB TO RJB	0 A	A/C HEAT SYSTEM - EVAP. GRD	0 R	RS - ENGINE CPT ACCES. GRD	1 2	12V BAT ELECTRONIC JCT BLOCK
SP 38	SPARE-FJB TO RJB	0 AA	RS - VOLTAGE REGULATOR GRD	0 R H	RS - RR END LAMPS RH GRD	1 2	BAT CPT 12V BATTERY
SP 43	SPARE-FJB TO RJB	0 B 1	EC - RR JCT PANNEL GRD	0 S	12 VOLT RUN- GND RLY	1 2 A	FR JCT BOX 12V DISC SW
SP 45	SPARE-FJB TO RJB	0 B	EC - ENGINE GRD	0 SA	ENGINE CPT STUD-ALTERN. BOSCH	1 2 A	RR JCT BOX 12V DISC SW
SP 46	SPARE-RJB TO LH FR ROOF	0 B	FRS - FR ROOF HEAT WIND GRD	0 T	FS - DASH ACCES. GRD	1 2 B	12V BAT ELECTRICAL JCT BLOCK
SP 48	SPARE-RJB TO DASH CENTER PANEL	0 B	RS - LUG. CPT ACCES. GRD	0 T 1	FS - DASH ACCES. GRD	1 2 B	RR JCT BOX 12V DISC SW
SP 56	SPARE-ENGINE TO RH SW PANEL	0 BE	RJB - BAT. EQUAL. BAT GRD	0 T 2	FS - DASH ACCES. GRD	1 2 B	FR JCT BOX 12V DISC SW
SP 57	SPARE-DASH CENTER PANEL TO ENG.	0 C	EC - STARTER MOTOR GRD	0 T 3	FS - DASH ACCES. GRD	1 2 BE	BAT. EQUALIZER MONITOR
SP 58	SPARE-DASH CENTER PANEL TO ENG.	0 C	FS - SERV. CPT ACCES. GRD	0 T 4	FS - DASH ACCES. GRD	1 2 C	FR JCT BOX 12V DISC SW
SP 59	SPARE-FJB TO ENGINE	0 C	RJB - FAN EVAP & CONDENSER GRD	0 T 5	FS - HVAC DASH MODULE. GRD	1 2 C	RR JCT BOX 12V DISC SW
SP 61	SPARE-FJB TO DASH RH PANEL	0 CR	24V DISC. SW. RLY GRD SIGNAL	0 T 6	FS - DASH ACCES. GRD	1 2 D	BAT CPT 12V BATTERY
SP 68	SPARE-FJB TO ENGINE	0 CS	24V DISC. SW. RLY GRD SIGNAL	0 V	RR JCT BOX CPT GRD STUD	1 2 DA	12V IGNITION DISTRIBUTION
SP 69	SPARE-FJB TO FR AXLE	0 C 1	FS - SERV. CPT ACCES. GRD	0 VA	BATTERY TO EQUALISER 0V	1 2 DT	TTLT MODULE
SP 70	SPARE-FJB TO FR AXLE	0 C 2	FS - SERV. CPT ACCES. GRD	0 W	FS - WT GND & SHIELD	1 2 E	FR JCT BOX 12V DISC SW
SP 71	SPARE-FJB TO RH SW PANEL	0 C 3	FS - SERV. CPT ACCES. GRD	0 W	RS - RR JCT BOX (WCL) GRD	1 2 E	RR JCT BOX 12V DISC SW
SP 72	SPARE-FJB TO FR SERV CPT	0 C 4	FS - FJB. CPT ACCES. GRD	0 W C	RS - RR JCT BOX GRD (WCL)	1 2 F	BAT CPT 12V FJB & IC
SP 74	SPARE-FJB TO LH CONSOLE	0 D	RJB - FAN CONDENSER GRD	0 X	RS - RR JCT BOX GRD	1 2 F	FR JCT BOX 12V DISC SW
SP 77	SPARE-FJB TO EVAPORATOR CPT	0 D	RJB - IGNITION RLY	0 Y	ABS FR JCT BOX CPT GRD STUD	1 2 F	RR JCT BOX 12V DISC SW
SP 78	SPARE-FJB TO CONDENSER CPT	0 D	RS - HAT RACK ACCES. LH GRD	0 Y	RR JCT BOX GRD	1 2 G	FR JCT BOX 12V DISC SW
SP 79	SPARE-FJB TO CONDENSER CPT	0 DF	RS - RR SIDE FLASH & MARK GRD	0 Y 1	ABS SYSTEM GRD	1 2 J	FR JCT BOX 12V DISC SW
SP 87	SPARE-RJB TO LH HAT RACK	0 DG	EC- ALTERNATOR CASING GRD	0 Y 2	ABS SYSTEM GRD	1 2 K	HVAC MODULE
SP 88	SPARE-RJB TO RH HAT RACK	0 DR	RS - RJB DOCKING LT RESISTORS	0 Y 3	ABS SYSTEM GRD	1 2 I	12V IGNITION DISTRIBUTION
SP 92	SPARE-RJB TO CONDENSER CPT	0 J	FS - LH CONSOLE SW GRD	0 Y 4	ABS SYSTEM GRD	1 2 I	RR JCT BOX 12V IGNITION
SP 93	SPARE-RJB TO EVAPORATOR CPT	0 J	RS - RR ROOF ACCES. GRD	0 Y 5		1 2 IA	12V IGNITION DISTRIBUTION

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
12 I A	FR JCT BOX 12V IGNITION	24	BAT CPT 24V BATTERY	25 F	12V IGNITION DISTRIBUTION	44 C	EXTERIOR LTS-FOG & HAZARD
12 I B	FR JCT BOX 12V IGNITION	24	FR JCT BOX 24V DISC SW	25 B	EXTERIOR LTS-DAYTIME RUN LTS	45 A	WATER PUMP SIGNAL
12 I E	ABS - FR JCT BOX 12V IGNITION	24 A	BOOSTER BLOCK 24V DISC SW	25 B	12 V. IGN. ALTERNATOR BOSCH	45 B	A/C & HEAT SYSTEM-HEAT SIGN
12 L X	CLUSTER FEED	24 A	FR JCT BOX 24V DISC SW	25 C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN	45 D	A/C & HEAT SYSTEM-WATER VALVE
12 I F	FR JCT BOX 12V IGNITION	24 A	FR JCT BOX 24V DISC SW	25 D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN	45 E	A/C & HEAT SYSTEM-HEAT 1 SIGN
12 M	ABS - FR JCT BOX 12V DISC. SW.	24 B	24V STARTER RLY FEEDING	25 E	24V DELCO SIGNAL ENGINE RUN	45 G	A/C & HEAT SYSTEM-DRIVER'S HTR
12 P	LH CONSOLE POWER OUTLET	24 B	FR JCT BOX 24V DISC SW	25 H	24 V. IGN. ALTERNATOR BOSCH	45 H	A/C & HEAT SYSTEM-DRIVER'S HTR
12 R	BAT CPT 12V DISC RLY TO RJB	24 B A	RR JCT BOX 24V DISC SW	25 K	NOT ALTERNATOR #2-WARNING LT	45 J	A/C & HEAT SYSTEM-DRIVER'S HTR
12 V	RR JCT BOX 12V DISC SW	24 B E	RJB CPT-BAT EQ MONITOR HOT WIRE	26	CIGAR LIGHTER	45 W	A/C & HEAT SYSTEM-COND. DOOR AJAR
12 V A	BATTERY TO EQUALIZER 12V	24 C	FR JCT BOX 24V DISC SW	26	DRIVER'S WINDOW LIFTER	46	EXTERIOR LTS-MARKER
12 V D	12V HOT WIRE DISTRIBUTION	24 C	RR JCT BOX 24V DISC SW	26 B	DRIVER'S WINDOW LIFTER	46 A	EXTERIOR LTS-MARKER
12 V F	BAT CPT 12V FJB & IC	24 D	BAT CPT 24V HOT WIRE	26 C	DRIVER'S WINDOW LIFTER	46 B	EXTERIOR LTS-MARKER
12 V I	12V IGNITION DISTRIBUTION	24 D	FR JCT BOX 24V HOT WIRE	27	PARKING BRAKE SONALERT	46 B	EXTERIOR LTS-MARKER
12 V R	BAT CPT 12V DISC RLY TO RJB	24 D	RR JCT BOX 24V HOT WIRE	27 A	PARKING BRAKE SONALERT	46 C	EXTERIOR LTS-MARKER
12 W	12V BATTERY DDEC III	24 D A	A/C JCT BOX 24V HOT WIRE	28 A	A/C & HEAT SYSTEM-HI PRESSURE	47	A/C & HEAT SYSTEM-DRIVER'S HTR
12 X	FR JCT BOX 12V DISC SW	24 E	BAT CPT 24V DISC SW	28 H	TTLT HI LO PRESS	52	ALARM & SIGNAL-ELEC. HORN
12 X 2	FR JCT BOX 12V DISC SW	24 E	FR JCT BOX 24V DISC SW	28 T	TTLT HI LO PRESS	52 A	ALARM & SIGNAL-ELEC. HORN
12 Y	FR JCT BOX 12V DISC SW	24 E	RR JCT BOX 24V DISC SW	29	A/C & HEAT SYSTEM-DRIVER'S HTR	52 B	ALARM & SIGNAL-AIR HORN
13 A	ALARM & SIGNAL-LO AIR PRIM.	24 F	FR JCT BOX 24V DISC SW	29 A	A/C & HEAT SYSTEM-DRIVER'S HTR	52 C	ALARM & SIGNAL-AIR HORN
13 B	ALARM & SIGNAL-LO AIR SEC.	24 F	RR JCT BOX 24V DISC SW	29 H	HVAC DASH MODULE	53	ALARM & SIGNAL-ELEC. HORN
15	EXTERIOR LTS-MULTI FUNC LEVEL	24 G	FR JCT BOX 24V DISC SW	29 B	A/C & HEAT SYSTEM-DRIVER'S HTR	53 A	WIPER & WASHER SYSTEM
15 A	WIPER & WASHER UPPER WINDSHIELD	24 G	RR JCT BOX 24V DISC SW	31 A	A/C & HEAT SYSTEM-UNLOADER	53 B	WIPER & WASHER SYSTEM
16	SPEED - SIGNAL +	24 H	FR JCT BOX 24V DISC SW	31 B	A/C & HEAT SYSTEM-UNLOADER	53 C	WIPER & WASHER SYSTEM
16 A	SPEED - SIGNAL +	24 H	RR JCT BOX 24V DISC SW	31 B	WIPER & WASHER SYSTEM	53 E	WIPER & WASHER SYSTEM
16 T	SPEED - SIGNAL +	24 I	FR JCT BOX 24V IGNITION	31 C	WIPER & WASHER SYSTEM	53 J	WIPER & WASHER SYSTEM
17	EXTERIOR LTS-FLASHER UNIT	24 I	RR JCT BOX 24V IGNITION	31 D	WIPER & WASHER SYSTEM	53 K	KEYLESS
17 A	EXTERIOR LTS-FLASHER UNIT	24 I A	FR JCT BOX 24V IGNITION	31 E	WIPER & WASHER SYSTEM	55	EXTERIOR LTS-HI BEAM
19	DIFFERENTIAL OIL TEMP	24 I A	RR JCT BOX 24V IGNITION	31 J	WIPER & WASHER SYSTEM	57	EXTERIOR LTS-HI BEAM
20	SPEED - SIGNAL -	24 I B	FR JCT BOX 24V IGNITION	31 X	WIPER & WASHER SYSTEM	57 A	A/C & HEAT SYSTEM-WATER PUMP
20 T	SPEED - SIGNAL -	24 I B	RR JCT BOX 24V IGNITION	32	EXTERIOR LTS-BACK-UP	57 A	EXTERIOR LTS-HI BEAM
20 W	SPEED - SIGNAL -	24 I F	FJB 24V IGNITION	32 B	EXTERIOR LTS-BACK-UP	57 B	A/C & HEAT SYSTEM-WATER PUMP
21	EXTERIOR LTS-DIRECTIONNAL LH	24 I C	FR JCT BOX 24V IGNITION	32 C	BACK-UP PWR & SIGNAL	57 C	PRE-HEAT WATER HEATER
21 A	EXTERIOR LTS-DIRECTIONNAL LH	24 P	FR JCT BOX 24V DISC SW	32 D	BACK-UP ALARM	57 C A	A/C & HEAT SYSTEM-HEAT SIGN
21 B	EXTERIOR LTS-HAZARD	24 S	24V DISC SW RLY SIGNAL	35	ENTRANCE DOOR	57 C C	A/C & HEAT SYSTEM-HEAT SIGN
21 C	EXTERIOR LTS-CORNERING LH	24 T	RR JCT BOX 24V DISC SW	35 B	ENTRANCE DOOR	57 E	A/C & HEAT SYSTEM-HEAT SIGN
21 D	EXTERIOR LTS-DIRECTIONNAL LH	24 V 2	RR JCT BOX 24V DISC SW	36	JACOB BRAKE SYSREM	58	EXTERIOR LTS-LO BEAM
21 H	EXTERIOR LTS-DIRECTIONNAL LH	24 V 3	RR JCT BOX 24V DISC SW	36 A	JACOB BRAKE SYSREM	58 A	EXTERIOR LTS-LO BEAM
21 K	EXTERIOR LTS-CORNERING	24 V 4	RR JCT BOX 24V DISC SW	39	INTERIOR LTS-12V RH PANEL SW.	58 B	EXTERIOR LTS-LO BEAM
21 N	EXTERIOR LTS-CORNERING LH	24 V 5	RR JCT BOX 24V DISC SW	39 A	INTERIOR LTS-DRIVER'S LTS	58 C	DAYTIME RUNNING LIGHT
21 P	EXTERIOR LTS-CORNERING LH	24 V D	24V HOT WIRE DISTRIBUTION	39 B	DRIVER'S LTS KEYLESS	58 D	DAYTIME RUNNING LIGHT
22	LATCHING RLY.	24 V F	BAT CPT 24V SW TO FJB & IC	39 K	DRIVER'S LTS KEYLESS	58 E	EXTERIOR LTS-LO BEAM
23	EXTERIOR LTS-DIRECTIONNAL RH	24 V A	BATTERY TO EQUALIZER 24V	41	A/C & HEAT SYSTEM-COND FAN MOT	59 A	JACOB BRAKE SYSTEM
23	EXTERIOR LTS-DIRECTIONNAL RH	24 V I	RR JCT BOX 24V IGNITION	41 A	A/C & HEAT SYSTEM-COND FAN MOT	61	EXTERIOR LTS-24V FEED SW
23 A	EXTERIOR LTS-DIRECTIONNAL RH	24 V R	BAT CPT 24V DISC SW TO RJB	41 B	A/C & HEAT SYSTEM-COND FAN MOT	61 A	EXTERIOR LTS-HEAD SIGNAL
23 B	EXTERIOR LTS-DIRECTIONNAL RH	25	12VAC GEN RLY ON SIGNAL	42	A/C & HEAT SYSTEM-COND FAN MOT	63	EXTERIOR LTS-CLEARANCE
23 C	EXTERIOR LTS-CORNERING RH	25 A	ETHER SWITCH	43	A/C & HEAT SYSTEM-COND FAN MOT	63 A	EXTERIOR LTS-CLEARANCE
23 D	EXTERIOR LTS-DIRECTIONNAL RH	25 A	NOT ALTERNATOR #1-WARNING LT	42 A	A/C & HEAT SYSTEM-COND FAN MOT	63 B	EXTERIOR LTS-CLEARANCE
23 K	EXTERIOR LTS-DOCKINK SW	25 A 1	24 VOLTS EXCITING SIGNAL - ALT. #1	44	EXTERIOR LTS-FOG	63 C	EXTERIOR LTS-MARKER SIGNAL
23 N	EXTERIOR LTS-CORNERING RH	25 A 2	24 VOLTS EXCITING SIGNAL - ALT. #2	44 A	EXTERIOR LTS-FOG	63 D	EXTERIOR LTS-MARKER & TAIL
23 P	EXTERIOR LTS-CORNERING RH	25 A 3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN	44 B	EXTERIOR LTS-FOG	63 E	EXTERIOR LTS-CLEARANCE

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
63 F	EXTERIOR LTS-MARKER BLINKER	85 G	TIME DELAY RF3	115	DDEC III-COOLANT LEVEL	132 H	LEVEL LOW SYSTEM
63 H	EXTERIOR LTS-TAIL	85 X	12V IGN ABS	115	WORLD TRANSM-DO NOT SHIFT SIGN	132 J	LEVEL LOW SYSTEM
64	DRIVER'S FAN	85 Y	ABS SYSTEM	115 C	DDEC III-COOLANT LEVEL	132 K	LEVEL LOW SYSTEM
64 B	DRIVER'S FAN	85 Z	TRAILER ABS SYSTEM	115 W	WORLD TRANSM-DO NOT SHIFT SIGN	132 W	WORLD TRANSM-ENG BRK OUTPUT (-)
64 C	DRIVER'S FAN	86	ENGINE CTR-STARTER SOL SIGN	116	WORLD TRANSM-LO SIGNAL SOL. HI	133	WORLD TRANSM-RET. ACTUATOR HI
65	FOOT DAMPER MOTOR	86 A	ENGINE CTR-STARTER SOL SIGN	116 B	A/C & HEAT SYSTEM-DRIVER'S HTR	134	WORLD TRANSM-RET. APPLY SOL. HI
65 A	FOOT DAMPER MOTOR	86 T	ENGINE CTR-STARTER SOL SIGN	117	WORLD TRANSM-SPARE INPUT (-)	135	A/C & HEAT SYSTEM-AIR SENSOR
65 P	AUX. LIQ.SOL.VALVE	88	ENGINE CTR-RR START SIGNAL	117 A	ALARM & SIGNAL-TRANSM OIL TEMP	135	WORLD TRANSM-ANALOG GRD
65 D	DRIVER'S REC. DAMPER	89	ENGINE CTR-RR START SIGNAL	117 A	ALARM & SIGNAL-TRANSM OIL TEMP	135 A	A/C & HEAT SYSTEM-AIR SENSOR
66	O_PASS. ON/OFF	90 B	A/C & HEAT SYSTEM-COND FAN MOT	118	WORLD TRANSM-SPARE INPUT (+)	135 D	WORLD TRANSM-RETARDER RES MOD
67	A/C & HEAT SYSTEM	90 B	ENGINE CTR-MAST KEY SW FEED	119	WORLD TRANSM-ENG BRK INPUT (+)	135 C	WORLD TRANSM-RETARDER TEMP
67 A	A/C & HEAT SYSTEM	90 C	A/C & HEAT SYSTEM-COND FAN MOT	120	WORLD TRANSM-SOL. C1	136	WORLD TRANSM-ECU POWER
67 C	HEAT WINDS.	90 F	CHARG SYST-VOLTAGE REGUL. "B"	121	WORLD TRANSM-SOL. GRD 2	136 V	WORLD TRANSM-12V BATTERY
67 K	A/C & HEAT SYSTEM-COND FAN CTR	90 H	A/C & HEAT SYSTEM-EVAP FAN MOT	122	A/C & HEAT SYSTEM-DRIVER'S HTR	136 W	WORLD TRANSM-12V BATTERY
67 L	A/C & HEAT SYSTEM-COND FAN CTR	91	PARKING BRAKE SW SIGNAL	122	A/C & HEAT SYSTEM-FRESH AIR	136 X	WORLD TRANSM-12V BATTERY
67 X	A/C & HEAT SYSTEM	91 A	DDEC-FAST IDLE SIGNAL	122	WORLD TRANSM-SOL. GRD 4	137	WORLD TRANSM-RETARDER
68	DASH & DEFROST DAMPER MOTOR	91 S	SONALERT PARKING BRAKE	122 A	A/C & HEAT SYSTEM-FRESH AIR	137 A	MIRROR (SPARTAN & RAMCO)
68 A	DASH & DEFROST DAMPER MOTOR	91 W	PARK, BRAKE SW SIGN (WCL)	123	WORLD TRANSM-NEUTRAL START	137 B	RR VIEW MIRROR (SPARTAN)
70	INTERIOR LTS-HAT RACK & RR RUN.	92	BATTERY EQUALIZER-CHECK BALANCE	123 A	ALARM & SIGNAL-FIRE DETECTOR	137 C	RR VIEW MIRROR (SPARTAN)
72	SUN VISOR-FEEDING	93	BATTERY EQUALIZER-CHECK LO/HI	123 B	ALARM & SIGNAL-FIRE DETECTOR	137 D	RR VIEW MIRROR (SPARTAN)
72 A	SUN VISOR-RH	95 A	ENGINE BRAKE & RETARDER SYSTEM	124	WORLD TRANSM-THROTTLE (HI)	137 E	RR VIEW MIRROR (SPARTAN)
72 B	SUN VISOR-RH	97	TACHOMETER (-)	125	WORLD TRANSM-RET. INDICATOR	137 G	RR VIEW MIRROR (SPARTAN)
72 C	SUN VISOR-LH	101	24V STARTER SOL FEEDING	125 W	WORLD TRANSM-RET. INDICATOR	138	ABS SYSTEM
72 D	SUN VISOR-LH	101	WORLD TRANSM-LO SIGN SOL. LO	126	LEVEL LOW SYSTEM	138	WORLD TRANSM-RETARDER TEMP
76	FUEL TANK GAUGE	102	24V STARTER TO GENERATOR DELCO	126	WORLD TRANSM-LUBE PRESS SW.	138 A	ABS SYSTEM
76 B	LOW FUEL LT & ETHER COLD START	102	WORLD TRANSM-SOL. GRD 1	127	WORLD TRANSM-LUBE PRESS SW.	139	ABS SYSTEM
76 C	LOW FUEL LT	102	WORLD TRANSM-SOL. C3	127	PRE-HEAT WATER HEATER	139	WORLD TRANSM-OUTPUT SPEED HI
76 P	FUEL PRIME PUMP	102 A	24V STARTER TO GENERATOR BOSCH	127 A	PRE-HEAT WATER HEATER	140	ABS SYSTEM
76 M	FUEL PRIME PUMP	104	WORLD TRANSM-SOL. FORWARD	127 B	PRE-HEAT WATER HEATER	140	WORLD TRANSM-OUTPUT SPEED LO
77 B	A/C & HEAT SYSTEM-COMPRESSOR	104	LEVEL LOW SYSTEM	127	WORLD TRANSM-RETARDER FEED SOL.	141	ABS SYSTEM
77 C	A/C & HEAT SYSTEM-COMPRESSOR	105	WORLD TRANSM-RETARDER & SUMP	127 S	PRE-HEAT WATER HEATER	141	WORLD TRANSM-ENGINE SPEED HI
77 H	A/C & HEAT SYSTEM-COMPRESSOR	105 W	WORLD TRANSM-RETARDER & SUMP	127 W	PRE-HEAT WATER HEATER	142	ABS SYSTEM
77 K	GRD SIGNAL-COMPRESSOR CUT-OUT	106	WORLD TRANSM-OIL LEVEL HI	128	PRE-HEAT WATER HEATER	142	WORLD TRANSM-SERIAL COM. A
81	EXTERIOR LTS-STOP SW	107	CHARG SYST-VOLTAGE REGUL. "F"	128 A	PRE-HEAT WATER HEATER	143	ABS SYSTEM
82	EXTERIOR LTS-STOP SIGNAL	107	WORLD TRANSM-LOCKUP SOL. HI	128 B	PRE-HEAT WATER HEATER	143	WORLD TRANSM-ECU BATTERY GRD
82 A	EXTERIOR LTS-STOP SIGNAL	108	WORLD TRANSM-REM. PWR WAKE UP	128 W	PRE-HEAT WATER HEATER	143 A	ABS SYSTEM
82 B	EXTERIOR LTS-STOP LTS	109	WORLD TRANSM-RET. SOL. LO	128	WORLD TRANSM-SOL. C2	143 W	WORLD TRANSM-BATTERY GRD
82 K	EXTERIOR LTS-STOP PARK BRK	110	ALARM & SIGNAL-WATER TEMP	129	PRE-HEAT WATER HEATER	143 X	WORLD TRANSM-BATTERY GRD
82 L	EXTERIOR LTS-LH STOP	110	WORLD TRANSM-LOCKUP SOL. LO	129	WORLD TRANSM-SOL. C5	144	ABS SYSTEM
82 R	EXTERIOR LTS-LH STOP	111	WORLD TRANSM-SOL. C6	130	A/C HEAT SYSTEM-EVAP FAN MOT	144	WORLD TRANSM-ECU CHASSIS GRD
83	ENGINE CTR-KEY SW ACCES SIGN	112	WORLD TRANSM-SPARE OUTPUT (+)	130	WORLD TRANSM-SOL. GRD 3	144 A	ABS SYSTEM
84	ENGINE CTR-KEY SW ACCES SIGN	113	ALARM & SIGNAL-OIL PRESS	131	WORLD TRANSM-SOL. C4	145	ABS SYSTEM
85	ENGINE CTR-KEY SWIGNITION SIGN	113	WORLD TRANSM-REVERSE WARNING	132	WORLD TRANSM-ENG BRK OUTPUT (-)	146	ABS SYSTEM
85	24V IGNITION SIGNAL	114	INTERIOR LTS-DASH LT REGUL.	132 A	LEVEL LOW SYSTEM	146	WORLD TRANSM-IGNITION SENSE
85 A	24V IGN DASH INSTRUMENTATION	114	WORLD TRANSM-SPARE OUTPUT (-)	132 B	LEVEL LOW SYSTEM	146 AA	DDR CONNECTOR POWER
85 B	ENGINE CTR-24V IGNITION	114 A	INTERIOR LTS-DASH LT	132 C	LEVEL LOW SYSTEM	146 W	WORLD TRANSM-12V IGNITION
85 C	PARKING BRAKE SWITCH	114 B	INTERIOR LTS-DASH LT REGUL.	132 D	LEVEL LOW SYSTEM	146 X	WORLD TRANSM-12V IGNITION
85 E	STOP LIGHT RLY.	114 D	INTERIOR LTS-DASH LT REGUL.	132 E	LEVEL LOW SYSTEM	147	ABS SYSTEM
85 F	ENGINE CTR-ENGINE CTR SW IGN	114 E	INTERIOR LTS-DASH LT REGUL.	132 F	LEVEL LOW SYSTEM	147	ETHER COLD START
85 F	LO AIR SONALERT	115	ALARM & SIGNAL-TAG PRESS	132 G	LEVEL LOW SYSTEM	147	WORLD TRANSM-OIL TEMP

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
147 C	ETHER COLD START	170 X	LUGGAGE DOOR LOCK	259	WINDSHIELD HEATED	544	DDEC III-CRUISE ON/OFF SW
148	ABS SYSTEM	170 Y	LUGGAGE DOOR LOCK	259 A	WINDSHIELD HEATED	545	DDEC III-CRUISE RESUME SW
148	WORLD TRANSM-OUTPUT SPEED LO	170 Z	LUGGAGE DOOR LOCK	264	SPEED SIGNAL- AUX. FAN UNIT	555	DDEC III-FAN CLUTCH SPEED# 1
149	ABS SYSTEM	173	BACK-UP MONITOR	264 A	SPEED SIGNAL- AUX. FAN UNIT	556	DDEC III-VEHICLE SPEED (+)
149	WORLD TRANSM-TURBINE SPEED HI	174	BACK-UP MONITOR	264 B	SPEED SIGNAL- AUX. FAN UNIT	557	DDEC III-VEHICLE SPEED (-)
149 A	ABS SYSTEM	174 W	WORLD TRANSM	270	KEYLESS ENTRY SYSTEM	563	DDEC III-FAN CLUTCH SPEED# 2
150	DDEC III-ECM BATTERY GRD	175	BACK-UP MONITOR	272	KEYLESS ENTRY SYSTEM	564	DDEC III-DIGITAL OUTPUT
150	WORLD TRANSM-ENGINE SPEED LO	175 A	BACK-UP MONITOR	274	KEYLESS ENTRY SYSTEM	565	DDEC III-ENGINE BRAKE ACTIVE
150 A	DDEC III-ECM BATTERY GRD	175 AW	WORLD TRANSM	275	KEYLESS ENTRY SYSTEM	583	DDEC III-ENGINE BRAKE 4 CYL.
151	ABS SYSTEM	175 B	BACK-UP MONITOR	276	KEYLESS ENTRY SYSTEM	900	DDEC III-DATA LINK (+)
151	DDEC III-ECM BATTERY GRD	175 C	BACK-UP MONITOR	277	KEYLESS ENTRY SYSTEM	901	DDEC III-DATA LINK (-)
151	WORLD TRANSM-SERIAL COM. B	180	DRIVER'S SEAT HEATER	278	KEYLESS ENTRY SYSTEM	905	DDEC IV-AMBIANT AIR TEMPERATURE
152	ABS SYSTEM	180 A	DRIVER'S SEAT HEATER	279	KEYLESS ENTRY SYSTEM	908	DDEC III-HYDRAULIC PWM#1 OUTPUT
153	WORLD TRANSM-SPARE INPUT (-)	180 B	CO-PILOT SEAT HEATER	280	KEYLESS ENTRY SYSTEM	916	DDEC III-SENSOR SUPPLY (5VDC)
154	ABS SYSTEM	180 C	CO-PILOT SEAT HEATER	283	KEYLESS ENTRY SYSTEM	952	DDEC III-SENSOR RETURN
154	WORLD TRANSM-ABS RET. INPUT	181 A	THERMOMETER INSIDE SENSOR	283 A	KEYLESS ENTRY SYSTEM	953	DDEC III-BATTERY GRD
155	WORLD TRANSM-SPARE INPUT (-)	181 B	THERMOMETER INSIDE SENSOR	284 A	KEYLESS ENTRY SYSTEM	976	DDEC IV-RELATIVE HUMIDITY
156	WORLD TRANSM-THROTTLE POS.	181 C	THERMOMETER OUTSIDE SENSOR	284 B	KEYLESS ENTRY SYSTEM	979	DDEC III-ENGINE BRAKE 2 CYL.
156 A	ABS SYSTEM	181 D	THERMOMETER OUTSIDE SENSOR	285	KEYLESS ENTRY SYSTEM		
157	WORLD TRANSM-SPEEDO SIGNAL	197	FUEL WATER FILTER	285 B	KEYLESS ENTRY SYSTEM		
157 B	ABS SYSTEM	197 A	FUEL WATER FILTER	285 C	KEYLESS ENTRY SYSTEM		
158	WORLD TRANSM-DIMMER	197 B	FUEL WATER FILTER	286	KEYLESS ENTRY SYSTEM		
160	ALARM & SIGNAL-TAG PRESS SW	198	FILTER FUEL HEATER	286 A	KEYLESS ENTRY SYSTEM		
160	WORLD TRANSM-SER. INTERFACE (-)	199	AIR FILTER RESTRICTION SENDER	290	FAN CLUTCH RADIATOR		
161	WORLD TRANSM-SIGNAL GRD	201	WORLD TRANSM-SPARE	290	FAN CLUTCH RADIATOR		
161 B	WORLD TRANSM-SIGNAL GRD	202	WORLD TRANSM-SPARE	291	FAN CLUTCH RADIATOR SPD 1		
162	WORLD TRANSM-PRESS. SW C3	203	WORLD TRANSM-SPARE	291	KEYLESS ENTRY SYSTEM		
163	WORLD TRANSM-RETARDER ENABLE	204	WORLD TRANSM-SPARE	292	FAN CLUTCH RADIATOR SPD 2		
164	WORLD TRANSM-RET. ACTUATOR SIGN	205	WORLD TRANSM-SPARE	293	KEYLESS ENTRY SYSTEM		
165	A/C & HEAT SYSTEM-TRANSMITER	206	WORLD TRANSM-SPARE	294	ANTI-THEFT SYSTEM KEYLESS		
165	WORLD TRANSM-OIL LEVEL SIGNAL	214	WORLD TRANSM-BACK UP SIGNAL	295	LED FEED ALARM -KEYLESS		
166 B	A/C & HEAT SYSTEM-EVAP. MOD.	216 B	24V SIGNAL AUX. LIQ. SOL. VALVE	416	DDEC IV-SENSOR SUPPLY 5VDC		
168	A/C & HEAT SYSTEM-HUMIDISTAT	216 C	12 V. TRIGGER AUX. A/C UNIT	417	DDEC III-LIMIT SPEED GOVERNOR		
168	WORLD TRANSM-SER. INTERFACE (+)	229	24 V. POWER AUX. A/C UNIT	419	DDEC III-CHECK ENGINE LIGHT		
168 A	A/C & HEAT SYSTEM-HUMIDISTAT	229 A	PWM SIGNAL - AUX. FAN UNIT	439	DDEC III-12V IGNITION		
170 C	LUGGAGE DOOR LOCK	231	NEUTRAL SIGNAL GRD	440	DDEC III-12V IGNITION		
170 D	LUGGAGE DOOR LOCK	231 A	NEUTRAL COIL RELAY FEED SIGNAL	440 A	DDEC III-12V IGNITION		
170 E	LUGGAGE DOOR LOCK	231 W	NEUTRAL SIGNAL GRD (WCL)	451	DDEC III-A/C FAN CLUTCH		
170 F	LUGGAGE DOOR LOCK	240	DDEC III-ECM 12V FEEDING	452	DDEC IV- SENSOR RETURN		
170 G	LUGGAGE DOOR LOCK	241	DDEC III-ECM 12V FEEDING	505	DDEC III-TACHOMETER DRIVE		
170 H	LUGGAGE DOOR LOCK	251	DDEC III - PRODRIVER 12V H.W.	509	DDEC III-STOP ENGINE LIGHT		
170 K	LUGGAGE DOOR LOCK	251 A	DDEC III -DATA LOGGER 12V H.W.	510	DDEC III-FAST IDLE SIGNAL		
170 L	LUGGAGE DOOR LOCK	257	WINDSHIELD HEATED	524	DDEC III-ENGINE BRAKE DISABLE		
170 M	LUGGAGE DOOR LOCK	257 A	WINDSHIELD HEATED	525	DDEC III-FAST IDLE SIGNAL		
170 N	LUGGAGE DOOR LOCK	257 B	WINDSHIELD HEATED	528	DDEC III-STOP ENG. OVERRIDE		
170 P	LUGGAGE DOOR LOCK	257 C	WINDSHIELD HEATED	531	DDEC III-CRUISE CLUTCH RELEASE		
170 R	LUGGAGE DOOR LOCK	257 D	WINDSHIELD HEATED SPARE	540	DDEC III-CRUISE ENABLE LTS.		
170 S	LUGGAGE DOOR LOCK	257 E	WINDSHIELD HEATED SPARE	541	DDEC III-CRUISE SET SW		
170 V	LUGGAGE DOOR LOCK	258	WINDSHIELD HEATED	542	INPUT PARK BRAKE INTERLOCK		
170 W	LUGGAGE DOOR LOCK	258 A	WINDSHIELD HEATED	543	DDEC III-CRUISE STOP SW CUT IN		