



12V POWER
FROM FR.JCT.BOX
SEE P.2.1

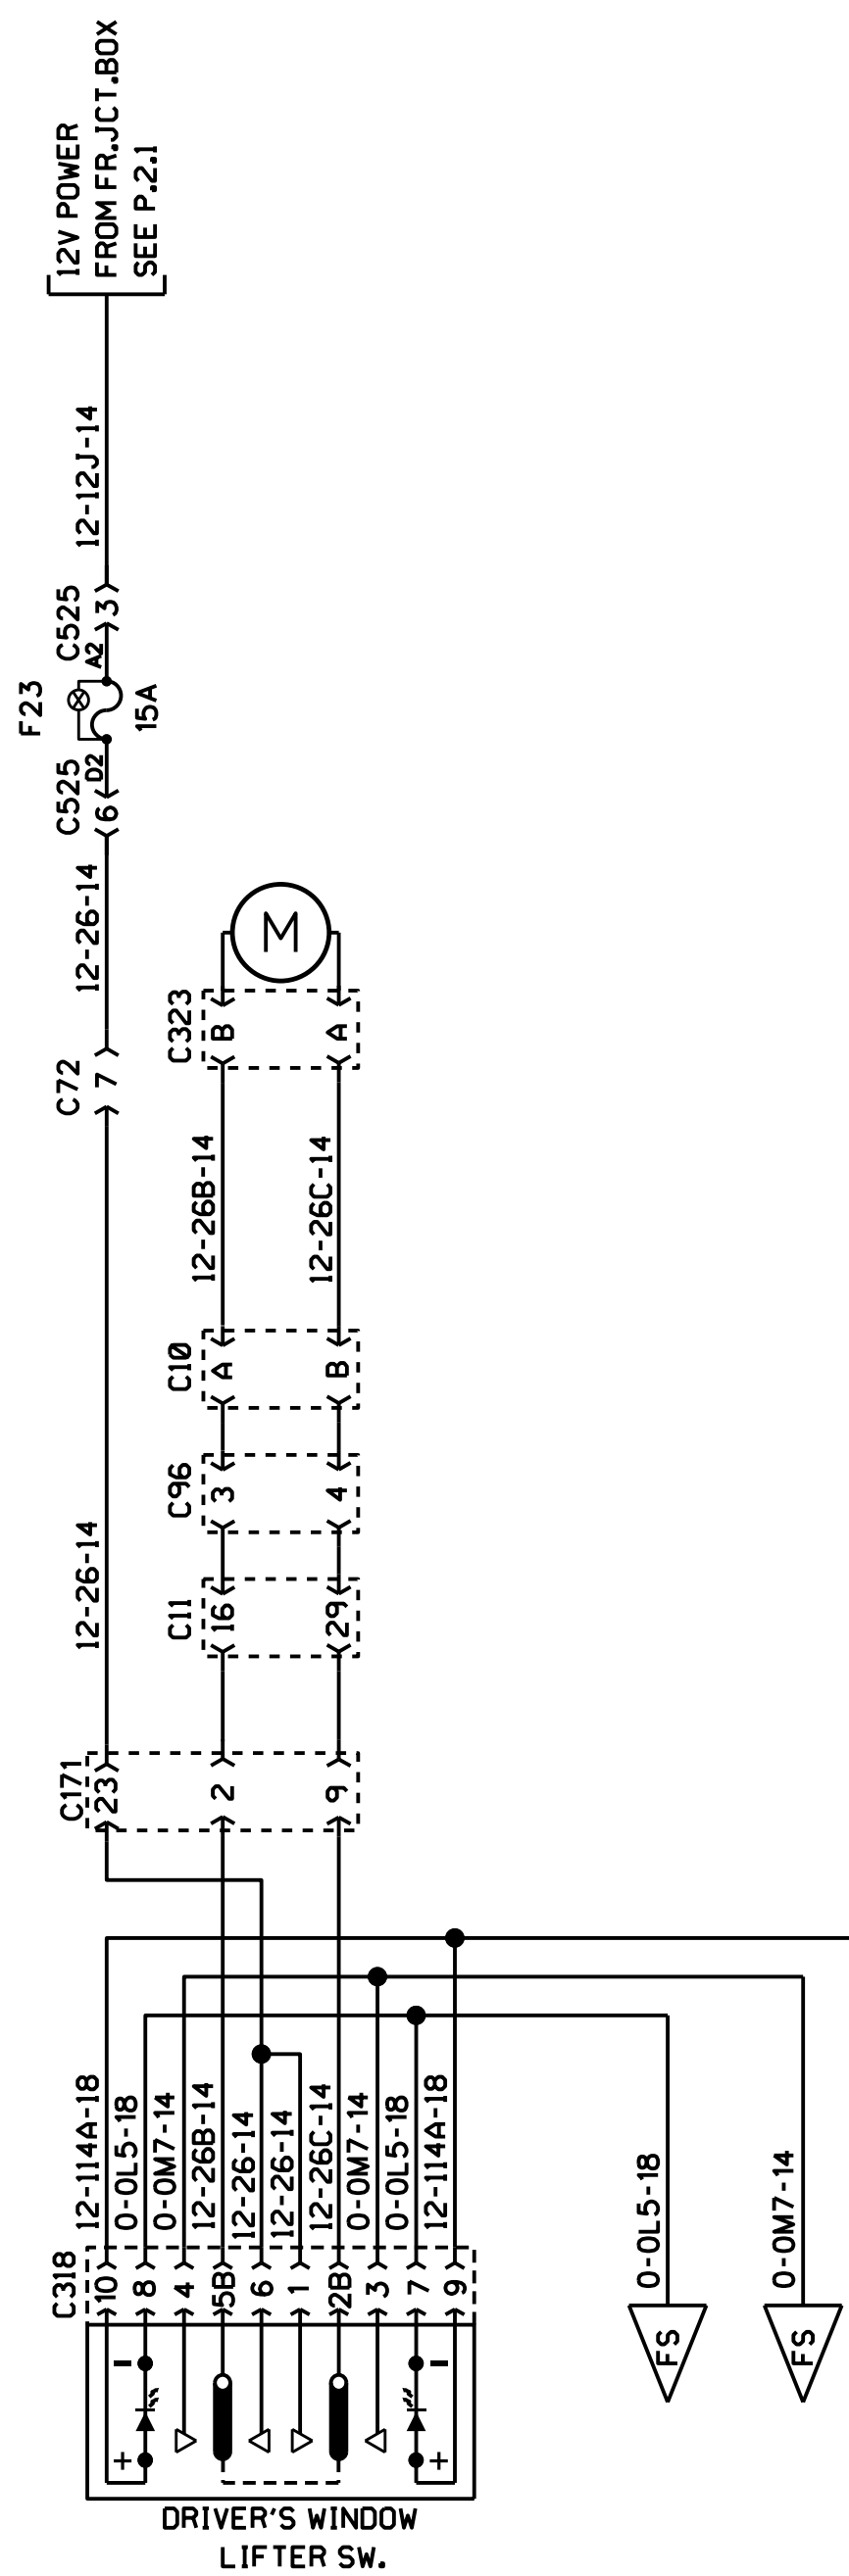


ENTRANCE DOOR AND DRIVER'S WINDOW LIFTER

24V POWER
FROM FR.JCT.BOX
SEE P.1.1

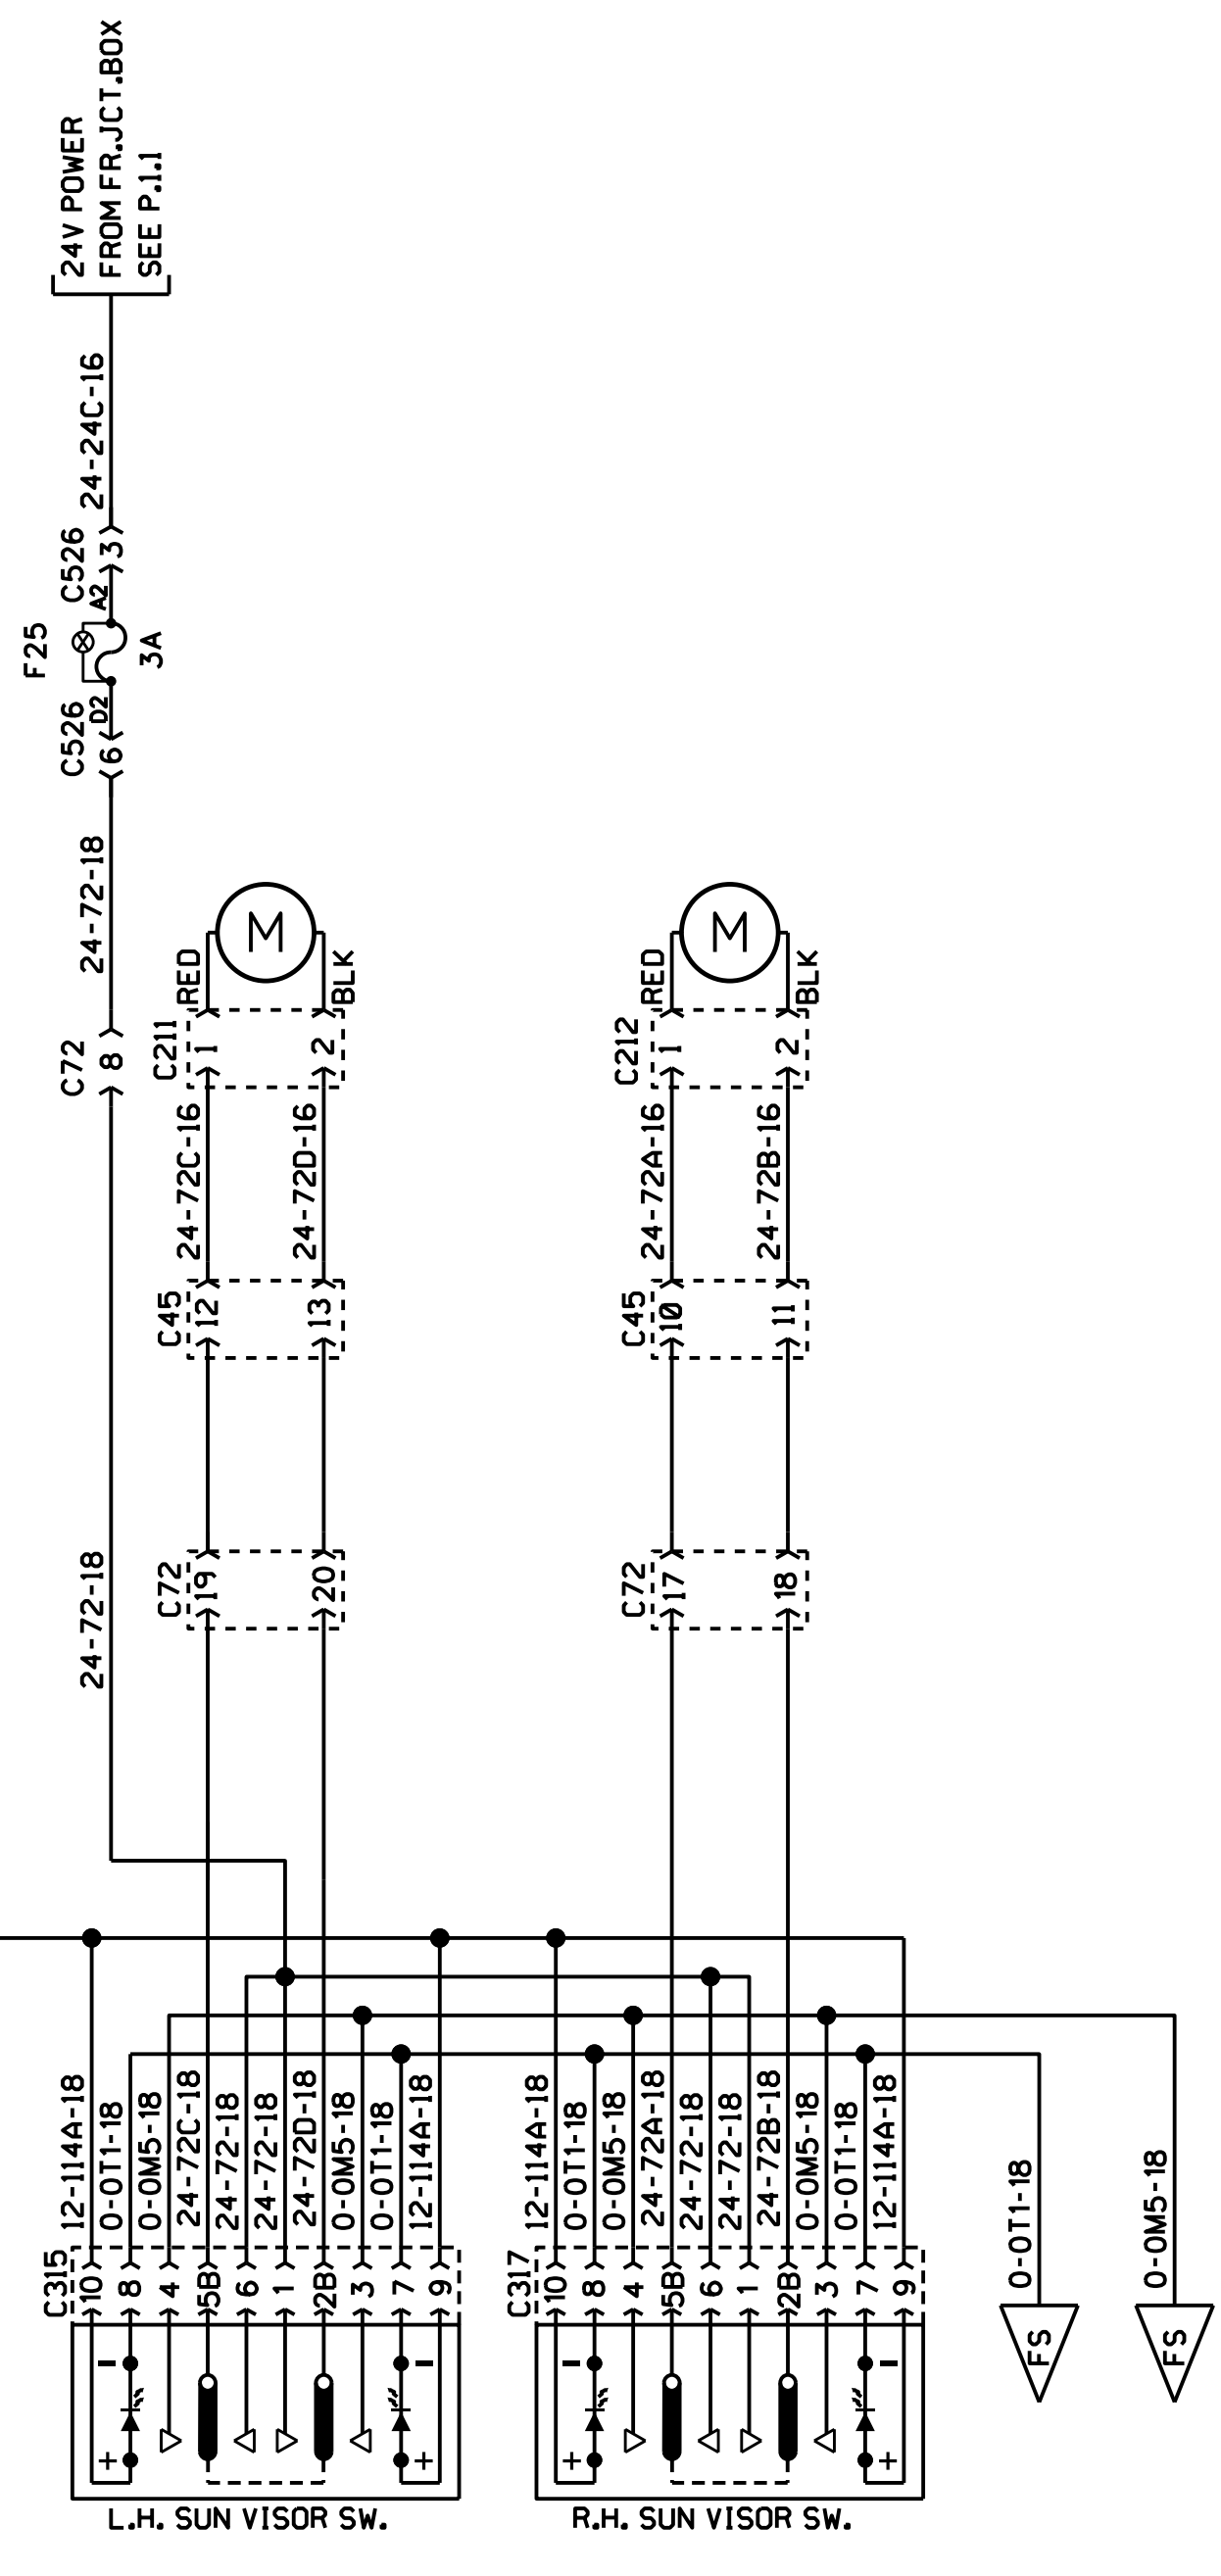

SUN VISOR

FROM 24V IGNITION
FROM RR.JCT.BOX
SEE P.1.1

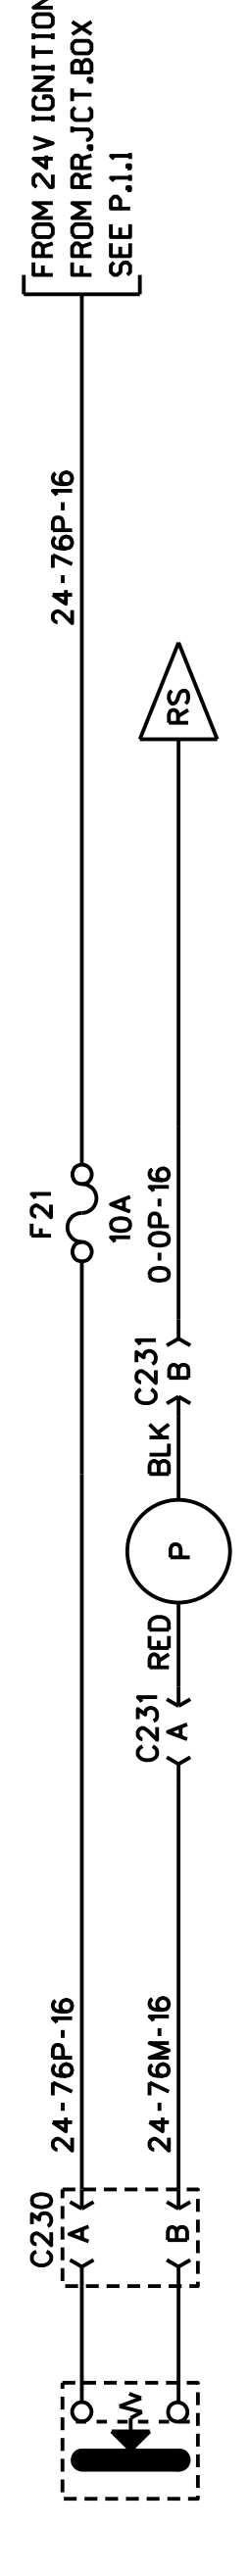

FUEL PRIME PUMP