

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A1	RADIO SYSTEM	C15	AUDIO AMPLI	SP10	SPARE WIRE	SP74	SPARE WIRE
A2	RADIO SYSTEM	D1	PASSENGER SPEAKER	SP11	SPARE WIRE	SP75	SPARE WIRE
A3	AUDIO AMPLI	D2	PASSENGER SPEAKER	SP12	SPARE WIRE	SP76	SPARE WIRE
A8	VIDEO SYSTEM	D3	PASSENGER SPEAKER	SP13	SPARE WIRE	SP77	SPARE WIRE
A9	RADIO SYSTEM	D4	PASSENGER SPEAKER	SP14	SPARE WIRE	SP78	SPARE WIRE
A10	AUDIO AMPLI	D5	PASSENGER SPEAKER	SP15	SPARE WIRE	SP80	SPARE WIRE
A11	AUDIO AMPLI	D6	PASSENGER SPEAKER	SP16	SPARE WIRE	SP81	SPARE WIRE
A12	AUDIO AMPLI	D7	PASSENGER SPEAKER	SP17	SPARE WIRE	SP82	SPARE WIRE
A13	AUDIO AMPLI	D8	PASSENGER SPEAKER	SP18	SPARE WIRE	SP83	SPARE WIRE
A15	AUDIO AMPLI	DR1	DRIVER'S SPEAKER	SP19	SPARE WIRE	SP84	SPARE WIRE
A16	VIDEO SYSTEM	DR2	DRIVER'S SPEAKER	SP20	SPARE WIRE	SP85	SPARE WIRE
B1	MICROPHONE	DR3	DRIVER'S SPEAKER	SP21	SPARE WIRE	SPZ1	SPARE WIRE-ZF TRANSM.
B2	MICROPHONE	DR4	DRIVER'S SPEAKER	SP23	SPARE WIRE	SPZ2	SPARE WIRE-ZF TRANSM.
B3	MICROPHONE	G1	PASSENGER SPEAKER	SP24	SPARE WIRE	SPZ3	SPARE WIRE-ZF TRANSM.
B4	MICROPHONE	G2	PASSENGER SPEAKER	SP25	SPARE WIRE	SPZ4	SPARE WIRE-ZF TRANSM.
B5	MICROPHONE	G3	PASSENGER SPEAKER	SP26	SPARE WIRE	SPZ5	SPARE WIRE-ZF TRANSM.
B6	MICROPHONE	G4	PASSENGER SPEAKER	SP27	SPARE WIRE	SPZ6	SPARE WIRE-ZF TRANSM.
B7	MICROPHONE	G5	PASSENGER SPEAKER	SP28	SPARE WIRE	TW1	TWISTED SPARE
B8	MICROPHONE	G6	PASSENGER SPEAKER	SP30	SPARE WIRE	TW2	TWISTED SPARE
B10	MICROPHONE	G7	PASSENGER SPEAKER	SP33	SPARE WIRE	W1	STEERING BOX CONVERTER
B11	MICROPHONE	G8	PASSENGER SPEAKER	SP34	SPARE WIRE	W2	STEERING BOX CONVERTER
B12	MICROPHONE	IPJ1	CLUSTER - BULB TEST POS	SP35	SPARE WIRE	Y1A	FLUORESCENT BALLAST
B1A	FLUORESCENT BALLAST	IPJ2	CLUSTER - BULB TEST NEG.	SP36	SPARE WIRE	Y1B	FLUORESCENT BALLAST
B1B	FLUORESCENT BALLAST	IPJ5	CLUSTER - FUEL GAUGE	SP37	SPARE WIRE	Y2A	FLUORESCENT BALLAST
B2A	FLUORESCENT BALLAST	IPJ6	CLUSTER - BULB TEST POS.	SP38	SPARE WIRE	Y2B	FLUORESCENT BALLAST
B2B	FLUORESCENT BALLAST	IPJ7	CLUSTER - BULB TEST NEG.	SP40	SPARE WIRE	Y3A	FLUORESCENT BALLAST
B3A	FLUORESCENT BALLAST	IPJ8	CLUSTER - MASTER WARNING	SP41	SPARE WIRE	Y3B	FLUORESCENT BALLAST
B3B	FLUORESCENT BALLAST	L8	WATER TANK HEATER	SP42	SPARE WIRE	Y4A	FLUORESCENT BALLAST
B4A	FLUORESCENT BALLAST	L9	WATER TANK HEATER	SP43	SPARE WIRE	Y4B	FLUORESCENT BALLAST
B4B	FLUORESCENT BALLAST	LX5	CLUSTER - COMPUTER MODE	SP44	SPARE WIRE	Y5A	FLUORESCENT BALLAST
B5A	FLUORESCENT BALLAST	LX6	CLUSTER - COMPUTER DOWN	SP45	SPARE WIRE	Y5B	FLUORESCENT BALLAST
B5B	FLUORESCENT BALLAST	LX7	CLUSTER - COMPUTER SET	SP48	SPARE WIRE	Y6A	FLUORESCENT BALLAST
B6A	FLUORESCENT BALLAST	LX16	CLUSTER - COMPUTER UP	SP50	SPARE WIRE	Y6B	FLUORESCENT BALLAST
B6B	FLUORESCENT BALLAST	LX21	CLUSTER - COMPUTER COM.	SP51	SPARE WIRE	Y7A	FLUORESCENT BALLAST
B7A	FLUORESCENT BALLAST	R1A	FLUORESCENT BALLAST	SP52	SPARE WIRE	Y7B	FLUORESCENT BALLAST
B7B	FLUORESCENT BALLAST	R1B	FLUORESCENT BALLAST	SP53	SPARE WIRE	0	BATTERY - MAIN GROUND
B14	RADIO SYSTEM	RT	T.T.L.T. MODULE - TEST SW.	SP54	SPARE WIRE	0	EVAP. COMPT. GROUND
B15	RADIO SYSTEM	SPK1	PASSENGER SPEAKER	SP55	SPARE WIRE	0	RJB - INSIDE GRD
C2	RADIO SYSTEM	SPK2	PASSENGER SPEAKER	SP56	SPARE WIRE	0	WCL MODULE
C3	CONTROL HEAD ANTENNA	SPK3	PASSENGER SPEAKER	SP57	SPARE WIRE	0	INVERTER CUT OFF RELAY
C5	VIDEO SYSTEM	SPK4	PASSENGER SPEAKER	SP60	SPARE WIRE	0A	LAVATORY ACCESSORIES
C6	CONTROL HEAD DIMMER	SP1	SPARE WIRE	SP61	SPARE WIRE	0A	EVAP. FAN GROUND
C7	RADIO SYSTEM	SP2	SPARE WIRE	SP62	SPARE WIRE	0A	FR. ROOF ACC. GRD
C8	AUDIO AMPLI	SP3	SPARE WIRE	SP63	SPARE WIRE	0B	BOOSTER BLOCK GROUND
C9	VIDEO SYSTEM	SP4	SPARE WIRE	SP64	SPARE WIRE	0B	A/C - CONDENSER GRD
C10	VIDEO SYSTEM	SP5	SPARE WIRE	SP65	SPARE WIRE	0B	24V&12V CUT OUT REL.COIL
C11	VIDEO SYSTEM	SP6	SPARE WIRE	SP69	SPARE WIRE	0BE	OV BATTERY MONITOR
C12	VIDEO SYSTEM	SP7	SPARE WIRE	SP70	SPARE WIRE	0C	R.J.B. - GRB
C13	VIDEO SYSTEM	SP8	SPARE WIRE	SP71	SPARE WIRE	0C	MOTOR STARTER GROUND
C14	VIDEO SYSTEM	SP9	SPARE WIRE	SP72	SPARE WIRE	0C	F.R. SERV. CPT- ACC.

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
0C1	ENTRANCE DOOR SEDAN	00SS	SOUND SYSTEM GROUND	10A	INTERIOR LTS-LUGGAGE CPT	12L	CORNERING LTS FEEDING
0C2	STEERING CONTROL GROUND	0S2	RADIO GROUND	10A	AUX. COMPRESSOR CLUTCH	12LX	CLUSTER 12V HOT WIRE
0C3	SOUND SYSTEM RELAY	0S3	VIDEO GROUND	10B	INTERIOR LTS-LUGGAGE CPT	12M	ABS-FR JCT PNL 12V DISC.SW
0C4	F.J.B. GRD	0T	LAVATORY FAN & PUMP	10C	INTERIOR LTS-LUGGAGE CPT	12P	12V BATTERY JCT BLOCK
0CJ	CRUISE SW. JUMPER	0T	SPEED SW. CONNECTOR	10E	INTERIOR LTS-BATTERY CPT	12R	12V MEMORY RADIO
0D	FLUORESCENT GRD	0T1	DASH ACC. GROUND	10H	AUX. COMPRESSOR CLUTCH	12P	12V POWER OUTLET
0D	COND FAN GRD	0T2	CLUSTER ACC. GROUND	10L	AUX. COMPRESSOR CLUTCH	12SB	12V SOUND SYSTEM FEEDING
0E	BATT. COMPT. LTS GROUND	0T2	WINDOW AWNING	10X	AUX. COMPRESSOR CLUTCH	12SS	12V SOUND SYSTEM FEEDING
0E	READING LIGHTS GROUND	0T3	ALTERNATOR MODULE	11	DESTINATION SIGN	12S	12V RADIO FEEDING
0F	FLUORESCENT GRD	0T4	12V OUTLET - CTR MODULE	11A	DESTINATION SIGN	12S1	12V RADIO FEEDING
0F	PRO-DRIVER GROUND	0T5	FS.HVAC DASH MODULE. GND	11B	DESTINATION SIGN	12S1A	12V DVD KARAOKE FEEDING
0G	READING LIGHTS GROUND	0VA	BATTERY EQUALIZER GROUND	11C	DESTINATION SIGN	12S2	12V RADIO FEEDING
0H	ENG. CPT. - ACC. GRD	0W	FJB - TRANSM. RLY GRD	11D	DESTINATION SIGN	12S2A	12V DVD KARAOKE FEEDING
0IN	INTERCOM SYSTEM	0W	SHIFT SELECTOR GROUND	11E	DESTINATION SIGN	12T	RR JCT BOX 12V DISC SW
0J	PARCEL RACK A/C UNIT	0W	WCL MODULE	11K	DESTINATION SIGN	12VA	12V BATTERY EQUALIZER
0K	PARCEL RACK A/C UNIT	0WA	WCL DOOR AJAR	11J	DESTINATION SIGN	12VB	FR JCT PANEL 12V DISC SW
0L	ENG.CPT -CLEAR.LTS RR ROOF	0WC	WCL BATTERY CPT. ACCES.	11P	DESTINATION SIGN	12VD	12V HOT WIRE DISTRIBUTION
0L	R.J.B. - GRD	0WL	WCL SIGNAL DOOR AJAR ALARM	12	12V ELECTRONIC TERMINAL	12VE	FR JCT PANEL 12V DISC SW
0L	FR - SIDE MARK. & FLASH GRD	0Y1	ABS SYSTEM-GRD	12A	FR JCT PANEL 12V DISC SW	12VF	12 VOLTS FRONT DISTRIBUTIUON
0L1	ENG.CPT-SIDE MARK. & FL. GRD	0Y2	ABS SYSTEM-GRD	12A	BATT. JCT PANEL 12V DISC SW	12VG	RR JCT PANEL 12V DISC SW
0L2	HEAD LTS GROUND	0Y3	ABS SYSTEM-GRD	12B	FR JCT PANEL 12V DISC SW	12VI	12V IGNITION DISTRIBUTION
0L3	FR.SERV.DR. & ENT.DOOR GRD	0Y4	ABS SYSTEM-GRD	12BE	12V BATTERY MONITOR	12VO	12V BATTERY EQUALIZER
0L4	FOG LTS RESISTOR GRD	0Y5	ABS SYSTEM-GRD	12C	FR JCT PANEL 12V DISC SW	12VR	12V REAR DISTRIBUTION
0L5	LH CONSOL - ACC. GRD	0Y6	ABS SYSTEM-GRD	12C	RR JCT BOX 12V DISC SW	12W	12V HOT WIRE DDEC FEEDING
0L5	W.C.L.DOOR	0Z1	ZF TRANSM. GRD	12D	BATT. JCT PANEL 12V HOT WIRE	12WA	ENTRANCE DOOR SYSTEM
0L6	MARKER&FLASH. GROUND	0Z2	ZF TRANSM. GRD	12D	FR JCT PANEL 12V HOT WIRE	12WR	WCL DOOR TOP LT
0L7	AISLE LIGHTS GROUND	00A	ELECTRONIC TERMINAL GROUND	12D	RR JCT PANEL 12V HOT WIRE	14	LAVATORY PUMP
0L8	DOCKING LTS	00F	FRONT ELECTRONIC GROUND	12DD	FR JCT PANEL 12V HOT WIRE	14A	LAVATORY PUMP- P.BUTTON
0LV	WINDSHIELD WASHER LEVEL	2B	A/C & HEAT SYSTEM	12DDR	FR JCT BOX 12V HOT DDR CONN	14P	LAVATORY PUMP
0M	WIPER 2 MIRROR MOTOR	2D	A/C & HEAT SYSTEM	12DT	T.T. LT MODULE	15	WIPER & WASHER FEEDING
0M3	DEFROST GRD	2DD	A/C & HEAT SYSTEM	12DZ	ZF TRANSM. 12V HOT WIRE	16	SPEEDOMETER (+)
0M4	HORN & DR'S WINDOW LIFTER	2E	A/C & HEAT SYSTEM	12E	FR JCT PANEL 12V DISC SW	16T	SPEED SW SIGNAL IN (+)
0M5	SUN VISOR MOTOR	2EE	A/C & HEAT SYSTEM	12F	RR JCT PANEL 12V DISC SW	17	EXTERIOR LTS-FLASHER UNIT
0M6	UPPER FAN DEFROST	2F	A/C & HEAT SYS.-EVAP. SPEED	12F1	FR JCT PANEL 12V DISC SW	17A	EXTERIOR LTS-FLASHER UNIT
0M7	DR'S WIND.LIFT. & RH MIR. SW	2H	A/C & HEAT SYS-LO-PRESS SW.	12F2	FR JCT PANEL 12V DISC SW	17C	JUMPER LTS SW. - HAZARD
0M7A	LH MIRROR SW.	2L	A/C & HEAT SYS-HI-PRESS SW.	12FL	RR JCT PANEL 12V DISC SW	18	UPPER FAN DEFROST
0P	ENG.CDT - PRE-HEATER	4A	HOTESS CHIME MAIN SWITCH	12G	FR JCT PANEL 12V DISC SW	19	UPPER FAN DEFROST
0R	SOUND SYSTEM RELAY GROUND	4C	HOTESS CHIME P. RACK SW.	12H	12V IGN. DASH ACCESS.	20	SPEEDOMETER SIGNAL (-)
0SA	BOSCH ALTERNATOR GROUND	5	AISLE LTS FEEDING	12I	RR JCT BOX 12V IGNITION	21	LEFT DIRECTIONNAL LTS
0SA	PARCEL RACK LTS SWITCH	5N	EMERGENCY LTS	12I	FR JCT PANEL 12V IGNITION	21A	LEFT DIRECTIONNAL LTS SIGN.
0SB	PARCEL RACK LTS SWITCH	5N0	SPEED SIGNAL HIGHER 5MPH	12IA	FR JCT PANEL 12V IGNITION	21B	HAZARD SWITCH SIGNAL
0SC	PARCEL RACK LTS SWITCH	5NC	SPEED SIGNAL LOWER 5MPH	12IA	RR JCT PANEL 12V IGNITION	21BB	LEFT DIRECTIONNAL LTS FEED.
0SE	PARCEL RACK LTS SWITCH	6	AISLE LTS	12IB	FR JCT PANEL 12V IGNITION	21H	EXTERIOR LTS-HAZARD SIGNAL
0SF	PARCEL RACK LTS SWITCH	7B	ENTRANCE DOOR FEED.-24V HW	12IB	STEERING BOX ECU FEEDING	21M	AUX. LTS - DIRECTIONAL LH
0SG	PARCEL RACK LTS SWITCH	9	INTERIOR LTS-ENGINE CPT	12IE	ABS-FR JCT PANEL 12V IGN.	23	RIGHT DIRECTIONNAL LTS
0SH	PARCEL RACK LTS SWITCH	9F	INTERIOR LTS - FR-SERV. CPT	12IZ	ZF TRANSM. IGNITION	23A	RIGHT DIRECTIONNAL LTS SIGN.
0SJ	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-LUGGAGE CPT	12J	12 VOLTS DISC.SW. INTERCOM	23BB	RIGHT DIRECTIONNAL LTS FEED.
0SS	SOUND SYSTEM GROUND	10	INTERIOR LTS-FR SERV. CPT	12J	FR JCT PANEL 12V DISC.SW.		
		10	INTERIOR LTS-FR SERV. CPT	12K	FR JCT PANEL 12V DISC.SW.		

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
23H	EXTERIOR LTS-HAZARD SIGNAL	24WL	WCL PUMP FEEDING	43X	PARCEL RACK A/C	63	EXTERIOR LTS-CLEAR. FEED
23K	RIGHT DIRECT. LTS W/KNELLING	24WR	WCL POWER ACCES.	44	EXTERIOR LTS-FOG	63B	EXTERIOR LTS-CLEARANCE
23M	AUX LTS - DIRECTIONAL RH	25	EITHER ALTERNAT. RUN SIGNAL	44A	EXTERIOR LTS-FOG	63C	EXT. LTS-MARKER SIGNAL
24	24 VOLTS BATTERY DIST.	25A	TT.LT. ALTERNATOR #1	44B	EXTERIOR LTS-FOG	63D	BLINKER RELAY
24	24 V. DISC. FRONT DIST.	25A1	BOSCH ALTERNATOR SIGNAL D+	44C	FOG,LTS & HVAC FEEDING	63E	BLINKER RELAY
24A	BATT. JCT PANEL 24V DISC SW	25A2	BOSCH ALTERNATOR SIGNAL D+	44D	EXTERIOR LTS - FOG	63F	EXT. LTS-MARKER BLINKER
24A	24V BOOSTER BLOCK	25B	EXT. LTS-DAYTIME RUN LTS	44E	EXTERNAL LTS - FOG	64	DRIVER'S FAN SPEED CTR
24A	FR JCT PANEL 24V DISC. SW	25D	BOTH ALTERNATOR RUN SIGNAL	45A	A/C & HEAT SYSTEM FULL AIR	64A	A/C SPARE
24A	RR JCT PANEL 24V DISC. SW	25E	EXT. LTS-DAYTIME RUN LTS	45B	A/C & HEAT SYS.-WATER PUMP	64B	A/C SPARE
24BE	BATTERY MONITOR	25K	T.T LT. ALTERNATOR #2	45C	A/C & HEAT SYS.-WATER VALV	65	FOOT DAMPER MOTOR
24C	FR JCT PANEL 24V DISC SW	26	DR'S & ENT. WINDOW LIFTER	45D	A/C & HEAT SYS.-WATER VALV	65A	FOOT DAMPER MOTOR
24D	24 V. HOT WIRE FEEDING	26A	CIGAR LIGHT. & POW.OUTLET LH	45G	A/C & HEAT SYS.-DR'S HTR	65D	DRIVER'S REC. DAMPER
24D	FR JCT BOX 24V HOT WIRE	26B	DRIVER'S WINDOW LIFTER	45H	A/C & HEAT SYS.-EVAP. SPEED	65E	DRIVER'S REC. DAMPER L.H.
24DD	FR JCT BOX 24V HOT WIRE	26C	DRIVER'S WINDOW LIFTER	46	EXTERIOR LTS-MARKER	65F	DRIVER'S REC. DAMPER L.H.
24DS	WIRELESS MICRO FEEDING	27	LAVATORY ALARM	46A	EXTERIOR LTS-AUX LTS RESIS.	66	A/C PASSENGER - ON/OFF
24E	24 VOLTS POWER DISTRIBUTION	28H	T.T.LT MODULE - HI A/C PRES.	46C	EXTERIOR LTS-MARKER	67A	A/C & HEAT SYSTEM
24E	RR JCT PANEL 24V DISC SW	28T	T.T.LT MODULE - LO A/C PRES.	46D	EXTERIOR LTS-AUX LTS RESIS.	68	DASH & DEFROST DAMPER MOT
24F	RR JCT PANEL 24V DISC SW	29	A/C & HEAT SYS.-DR'S HTR	48	ENTRANCE DOOR OPEN SIGNAL	68A	DASH & DEFROST DAMPER MOT
24G	FR JCT PANEL 24V DISC SW	29H	HVAC DASH MODILE	48A	ENTRANCE DOOR OPEN SOL.	69	DAMPER MIX LIMIT SWITCH
24H	RR JCT PANEL 24V DISC SW	30A	GALLEY SWITCH SIGNAL	48B	ENTRANCE DOOR OPEN SIGNAL	70	HAT RACK & NIGHT LTS FEEDING
24I	FR JCT PANEL 24V IGNITION	30J	GALLEY SWITCH LED	48C	ENTRANCE DOOR SYSTEM	72	SUN VISOR - FEED
24IA	RR JCT PANEL 24V IGNITION	30J	GALLEY SWITCH LED	48D	ENTRANCE DOOR SYSTEM	72A	SUN VISOR RH
24IA	FR JCT PANEL 24V IGNITION	31B	WIPER & WASHER SYSTEM	48W	ENTRANCE DOOR SEDAN	72B	SUN VISOR RH
24IB	FR JCT PANEL 24V IGNITION	32	EXTERIOR LTS-BACK-UP	49	ENTRANCE DOOR CLOSE SIGNAL	72C	SUN VISOR LH
24IF	FR JCT PANEL 24V IGNITION	32B	EXTERIOR LTS-BACK-UP	49A	ENTRANCE DOOR SYSTEM	72D	SUN VISOR LH
24IZ	FR JCT COMPT	35	ENTRANCE STEP LIGHTS	49B	ENTRANCE DOOR SYSTEM	74	R.H. READING LAMP FEEDING
24K	RR JCT PANEL 24V DISC SW	36	ENGINE BRAKE SYSTEM	50	AIR DRYER	74A	R.H. HOTESS CHIME FEEDING
24L	RR JCT PANEL 24V DISC SW	36A	ENGINE BRAKE SYSTEM & RET.	52	ALARM & SIGNAL-ELEC.HORN	74B	WCL R.H. READING LAMP FEED.
24M	RR JCT PANEL 24V DISC SW	37	LAVATORY LTS FEEDING	52A	ALARM & SIGNAL-ELEC.HORN	74D	READING LAMP SWITCH
24P	FR JCT PANEL 24V DISC SW	38	FLUORESCENT RELAY FEEDING	52B	PNEUMATIC HORN	74J	READING LAMP INDICATOR SW.
24P2	RR BENCH- INVERTER	38A	R.H FLUORESCENT	53	ALARM & SIGNAL-ELEC.HORN	75	L.H. READING LAMP FEEDING
24PV	RR BENCH- INVERTER	38B	L.H. FLUORESCENT	53B	WIPER & WASHER SYSTEM	75A	L.H. HOTESS CHIME FEEDING
24R	24V STARTER RELAY	38C	FLUORESCENT FEEDING	53C	WIPER & WASHER SYSTEM	76	FUEL TANK GAUGE
24R	SCENIC VIEW SIGNAL ON	39	INTERIOR LTS-DRIVER'S LTS	53E	WIPER & WASHER SYSTEM	76C	LOW FUEL T.T.LT
24SB	24V SOUND SYSTEM FEEDING	39D	INTERIOR LTS - DRIVER' LTS	53J	WIPER & WASHER SYSTEM	76M	FUEL PRIME PUMP
24SS	24V SOUND SYSTEM FEEDING	41	A/C SYS.-COND FAN MOTOR	55	EXTERIOR LTS-HI BEAM	76P	FUEL PRIME PUMP FEEDING
24S1	AMPLIFIER FEEDING	41A	A/C SYS.-COND FAN MOTOR	57	EXTERIOR LTS-HI BEAM	77B	A/C SYS. - LIQ. SOL. VALVE
24S2	AMPLIFIER FEEDING	41B	A/C SYS.-COND FAN MOTOR	57A	EXTERIOR LTS-HI BEAM	77C	A/C & HEAT SYS.- COMPRESSOR
24S3	VIDEO FEEDING	42	A/C SYS.-COND FAN MOTOR	57B	A/C & HEAT SYS.-WATER PUMP	77H	A/C SYS.-LIQ. SOL. VALVE
24S4	VIDEO FEEDING	42A	A/C SYS.-COND FAN MOTOR	57C	A/C & HEAT SYS.-WATER PUMP	81	EXTERIOR LTS-STOP SW
24T	RR JCT PANEL 24V DISC SW	43	PARCEL RACK A/C	57E	A/C & HEAT SYS.-WATER VALV	82	EXTERIOR LTS-STOP SIGNAL
24VA	24 VOLTS BATTERY EQUALIZER	43A	PARCEL RACK A/C	57W	PRE-HEAT WATER HEATER	82A	EXTERIOR LTS-STOP SIGNAL
24VD	24V HOT WIRE FEED	43B	PARCEL RACK A/C	58	EXTERIOR LTS-LO BEAM	82B	EXTERIOR LTS-STOP LTS
24VF	24 VOLTS FRONT DISTRIBUTION	43C	PARCEL RACK A/C	58A	EXTERIOR LTS-LO BEAM	82C	EXTERIOR LTS-STOP LTS
24VI	24 VOLTS IGNITION REAR DIST.	43D	PARCEL RACK A/C	58B	EXTERIOR LTS-LO BEAM	82L	EXT. LTS-STOP LTS & CYCLOP
24VR	24 VOLTS REAR DISTRIBUTION	43E	PARCEL RACK A/C	59A	ENGINE BRAKE SYSTEM	82R	EXTERIOR LTS-STOP LTS
24Y	24 VOLTS POWER GALLEY	43F	PARCEL RACK A/C	61	EXTERIOR LTS-24V FEED SW	83	ENG. CTR-MAST. KEY SW ACC.
24WC	WCL PUMP FEEDING	43G	PARCEL RACK A/C	61A	EXTERIOR LTS-HEAD SIGNAL		
		43M	PARCEL RACK A/C	62	LAVATORY INDICATOR		

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
83A	24V&12V CUT RELAY COIL	112	WORLD TR.-SPARE OUTPUT (+)	128B	PRE-HEAT WATER HEATER	140	ABS SYSTEM-VALVE
83B	24V&12V CUT RELAY COIL	113W	WORLD TR.-REVERSE WARNING	129	WORLD TRANSM-E SOL.	141	ABS SYSTEM-VALVE
84	ENG. CTR-MAST KEY SW START	113Z	ZF TRANSM.- REVERSE	129	PRE-HEAT WATER HEATER	141	WORLD TR.-ENGINE SPEED HI
84A	ENG. CTR-MAST KEY SW START	114	INTERIOR LT-DASH LT RHEOS.	129B	PRE-HEAT WATER HEATER	142	ABS SYSTEM-VALVE
84J	ENG. CTR-MAST KEY SW START	114A	INTERIOR LT-DASH LT RHEOS.	130	WORLD TRANSM-SOL. SUPPLY	143	ABS SYSTEM-SENSOR
85	24V IGNITION SIGNAL	114B	INT. LT-DASH LT RHEOST.FEED	130	EVAP. FAN MAIN CABLE	143A	ABS SYSTEM-SENSOR
85A	24V IGN DASH INSTRUMENT.	115	DDEC -COOLANT LEVEL	130A	EVAP. FAN MAIN CABLE	143A	WORLD TRANS-BATTERY GRD
85C	24V IGNITION - FEED	115W	TRANSM.-DO NOT SHIFT SIGN	131	WORLD TRANSM-D SOL.	143W	WORLD TRANSM-BATTERY GRD
85F	RAD. FAN CONTROL W/RETARD	115W	ZF -CHECK TRANSM. TTLT	132	WORLD TRANSM-ENGINE BRAKE	143X	WORLD TRANSM-BATTERY GRD
85W	OUT SPEED INTERLOCK-24V IGN.	116	WORLD TR.-SOL. SUPPLY	133	GALLEY HEATING CONTAINER	143Y	WORLD TRANSM.BATT.GRD
85X	ABS-24V IGN	116B	A/C & HEAT SYSTEM-DR'S HTR	133A	GALLEY HEATING CONTAINER	143W	FROM GROUND STUD
85Y	ABS-WARNING LT	116C	A/C SYS.-TRIG. DEFROST	133B	GALLEY HEATING CONTAINER	144	ABS SYSTEM-SENSOR
86	ENG. CTR-STARTER SOL.	119	WORLD TRANSM-ENGINE BRAKE	133C	GALLEY HEATING CONTAINER	144A	ABS SYSTEM-SENSOR
86A	ENG. CTR-STARTER RELAY COIL	120	WORLD TRANSM-A SOL.	134	GALLEY HEATING CONTAINER	145	ABS SYSTEM
86F	TELL TALE STARTER ON	121	WORLD TRANSM-SOL.SUPPLY	134A	GALLEY HEATING CONTAINER	146	ABS SYSTEM
86T	TELL TALE STARTER ON	123	WORLD TR.-NEUTRAL START	135	GALLEY HEATING CONTAINER	146A	WORLD TRANSM-12V IGNITION
87B	ENGINE CTR-24V IGNITION	123A	ALARM & SIGNAL-FIRE DETECT.	135A	WORLD TR.-RES MODULE RET.	146AA	WORLD TRANSM-DIAGN.CONN.
88	ENGINE CTR-RR START SIGNAL	123B	ALARM & SIGNAL-FIRE DETECT.	135B	A/C & HEAT SYS.-AIR SENSOR	147	WORLD TRANSM-OIL TEMP
89	ENGINE CTR-RR START SIGNAL	124	WORLD TR.-SENSOR POWER	135C	A/C & HEAT SYS.-AIR SENSOR	147	ABS SYSTEM-VALVE
90	DASH MAGNETIC SWITCH	124A	WORLD TRANSM-SENSOR PWR	136	MICRO-WAVE OVEN SWITCH	147A	ETHER COLD START
90B	ENG. CTR-MAST KEY SW FEED	125	LAVATORY FAN	136A	GALLEY LAMP	147C	ETHER COLD START
91	PARKING BRAKE SW SIGNAL	125	WORLD TR.-RETARDER INDICAT.	136A	WORLD TRANSM-12V BATTERY	148	ABS SYSTEM-VALVE
91A	DDEC -FAST IDLE SIGNAL	125	WORLD TR.-RETARDER INDICAT.	136A1	WORLD TRANSM-12V BATTERY	148	WORLD TR.-OUTPUT SPEED LO
91B	D.R.L. CANCEL RELAY	125W	WORLD TR.-RETARDER INDICAT.	136A2	WORLD TRANSM-12V BATTERY	149	WORLD TR.-TURBINE SPEED H
91C	PARKING BRAKE - T.T.LT	126	24 V IGN. SPEED SWITCH	136AA	WORLD TRANSM-SHIFTER PWR	149	ABS SYSTEM-SENSOR
91J	FAST IDLE - JUMPER SW.	126	24 V IGN. SPEED SWITCH	136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM
91W	WCL PARKING BRAKE SIGNAL	126A	KNEELING SYSTEM	136W	WORLD TRANSM-12V BATTERY	150	WORLD TR.-ENGINE SPEED LO
92	BATT. EQUAL.-CHECK BALANCE	126AA	KNEELING SYSTEM	136X	WORLD TRANSM-12V BATTERY	150A	DDEC -ECM BATTERY GRD
93	BATT. EQUALIZ.-CHECK LO/HI	126B	HI-BUOY SIGNAL	137	WORLD TRANSM-RETARDER	151	DDEC -ECM BATTERY GRD
95A	ENG. BRAKE & RETARDER SYS.	126C	KNEELING SYSTEM	137	RR VIEW MIRROR	151	ATC VALVE
95B	ENG. BRAKE & RETARDER SYS.	126D	KNEELING SYSTEM	137A	RR VIEW MIRROR	152	ATC VALVE
100	INTERIOR LTS RELAY COIL	126F	KNEELING SYSTEM	137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT
100	INDIRECT LTS FEEDING	126G	KNEELING SYSTEM	137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)
100A	INDIRECT LTS RELAY COIL	126H	SPEED SIGN 5NC - 24V	137D	RR VIEW MIRROR	154	ABS SYSTEM-FEED
100B	INDIRECT LTS FEEDING	126H	SPEED SIGN 5NC - 24V	137E	RR VIEW MIRROR	156A	ABS SYSTEM-FEED
100C	INDIRECT LTS FEEDING	126K	KNEELING SYSTEM	137F	RR VIEW MIRROR	157B	ABS SYSTEM
101	24 VOLTS POWER STARTER	126L	KNEELING SYSTEM	137H	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC
101	WORLD TR.- LO SIGN SOL.LO	126P	KNEELING SYSTEM	137I	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW
102	24 VOLTS A/C DISTRIBUTION	126R	KNEELING SYSTEM	137J	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD
102	WORLD TRANSM.-SOL. SUPPLY	126S	KNEELING SYSTEM	137K	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C
102A	BOSCH ALTERNATOR FEEDING	126T	KNEELING SYSTEM	137L	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE
103	WORLD TRANSM.- B.SOL.LO	126W	KNEELING SYSTEM	137M	RR VIEW MIRROR FEED	164	WORLD TR.-RET. ACTUAT. SIGN
103	LOW BUOY SYSTEM	126W	WORLD TRANSM-NOT USED	137R	WORLD TRANSM-RETARDER	164	WORLD TR.-RET. ACTUAT. SIGN
104	WORLD TR. -G SOL.	127	WORLD TRANSM.- H SOL.	137T	MIRROR HEAT SW-JUMPER	165	WORLD TR.-OIL LEVEL SIGNAL
105W	WORLD TR-SOL.-RET.OIL TT.LT	127	24HOT WIRE PREHEAT	138	WORLD TR.-RETARDER TEMP	166	WORLD TRANSM. OUTPUT 7
107	WORLD TR. - SOL. SUPPLY	127A	PRE-HEAT WATER HEATER	138	ABS SYSTEM-SENSOR	167	W. TR.-OUT SPEED INTERLOCK
110	WORLD TR.-F SOL. LO	127B	PRE-HEAT WATER HEATER	138A	ABS SYSTEM-SENSOR	167Z	ZMTEC MODULE
		127S	PRE-HEAT WATER HEATER	139	ABS SYSTEM-VALVE	169	WORLD TRANSM-PRE-SELECT #1
		128	WORLD TRANSM-B SOL.	139	WORLD TR.-OUTPUT SPEED HI	170	WORLD TRANSM-SHIFTER
		128A	PRE-HEAT WATER HEATER	140	WORLD TR.-TURBINE SPEED LO	170C	LUGGAGE DOOR LOCK-T.T.LT

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
170D	LUGGAGE DOOR LOCK-FEED	254	GALLEY REFRIGERATOR	564	DDEC-DIGITAL OUTPUT		
170E	LUG. DOOR LOCK-UNLOCK SIGN	254A	GALLEY REFRIGERATOR	565	DDEC-ENGINE BRAKE ACTIVE		
170F	LUGGAGE DOOR LOCK-FEED	254F	GALLEY REFRIGERATOR	583	DDEC-ENGINE BRAKE 4 CYL.		
170G	LUGGAGE DOOR LOCK-FEED	255	GALLEY COFFEEMAKER	700	J1587(+)		
170K	LUGGAGE DOOR-LOCK SIGN	255A	GALLEY COFFEEMAKER	701	J1587(-)		
170L	LUGG DOOR LOCK-SIGN T.T.LT	255B	GALLEY COFFEEMAKER	705	ZF SIGNALS		
170N	LUGG DOOR LOCK-SIGN T.T.LT	260	WINDOW AJAR-T.T.LT	706	ZF SIGNALS		
170R	LUGG DOOR LOCK-SIGN. T.T.LT.	290	FAN CLUTCH RADIATOR-FEED	707	ZF SIGNALS		
170S	LUGG DOOR LOCK-SIGN T.T.LT	290A	FAN CLUTCH RADIATOR-FEED	717	ZF SIGNALS		
170T	LUGG DOOR LOCK-SIGN T.T.LT	291	FAN CLUTCH RADIATOR SPD 1	718	ZF SIGNALS		
170V	LUGG DOOR LOCK-SIGN T.T.LT	292	FAN CLUTCH RADIATOR SPD 2	719	ZF SIGNALS		
170W	LUGGAGE DOOR LOCK-FEED	292J	FAN OVERRIDE LTS SWITCH	720	ZF SIGNALS		
170X	LUGG DOOR LOCK-SIGN T.T.LT	300	WCL POWER SYSTEM & ACCESS.	740	EASY START VALVE		
170Y	LUGGAGE DOOR LOCK-FEED	300A	WCL POWER SYSTEM SW.	900	DDEC-DATA LINK (+)		
170Z	LUGGAGE DOOR LOCK	301J	WCL POWER SW. JUMPER LED	901	DDEC-DATA LINK (-)		
171	WORLD TRANSM-SHIFTER	301	WCL SIGNAL POWER SW.	908	DDEC-HYDRAU. PWM#1 OUTPUT		
172	WORLD TRANSM-SHIFTER	302	WCL DOOR AJAR TTLT & ALARM	916	DDEC-SENSOR SUPPLY (5VDC)		
173	WORLD TRANSM-SHIFTER	304	WCL DOOR TOP LT.	925	J1939(+)		
174	WORLD TRANSM-SHIFTER	305	WCL PARKING BRAKE SOL. VALVE	926	J1939(-)		
175A	WORLD TRANSM-SHIFTER	305A	WCL DOOR OPEN SIGNAL	927	J1939(SHIELD)		
176	WORLD TRANSM-SHIFTER	305B	WCL DOOR TOP LT.	952	DDEC-SENSOR RETURN		
180	OUTSIDE TEMP. DISPLAY	306	WCL CONTROL SYSTEM	953	DDEC-BATTERY GRD		
180A	OUTSIDE TEMP. DISPLAY	307	WCL CONTROL SYSTEM	979	DDEC-ENGINE BRAKE 2 CYL.		
180A	WORLD TRANSM-SHIFTER	308	WCL CONTROL SYSTEM	2123	FLASHER SIGNAL LTS		
180B	OUTSIDE TEMP. DISPLAY	309	WCL CONTROL SYSTEM				
180C	OUTSIDE TEMP. DISPLAY	417	DDEC-LIMIT SPEED GOVERNOR				
181	FROZEN POINT T.T.LT	419	DDEC -CHEK ENGINE LIGHT				
181A	TEMP. CTR'L INSIDE SENSOR	439	DDEC-12V IGNITION				
181B	TEMP. CTR'L INSIDE SENSOR	451	DDEC-A/C FAN CLUTCH				
181C	THERMOMET. OUTSIDE SENSOR	499	DDEC-OUTPUT PWR SHUTDOWN				
181D	THERMOMET. OUTSIDE SENSOR	505	DDEC-TACHOMETER DRIVE				
195	WORLD TRANSM-TRANS ID	509	DDEC-STOP ENGINE LIGHT				
197	FUEL WATER FILTER	510	DDEC-FAST IDLE SIGNAL				
197A	FUEL WATER FILTER	524	DDEC-ENGINE BRAKEDISABLE				
		524B	ZF THROTTLE				
201	WORLD TRANSM-SPARE	525	DDEC-FAST IDLE SIGNAL				
202	WORLD TRANSM-SPARE	528	DDEC-STOP ENG. OVERRIDE				
203	WORLD TRANSM-SPARE	531	DDEC-CRUISE CLUTCH CUT OUT				
204	WORLD TRANSM-SPARE	540	DDEC-CRUISE ENABLE T.T.LT				
214	WORLD TR.-BACK-UP SIGNAL	541	DDEC-CRUISE SET SW				
231	WORLD TR.-NEUTRAL SIGN GRD	542	INPUT PARK BRAKE INTERLOCK				
231F	WORLD TR.-NEUTRAL SIGN GRD	543	DDEC-CRUISE BRAKE PEDAL				
231W	W.TR.-NEUTRAL SIGN GRD WCL	544	DDEC-CRUISE ON/OFF SW				
231Z	ZF NEUTRAL SIGNAL	545	DDEC-CRUISE RESUME SW				
240	DDEC -ECM 12V FEEDING	555	DDEC-FAN CLUTCH SPEED#1				
241	DDEC -ECM 12V FEEDING	556	DDEC-VEHICULE SPEED (+)				
253	24V SIGNAL GALLEY INVERTER	557	DDEC-VEHICULE SPEED (-)				
		563	DDEC-FAN CLUTCH SPEED#2				