

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A1	RADIO SYSTEM	C15	AUDIO AMPLI	SP8	SPARE WIRE	SP69	SPARE WIRE
A2	RADIO SYSTEM	D1	PASSENGER SPEAKER	SP9	SPARE WIRE	SP70	SPARE WIRE
A3	AUDIO AMPLI	D2	PASSENGER SPEAKER	SP10	SPARE WIRE	SP71	SPARE WIRE
A8	VIDEO SYSTEM	D3	PASSENGER SPEAKER	SP11	SPARE WIRE	SP72	SPARE WIRE
A9	RADIO SYSTEM	D4	PASSENGER SPEAKER	SP12	SPARE WIRE	SP74	SPARE WIRE
A10	AUDIO AMPLI	D4S	PASSENGER SPEAKER	SP13	SPARE WIRE	SP75	SPARE WIRE
A11	AUDIO AMPLI	D5	PASSENGER SPEAKER	SP14	SPARE WIRE	SP76	SPARE WIRE
A12	AUDIO AMPLI	D6	PASSENGER SPEAKER	SP15	SPARE WIRE	SP77	SPARE WIRE
A13	AUDIO AMPLI	D7	PASSENGER SPEAKER	SP16	SPARE WIRE	SP78	SPARE WIRE
A15	AUDIO AMPLI	D8	PASSENGER SPEAKER	SP17	SPARE WIRE	SP80	SPARE WIRE
A16	VIDEO SYSTEM	DR1	DRIVER'S SPEAKER	SP18	SPARE WIRE	SP81	SPARE WIRE
B1	MICROPHONE	DR2	DRIVER'S SPEAKER	SP19	SPARE WIRE	SP82	SPARE WIRE
B2	MICROPHONE	DR3	DRIVER'S SPEAKER	SP20	SPARE WIRE	SP83	SPARE WIRE
B3	MICROPHONE	DR4	DRIVER'S SPEAKER	SP21	SPARE WIRE	SP84	SPARE WIRE
B4	MICROPHONE	G1	PASSENGER SPEAKER	SP23	SPARE WIRE	SP85	SPARE WIRE
B5	MICROPHONE	G2	PASSENGER SPEAKER	SP24	SPARE WIRE	SPZ1	SPARE WIRE-ZF TRANSM.
B6	MICROPHONE	G3	PASSENGER SPEAKER	SP25	SPARE WIRE	SPZ2	SPARE WIRE-ZF TRANSM.
B7	MICROPHONE	G4	PASSENGER SPEAKER	SP26	SPARE WIRE	SPZ3	SPARE WIRE-ZF TRANSM.
B8	MICROPHONE	G5	PASSENGER SPEAKER	SP27	SPARE WIRE	SPZ4	SPARE WIRE-ZF TRANSM.
B10	MICROPHONE	G6	PASSENGER SPEAKER	SP28	SPARE WIRE	SPZ5	SPARE WIRE-ZF TRANSM.
B11	MICROPHONE	G7	PASSENGER SPEAKER	SP30	SPARE WIRE	SPZ6	SPARE WIRE-ZF TRANSM.
B12	MICROPHONE	G8	PASSENGER SPEAKER	SP33	SPARE WIRE	TW1	TWISTED SPARE
B1A	FLUORESCENT BALLAST	G8S	PASSENGER SPEAKER	SP34	SPARE WIRE	TW2	TWISTED SPARE
B1B	FLUORESCENT BALLAST	IPJ1	CLUSTER - BULB TEST POS	SP35	SPARE WIRE	W1	STEERING BOX CONVERTER
B2A	FLUORESCENT BALLAST	IPJ2	CLUSTER - BULB TEST NEG.	SP36	SPARE WIRE	W2	STEERING BOX CONVERTER
B2B	FLUORESCENT BALLAST	IPJ5	CLUSTER - FUEL GAUGE	SP37	SPARE WIRE	Y1A	FLUORESCENT BALLAST
B3A	FLUORESCENT BALLAST	IPJ6	CLUSTER - BULB TEST POS.	SP38	SPARE WIRE	Y1B	FLUORESCENT BALLAST
B3B	FLUORESCENT BALLAST	IPJ7	CLUSTER - BULB TEST NEG.	SP40	SPARE WIRE	Y2A	FLUORESCENT BALLAST
B4A	FLUORESCENT BALLAST	IPJ8	CLUSTER - MASTER WARNING	SP41	SPARE WIRE	Y2B	FLUORESCENT BALLAST
B4B	FLUORESCENT BALLAST	L8	WATER TANK HEATER	SP42	SPARE WIRE	Y3A	FLUORESCENT BALLAST
B5A	FLUORESCENT BALLAST	L9	WATER TANK HEATER	SP43	SPARE WIRE	Y3B	FLUORESCENT BALLAST
B5B	FLUORESCENT BALLAST	LX5	CLUSTER - COMPUTER MODE	SP44	SPARE WIRE	Y4A	FLUORESCENT BALLAST
B6A	FLUORESCENT BALLAST	LX6	CLUSTER - COMPUTER DOWN	SP45	SPARE WIRE	Y4B	FLUORESCENT BALLAST
B6B	FLUORESCENT BALLAST	LX7	CLUSTER - COMPUTER SET	SP48	SPARE WIRE	Y5A	FLUORESCENT BALLAST
B7A	FLUORESCENT BALLAST	LX16	CLUSTER - COMPUTER UP	SP50	SPARE WIRE	Y5B	FLUORESCENT BALLAST
B7B	FLUORESCENT BALLAST	LX21	CLUSTER - COMPUTER COM.	SP51	SPARE WIRE	Y6A	FLUORESCENT BALLAST
B14	RADIO SYSTEM	R1A	FLUORESCENT BALLAST	SP52	SPARE WIRE	Y6B	FLUORESCENT BALLAST
B15	RADIO SYSTEM	R1B	FLUORESCENT BALLAST	SP53	SPARE WIRE	Y7A	FLUORESCENT BALLAST
C2	RADIO SYSTEM	RT	T.T.L.T. MODULE - TEST SW.	SP54	SPARE WIRE	Y7B	FLUORESCENT BALLAST
C3	CONTROL HEAD ANTENNA	SPK1	PASSENGER SPEAKER	SP55	SPARE WIRE	0	BATTERY - MAIN GROUND
C5	VIDEO SYSTEM	SPK2	PASSENGER SPEAKER	SP56	SPARE WIRE	0	EVAP. COMPT. GROUND
C6	CONTROL HEAD DIMMER	SPK3	PASSENGER SPEAKER	SP57	SPARE WIRE	0	RJB - INSIDE GRD
C7	RADIO SYSTEM	SPK4	PASSENGER SPEAKER	SP60	SPARE WIRE	0	WCL MODULE
C8	AUDIO AMPLI	SP1	SPARE WIRE	SP61	SPARE WIRE	0	INVERTER CUT OFF RELAY
C9	VIDEO SYSTEM	SP2	SPARE WIRE	SP62	SPARE WIRE	0A	LAVATORY ACCESSORIES
C10	VIDEO SYSTEM	SP3	SPARE WIRE	SP63	SPARE WIRE	0A	EVAP. FAN GROUND
C11	VIDEO SYSTEM	SP4	SPARE WIRE	SP64	SPARE WIRE	0A	FR. ROOF ACC. GRD
C12	VIDEO SYSTEM	SP5	SPARE WIRE	SP65	SPARE WIRE	0B	BOOSTER BLOCK GROUND
C13	VIDEO SYSTEM	SP6	SPARE WIRE	SP66	SPARE WIRE	0B	A/C - CONDENSER GRD
C14	VIDEO SYSTEM	SP7	SPARE WIRE	SP67	SPARE WIRE	0B	24V&12V CUT OUT REL.COIL

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
0BE	OV BATTERY MONITOR	0SF	PARCEL RACK LTS SWITCH	4C	HOTESS CHIME P. RACK SW.	12H	12V IGN. DASH ACCESS.
0C	R.J.B. - GRB	0SG	PARCEL RACK LTS SWITCH	5	AISLE LTS FEEDING	12I	RR JCT BOX 12V IGNITION
0C	MOTOR STARTER GROUND	0SH	PARCEL RACK LTS SWITCH	5N	EMERGENCY LTS	12I	FR JCT PANEL 12V IGNITION
0C	F.R. SERV. CPT- ACC.	0SJ	PARCEL RACK LTS SWITCH	5N0	SPEED SIGNAL HIGHER 5MPH	12IA	FR JCT PANEL 12V IGNITION
0C1	ENTRANCE DOOR SEDAN	0SS	SOUND SYSTEM GROUND	5NC	SPEED SIGNAL LOWER 5MPH	12IA	RR JCT PANEL 12V IGNITION
0C2	STEERING CONTROL GROUND	00SS	SOUND SYSTEM GROUND	6	AISLE LTS	12IB	FR JCT PANEL 12V IGNITION
0C3	SOUND SYSTEM RELAY	0S2	RADIO GROUND	7B	ENTRANCE DOOR FEED.-24V HW	12IB	STEERING BOX ECU FEEDING
0C4	F.J.B. GRD	0S3	VIDEO GROUND	9	INTERIOR LTS-ENGINE CPT	12IE	ABS-FR JCT PANEL 12V IGN.
0CJ	CRUISE SW. JUMPER	0S3A	VIDEO GROUND	9F	INTERIOR LTS - FR-SERV. CPT	12IZ	ZF TRANSM. IGNITION
0D	FLUORESCENT GRD	0S3B	VIDEO GROUND	10	INTERIOR LTS-LUGGAGE CPT	12IN	12 VOLTS DISC.SW. INTERCOM
0D	COND FAN GRD	0S3C	VIDEO GROUND	10	INTERIOR LTS-FR SERV. CPT	12J	FR JCT PANEL 12V DISC.SW.
0E	BATT. COMPT. LTS GROUND	0S3D	VIDEO GROUND	10A	INTERIOR LTS-LUGGAGE CPT	12K	FR JCT PANEL 12V DISC.SW.
0E	READING LIGHTS GROUND	0S3E	VIDEO GROUND	10A	AUX. COMPRESSOR CLUTCH	12L	CORNERING LTS FEEDING
0F	FLUORESCENT GRD	0T	LAVATORY FAN & PUMP	10A	INTERIOR LTS-LUGGAGE CPT	12LX	CLUSTER 12V HOT WIRE
0F	PRO-DRIVER GROUND	0T	SPEED SW. CONNECTOR	10B	INTERIOR LTS-LUGGAGE CPT	12M	ABS-FR JCT PNL 12V DISC.SW
0G	READING LIGHTS GROUND	0T1	DASH ACC. GROUND	10C	INTERIOR LTS-LUGGAGE CPT	12P	12V BATTERY JCT BLOCK
0H	ENG. CPT. - ACC. GRD	0T2	CLUSTER ACC. GROUND	10E	INTERIOR LTS-BATTERY CPT	12R	12V MEMORY RADIO
0IN	INTERCOM SYSTEM	0T2	WINDOW AWNING	10H	AUX. COMPRESSOR CLUTCH	12P	12V POWER OUTLET
0J	PARCEL RACK A/C UNIT	0T3	ALTERNATOR MODULE	10L	AUX. COMPRESSOR CLUTCH	12SB	12V SOUND SYSTEM FEEDING
0K	PARCEL RACK A/C UNIT	0T4	12V OUTLET - CTR MODULE	10X	AUX. COMPRESSOR CLUTCH	12SS	12V SOUND SYSTEM FEEDING
0L	ENG.CPT -CLEAR.LTS RR ROOF	0T5	FS.HVAC DASH MODULE. GND	11	DESTINATION SIGN	12S	12V RADIO FEEDING
0L	R.J.B. - GRD	0T6	FS-DDR GROUND	11A	DESTINATION SIGN	12S1	12V RADIO FEEDING
0L	FR - SIDE MARK. & FLASH GRD	0VA	BATTERY EQUALIZER GROUND	11B	DESTINATION SIGN	12S1A	12V DVD KARAOKE FEEDING
0L1	ENG.CPT-SIDE MARK. & FL. GRD	0W	FJB - TRANSM. RLY GRD	11C	DESTINATION SIGN	12S2	12V RADIO FEEDING
0L2	HEAD LTS GROUND	0W	SHIFT SELECTOR GROUND	11D	DESTINATION SIGN	12S2A	12V DVD KARAOKE FEEDING
0L3	FR.SERV.DR. & ENT.DOOR GRD	0W	WCL MODULE	11E	DESTINATION SIGN	12T	RR JCT BOX 12V DISC SW
0L4	FOG LTS RESISTOR GRD	0WA	WCL DOOR AJAR	11K	DESTINATION SIGN	12VA	12V BATTERY EQUALIZER
0L5	LH CONSOL - ACC. GRD	0WC	WCL BATTERY CPT. ACCES.	11J	DESTINATION SIGN	12VB	FR JCT PANEL 12V DISC SW
0L5	W.C.L.DOOR	0WL	WCL SIGNAL DOOR AJAR ALARM	11P	DESTINATION SIGN	12VD	12V HOT WIRE DISTRIBUTION
0L6	MARKER&FLASH. GROUND	0Y1	ABS SYSTEM-GRD	12	12V ELECTRONIC TERMINAL	12VE	FR JCT PANEL 12V DISC SW
0L7	AISLE LIGHTS GROUND	0Y2	ABS SYSTEM-GRD	12A	FR JCT PANEL 12V DISC SW	12VF	12 VOLTS FRONT DISTRIBUTIUON
0L8	DOCKING LTS	0Y3	ABS SYSTEM-GRD	12A	BATT. JCT PANEL 12V DISC SW	12VG	RR JCT PANEL 12V DISC SW
0LV	WINDSHIELD WASHER LEVEL	0Y4	ABS SYSTEM-GRD	12B	FR JCT PANEL 12V DISC SW	12VI	12V IGNITION DISTRIBUTION
0M	WIPER 2 MIRROR MOTOR	0Y5	ABS SYSTEM-GRD	12BE	12V BATTERY MONITOR	12VO	12V BATTERY EQUALIZER
0M3	DEFROST GRD	0Y6	ABS SYSTEM-GRD	12C	FR JCT PANEL 12V DISC SW	12VR	12V REAR DISTRIBUTION
0M4	HORN & DR'S WINDOW LIFTER	0Z1	ZF TRANSM. GRD	12C	RR JCT BOX 12V DISC SW	12W	12V HOT WIRE DDEC FEEDING
0M5	SUN VISOR MOTOR	0Z2	ZF TRANSM. GRD	12D	BATT. JCT PANEL 12V HOT WIRE	12WA	ENTRANCE DOOR SYSTEM
0M6	UPPER FAN DEFROST	00A	ELECTRONIC TERMINAL GROUND	12D	FR JCT PANEL 12V HOT WIRE	12WR	WCL DOOR TOP LT
0M7	DR'S WIND.LIFT. & RH MIR. SW	00F	FRONT ELECTRONIC GROUND	12D	RR JCT PANEL 12V HOT WIRE	14	LAVATORY PUMP
0M7A	LH MIRROR SW.	2B	A/C & HEAT SYSTEM	12DD	FR JCT PANEL 12V HOT WIRE	14A	LAVATORY PUMP- P.BUTTON
0P	ENG.CDT - PRE-HEATER	2D	A/C & HEAT SYSTEM	12DDR	FR JCT BOX 12V HOT DDR CONN	14P	LAVATORY PUMP
0P1	A/C COMPRESSOR GRD	2DD	A/C & HEAT SYSTEM	12DT	T.T. LT MODULE	15	WIPER & WASHER FEEDING
0R	SOUND SYSTEM RELAY GROUND	2E	A/C & HEAT SYSTEM	12DZ	ZF TRANSM. 12V HOT WIRE	16	SPEEDOMETER (+)
0SA	BOSCH ALTERNATOR GROUND	2EE	A/C & HEAT SYSTEM	12E	FR JCT PANEL 12V DISC SW	16T	SPEED SW SIGNAL IN (+)
0SA	PARCEL RACK LTS SWITCH	2F	A/C & HEAT SYS.-EVAP. SPEED	12F	RR JCT PANEL 12V DISC SW	17	EXTERIOR LTS-FLASHER UNIT
0SB	PARCEL RACK LTS SWITCH	2H	A/C & HEAT SYS-LO-PRESS SW.	12F1	FR JCT PANEL 12V DISC SW	17A	EXTERIOR LTS-FLASHER UNIT
0SC	PARCEL RACK LTS SWITCH	2L	A/C & HEAT SYS-HI-PRESS SW.	12F2	FR JCT PANEL 12V DISC SW	17C	JUMPER LTS SW. - HAZARD
0SE	PARCEL RACK LTS SWITCH	4A	HOTESS CHIME MAIN SWITCH	12FL	RR JCT PANEL 12V DISC SW	18	UPPER FAN DEFROST
				12FT	RR JCT PANEL 12V DISC SW	19	UPPER FAN DEFROST
				12G	FR JCT PANEL 12V DISC SW	20	SPEEDOMETER SIGNAL (-)

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
21	LEFT DIRECTIONNAL LTS	24S1	AMPLIFIER FEEDING	30A	GALLEY SWITCH SIGNAL	48C	ENTRANCE DOOR SYSTEM
21A	LEFT DIRECTIONNAL LTS SIGN.	24S1A	AMPLIFIER FEEDING	30J	GALLEY SWITCH LED	48D	ENTRANCE DOOR SYSTEM
21B	HAZARD SWITCH SIGNAL	24S1B	AMPLIFIER FEEDING	31B	WIPER & WASHER SYSTEM	48W	ENTRANCE DOOR SEDAN
21BB	LEFT DIRECTIONNAL LTS FEED.	24S1C	AMPLIFIER FEEDING	32	EXTERIOR LTS-BACK-UP	49	ENTRANCE DOOR CLOSE SIGNAL
21H	EXTERIOR LTS-HAZARD SIGNAL	24S1D	AMPLIFIER FEEDING	32B	EXTERIOR LTS-BACK-UP	49A	ENTRANCE DOOR SYSTEM
21M	AUX. LTS - DIRECTIONAL LH	24S1E	AMPLIFIER FEEDING	35	ENTRANCE STEP LIGHTS	49B	ENTRANCE DOOR SYSTEM
23	RIGHT DIRECTIONNAL LTS	24S2	AMPLIFIER FEEDING	36	ENGINE BRAKE SYSTEM	50	AD-9 AIR DRYER
23A	RIGHT DIRECTIONNAL LTS SIGN.	24S3	VIDEO FEEDING	36A	ENGINE BRAKE SYSTEM & RET.	52	ALARM & SIGNAL-ELEC.HORN
23BB	RIGHT DIRECTIONNAL LTS FEED.	24S3A	VIDEO FEEDING	37	LAVATORY LTS FEEDING	52A	ALARM & SIGNAL-ELEC.HORN
23H	EXTERIOR LTS-HAZARD SIGNAL	24S3B	VIDEO FEEDING	38	FLUORESCENT RELAY FEEDING	52B	PNEUMATIC HORN
23K	RIGHT DIRECT. LTS W/KNELLING	24S3C	VIDEO FEEDING	38A	R.H FLUORESCENT	53	ALARM & SIGNAL-ELEC.HORN
23M	AUX LTS - DIRECTIONAL RH	24S3D	VIDEO FEEDING	38B	L.H. FLUORESCENT	53B	WIPER & WASHER SYSTEM
24	24 VOLTS BATTERY DIST.	24S3E	VIDEO FEEDING	38C	FLUORESCENT FEEDING	53C	WIPER & WASHER SYSTEM
24	24 V. DISC. FRONT DIST.	24S3F	VIDEO FEEDING	39	INTERIOR LTS-DRIVER'S LTS	53E	WIPER & WASHER SYSTEM
24A	BATT. JCT PANEL 24V DISC SW	24S3G	VIDEO FEEDING	39D	INTERIOR LTS - DRIVER' LTS	53J	WIPER & WASHER SYSTEM
24A	24V BOOSTER BLOCK	24S3H	VIDEO FEEDING	41	A/C SYS.-COND FAN MOTOR	55	EXTERIOR LTS-HI BEAM
24A	FR JCT PANEL 24V DISC. SW	24S3I	VIDEO FEEDING	41A	A/C SYS.-COND FAN MOTOR	57	EXTERIOR LTS-HI BEAM
24A	RR JCT PANEL 24V DISC. SW	24S3J	VIDEO FEEDING	41B	A/C SYS.-COND FAN MOTOR	57A	EXTERIOR LTS-HI BEAM
24BE	BATTERY MONITOR	24S4	VIDEO FEEDING	42	A/C SYS.-COND FAN MOTOR	57B	A/C & HEAT SYS.-WATER PUMP
24C	FR JCT PANEL 24V DISC SW	24T	RR JCT PANEL 24V DISC SW	42A	A/C SYS.-COND FAN MOTOR	57C	A/C & HEAT SYS.-WATER PUMP
24D	24 V. HOT WIRE FEEDING	24VA	24 VOLTS BATTERY EQUALIZER	43	PARCEL RACK A/C	57E	A/C & HEAT SYS.-WATER VALV
24D	FR JCT BOX 24V HOT WIRE	24VD	24V HOT WIRE FEED	43A	PARCEL RACK A/C	57W	PRE-HEAT WATER HEATER
24DD	FR JCT BOX 24V HOT WIRE	24VF	24 VOLTS FRONT DISTRIBUTION	43B	PARCEL RACK A/C	58	EXTERIOR LTS-LO BEAM
24DS	WIRELSS MICRO FEEDING	24VI	24 VOLTS IGNITION REAR DIST.	43C	PARCEL RACK A/C	58A	EXTERIOR LTS-LO BEAM
24DZ	ZF TRANSM. 24V HOT WIRE	24VR	24 VOLTS REAR DISTRIBUTION	43D	PARCEL RACK A/C	58B	EXTERIOR LTS-LO BEAM
24E	24 VOLTS POWER DISTRIBUTION	24V	24 VOLTS POWER GALLEY	43E	PARCEL RACK A/C	59A	ENGINE BRAKE SYSTEM
24E	RR JCT PANEL 24V DISC SW	24WC	WCL PUMP FEEDING	43F	PARCEL RACK A/C	61	EXTERIOR LTS-24V FEED SW
24F	RR JCT PANEL 24V DISC SW	24WL	WCL PUMP FEEDING	43G	PARCEL RACK A/C	61A	EXTERIOR LTS-HEAD SIGNAL
24G	FR JCT PANEL 24V DISC SW	24WR	WCL POWER ACCES.	43M	PARCEL RACK A/C	62	LAVATORY INDICATOR
24H	RR JCT PANEL 24V DISC SW	25	EITHER ALTERNAT. RUN SIGNAL	43X	PARCEL RACK A/C	63	EXTERIOR LTS-CLEAR. FEED
24I	FR JCT PANEL 24V IGNITION	25A	TT.LT. ALTERNATOR #1	44	EXTERIOR LTS-FOG	63B	EXTERIOR LTS-CLEARANCE
24IA	RR JCT PANEL 24V IGNITION	25A1	BOSCH ALTERNATOR SIGNAL D+	44A	EXTERIOR LTS-FOG	63C	EXT. LTS-MARKER SIGNAL
24IA	FR JCT PANEL 24V IGNITION	25A2	BOSCH ALTERNATOR SIGNAL D+	44B	EXTERIOR LTS-FOG	63D	BLINKER RELAY
24IB	FR JCT PANEL 24V IGNITION	25B	EXT. LTS-DAYTIME RUN LTS	44C	FOG,LTS & HVAC FEEDING	63E	BLINKER RELAY
24IF	FR JCT PANEL 24V IGNITION	25D	BOTH ALTERNATOR RUN SIGNAL	44D	EXTERIOR LTS - FOG	63F	EXT. LTS-MARKER BLINKER
24IZ	ZF TRANSM. IGNITION	25K	T.T LT. ALTERNATOR #2	44E	EXTERNAL LTS - FOG	64	DRIVER'S FAN SPEED CTR
24K	RR JCT PANEL 24V DISC SW	26	DR'S & ENT. WINDOW LIFTER	45A	A/C & HEAT SYSTEM FULL AIR	64A	A/C SPARE
24L	RR JCT PANEL 24V DISC SW	26A	CIGAR LIGHT. & POW.OUTLET LH	45B	A/C & HEAT SYS.-WATER PUMP	64B	A/C SPARE
24M	RR JCT PANEL 24V DISC SW	26B	DRIVER'S WINDOW LIFTER	45C	A/C & HEAT SYS.-WATER VALV	65	FOOT DAMPER MOTOR
24P	FR JCT PANEL 24V DISC SW	26C	DRIVER'S WINDOW LIFTER	45D	A/C & HEAT SYS.-WATER VALV	65A	FOOT DAMPER MOTOR
24P2	RR BENCH- INVERTER	27	LAVATORY ALARM	45G	A/C & HEAT SYS.-DR'S HTR	65D	DRIVER'S REC. DAMPER
24PV	RR BENCH- INVERTER	28H	T.T.LT MODULE - HI A/C PRES.	45H	A/C & HEAT SYS.-EVAP. SPEED	65E	DRIVER'S REC. DAMPER L.H.
24R	24V STARTER RELAY	28T	T.T.LT MODULE - LO A/C PRES.	46	EXTERIOR LTS-MARKER	65F	DRIVER'S REC. DAMPER L.H.
24R	SCENIC VIEW SIGNAL ON	29	A/C & HEAT SYS.-DR'S HTR	46A	EXTERIOR LTS-AUX LTS RESIS.	66	A/C PASSENGER - ON/OFF
24SB	24V SOUND SYSTEM FEEDING	29H	HVAC DASH MODILE	46C	EXTERIOR LTS-MARKER	67A	A/C & HEAT SYSTEM
24SS	24V SOUND SYSTEM FEEDING			46D	EXTERIOR LTS-AUX LTS RESIS.	68	DASH & DEFROST DAMPER MOT
				48	ENTRANCE DOOR OPEN SIGNAL	68A	DASH & DEFROST DAMPER MOT
				48A	ENTRANCE DOOR OPEN SOL.	69	DAMPER MIX LIMIT SWITCH
				48B	ENTRANCE DOOR OPEN SIGNAL	70	HAT RACK & NIGHT LTS

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
	FEEDING	90	DASH MAGNETIC SWITCH	124A	WORLD TRANSM-SENSOR PWR	136A	WORLD TRANSM-12V BATTERY
72	SUN VISOR - FEED	90B	ENG. CTR-MAST KEY SW FEED	125	LAVATORY FAN	136A1	WORLD TRANSM-12V BATTERY
72A	SUN VISOR RH	91	PARKING BRAKE SW SIGNAL	125	WORLD TR.-RETARDER INDICAT.	136A2	WORLD TRANSM-12V BATTERY
72B	SUN VISOR RH	91A	DDEC -FAST IDLE SIGNAL	125W	WORLD TR.-RETARDER INDICAT.	136AA	WORLD TRANSM-SHIFTER PWR
72C	SUN VISOR LH	91B	D.R.L. CANCEL RELAY	126	24 V IGN. SPEED SWITCH	136V	WORLD TRANSM-12V BATTERY
72D	SUN VISOR LH	91C	PARKING BRAKE - T.T.LT	126	KNEELING SYSTEM	136W	WORLD TRANSM-12V BATTERY
74	R.H. READING LAMP FEEDING	91J	FAST IDLE - JUMPER SW.	126A	KNEELING SYSTEM	136X	WORLD TRANSM-12V BATTERY
74A	R.H. HOTESS CHIME FEEDING	91W	WCL PARKING BRAKE SIGNAL	126AA	KNEELING SYSTEM	137	WORLD TRANSM-RETARDER
74B	WCL R.H. READING LAMP FEED.	92	BATT. EQUAL.-CHECK BALANCE	126B	HI-BUOY SIGNAL	137	RR VIEW MIRROR
74D	READING LAMP SWITCH	93	BATT. EQUALIZ.-CHECK LO/HI	126C	KNEELING SYSTEM	137A	RR VIEW MIRROR
74J	READING LAMP INDICATOR SW.	95A	ENG. BRAKE & RETARDER SYS.	126D	KNEELING SYSTEM	137B	RR VIEW MIRROR
75	L.H. READING LAMP FEEDING	95B	ENG. BRAKE & RETARDER SYS.	126F	KNEELING SYSTEM	137C	RR VIEW MIRROR
75A	L.H. HOTESS CHIME FEEDING	100	INTERIOR LTS RELAY COIL	126G	KNEELING SYSTEM	137D	RR VIEW MIRROR
76	FUEL TANK GAUGE	100	INDIRECT LTS FEEDING	126H	SPEED SIGN 5NC - 24V	137E	RR VIEW MIRROR
76C	LOW FUEL T.T.LT	100A	INDIRECT LTS RELAY COIL	126K	KNEELING SYSTEM	137F	RR VIEW MIRROR
76M	FUEL PRIME PUMP	100B	INDIRECT LTS FEEDING	126L	KNEELING SYSTEM	137H	RR VIEW MIRROR
76P	FUEL PRIME PUMP FEEDING	100C	INDIRECT LTS FEEDING	126P	KNEELING SYSTEM	137J	RR VIEW MIRROR
77B	A/C SYS. - LIQ. SOL. VALVE	101	24 VOLTS POWER STARTER	126R	KNEELING SYSTEM	137K	RR VIEW MIRROR
77C	A/C & HEAT SYS.-COMPRESSOR	101	WORLD TR.- LO SIGN SOL.LO	126S	KNEELING SYSTEM	137L	RR VIEW MIRROR
77H	A/C SYS.-LIQ. SOL. VALVE	102	24 VOLTS A/C DISTRIBUTION	126T	KNEELING SYSTEM	137M	RR VIEW MIRROR FEED
81	EXTERIOR LTS-STOP SW	102	WORLD TRANSM.-SOL. SUPPLY	126W	KNEELING SYSTEM	137R	WORLD TRANSM-RETARDER
82	EXTERIOR LTS-STOP SIGNAL	102A	BOSCH ALTERNATOR FEEDING	126W	WORLD TRANSM-NOT USED	137T	MIRROR HEAT SW-JUMPER
82A	EXTERIOR LTS-STOP SIGNAL	103	WORLD TRANSM.- B.SOL.LO	127	WORLD TRANSM. - H SOL.	138	WORLD TR.-RETARDER TEMP
82B	EXTERIOR LTS-STOP LTS	103	LOW BUOY SYSTEM	127	24HOT WIRE PREHEAT	138	ABS SYSTEM-SENSOR
82C	EXTERIOR LTS-STOP LTS	104	WORLD TR. -G SOL.	127A	PRE-HEAT WATER HEATER	138A	ABS SYSTEM-SENSOR
82L	EXT. LTS-STOP LTS & CYCLOP	105W	WORLD TR-SOL.-RET.OIL TT.LT	127B	PRE-HEAT WATER HEATER	139	ABS SYSTEM-VALVE
82R	EXTERIOR LTS-STOP LTS	107	WORLD TR. - SOL. SUPPLY	127S	PRE-HEAT WATER HEATER	139	WORLD TR.-OUTPUT SPEED HI
83	ENG. CTR-MAST. KEY SW ACC.	110	WORLD TR.- F SOL. LO	128	WORLD TRANSM-B SOL.	140	WORLD TR.-TURBINE SPEED LO
83A	24V&12V CUT RELAY COIL	112	WORLD TR.-SPARE OUTPUT (+)	128A	PRE-HEAT WATER HEATER	140	ABS SYSTEM-VALVE
83B	24V&12V CUT RELAY COIL	113W	WORLD TR.-REVERSE WARNING	128B	PRE-HEAT WATER HEATER	141	ABS SYSTEM-VALVE
84	ENG. CTR-MAST KEY SW START	113Z	ZF TRANSM.- REVERSE	129	WORLD TRANSM-E SOL.	141	WORLD TR.-ENGINE SPEED HI
84A	ENG. CTR-MAST KEY SW START	114	INTERIOR LT-DASH LT RHEOS.	129	PRE-HEAT WATER HEATER	142	ABS SYSTEM-VALVE
84J	ENG. CTR-MAST KEY SW START	114A	INTERIOR LT-DASH LT RHEOS.	129B	PRE-HEAT WATER HEATER	143	ABS SYSTEM-SENSOR
85	24V IGNITION SIGNAL	114B	INT. LT-DASH LT RHEOST.FEED	130	WORLD TRANSM-SOL. SUPPLY	143A	ABS SYSTEM-SENSOR
85A	24V IGN DASH INSTRUMENT.	115	DDEC -COOLANT LEVEL	130	EVAP. FAN MAIN CABLE	143A	WORLD TRANS-BATTERY GRD
85C	24V IGNITION - FEED	115W	TRANSM.-DO NOT SHIFT SIGN	130A	EVAP. FAN MAIN CABLE	143W	WORLD TRANSM-BATTERY GRD
85F	RAD. FAN CONTROL W/RETARD	115W	ZF -CHECK TRANSM. TTLT	131	WORLD TRANSM-D SOL.	143X	WORLD TRANSM-BATTERY GRD
85W	OUT SPEED INTERLOCK-24V IGN.	116	WORLD TR.-SOL. SUPPLY	132	WORLD TRANSM-ENGINE BRAKE	143Y	WORLD TRANSM.BATT.GRD
85X	ABS-24V IGN	116B	A/C & HEAT SYSTEM-DR'S HTR	133	GALLEY HEATING CONTAINER	143W	FROM GROUND STUD
85Y	ABS-WARNING LT	116C	A/C SYS.-TRIG. DEFROST	133A	GALLEY HEATING CONTAINER	144	ABS SYSTEM-SENSOR
86	ENG. CTR-STARTER SOL.	119	WORLD TRANSM-ENGINE BRAKE	133B	GALLEY HEATING CONTAINER	144A	ABS SYSTEM-SENSOR
86A	ENG. CTR-STARTER RELAY COIL	120	WORLD TRANSM-ENGINE	133C	GALLEY HEATING CONTAINER	145	ABS SYSTEM
86F	TELL TALE STARTER ON	121	WORLD TRANSM-A SOL.	134	GALLEY HEATING CONTAINER	146	ABS SYSTEM
86T	TELL TALE STARTER ON	122	WORLD TRANSM-SOL.SUPPLY	134A	GALLEY HEATING CONTAINER	146A	WORLD TRANSM-12V IGNITION
87B	ENGINE CTR-24V IGNITION	123	WORLD TR.-NEUTRAL START	135	GALLEY HEATING CONTAINER	146AA	WORLD TRANSM-DIAGN.CONN.
88	ENGINE CTR-RR START SIGNAL	123A	ALARM & SIGNAL-FIRE DETECT.	135A	WORLD TR.-RES MODULE RET.	147	WORLD TRANSM-OIL TEMP
89	ENGINE CTR-RR START SIGNAL	123B	ALARM & SIGNAL-FIRE DETECT.	135B	A/C & HEAT SYS.-AIR SENSOR	147	ABS SYSTEM-VALVE
		123B	ALARM & SIGNAL-FIRE DETECT.	135C	A/C & HEAT SYS.-AIR SENSOR	147A	ETHER COLD START
		124	WORLD TR.-SENSOR POWER	136	MICRO-WAVE OVEN SWITCH	147C	ETHER COLD START
				136A	GALLEY LAMP	148	ABS SYSTEM-VALVE

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
148	WORLD TR.-OUTPUT SPEED LO	180	OUTSIDE TEMP. DISPLAY		VALVE	916	DDEC-SENSOR SUPPLY (5VDC)
149	WORLD TR.-TURBINE SPEED HI	180A	OUTSIDE TEMP. DISPLAY	305A	WCL DOOR OPEN SIGNAL	925	J1939(+)
149	ABS SYSTEM-SENSOR	180A	WORLD TRANSM-SHIFTER	305B	WCL DOOR TOP LT.	926	J1939(-)
149A	ABS SYSTEM	180B	OUTSIDE TEMP. DISPLAY	306	WCL CONTROL SYSTEM	927	J1939(SHIELD)
150	WORLD TR.-ENGINE SPEED LO	180C	OUTSIDE TEMP. DISPLAY	307	WCL CONTROL SYSTEM	952	DDEC-SENSOR RETURN#1
150	DDEC -ECM BATTERY GRD	181	FROZEN POINT T.T.LT	308	WCL CONTROL SYSTEM	953	DDEC-SENSOR RETURN#2
150A	DDEC -ECM BATTERY GRD	181A	TEMP. CTR'L INSIDE SENSOR	309	WCL CONTROL SYSTEM	979	DDEC-ENGINE BRAKE 2 CYL.
151	DDEC -ECM BATTERY GRD	181B	TEMP. CTR'L INSIDE SENSOR	417	DDEC-LIMIT SPEED GOVERNOR	2123	FLASHER SIGNAL LTS
151	ATC VALVE	181C	THERMOMET. OUTSIDE SENSOR	419	DDEC -CHEK ENGINE LIGHT		
152	ATC VALVE		THERMOMET. OUTSIDE SENSOR	439	DDEC-12V IGNITION		
153	ELECTRICAL DRIVER'S SEAT	181D	THERMOMET. OUTSIDE SENSOR	451	DDEC-A/C FAN CLUTCH		
154	WORLD TRANSM-ABS INPUT (-)	195	WORLD TRANSM-TRANS ID	499	DDEC-OUTPUT PWR SHUTDOWN		
156A	ABS SYSTEM-FEED	197	FUEL WATER FILTER	505	DDEC-TACHOMETER DRIVE		
157B	ABS SYSTEM	197A	FUEL WATER FILTER	509	DDEC-STOP ENGINE LIGHT		
159	WORLD TRANSM-DIAGNOSTIC			510	DDEC-FAST IDLE SIGNAL		
160	ALARM & SIGN.-TAG PRESS SW	201	WORLD TRANSM-SPARE	524	DDEC-ENGINE BRAKEDISABLE		
161B	WORLD TRANSM-SIGNALGRD	202	WORLD TRANSM-SPARE	524B	ZF SIGNAL-AUX.SENS.THROTTLE		
162	WORLD TRANSM-PRESS. SW C3	203	WORLD TRANSM-SPARE	525	DDEC-FAST IDLE SIGNAL		
163	WORLD TR.-RETARDER ENABLE	204	WORLD TRANSM-SPARE	528	DDEC-STOP ENG. OVERRIDE		
164	WORLD TR.-RET. ACTUAT. SIGN	214	WORLD TR.-BACK-UP SIGNAL	531	DDEC-CRUISE CLUTCH CUT OUT		
165	WORLD TR.-OIL LEVEL SIGNAL	231	WORLD TR.-NEUTRAL SIGN GRD	540	DDEC-CRUISE ENABLE T.T.LT		
166	WORLD TRANSM. OUTPUT 7			541	DDEC-CRUISE SET SW		
167	W. TR.-OUT SPEED INTERLOCK	231F	WORLD TR.-NEUTRAL SIGN GRD	542	INPUT PARK BRAKE INTERLOCK		
167Z	ZMTEC MODULE			543	DDEC-CRUISE BRAKE PEDAL		
169	WORLD TRANSM-PRE-SELECT #1	231W	W. TR.-NEUTRAL SIGN GRD WCL	544	DDEC-CRUISE ON/OFF SW		
170	WORLD TRANSM-SHIFTER	231Z	ZF NEUTRAL SIGNAL GRD	545	DDEC-CRUISE RESUME SW		
170C	LUGGAGE DOOR LOCK-T.T.LT	240	DDEC -ECM 12V FEEDING	555	DDEC-FAN CLUTCH SPEED#1		
170D	LUGGAGE DOOR LOCK-FEED	241	DDEC -ECM 12V FEEDING	556	DDEC-VEHICULE SPEED (+)		
170E	LUG. DOOR LOCK-UNLOCK SIGN	253	24V SIGNAL GALLEY INVERTER	557	DDEC-VEHICULE SPEED (-)		
170F	LUGGAGE DOOR LOCK-FEED	254	GALLEY REFRIGERATOR	563	DDEC-FAN CLUTCH SPEED#2		
170G	LUGGAGE DOOR LOCK-FEED	254A	GALLEY REFRIGERATOR	564	DDEC-DIGTAL OUTPUT		
170K	LUGGAGE DOOR-LOCK SIGN	254F	GALLEY REFRIGERATOR	564B	DDEC-DIGTAL OUTPUT		
170L	LUGG DOOR LOCK-SIGN T.T.LT	255	GALLEY COFFEEMAKER	565	DDEC-ENGINE BRAKE ACTIVE		
170N	LUGG DOOR LOCK-SIGN T.T.LT	255A	GALLEY COFFEEMAKER	565Z	DECELERATION LTS		
170R	LUGG DOOR LOCK-SIGN. T.T.LT.	255B	GALLEY COFFEEMAKER	583	DDEC-ENGINE BRAKE 4 CYL.		
170S	LUGG DOOR LOCK-SIGN T.T.LT	260	WINDOW AJAR-T.T.LT	700	J1587(+)		
170T	LUGG DOOR LOCK-SIGN T.T.LT	290	FAN CLUTCH RADIATOR-FEED	701	J1587(-)		
170V	LUGG DOOR LOCK-SIGN T.T.LT	290A	FAN CLUTCH RADIATOR-FEED	705	ZF SIGNALS		
170W	LUGGAGE DOOR LOCK-FEED	291	FAN CLUTCH RADIATOR SPD 1	706	ZF SIGNALS		
170X	LUGG DOOR LOCK-SIGN T.T.LT	292	FAN CLUTCH RADIATOR SPD 2	707	ZF SIGNALS		
170Y	LUGGAGE DOOR LOCK-FEED	292J	FAN OVERRIDE LTS SWITCH	717	ZF SIGNALS		
170Z	LUGGAGE DOOR LOCK	300	WCL POWER SYS. & ACCESS.	718	ZF SIGNALS		
171	WORLD TRANSM-SHIFTER	300A	WCL POWER SYSTEM SW.	719	ZF SIGNALS		
172	WORLD TRANSM-SHIFTER	301J	WCL POWER SW. JUMPER LED	720	ZF SIGNALS		
173	WORLD TRANSM-SHIFTER	301	WCL SIGNAL POWER SW.	740	EASY START VALVE		
174	WORLD TRANSM-SHIFTER	302	WCL DOOR AJAR TTLT& ALARM	761	ZF SIGNALS		
175A	WORLD TRANSM-SHIFTER	303	WCL FR RH FLASHER	900	DDEC-DATA LINK (+)		
176	WORLD TRANSM-SHIFTER	303A	WCL FR RH FLASHER	901	DDEC-DATA LINK (-)		
		304	WCL DOOR TOP LT.	908	DDEC-HYDRAU. PWM#1 OUTPUT		
		305	WCL PARKING BRAKE SOL.				