

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 68	28.1	24V	561991	S.S. PANEL	S.S. ACC. SWITCH
R2						R 69	12.1	12V	563337	RR JCT BOX	LUGG DOOR LOCK
R3						R 70	12.1	12V	563337	RR JCT BOX	LUGG DOOR UNLOCK
R4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR	R 71	12.1	24V	563332	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R5	5.1	24V	563332	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 72	29.1	24V	563332	POWER JCT BOX	WCL-SYTEME ON
R6						R 73	29.1	24V	563332	POWER JCT BOX	WCL-DOOR OPEN SW. SIGNAL
R7	5.1	24V	563332	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 74	12.1	12V	563337	RR JCT BOX	LUGG DOOR LOCK
R8						R 75	12.1	12V	563337	RR JCT BOX	LUGG DOOR UNLOCK
R9	9.3	24V	563332	RR JCT BOX	BACK-UP LTS	R 76	9.3	24V	563332	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R10						R 77	9.2	12V	563337	UNDER DASH	AUDIBLE FLASHER RLY
R11	6.1	24V	563332	FR JCT BOX	TRANS. INHIBIT	R 78	8.1	24V	563332	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R12	7.2	12V	563337	FR JCT BOX	ELECTRICAL HORNS	R 79	8.1	24V	563332	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R13	9.3	24V	563332	FR JCT BOX	FOG LTS-12V	R 79	27.1	24V	563332	GALLEY PANEL	REFREGIRATOR
R14	9.1	24V	563332	FR JCT BOX	BLINKER	R 80	9.3	24V	563332	RR JCT BOX	CYCLOP LTS WITH BRAKE
R15	15.4	24V	561991	FR JCT BOX	UPPER FAN DEFROST	R 81	26.1	24V	563332	FR JCT BOX	LAVATORY SW.
R16	9.1	24V	563332	FR JCT BOX	FRONT CLEARANCE LIGHT	R 82	21.1	24V	563332	FR JCT BOX	RETARDER SYSTEM
R17	9.1	24V	563332	RR JCT BOX	TAIL LICENCE. RR LTS	R 83	14.4SP	24V	563332	RR JCT BOX	WATER PUMP RLY - PROHEAT OPTIONAL
R18	9.1	24V	563332	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 84	15.2	24V	563332	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R19	9.5	24V	563332	FR JCT BOX	HI-BEAM	R 85	15.2	24V	563332	FR JCT BOX	HVAC DR'S REC. DAMPER CYL. L.H.
R20	9.5	24V	563332	FR JCT BOX	LO-BEAM	R 86	15.2	24V	563332	RR JCT BOX	HVAC MODE COOL/HEAT
R21	9.2	24V	563332	FR JCT BOX	LH DIRECTIONNAL LTS	R 86	18.1	24V	563332	FR SERV. COMPT.	KNEELING SYSTEM
R22						R 87	21.1	24V	563332	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R23	9.2	24V	563332	FR JCT BOX	RH DIRECTIONNAL LTS	R 87A	18.1	24V	563332	FR SERV. COMPT.	KNEELING SYSTEM
R24	9.2sp1	24v	563332	FR JCT BOX	RH CORNERING LTS	R 88	4.1	24V	563332	FR JCT BOX	LATCHING 24V CUT OUT SW.
R25	9.2sp1	24v	563332	FR JCT BOX	LH CORNERING LTS	R 88	18.1	24V	563332	FR SERV. COMPT.	KNEELING SYSTEM
R26	9.3	24V	563332	RR JCT BOX	STOP LTS	R 89	15.3	24V	563332	FR JCT BOX	WATER PUMP RELAY
R27	11.3	24v	563332	FR JCT BOX	AISLE LTS	R 90	18.1	24V	563332	FR JCT BOX	KNEELING CANCELLATION
R28	11.2	24V	563332	FR JCT BOX	DASH LTS RHEOSTAT	R 94	9.3	24V	563332	RR JCT BOX	AUX READ LAMP-LH
R29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 95	9.3	24V	563332	RR JCT BOX	AUX READ LAMP-RH
R30	15.3	24V	561005	A/C JCT BOX	EVAPORATOR FAN	R 96	29.1	24V	563332	POWER JCT BOX	WCL - DOOR AJAR SIGNAL
R31	15.3	24V	563332	FR JCT BOX	WATER VALVE & BYPASS	R 97	29.1	24V	563332	POWER JCT BOX	WCL - DOOR AJAR PARKING BRAKE
R32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 98	29.1	24V	563332	POWER JCT BOX	WCL - ALTERNATOR SIGNAL
R33						R 99	8.1	24V	563332	RR JCT BOX	RADIATOR FAN CLUTCH
R34	15.1	24V	563332	RR JCT BOX	A/C RAD. FAN CLUTCH (PARCEL RACK)	R 103	15.1	24V	563332	RR JCT BOX	PARCEL RACK VENTILATION
R35	15.3	24V	563332	FR JCT BOX	WATER PUMP	R 104	15.1	24V	563332	RR JCT BOX	PARCEL RACK VENTILATION
R36	15.1	24V	563332	RR JCT BOX	A/C COMPR. CLUTCH (PARCEL RACK)	R 105	15.1	24V	563332	RR JCT BOX	PARCEL RACK VENTILATION
R37	11.4	24V	563332	RR JCT BOX	READING LAMP	R 107					
R38	11.4	24V	563332	RR JCT BOX	READING LAMP	R 109	5.1	24V	563332	RR JCT BOX	THROTTLE INHIBIT WITH WCL
R39	11.5	24V	563332	RR JCT BOX	24 V FLUORESCENT	R 111	4.1SP2	24V	563332	POWER JCT BOX	HEATER RUN. WITH CHARGER 110V ACTIVED
R40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 112	4.1SP2	24V	563332	POWER JCT BOX	HEATER RUN. WITH CHARGER 110V ACTIVED
R41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R F1	8.1	24V	563332	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R F2	8.1	24V	563332	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R43						R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R H3	15.1	24V	563332	A/C JCT BOX	LUGGAGE CPT. FAN BEFORE FILTER
R45	11.4	24V	563332	RR JCT BOX	INDIRECT LTS	R H4	15.1SP	24V	563332	A/C JCT BOX	LUGGAGE CPT. FAN AFTER FLITER
R46						R LFL	11.5SP	24V	563332	RR JCT BOX	LAST FLUOR. OPT.
R47	27.1	24V	563332	GALLEY PANEL	COFFEE CONTAINERS	R LA	24.1	24V	563332	RH UNDER DASH	ENTRANCE DOOR SYSTEM
R48	27.1	24V	563332	GALLEY PANEL	COFFEE MAKER	R LO	24.1	24V	563332	RH UNDER DASH	ENTRANCE DOOR SYSTEM
R49	22.1	12V	563337	FR JCT BOX	12V ABS - ENGINE BRAKE	R LT	24.1	24V	563332	RH UNDER DASH	ENTRANCE DOOR SYSTEM
R50						R LV	24.1	24V	563332	RH UNDER DASH	ENTRANCE DOOR SYSTEM
R51	11.2	24V	563332	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	R RL1	11.4SP	24V	563332	RR JCT BOX	READING LAMP OPT.
R52	22.1	12V	563337	FR JCT BOX	12V ABS - RETARDER	R RL2	11.4SP	24V	563332	RR JCT BOX	READING LAMP OPT.
R53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	Z F1	6.1	12V	563033	FR JCT BOX	ZF STEERING GEAR BOX - CONTROL UNIT
R54	2.1	24V	563332	RR JCT BOX	IGNITION 12V RR	R SP	4.1SP3	24V	563332	FR JCT BOX	POWER SHUTDOWN OPT
R59	9.3sp1	24V	563332	RR JCT BOX	DOCKING LTS	R SCF	4.1SP1	24V	563332	N/D	STARTER LOCKOUT OPT
R61	15.3	24V	563332	A/C JCT BOX	EVAPORATOR FAN - SPEED RLY	R ZF2	6.3	24V	563332	FR JCT BOX	EASY START CONTROL - ZF TRANSMISSION
R62	5.1	24V	563332	FR JCT BOX	DDEC PARK. BRAKE SIGNAL	R ZF3	9.3	24V	563332	RR JCT BOX	DECELERATION LIGHT - ZF TRANSMISSION
R63	15.3	24V	560772	A/C JCT BOX	EVAPORATOR FAN - TIMER RLY	V IM1	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R64	27.1	24V	561005	GALLEY PANEL	INVERTER CUT OFF	V IM2	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R65	28.4	24V	OPTION	HAT RACK	SCENIC VIEW CAMERA	V IM3	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R66	28.3	24V	563332	S.S. PANEL	VIDEO TRIGGER	V IM4	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R67	28.1	12V	563337	S.S. PANEL	RARIO TRIGGER	V IMN	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
						V IMR	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL

RELAYS NUMBER CODE

No. PAGE COIL V #PREV. LOCATION FUNCTION

No. PAGE COIL V #PREV. LOCATION FUNCTION