

## WIRING DIAGRAM INDEX

<p><b>A</b> A/C &amp; HEAT – DRIVER'S AIR           Page: 15.1  A/C &amp; HEAT – FULL AIR           Page: 15.2  A/C &amp; HEAT – UPPER FAN DEFROST   Page: 15.4  ALARM &amp; SIGNAL           Page: 7.2  ABS           Page: 22.1  ARRANGEMENT - CABLE           Page: B  ARRANGEMENT - HARNESS       Page: C  ARRANGEMENT - SPARE WIRE       Page: D  ARRANGEMENT - SPARE WIRE       Page: D</p>	<p><b>D</b> DASH INSTRUMENT           Page: 7.1  DDEC IV           Page: 5.1  DISCONNECT SWITCH 12V, 24V   Page: 1.1  DISTRIB. 24V DISC., IGN &amp; HOT WIRE   Page: 1.1  DISTRIB. 12V DISC., IGN &amp; HOT WIRE   Page: 2.1  DRIVER'S SEAT ADJUST           Page: 13.1</p>	<p><b>L</b> LEVEL – LOW SYSTEM           Page: 18.1  LUGGAGE DOOR LOCK           Page: 12.1</p>
<p><b>B</b> BACK-UP ALARM           Page: 9.3  BATTERY STANDARD           Page: 1.2</p>	<p><b>E</b> ENGINE BLOCK HEATER       Page: 20.1  ENGINE BRAKE SYSTEM       Page: 21.1  ENGINE CONTROL           Page: 4.1  ENTRANCE DOOR ELCTRICAL LOCK   Page: 12.1  ENTRANCE DOOR AIR LOCK       Page: 20.1  ETHER COLD START           Page: 8.1  EXTERIOR LIGHTING           Page: 9.1</p>	<p><b>M</b> MIRROR-REAR VIEW           Page: 16.1</p> <p><b>P</b> PARKING BRAKE SWITCH &amp; ALARM   Page: 8.1  POWER 12V OUTLET           Page: 13.1</p>
<p><b>C</b> CENTER DOOR-AIR LOCK       Page: 20.1  CHARGING SYSTEM           Page: 4.2  CIGAR LIGHTER &amp; 12V OUTLET   Page: 13.1  CLUSTER           Page: 7.1  CODE - CIRCUIT NUMBER       Page: E  CODE - CIRCUIT BREAKER       Page: F  CODE - CONNECTOR           Page: G  CODE - DIODE           Page: H  CODE - FUSE           Page: L  CODE - RELAY           Page: I  CODE - RESISTOR           Page: J  CODE – TRUTH TABLE       Page: M  CODE - WIRING KEY           Page: K  CRUISE CONTROL - DDEC       Page: 5.1</p>	<p><b>F</b> FAN-CLUTCH RADIATOR       Page: 8.1  FAST IDLE - DDEC           Page: 5.1  FIRE DETECTOR           Page: 7.2  FUEL WATER FILTER           Page: 8.1  FUEL PRIME PUMP           Page: 19.1</p>	<p><b>R</b> RETARDER - WORLD TRANSM.   Page: 21.1</p> <p><b>S</b> SLIDE-OUT           Page: 24  SPEED SIGNAL           Page: 17.1  SPEEDOMETER           Page: 7.1  STEERING CONTROL       Page: 17.1  SUN VISOR           Page: 19.1</p>
	<p><b>G</b> GROUND SYSTEM           Page: 3.1</p>	<p><b>T</b> TACHOMETER           Page: 7.1  TRANSMISSION – WTEC 3       Page: 6.1  TELL TALE LIGHT MODULES   Page: 23.1</p>
	<p><b>H</b> HORN           Page: 7.2</p>	<p><b>W</b> WINDOW AJAR           Page: 7.3  WINDOW LIFTER           Page: 19.1  WIPER &amp; WASHER           Page: 10.1</p>
	<p><b>I</b> INTERIOR LIGHTING       Page: 11.1</p>	
	<p><b>K</b> KEYLESS ENTRY SYSTEM   Page: 12.2</p>	

# WIRING DIAGRAM INDEX