

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
IPJ1	CLUSTER - BULB TEST POS	SP62	SPARE WIRE	0T1	DASH ACC.	12DDR	RR JCT BOX 12V HOT WIRE DDR CON
IPJ2	CLUSTER - BULB TEST NEG.	SP63	SPARE WIRE	0T2	CLUSTER ACC.	12DT	T.T. LT MODULE
IPJ3	CLUSTER - SV SIGNAL	SP69	SPARE WIRE	0T2	WINDOW AWNING	12E	RR JCT BOX 12V DISC SW
IPJ4	CLUSTER - RETURN TO ZERO	SP70	SPARE WIRE	0T3	ALTERNATOR MODULE	12F	FR JCT PANEL 12V DISC SW
IPJ5	CLUSTER - FUEL LEVEL GAUGE	SP71	SPARE WIRE	0T4	12V OUTLET - CTR MODULE	12G	FR JCT PANEL 12V DISC SW
IPJ6	CLUSTER - BULB TEST POS.	SP72	SPARE WIRE	0T5	FS-HVAC DASH MODULE. GND	12H	12V DASH ACCESS.
IPJ7	CLUSTER - BULB TEST NEG.	SP74	SPARE WIRE	0W	FJB - TRANSM. RLY GRD	12I	RR JCT BOX 12V IGNITION
IPJ8	CLUSTER - MASTER WARNING	SP83	SPARE WIRE	0W	TRANSM ACC. - FR.SERV. CPT	12I	FR JCT PANEL 12V IGNITION
LX5	CLUSTER - COMPUTER MODE	SP84	SPARE WIRE	0Y1	ASB SYSTEM-GRD	12IA	FR JCT PANEL 12V IGNITION
LX6	CLUSTER - COMPUTER DOWN	SP114	SPARE WIRE	0Y2	ASB SYSTEM-GRD	12IA	RR JCT PANEL 12V IGNITION
LX7	CLUSTER - COMPUTER SET	SP115	SPARE WIRE	0Y3	ASB SYSTEM-GRD	12IE	ABS-FR JCT PANEL 12V IGN.
LX16	CLUSTER - COMPUTER UP	SP116	SPARE WIRE	0Y4	ASB SYSTEM-GRD	12IF	FR JCT PANEL 12V IGNITION
LX21	CLUSTER - COMPUTER COM.	SP117	SPARE WIRE	0Y5	ASB SYSTEM-GRD	12J	FR JCT PANEL 12V DISC.SW.
RT	T.T.L.T. MODULE - TEST SW.	TW1	SPR. W. TWISTER 50T/M WITH TW2	0Y6	ASB SYSTEM-GRD	12JA	FR JCT PANEL 12V DISC.SW.
SP1	SPARE WIRE	TW2	SPR. W. TWISTER 50T/M WITH TW1	00A	BATTERY GRD-DASH ACC.	12K	FR JCT PANEL 12V DISC.SW.
SP2	SPARE WIRE	0	A/C EVAP.CPT - CPT GRD	2A	A/C & HEAT SYSTEM	12LX	12V HOTWIRE CLUST. & MOD A/C
SP3	SPARE WIRE	0	JUMPER - CLUTCH SIGN.	2B	A/C & HEAT SYSTEM	12LX	CLUSTER 12V HOT WIRE
SP4	SPARE WIRE	0	RJB - INSIDE GRD	2D	A/C & HEAT SYSTEM	12M	ABS-FR JCT PANEL 12V DISC.SW.
SP5	SPARE WIRE	0A	FR. ROOF ACC. GRD	2E	A/C & HEAT SYSTEM	12P	12V POWER OUTLET
SP6	SPARE WIRE	0A	W0,W5 EVAP. MOTOR FAN GRD	2F	A/C & HEAT SYSTEM - EVAP. FAN	12T	RR JCT BOX 12V DISC SW
SP7	SPARE WIRE	0B	A/C - CONDENSER GRD	2H	A/C & HEAT SYS-LO-PRESS SW.	12VD	12V HOT WIRE
SP8	SPARE WIRE	0B	ENG. CPT ACC. GRD	2L	A/C & HEAT SYS-HI-PRESS SW.	12VI	RR JCT PANEL 12V IGNITION
SP9	SPARE WIRE	0BE	OV BATTERY MONITOR	3A	A/C & HEAT SYSTEM-EVAPORATOR	12W	12V HOT WIRE DDEC III FEED
SP10	SPARE WIRE	0C	R.J.B. - GRB	5N0	SPEED SIGNAL HIGHER 5MPH	15	EXT. LTS-MULTI FUNC LEVEL
SP11	SPARE WIRE	0C	F.R. SERV. CPT-ACCESSOIRIES	5NC	SPEED SIGNAL LOWER 5MPH	15	WIPER & WASHER SYSTEM
SP12	SPARE WIRE	0C1	ENTRANCE DOOR KEYLESS	6	EXTERIOR LTS-DOCKING	16	SPEEDOMETER (+)
SP13	SPARE WIRE	0C4	F.J.B. GRD	6A	EXTERIOR LTS-CORNERING	16T	SPEED SW SIGNAL IN (+)
SP14	SPARE WIRE	0CJ	CRUISE SW. JUMPER	6B1	EXTERIOR LTS-CORNERING RH	17	EXTERIOR LTS-FLASHER UNIT
SP15	SPARE WIRE	0D	A/C JCT BOX - COND FAN GRD	6C1	EXTERIOR LTS-CORNERING RH	17A	EXTERIOR LTS-FLASHER UNIT
SP16	SPARE WIRE	0E	WE EVAP. MOTOR FAN GRD	6D	EXTERIOR LTS-DOCKING	17C	JUMPER LTS SW. - HAZARD
SP17	SPARE WIRE	0F	SILENT 1000	9	INTERIOR LTS-ENGINE CPT	18	UPPER FAN DEFROST
SP18	SPARE WIRE	0G	ABS GRD CX1	9	INTERIOR LTS-RR JCT BOX	19	UPPER FAN DEFROST
SP19	SPARE WIRE	0H	ENG. CPT. - ACC. GRD	9F	INTERIOR LTS - FR-SERV. CPT	20	SPEEDOMETER SIGNAL (-)
SP21	SPARE WIRE	0L	ENG.CPT -CLEAR.LTS RR ROOF	10	A/C & HEAT SYSTEM -LO PRES.	20T	SPEED SW SIGNAL IN (-)
SP23	SPARE WIRE	0L	R.J.B. - GRD	10	INTERIOR LTS-LUGGAGE CPT	21	EXTERIOR LTS-DIRECT. LH
SP24	SPARE WIRE	0L	FR - SIDE MARK. & FLASH GRD	10	INTERIOR LTS-FR SERV. CPT	21A	EXTERIOR LTS-LH
SP25	SPARE WIRE	0L1	ENG.CPT-SIDE MARK. & FL. GRD	10A	INTERIOR LTS-LUGGAGE CPT	21A	EXTERIOR LTS-CORNERING-LH
SP30	SPARE WIRE	0L2	HEAD LTS	10B	INTERIOR LTS-LUGGAGE CPT	21B	EXTERIOR LTS-DIRECT. LH
SP33	SPARE WIRE	0L3	FR.SERV.DR. & ENT.DOOR GRD ACC.	10C	INTERIOR LTS-LUGGAGE CPT	21BB	EXTERIOR LTS-DIRECT. LH
SP38	SPARE WIRE	0L4	FOG LTS RESISTOR GRD	10D	INTERIOR LTS-LUGGAGE CPT	21H	EXTERIOR LTS-HAZARD SIGNAL
SP40	SPARE WIRE	0L5	LH CONSOL - ACC. GRD	10E	INTERIOR LTS-LUGGAGE CPT	21M	AUX. LTS - DIRECTIONAL LH
SP41	SPARE WIRE	0LV	WINDSHIELD WASHER LEVEL	10R	CENTER DOOR T.T.L.T.	21P	CORN. LTS - DIRECT. SIGN. LH
SP42	SPARE WIRE	0M	WIPER 2 MIRROR MOTOR	12A	FR JCT PANEL 12V DISC SW	23	EXTERIOR LTS-DIRECT. RH
SP43	SPARE WIRE	0M3	DEFROST GRD	12B	FR JCT PANEL 12V DISC SW	23A	EXTERIOR LTS-DIRECT. RH
SP45	SPARE WIRE	0M4	HORN & DR'S WINDOW LIFTER	12BAT	12V HOT-WIRE ACC - JCT BLK	23A	EXTERIOR LTS - CORNER. LTS
SP48	SPARE WIRE	0M5	SUN VISOR MOTOR	12BE	12V BATTERY MONITOR	23BB	EXTERIOR LTS - DIRECT. RH
SP56	SPARE WIRE	0M6	UPPER FAN DEFROST	12C	FR JCT PANEL 12V DISC SW	23C	EXTERIOR LTS-CORNERING RH
SP57	SPARE WIRE	0M7	DR'S WIND.LIFT. & RH MIR. SW	12C	RR JCT BOX 12V DISC SW	23H	EXTERIOR LTS-HAZARD SIGNAL
SP60	SPARE WIRE	0M7A	LH MIRROR SW.	12D	FR JCT PANEL 12V HOT WIRE	23M	AUX LTS - DIRECTIONAL RH
SP61	SPARE WIRE	0T	SPEED SW. CONNECTOR	12DD	FR JCT PANEL 12V HOT WIRE	23P	CORN. LTS - DIRECT SIGN RH

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
24	FR JCT PANEL 24V DISC. SW.	41A	A/C SYS.-COND FAN MOTOR	64A	DRIVER'S FAN SPEED CTR	91C	PARKING BRAKE - T.T.LT
24A	RR JCT PANEL 24V DISC. SW	41B	A/C SYS.-COND FAN MOTOR	64B	DRIVER'S FAN SPEED CTR	91J	FAST IDLE - JUMPER SW.
24A	FR JCT PANEL 24V DISC. SW	42A	A/C SYS.-COND FAN MOTOR	65	FOOT DAMPER MOTOR	92	BATT. EQUAL.-CHECK BALANCE
24BE	BATTERY MONITOR	43	A/C & HEAT SYS. - FAN SPEED	65A	FOOT DAMPER MOTOR	93	BATT. EQUALIZ.-CHECK LO/HI
24C	FR JCT PANEL 24V DISC SW	44	EXTERIOR LTS-FOG	65D	DRIVER'S REC. DAMPER	95A	ENG. BRAKE & RETARDER SYS.
24D	FR JCT BOX 24V HOT WIRE	44A	EXTERIOR LTS-FOG	66	A/C PASSENGER - ON/OFF	95B	ENG. BRAKE & RETARDER SYS.
24F	RR JCT PANEL 24V DISC SW	44B	EXTERIOR LTS-FOG	67A	A/C & HEAT SYSTEM	97	TACHOMETER SIGN.-NOT USED
24G	RR JCT PANEL 24V DISC SW	44C	EXT. LTS-FOG,HVAC & HAZ. SW	68	DASH & DEFROST DAMPER MOT	101	WORLD TR.- LO SIGN SOL.LO
24I	FR JCT PANEL 24V IGNITION	44D	EXTERIOR LTS - FOG	68A	DASH & DEFROST DAMPER MOT	102	WORLD TRANSM.-SOL. SUPPLY
24I	RR JCT PANEL 24V IGNITION	44E	EXTERNAL LTS - FOG	72	SUN VISOR - FEED	103	WORLD TRANSM.- B.SOL.LO
24IA	FR JCT PANEL 24V IGNITION	45A	A/C & HEAT SYSTEM FULL AIR	72A	SUN VISOR RH	104	LEVEL-LOW SYS- DR'S SOL.
24IB	FR JCT PANEL 24V IGNITION	45B	A/C & HEAT SYS.-WATER PUMP	72B	SUN VISOR RH	104	WORLD TR. -SOL. FORWARD
24IF	FR JCT PANEL 24V IGNITION	45C	A/C & HEAT SYS.-WATER VALV	72C	SUN VISOR LH	105W	WORLD TR.-SOL.-RET.OIL TT.LT
24P	FR JCT PANEL 24V DISC SW	45D	A/C & HEAT SYS.-WATER VALV	72D	SUN VISOR LH	107	WORLD TR.-LOCKUP SOL. HI
24R	24V RR JCT BLK TO STARTER	45E	A/C & HEAT SYS.-WATER PUMP	76	FUEL TANK GAUGE	108	WORLD TR.-LOCKUP SOL.
24T	RR JCT PANEL 24V DISC SW	45G	A/C & HEAT SYS.-DR'S HTR	76C	LOW FUEL T.T.LT	110	WORLD TR.-LOCKUP SOL. LO
24VD	24V HOT WIRE FEED	45H	A/C & HEAT SYS.- EVAP.FAN	76L	LOW FUEL T.T.LT	112	WORLD TR.-SPARE OUTPUT (+)
25A	TT.LT. MODULE - LED	45J	A/C & HEAT SYS.-WATER PUMP	77A	A/C & HEAT SYS. - THERMOST.	112	WORLD TR.-SPARE OUTPUT (+)
25A1	BOSCH ALTERNATOR - WE ONLY	46	EXTERIOR LTS-MARKER	77B	A/C SYS. - LIQ. SOL. VALVE	113W	WORLD TR.-REVERSE WARNING
25A2	BOSCH ALTERNATOR - WE ONLY	46A	EXTERIOR LTS-AUX LTS RESIS.	77C	A/C & HEAT SYS.-COMPRESSOR	114	WORLD TR.-SPARE OUTPUT (-)
25B	EXT. LTS-DAYTIME RUN LTS	46C	EXTERIOR LTS-MARKER	77H	A/C SYS.-LIQ. SOL. VALVE	114	INTERIOR LT-DASH LT RHEOS.
25D	GENERATOR SKTN. ON - HVAC	46D	EXTERIOR LTS-AUX LTS RESIS.	77H	A/C & HEAT SYS.-THERMOSTAT	114A	INTERIOR LT-DASH LT RHEOS.
25L	GENERATOR SIGNAL TO RLY R88	48A	ENTRANCE DOOR AIR LOCK	81	EXTERIOR LTS-STOP SW	114B	INT. LT-DASH LT RHEOST.FEED
26	DR'S & ENT. WINDOW LIFTER	48B	ENTRANCE DOOR AIR LOCK	82	EXTERIOR LTS-STOP SIGNAL	115	DDEC III-COOLANT LEVEL
26A	CIGAR LIGHT. & POW.OUTLET LH	48C	ENTRANCE DOOR AIR LOCK	82A	EXTERIOR LTS-STOP SIGNAL	115W	WORLD TR.-DO NOT SHIFT SIGN
26B	DRIVER'S WINDOW LIFTER	52	ALARM & SIGNAL-ELEC.HORN	82B	EXTERIOR LTS-STOP LTS	116	WORLD TR.-LO SIGNAL SOL. HI
26C	DRIVER'S WINDOW LIFTER	52A	ALARM & SIGNAL-ELEC.HORN	82L	EXT. LTS-STOP LTS & CYCLOP	116B	A/C & HEAT SYSTEM-DR'S HTR
26D	ENT. DOOR WINDOW LIFTER	53	ALARM & SIGNAL-ELEC.HORN	82R	EXTERIOR LTS-STOP LTS	116C	A/C SYS.-TRIG. DEFROST
26E	ENT. DOOR WINDOW LIFTER	53B	WIPER & WASHER SYSTEM	83	ENG. CTR-MAST. KEY SW ACC.	119	WORLD TRANSM-ENGINE BRAKE
26F	ENT. DOOR WINDOW LIFTER	53C	WIPER & WASHER SYSTEM	84	ENG. CTR-MAST KEY SW START	120	WORLD TRANSM-SOL. C1
28H	T.T.LT MODULE - HI A/C PRES.	53E	WIPER & WASHER SYSTEM	84A	ENG. CTR-MAST KEY SW START	121	WORLD TRANSM-SOL.GRD 2
28T	T.T.LT MODULE - LO A/C PRES.	53J	WIPER & WASHER SYSTEM	84J	ENG. CTR-MAST KEY SW START	123	WORLD TR.-NEUTRAL START
29	A/C & HEAT SYS.-DR'S HTR	53K	KEYLESS SYSTEM	85	24V IGNITION SIGNAL	123A	ALARM & SIGNAL-FIRE DETECT.
29H	HVAC DASH MODILE	55	EXTERIOR LTS-HI BEAM	85A	24V IGN DASH INSTRUMENT.	123B	ALARM & SIGNAL-FIRE DETECT.
31B	WIPER & WASHER SYSTEM	57	EXTERIOR LTS-HI BEAM	85C	24V IGNITION - FEED	124	WORLD TR.-THROTTLE (HI)
31C	WIPER & WASHER SYSTEM	57A	EXTERIOR LTS-HI BEAM	85W	WORLD TRANSM. - 24V IGN.	124A	WORLD TRANSM-SENSOR PWR
32	EXTERIOR LTS-BACK-UP	57B	A/C & HEAT SYS.-WATER PUMP	85X	ABS-12V IGN	125	WORLD TR-RETARDER INDICAT.
32B	EXTERIOR LTS-BACK-UP	57C	A/C & HEAT SYS.-WATER PUMP	85Y	ABS-12V IGN	125W	WORLD TR-RETARDER INDICAT.
32F	BACK-UP CANCEL SW.	57E	A/C & HEAT SYS.-WATER VALV	85Z	ABS-12V IGN	126	WORLD TR.-LUBE PRESS SW.
32G	BACK-UP ALARM	58	EXTERIOR LTS-LO BEAM	86	ENG. CTR-STARTER SOL SIGN	126	24VIGN-LEV.LOW & WORLD TR.
32J	BACK-UP SW. - JUMPER	58A	EXTERIOR LTS-LO BEAM	86A	ENG. CTR-STARTER SOL SIGN	126F	LEVEL LOW SYSTEM
35B	DRIVER'S LTS - KEYLESS SIGN	58B	EXTERIOR LTS-LO BEAM	87B	ENGINE CTR-24V IGNITION	126H	SPEED SIGN 5NC - NOT USED
36	ENGINE BRAKE SYSTEM	59A	ENGINE BRAKE SYSTEM	88	ENGINE CTR-RR START SIGNAL	126W	WORLD TRANSM-NOT USED
36A	ENGINE BRAKE SYSTEM & RET.	61	EXTERIOR LTS-24V FEED SW	89	ENGINE CTR-RR START SIGNAL	127	24HW DR'S LT PREHEAT & HVAC
39	INTERIOR LTS-DRIVER'S LTS	61A	EXTERIOR LTS-HEAD SIGNAL	90	CONVERTER - CABLE SPARG	128	WORLD TRANSM-SOL. C2
39B	INTERIOR LTS-DRIVER'S LTS	63	EXTERIOR LTS-CLEAR. FEED	90A	ENG. CTR-MAST KEY SW FEED	129	WORLD TRANSM-SOL. C5
39C	INTERIOR LTS-DRIVER'S LTS	63B	EXTERIOR LTS-CLEARANCE	90B	A/C & H. SYS.-COND FAN MOT	130	WORLD TRANSM-SOL. GRD 3
39D	INTERIOR LTS - FRIVER' LTS	63C	EXT. LTS-MARKER SIGNAL	90B	ENG. CTR-MAST KEY SW FEED	130	EVAP. FAN - POWER CABLE
39K	DR'S LTS - KEYLESS SIGN.	63F	EXT. LTS-MARKER BLINKER	91	PARKING BRAKE SW SIGNAL	130A	EVAP. FAN - POWER CABLE
41	A/C SYS.-COND FAN MOTOR	64	DRIVER'S FAN SPEED CTR	91A	DDEC III-FAST IDLE SIGNAL	131	WORLD TRANSM-SOL.C4

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
132	WORLD TRANSM-ENGINE BRAKE	146A	WORLD TRANSM-12V IGNITION	170X	LUGG DOOR LOCK-SIGN T.T.LT	291	FAN CLUTCH RADIATOR SPD 1
132A	LEVEL LOW SYSTEM	146AA	WORLD TRANSM-DIAGN.CONN.	170Y	LUGGAGE DOOR LOCK-FEED	292	FAN CLUTCH RADIATOR SPD 2
132B	LEVEL LOW SYSTEM	147	WORLD TRANSM-OIL TEMP	170Z	LUGGAGE DOOR LOCK	292A	FAN CLUTCH RADIATOR SPD 2
132C	LEVEL LOW SYSTEM	147	ABS SYSTEM-VALVE	171	WORLD TRANSM-SHIFTER	294	KEYLESS SYSTEM-ANTI-THEFT
132D	LEVEL LOW SYSTEM	147A	ETHER COLD START	172	WORLD TRANSM-SHIFTER	295	KEYLESS SYS-LED INDICATOR
132E	LEVEL LOW SYSTEM	147A	DAYTIME LST-ALT.SIGNAL	173	WORLD TRANSM-SHIFTER	417	DDEC-LIMIT SPEED GOVERNOR
132F	LEVEL LOW SYSTEM	147C	ETHER COLD START	174	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT
135	WORLD TRANSM-RET.TEMP.	148	ABS SYSTEM-VALVE	175A	WORLD TRANSM-SHIFTER	439	DDEC-12V IGNITION
135A	WORLD TR.-RES MODULE RET.	148	WORLD TR.-OUTPUT SPEED LO	175A	WORLD TRANSM-SHIFTER	451	DDEC-A/C FAN CLUTCH
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	180	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	180	OUTSIDE TEMP. DISPLAY	509	DDEC-STOP ENGINE LIGHT
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	180A	OUTSIDE TEMP. DISPLAY	510	DDEC-FAST IDLE SIGNAL
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180A	WORLD TRANSM-SHIFTER	524	DDEC-ENGINE BRAKEDISABLE
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180B	OUTSIDE TEMP. DISPLAY	525	DDEC-FAST IDLE SIGNAL
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180C	OUTSIDE TEMP. DISPLAY	528	DDEC-STOP ENG. OVERRIDE
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	181	FROZEN POINT T.T.LT	531	DDEC-CRUISE CLUTCH CUT OUT
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	181A	THERMOMETER INSIDE SENSOR	540	DDEC-CRUISE ENABLE T.T.LT
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	181B	THERMOMETER INSIDE SENSOR	541	DDEC-CRUISE SET SW
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181C	THERMOMET. OUTSIDE SENSOR	542	INPUT PARK BRAKE INTERLOCK
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181D	THERMOMET. OUTSIDE SENSOR	543	DDEC-CRUISE STOP SW CUT IN
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	195	WORLD TRANSM-TRANS ID	544	DDEC-CRUISE ON/OFF SW
137D	RR VIEW MIRROR	157B	ABS SYSTEM	197	FUEL WATER FILTER	545	DDEC-CRUISE RESUME SW
137E	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197A	FUEL WATER FILTER	555	DDEC-FAN CLUTCH SPEED#1
137F	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	201	WORLD TRANSM-SPARE	556	DDEC-VEHICLE SPEED (+)
137H	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	202	WORLD TRANSM-SPARE	557	DDEC-VEHICLE SPEED (-)
137J	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	203	WORLD TRANSM-SPARE	563	DDEC-FAN CLUTCH SPEED#2
137K	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE	204	WORLD TRANSM-SPARE	564	DDEC-DIGTAL OUTPUT
137L	RR VIEW MIRROR	164	WORLD TR.-RET. ACTUAT. SIGN	214	WORLD TR.-BACK-UP SIGNAL	565	DDEC-ENGINE BRAKE ACTIVE
137M	RR VIEW MIRROR FEED	165	WORLD TR.-OIL LEVEL SIGNAL	231	WORLD TR.-NEUTRAL SIGN GRD	583	DDEC-ENGINE BRAKE 4 CYL.
137R	WORLD TRANSM-RETARDER	167	WORLD TR.-SPEED 5N0, 5NC	240	DDEC III-ECM 12V FEEDING	900	DDEC-DATA LINK (+)
137T	MIRROR HEAT SW-JUMPER	169	WORLD TRANSM-INPUT 12	241	DDEC III-ECM 12V FEEDING	901	DDEC-DATA LINK (-)
138	WORLD TR.-RETARDER TEMP	170	WORLD TRANSM-SHIFTER	260	WINDOW AJAR-T.T.LT	908	DDEC-HYDRAU. PWM#1 OUTPUT
138	ABS SYSTEM-SENSOR	170C	LUGGAGE DOOR LOCK-T.T.LT	270	KEYLESS MODULE-FEED	916	DDEC-SENSOR SUPPLY (5VDC)
138A	ABS SYSTEM-SENSOR	170D	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK	952	DDEC-SENSOR RETURN
139	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD	953	DDEC-BATTERY GRD
139	WORLD TR.-OUTPUT SPEED HI	170F	LUGGAGE DOOR LOCK-FEED	274	KEYLESS SYSTEM-KEYBOARD	979	DDEC-ENGINE BRAKE 2 CYL.
140	WORLD TR.-OUTPUT SPEED LO	170G	LUGGAGE DOOR LOCK-FEED	276	KEYLESS SYSTEM-KEYBOARD	2123	FLASHER SIGNAL LTS
140	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	277	KEYLESS SYS-DR'V LTS SIGN		
141	ABS SYSTEM-VALVE	170K	LUGGAGE DOOR-LOCK SIGN	278	KEYLESS SYSTEM-KEYBOARD		
141	WORLD TR.-ENGINE SPEED HI	170LA	LUGG DOOR LOCK-T.T.LT WE	280	KEYLESS SYSTEM-KEYBOARD		
142	ABS SYSTEM-VALVE	170LB	LUGG DOOR LOCK-T.T.LT WE	283	KEYLESS SYSTEM-ANTI-THEFT		
143	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN		
143A	ABS SYSTEM-SENSOR	170M	LUGG DOOR LOCK-SIGN T.T.LT	284A	KEYLESS SYSTEM		
143A	WORLD TRANS-BATERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR		
143W	WORLD TRANSM-BATTERY GRD	170P	LUGG DOOR LOCK-SIGN T.T.LT	285B	KEYLESS SYSTEM		
143X	WORLD TRANSM-BATTERY GRD	170R	LUGG DOOR LOCK-ENTR. DOOR	285C	KEYLESS SYSTEM		
144	ABS SYSTEM-SENSOR	170S	LUGG DOOR LOCK-SIGN T.T.LT	286	LUGG DOOR LOCK-ENT. DOOR		
144A	ABS SYSTEM-SENSOR	170T	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR		
145	ABS SYSTEM-VALUE	170V	LUGG DOOR LOCK-SIGN T.T.LT	290	FAN CLUTCH RADIATOR-FEED		
146	ABS SYSTEM-VALUE	170W	LUGGAGE DOOR LOCK-FEED	290A	FAN CLUTCH RADIATOR-FEED		

CIRCUIT NUMBER CODE

NO. DESCRIPTION

NO. DESCRIPTION

NO. DESCRIPTION

NO. DESCRIPTION