

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 63	15.3	24V	560772	A/C JCT BOX	TIME DELAY - EVAPORATOR FAN
R 2	12.1	12V	563337	UNDER DASH R.H.	UNLOCK ENTRANCE DOOR	R 64					
R 3	12.1	12V	563054	UNDER DASH R.H.	ENTRANCE DOOR OPEN SIGNAL	R 65					
R 4	4.1	24V	560407	RR JCT BOX	STARTING MOTOR	R 66	11.2	24V	562341	UNDER DASH R.H.	DRIVER'S LIGHT TIME DELAY
R 5	5.1	24V	563332	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 67					
R 6	15.3	24V	563332	FR JCT BOX	REC PASS DAMPER	R 68					
R 7	5.1	24V	563332	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 69	12.1	12V	563337	RR JCT BOX	LUGG DOOR LOCK
R 8	11.2	12V	563054	UNDER DASH R.H.	DRIVER'S LIGHT SIGNAL FROM KEYLESS	R 70	12.1	12V	563337	RR JCT BOX	LUGG DOOR UNLOCK
R 9	9.3	24V	563332	RR JCT BOX	BACK-UP LTS	R 71	12.1	24V	563332	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R 10	12.1	12V	563337	UNDER DASH R.H.	LOCK ENTRANCE DOOR	R 72					
R 11	6.1	24V	563332	FR JCT BOX	TRANS. INHIBIT	R 73					
R 12	7.2	12V	563337	FR JCT BOX	ELECTRICAL HORNS	R 74	12.1	12V	563337	RR JCT BOX	LUGG DOOR LOCK
R 13	9.3	24V	563332	FR JCT BOX	FOG LTS-12V	R 75	12.1	12V	563337	RR JCT BOX	LUGG DOOR UNLOCK
R 14	9.1	24V	563332	FR JCT BOX	BLINKER	R 76	9.3	24V	563332	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R 15	15.4	24V	561991	FR JCT BOX	UPPER FAN DEFROST	R 77	9.2	12V	563337	UNDER DASH	AUDIBLE FLASHER RLY
R 16	9.1	24V	563332	FR JCT BOX	FRONT CLEARANCE LIGHT	R 78	8.1	24V	563332	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R 17	9.1	24V	563332	RR JCT BOX	TAIL.LICENCE. RR LTS	R 79	8.1	24V	563332	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R 18	9.1	24V	563332	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 80	9.3	24V	563332	RR JCT BOX	CYCLOP LTS WITH BRAKE
R 19	9.1	24V	563332	FR JCT BOX	HI-BEAM	R 81					
R 20	9.1	24V	563332	FR JCT BOX	LO-BEAM	R 82	21.1	24V	563332	FR JCT BOX	RETARDER SYSTEM
R 21	9.2	24V	563332	FR JCT BOX	LH DIRECTIONNAL LTS	R 83					
R 22						R 84	15.2	24V	563332	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R 23	9.2	24V	563332	FR JCT BOX	RH DIRECTIONNAL LTS	R 85					
R 24	9.2	24V	563332	FR JCT BOX	RH CORNERING	R 86	15.2	24V	563332	RR JCT BOX	HVAC MODE COOL/HEAT
R 25	9.2	24V	563332	FR JCT BOX	LH CORNERING	R 87	21.1	24V	563332	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R 26	9.3	24V	563332	RR JCT BOX	STOP LTS	R 88	4.1	12V or	561538	FR JCT BOX	LATCHING 24V CUT OUT SW. (DELCO ALT.)
R 27						R 88	4.1	24V	563332	FR JCT BOX	LATCHING 24V CUT OUT SW. (TWIN BOSCH)
R 28	11.2	24V	563332	FR JCT BOX	DASH LTS RHEOSTAT	R 89	15.3	24V	563332	FR JCT BOX	WATER PUMP RELAY
R 29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 90					
R 30	15.3	24V	561005	A/C JCT BOX	EVAPORATOR FAN	R 91					
R 31	15.3	24V	563332	FR JCT BOX	WATER VALVE & BYPASS (FULL AIR)	R 92					
R 32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 93					
R 33						R 94	9.3	24V	563332	RR JCT BOX	AUX READ LAMP-LH
R 34	15.1	24V	563332	RR JCT BOX	A/C RAD. FAN CLUTCH (DRIVER'S AIR)	R 95	9.3	24V	563332	RR JCT BOX	AUX READ LAMP-RH
R 35	15.1	24V	563332	FR JCT BOX	WATER PUMP (DRIVER'S AIR)	R 96					
R 35	15.3	24V	563332	FR JCT BOX	WATER PUMP (FULL AIR)	R 97					
R 36	15.1	24V	563332	RR JCT BOX	A/C COMPR. CLUTCH (DRIVER'S AIR)	R 98					
R 37						R 99	8.1	24V	563332	RR JCT BOX	RADIATOR FAN CLUTCH
R 38						R 104	4.1	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 39						R 108	20.1	24V	563332	FR JCT BOX	ENTRANCE DOOR AIR LOCK
R 40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 113	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 114	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 115	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 43						R 116	12.2	12V	563054	UNDER DASH R.H.	KEYLESS SYSTEM
R 44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 200	10.1	24V	565862	FR JCT BOX	HEAD LAMP WASHER TIMER/RELAY
R 45						R F1	8.1	24V	563332	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R 46						R F2	8.1	24V	563332	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R 47						R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R 48						R RJ	21.1SP	24V	563332	FR JCT BOX	ENGINE BRAKE SYSTEM JAKE & RETARDER OPT.
R 49	22.1	12V	563337	FR JCT BOX	12V ABS - ENGINE BRAKE	V IM1	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R 50						V IM2	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 51	11.2	24V	563332	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	V IM3	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R 52	22.1	12V	563337	FR JCT BOX	12V ABS - RETARDER	V IM4	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	V IMN	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 54	2.1	24V	563332	RR JCT BOX	IGNITION 12V RR	V IMR	6.1	12V	563337	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 55											
R 56											
R 57											
R 58											
R 59											
R 60											
R 61	15.3	24V	563332	A/C JCT BOX	EVAPORATOR FAN						
R 62	5.1	24V	563332	FR JCT BOX	DDEC PARK BRAKE S SIGNAL						

RELAYS NUMBER CODE

No. PAGE COIL V #PREV. LOCATION FUNCTION

No. PAGE COIL V #PREV. LOCATION FUNCTION