

## WIRING DIAGRAM INDEX

<b>A</b> A/C & VENTILATION PARCEL RACK    Page: 15.1 A/C & HEAT – VENTILATION        Page: 15.2 AIR DRYER                                Page: 8.1 ALARM & SIGNAL                        Page: 7.2 ABS                                        Page: 22.1 ARRANGEMENT - CABLE                Page: B ARRANGEMENT - HARNESS             Page: C ARRANGEMENT - SPARE WIRE         Page: D	DDEC IV                                Page: 5 DIGITAL CLOCK                        Page: 13.1 DISCONNECT SWITCH 12V, 24V      Page: 1.1 DISTRIBUTION 24 VOLTS              Page: 1.1 DISTRIBUTION 12 VOLTS              Page: 2.1 DRIVER'S SEAT (WIRING ONLY)      Page: 13.1  <b>E</b> ENGINE BLOCK HEATER              Page: 20.1 ENGINE BRAKE SYSTEM                Page: 21.1 ENGINE CONTROL                      Page: 4.1 ENTRANCE DOOR (SEDAN)            Page: 24.1 ETHER COLD START                    Page: 8.1 EXTERIOR LIGHTING                    Page: 9	<b>L</b> LAVATORY                                Page: 26.1 LOW BUOY                                Page: 18.1 LUGGAGE DOOR LOCK                  Page: 12.1  <b>M</b> MIRROR-REAR VIEW                    Page: 16  <b>P</b> PARKING BRAKE SWITCH & ALARM      Page: 8.1 POWER 12V OUTLET                    Page: 13.1  <b>R</b> RETARDER - WORLD TRANSM.         Page: 21.1  <b>S</b> SEAT AUDIO                              Page: 28.6 SOUND SYSTEM                        Page: 28.1 SPEED SIGNAL                         Page: 17.1 SPEEDOMETER                         Page: 7.1 STARTER                                Page: 4.2 STEERING CONTROL                    Page: 17.1 STEP LIGHTS                          Page: 24.1 SUN VISOR                              Page: 19.1  <b>T</b> TACHOMETER                            Page: 7.1 TRANSMISSION – WTEC 3              Page: 6.1 TELL TALE LIGHT MODULES          Page: 23.1 TV TUNER                                Page: 28.3  <b>V</b> VIDEO SYSTEM                         Page: 28.3  <b>W</b> WATER HEATER PRE-HEAT            Page: 14.1 WATER TANK HEATER                  Page: 20.1 WINDOW AJAR                         Page: 20.1 WINDOW LIFTER                        Page: 19.1 WIPER & WASHER                      Page: 10.1 WIRELESS MICROPHONE                Page: 28.5 WHEELCHAIR LIFT                      Page: 29.1
<b>B</b> BACK-UP ALARM                        Page: 9.3 BACK-UP CAMERA                      Page: 25.1 BATTERY                                 Page: 1.2 BATTERY CHARGER                     Page: 11.5	<b>F</b> FAN-CLUTCH RADIATOR                Page: 8.1 FAST IDLE - DDEC                    Page: 5.2 FIRE DETECTOR                        Page: 7.2 FRONT DESTINATION SIGN            Page: 25.1 FUEL WATER FILTER                  Page: 8.1 FUEL PRIME PUMP                     Page: 19.1  <b>G</b> GROUND SYSTEM                      Page: 7.2 GALLEY                                 Page: 27.1  <b>H</b> HORN                                    Page: 7.2 HI-BUOY                                Page: 18.1 HOTESS CHIME                        Page: 11.4  <b>I</b> INTERIOR LIGHTING                    Page: 11 INTERCOM                             Page: 30.1  <b>K</b> KNEELING SYSTEM                    Page: 18.1	
<b>C</b> CAMERA SCENIC VIEW                Page: 28.4 CHARGING SYSTEM                    Page: 4.2 CIGAR LIGHTER & 12V OUTLET        Page: 13.1 CLUSTER                                Page: 7.1 CODE - CIRCUIT NUMBER              Page: E CODE - CIRCUIT BREAKER             Page: F CODE - CONNECTOR                    Page: G CODE - DIODE                         Page: H CODE - FUSE                            Page: L CODE - RELAY                         Page: I CODE - RESISTOR                      Page: J CODE – TRUTH TABLE                Page: M CODE - WIRING KEY                    Page: K CRUISE CONTROL - DDEC              Page: 5.1		
<b>D</b> DASH INSTRUMENT                    Page: 7.1		

**WIRING DIAGRAM INDEX**