

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A1	RADIO SYSTEM	C15	AUDIO AMPLI	SP10	SPARE WIRE	SP75	SPARE WIRE
A2	RADIO SYSTEM	D1	PASSENGER SPEAKER	SP11	SPARE WIRE	SP76	SPARE WIRE
A3	AUDIO AMPLI	D2	PASSENGER SPEAKER	SP12	SPARE WIRE	SP77	SPARE WIRE
A8	VIDEO SYSTEM	D3	PASSENGER SPEAKER	SP13	SPARE WIRE	SP78	SPARE WIRE
A9	RADIO SYSTEM	D4	PASSENGER SPEAKER	SP14	SPARE WIRE	SP80	SPARE WIRE
A10	AUDIO AMPLI	D5	PASSENGER SPEAKER	SP15	SPARE WIRE	SP81	SPARE WIRE
A11	AUDIO AMPLI	D6	PASSENGER SPEAKER	SP16	SPARE WIRE	SP82	SPARE WIRE
A12	AUDIO AMPLI	D7	PASSENGER SPEAKER	SP17	SPARE WIRE	SP83	SPARE WIRE
A13	AUDIO AMPLI	D8	PASSENGER SPEAKER	SP18	SPARE WIRE	SP84	SPARE WIRE
A15	AUDIO AMPLI	DR1	DRIVER'S SPEAKER	SP19	SPARE WIRE	SP85	SPARE WIRE
A16	VIDEO SYSTEM	DR2	DRIVER'S SPEAKER	SP20	SPARE WIRE	TW1	TWISTED SPARE
B1	MICROPHONE	DR3	DRIVER'S SPEAKER	SP21	SPARE WIRE	TW2	TWISTED SPARE
B2	MICROPHONE	DR4	DRIVER'S SPEAKER	SP23	SPARE WIRE	W1	STEERING BOX CONVERTER
B3	MICROPHONE	G1	PASSENGER SPEAKER	SP24	SPARE WIRE	W2	STEERING BOX CONVERTER
B4	MICROPHONE	G2	PASSENGER SPEAKER	SP25	SPARE WIRE	Y1A	FLUORESCENT BALLAST
B5	MICROPHONE	G3	PASSENGER SPEAKER	SP26	SPARE WIRE	Y1B	FLUORESCENT BALLAST
B6	MICROPHONE	G4	PASSENGER SPEAKER	SP27	SPARE WIRE	Y2A	FLUORESCENT BALLAST
B7	MICROPHONE	G5	PASSENGER SPEAKER	SP28	SPARE WIRE	Y2B	FLUORESCENT BALLAST
B8	MICROPHONE	G6	PASSENGER SPEAKER	SP30	SPARE WIRE	Y3A	FLUORESCENT BALLAST
B10	MICROPHONE	G7	PASSENGER SPEAKER	SP33	SPARE WIRE	Y3B	FLUORESCENT BALLAST
B11	MICROPHONE	G8	PASSENGER SPEAKER	SP34	SPARE WIRE	Y4A	FLUORESCENT BALLAST
B12	MICROPHONE	IPJ1	CLUSTER - BULB TEST POS	SP35	SPARE WIRE	Y4B	FLUORESCENT BALLAST
B1A	FLUORESCENT BALLAST	IPJ2	CLUSTER - BULB TEST NEG.	SP36	SPARE WIRE	Y5A	FLUORESCENT BALLAST
B1B	FLUORESCENT BALLAST	IPJ5	CLUSTER - FUEL GAUGE	SP37	SPARE WIRE	Y5B	FLUORESCENT BALLAST
B2A	FLUORESCENT BALLAST	IPJ6	CLUSTER - BULB TEST POS.	SP38	SPARE WIRE	Y6A	FLUORESCENT BALLAST
B2B	FLUORESCENT BALLAST	IPJ7	CLUSTER - BULB TEST NEG.	SP40	SPARE WIRE	Y6B	FLUORESCENT BALLAST
B3A	FLUORESCENT BALLAST	IPJ8	CLUSTER - MASTER WARNING	SP41	SPARE WIRE	Y7A	FLUORESCENT BALLAST
B3B	FLUORESCENT BALLAST	L8	WATER TANK HEATER	SP42	SPARE WIRE	Y7B	FLUORESCENT BALLAST
B4A	FLUORESCENT BALLAST	L9	WATER TANK HEATER	SP43	SPARE WIRE	0	BATTERY - MAIN GROUND
B4B	FLUORESCENT BALLAST	LX5	CLUSTER - COMPUTER MODE	SP44	SPARE WIRE	0	EVAP. COMPT. GROUND
B5A	FLUORESCENT BALLAST	LX6	CLUSTER - COMPUTER DOWN	SP45	SPARE WIRE	0	RJB - INSIDE GRD
B5B	FLUORESCENT BALLAST	LX7	CLUSTER - COMPUTER SET	SP48	SPARE WIRE	0A	LAVATORY ACCESSORIES
B6A	FLUORESCENT BALLAST	LX16	CLUSTER - COMPUTER UP	SP50	SPARE WIRE	0A	EVAP. FAN GROUND
B6B	FLUORESCENT BALLAST	LX21	CLUSTER - COMPUTER COM.	SP51	SPARE WIRE	0A	FR. ROOF ACC. GRD
B7A	FLUORESCENT BALLAST	R1A	FLUORESCENT BALLAST	SP52	SPARE WIRE	0B	BOOSTER BLOCK GROUND
B7B	FLUORESCENT BALLAST	R1B	FLUORESCENT BALLAST	SP53	SPARE WIRE	0B	A/C - CONDENSER GRD
B14	RADIO SYSTEM	RT	T.T.L.T. MODULE - TEST SW.	SP54	SPARE WIRE	0B	24V&12V CUT OUT REL.COIL
B15	RADIO SYSTEM	SPK1	PASSENGER SPEAKER	SP56	SPARE WIRE	0BE	OV BATTERY MONITOR
C2	RADIO SYSTEM	SPK2	PASSENGER SPEAKER	SP57	SPARE WIRE	0C	R.J.B. - GRB
C3	CONTROL HEAD ANTENNA	SPK3	PASSENGER SPEAKER	SP60	SPARE WIRE	0C	MOTOR STARTER GROUND
C5	VIDEO SYSTEM	SPK4	PASSENGER SPEAKER	SP61	SPARE WIRE	0C	F.R. SERV. CPT- ACC.
C6	CONTROL HEAD DIMMER	SP1	SPARE WIRE	SP62	SPARE WIRE	0C1	ENTRANCE DOOR SEDAN
C7	RADIO SYSTEM	SP2	SPARE WIRE	SP63	SPARE WIRE	0C2	STEERING CONTROL GROUND
C8	AUDIO AMPLI	SP3	SPARE WIRE	SP64	SPARE WIRE	0C3	SOUND SYSTEM RELAY
C9	VIDEO SYSTEM	SP4	SPARE WIRE	SP65	SPARE WIRE	0C4	F.J.B. GRD
C10	VIDEO SYSTEM	SP5	SPARE WIRE	SP69	SPARE WIRE	0CJ	CRUISE SW. JUMPER
C11	VIDEO SYSTEM	SP6	SPARE WIRE	SP70	SPARE WIRE	0D	FLUORESCENT GRD
C12	VIDEO SYSTEM	SP7	SPARE WIRE	SP71	SPARE WIRE	0D	COND FAN GRD
C13	VIDEO SYSTEM	SP8	SPARE WIRE	SP72	SPARE WIRE	0E	BATT. COMPT. LTS GROUND
C14	VIDEO SYSTEM	SP9	SPARE WIRE	SP74	SPARE WIRE	0E	READING LIGHTS GROUND

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
0F	FLUORESCENT GRD		GROUND	11J	DESTINATION SIGN	15	WIPER & WASHER FEEDING
0F	PRO-DRIVER GROUND	0W	FJB - TRANS. RLY GRD	11P	DESTINATION SIGN	16	SPEEDOMETER (+)
0G	READING LIGHTS GROUND	0W	SHIFT SELECTOR GROUND	12	12V ELECTRONIC TERMINAL	16T	SPEED SW SIGNAL IN (+)
0G	ABS GRD CX1	0WA	PRE-HEAT WATER HEATER	12A	FR JCT PANEL 12V DISC SW	17	EXTERIOR LTS-FLASHER UNIT
0H	ENG. CPT. - ACC. GRD	0Y1	ABS SYSTEM-GRD	12B	FR JCT PANEL 12V DISC SW	17A	EXTERIOR LTS-FLASHER UNIT
0J	PARCEL RACK A/C UNIT	0Y2	ABS SYSTEM-GRD	12BE	12V BATTERY MONITOR	17C	JUMPER LTS SW. - HAZARD
0K	PARCEL RACK A/C UNIT	0Y3	ABS SYSTEM-GRD	12C	FR JCT PANEL 12V DISC SW	20	SPEEDOMETER SIGNAL (-)
0L	ENG. CPT -CLEAR. LTS RR ROOF	0Y4	ABS SYSTEM-GRD	12C	RR JCT BOX 12V DISC SW	21	LEFT DIRECTIONNAL LTS
0L	R.J.B. - GRD	0Y5	ABS SYSTEM-GRD	12D	BATT. JCT PANEL 12V HOT WIRE	21A	LEFT DIRECTIONNAL LTS SIGN.
0L	FR - SIDE MARK. & FLASH GRD	0Y6	ABS SYSTEM-GRD	12D	FR JCT PANEL 12V HOT WIRE	21B	HAZARD SWITCH SIGNAL
0L1	ENG. CPT-SIDE MARK. & FL. GRD	0Y7	ABS SYSTEM-GRD	12D	RR JCT PANEL 12V HOT WIRE	21BB	LEFT DIRECTIONNAL LTS FEEDING
0L2	HEAD LTS GROUND	00A	ELECTRONIC TERMINAL GROUND	12DD	FR JCT PANEL 12V HOT WIRE	21H	EXTERIOR LTS-HAZARD SIGNAL
0L3	FR. SERV. DR. & ENT. DOOR GRD	00A	DASH ELECTRONIC GROUND	12DT	T.T. LT MODULE	21M	AUX. LTS - DIRECTIONAL LH
0L4	FOG LTS RESISTOR GRD	00F	FRONT ELECTRONIC GROUND	12E	FR JCT PANEL 12V DISC SW	23	RIGHT DIRECTIONNAL LTS
0L5	LH CONSOL - ACC. GRD	2B	A/C & HEAT SYSTEM	12F	RR JCT PANEL 12V DISC SW	23A	RIGHT DIRECTIONNAL LTS SIGN.
0L6	MARKER&FLASH. GROUND	2D	A/C & HEAT SYSTEM	12F1	FR JCT PANEL 12V DISC SW	23BB	RIGHT DIRECTIONNAL LTS FEEDING
0L7	AISLE LIGHTS GROUND	2DD	A/C & HEAT SYSTEM	12F2	FR JCT PANEL 12V DISC SW	23H	EXTERIOR LTS-HAZARD SIGNAL
0LV	WINDSHIELD WASHER LEVEL	2E	A/C & HEAT SYSTEM	12G	FR JCT PANEL 12V DISC SW	23K	RIGHT DIRECT. LTS W/KNELLING
0M	WIPER 2 MIRROR MOTOR	2EE	A/C & HEAT SYSTEM	12H	12V IGN. DASH ACCESS.	23M	AUX LTS - DIRECTIONAL RH
0M3	DEFROST GRD	2H	A/C & HEAT SYS-LO-PRESS SW.	12I	RR JCT BOX 12V IGNITION	24	24 VOLTS BATTERY DIST.
0M4	HORN & DR'S WINDOW LIFTER	2L	A/C & HEAT SYS-HI-PRESS SW.	12I	FR JCT PANEL 12V IGNITION	24	24 V. DISC. FRONT DIST.
0M5	SUN VISOR MOTOR	4A	HOTESS CHIME MAIN SWITCH	12IA	FR JCT PANEL 12V IGNITION	24A	24V BOOSTER BLOCK
0M7	DR'S WIND. LIFT. & RH MIR. SW	4C	HOTESS CHIME P. RACK SW.	12IA	RR JCT PANEL 12V IGNITION	24A	FR JCT PANEL 24V DISC. SW
0M7A	LH MIRROR SW.	5	AISLE LTS FEEDING	12IB	FR JCT PANEL 12V IGNITION	24A	RR JCT PANEL 24V DISC. SW
0P	ENG. CDT - PRE-HEATER	5N	EMERGENCY LTS	12IB	STEERING BOX ECU FEEDING	24B	FR JCT PANEL 24V DISC. SW
0R	SOUND SYSTEM RELAY GROUND	5N0	SPEED SIGNAL HIGHER 5MPH	12J	FR JCT PANEL 12V DISC. SW.	24BE	BATTERY MONITOR
0SA	BOSCH ALTERNATOR GROUND	5NC	SPEED SIGNAL LOWER 5MPH	12K	FR JCT PANEL 12V DISC. SW.	24C	FR JCT PANEL 24V DISC SW
0SA	PARCEL RACK LTS SWITCH	6	AISLE LTS	12LX	CLUSTER 12V HOT WIRE	24D	24 V. HOT WIRE FEEDING
0SB	PARCEL RACK LTS SWITCH	7B	ENTRANCE DOOR FEEDING-24V HW	12P	12 VOLTS BATTERY JCT BLOCK	24D	FR JCT BOX 24V HOT WIRE
0SC	PARCEL RACK LTS SWITCH	9	INTERIOR LTS-ENGINE CPT	12R	12 VOLTS MEMORY RADIO	24DD	FR JCT BOX 24V HOT WIRE
0SE	PARCEL RACK LTS SWITCH	9F	INTERIOR LTS - FR-SERV. CPT	12P	12V POWER OUTLET	24E	24 VOLTS POWER DISTRIBUTION
0SF	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-LUGGAGE CPT	12SB	12V SOUND SYSTEM FEEDING	24E	RR JCT PANEL 24V DISC SW
0SG	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-FR SERV. CPT	12SS	12V SOUND SYSTEM FEEDING	24F	RR JCT PANEL 24V DISC SW
0SH	PARCEL RACK LTS SWITCH	10A	INTERIOR LTS-LUGGAGE CPT	12S	12 V RADIO FEEDING	24H	RR JCT PANEL 24V DISC SW
0SJ	PARCEL RACK LTS SWITCH	10A	AUX. COMPRESSOR CLUTCH	12S1	12 V RADIO FEEDING	24I	FR JCT PANEL 24V IGNITION
0SS	SOUND SYSTEM GROUND	10B	INTERIOR LTS-LUGGAGE CPT	12S2	12 V RADIO FEEDING	24IA	FR JCT PANEL 24V IGNITION
00SS	SOUND SYSTEM GROUND	10C	INTERIOR LTS-LUGGAGE CPT	12T	RR JCT BOX 12V DISC SW	24IB	FR JCT PANEL 24V IGNITION
0S2	RADIO GROUND	10E	INTERIOR LTS-BATTERY CPT	12VB	FR JCT PANEL 12V DISC SW	24IF	FR JCT PANEL 24V IGNITION
0S3	VIDEO GROUND	10H	AUX. COMPRESSOR CLUTCH	12VD	12V HOT WIRE DISTRIBUTION	24K	RR JCT PANEL 24V DISC SW
0T	LAVATORY FAN & PUMP	10L	AUX. COMPRESSOR CLUTCH	12VE	FR JCT PANEL 12V DISC SW	24L	RR JCT PANEL 24V DISC SW
0T	SPEED SW. CONNECTOR	10X	AUX. COMPRESSOR CLUTCH	12VF	12 VOLTS FRONT DISTRIBUTIUON	24M	RR JCT PANEL 24V DISC SW
0T1	DASH ACC. GROUND	11	DESTINATION SIGN	12VG	RR JCT PANEL 12V DISC SW	24P	FR JCT PANEL 24V DISC SW
0T2	CLUSTER ACC. GROUND	11A	DESTINATION SIGN	12VI	12V IGNITION DISTRIBUTION	24PV	MICRO-WAVE INVERTER
0T2	WINDOW AWNING	11B	DESTINATION SIGN	12VO	12 VOLTS BATTERY EQUALIZER	24R	24V STARTER RELAY
0T3	ALTERNATOR MODULE	11C	DESTINATION SIGN	12VR	12 VOLTS REAR DISTRIBUTION	24R	SCENIC VIEW SIGNAL ON
0T4	12V OUTLET - CTR MODULE	11D	DESTINATION SIGN	12W	12V HOT WIRE DDEC FEEDING		
0VA	BATTERY EQUALIZER	11E	DESTINATION SIGN	12WA	ENTRANCE DOOR SYSTEM		
		11K	DESTINATION SIGN	14	LAVATORY PUMP		

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
24SB	24V SOUND SYSTEM FEEDING	41	A/C SYS.-COND FAN MOTOR	53E	WIPER & WASHER SYSTEM	76C	LOW FUEL T.T.LT
24SS	24V SOUND SYSTEM FEEDING	41A	A/C SYS.-COND FAN MOTOR	53J	WIPER & WASHER SYSTEM	76M	FUEL PRIME PUMP
24S1	AMPLIFIER FEEDING	41B	A/C SYS.-COND FAN MOTOR	55	EXTERIOR LTS-HI BEAM	76P	FUEL PRIME PUMP FEEDING
24S2	AMPLIFIER FEEDING	42	A/C SYS.-COND FAN MOTOR	57	EXTERIOR LTS-HI BEAM	77B	A/C SYS. - LIQ. SOL. VALVE
24S3	VIDEO FEEDING	42A	A/C SYS.-COND FAN MOTOR	57A	EXTERIOR LTS-HI BEAM	77C	A/C & HEAT SYS.-COMPRESSOR
24S4	VIDEO FEEDING	43	PARCEL RACK A/C	57B	A/C & HEAT SYS.-WATER PUMP	77H	A/C SYS.-LIQ. SOL. VALVE
24T	RR JCT PANEL 24V DISC SW	43A	PARCEL RACK A/C	57C	PRE-HEAT WATER HEATER	81	EXTERIOR LTS-STOP SW
24VA	24 VOLTS BATTERY EQUALIZER	43B	PARCEL RACK A/C	57C	A/C & HEAT SYS.-WATER PUMP	82	EXTERIOR LTS-STOP SIGNAL
24VD	24V HOT WIRE FEED	43C	PARCEL RACK A/C	57E	A/C & HEAT SYS.-WATER VALV	82A	EXTERIOR LTS-STOP SIGNAL
24VF	24 VOLTS FRONT DISTRIBUTION	43D	PARCEL RACK A/C	57W	PRE-HEAT WATER HEATER	82B	EXTERIOR LTS-STOP LTS
24VI	24 VOLTS IGNITION REAR DIST.	43E	PARCEL RACK A/C	58	EXTERIOR LTS-LO BEAM	82L	EXT. LTS-STOP LTS & CYCLOP
24VR	24 VOLTS REAR DISTRIBUTION	43F	PARCEL RACK A/C	58A	EXTERIOR LTS-LO BEAM	82R	EXTERIOR LTS-STOP LTS
24Y	24 VOLTS POWER GALLEY	43G	PARCEL RACK A/C	58B	EXTERIOR LTS-LO BEAM	83	ENG. CTR-MAST. KEY SW ACC.
25	EITHER ALTERNATOR RUN SIGNAL	43M	PARCEL RACK A/C	59A	ENGINE BRAKE SYSTEM	83A	24V&12V CUT RELAY COIL
25A	TT.LT. ALTERNATOR #1	43X	PARCEL RACK A/C	61	EXTERIOR LTS-24V FEED SW	83B	24V&12V CUT RELAY COIL
25A1	BOSCH ALTERNATOR SIGNAL D+	44	EXTERIOR LTS-FOG	61A	EXTERIOR LTS-HEAD SIGNAL	84	ENG. CTR-MAST KEY SW START
25A2	BOSCH ALTERNATOR SIGNAL D+	44A	EXTERIOR LTS-FOG	62	LAVATORY INDICATOR	84A	ENG. CTR-MAST KEY SW START
25B	EXT. LTS-DAYTIME RUN LTS	44B	EXTERIOR LTS-FOG	63	EXTERIOR LTS-CLEAR. FEED	84J	ENG. CTR-MAST KEY SW START
25D	BOTH ALTERNATOR RUN SIGNAL	44C	FOG,LTS & HVAC FEEDING	63B	EXTERIOR LTS-CLEARANCE	85	24V IGNITION SIGNAL
25K	T.T LT. ALTERNATOR #2	44D	EXTERIOR LTS - FOG	63C	EXT. LTS-MARKER SIGNAL	85A	24V IGN DASH INSTRUMENT.
26	DR'S & ENT. WINDOW LIFTER	44E	EXTERNAL LTS - FOG	63D	BLINKER RELAY	85C	24V IGNITION - FEED
26A	CIGAR LIGHT. & POW.OUTLET LH	45A	A/C & HEAT SYSTEM FULL AIR	63E	BLINKER RELAY	85F	RAD. FAN CONTROL W/RETARDER
26B	DRIVER'S WINDOW LIFTER	45B	A/C & HEAT SYS.-WATER PUMP	64	DRIVER'S FAN SPEED CTR	85W	OUT SPEED INTERLOCK - 24V IGN.
26C	DRIVER'S WINDOW LIFTER	45C	A/C & HEAT SYS.-WATER VALV	64A	A/C SPARE	85X	ABS-24V IGN
27	LAVATORY ALARM	45D	A/C & HEAT SYS.-WATER VALV	64B	A/C SPARE	85Y	ABS-WARNING LT
28H	T.T.LT MODULE - HI A/C PRES.	45G	A/C & HEAT SYS.-DR'S HTR	65	FOOT DAMPER MOTOR	86	ENG. CTR-STARTER SOL.
28T	T.T.LT MODULE - LO A/C PRES.	46	EXTERIOR LTS-MARKER	65A	FOOT DAMPER MOTOR	86A	ENG. CTR-STARTER RELAY COIL
29	A/C & HEAT SYS.-DR'S HTR	46A	EXTERIOR LTS-AUX LTS RESIS.	65D	DRIVER'S REC. DAMPER	86F	TELL TALE STARTER ON
29H	HVAC DASH MODILE	46C	EXTERIOR LTS-MARKER	66	A/C PASSENGER - ON/OFF	86T	TELL TALE STARTER ON
30A	GALLEY SWITCH SIGNAL	46D	EXTERIOR LTS-AUX LTS RESIS.	67A	A/C & HEAT SYSTEM	87B	ENGINE CTR-24V IGNITION
30J	GALLEY SWITCH LED	48	ENTRANCE DOOR OPEN SIGNAL	68	DASH & DEFROST DAMPER MOT	88	ENGINE CTR-RR START SIGNAL
31B	WIPER & WASHER SYSTEM	48A	ENTRANCE DOOR OPEN SOL.	68A	DASH & DEFROST DAMPER MOT	89	ENGINE CTR-RR START SIGNAL
32	EXTERIOR LTS-BACK-UP	48B	ENTRANCE DOOR OPEN SIGNAL	69	DAMPER MIX LIMIT SWITCH	90B	ENG. CTR-MAST KEY SW FEED
32B	EXTERIOR LTS-BACK-UP	48C	ENTRANCE DOOR SYSTEM	70	HAT RACK & NIGHT LTS FEEDING	91	PARKING BRAKE SW SIGNAL
35	ENTRANCE STEP LIGHTS	48D	ENTRANCE DOOR SYSTEM	72	SUN VISOR - FEED	91A	DDEC -FAST IDLE SIGNAL
36	ENGINE BRAKE SYSTEM	48W	ENTRANCE DOOR SEDAN	72A	SUN VISOR RH	91B	D.R.L. CANCEL RELAY
36A	ENGINE BRAKE SYSTEM & RET.	49	ENTRANCE DOOR CLOSE SIGNAL	72B	SUN VISOR RH	91C	PARKING BRAKE - T.T.LT
37	LAVATORY LTS FEEDING	49A	ENTRANCE DOOR SYSTEM	72C	SUN VISOR LH	91J	FAST IDLE - JUMPER SW.
38	FLUORESCENT RELAY FEEDING	49B	ENTRANCE DOOR SYSTEM	72D	SUN VISOR LH	92	BATT. EQUAL.-CHECK BALANCE
38A	R.H FLUORESCENT	50	AIR DRYER	74	R.H. READING LAMP FEEDING	93	BATT. EQUALIZ.-CHECK LO/HI
38B	L.H. FLUORESCENT	52	ALARM & SIGNAL-ELEC.HORN	74A	R.H. HOTESS CHIME FEEDING	95A	ENG. BRAKE & RETARDER SYS.
38C	FLUORESCENT FEEDING	52A	ALARM & SIGNAL-ELEC.HORN	74D	READING LAMP SWITCH	95B	ENG. BRAKE & RETARDER SYS.
39	INTERIOR LTS-DRIVER'S LTS	52B	PNEUMATIC HORN	74J	READING LAMP INDICATOR SW.	97	TACHOMETER SIGN.-NOT
39D	INTERIOR LTS - DRIVER' LTS	53	ALARM & SIGNAL-ELEC.HORN	75	L.H. READING LAMP FEEDING		
		53B	WIPER & WASHER SYSTEM	75A	L.H. HOTESS CHIME FEEDING		
		53C	WIPER & WASHER SYSTEM	76	FUEL TANK GAUGE		

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
	USED	126D	KNEELING SYSTEM	137B	RR VIEW MIRROR	151	ATC VALVE
100	INTERIOR LTS RELAY COIL	126F	KNEELING SYSTEM	137C	RR VIEW MIRROR	152	ATC VALVE
100	INDIRECT LTS FEEDING	126G	KNEELING SYSTEM	137D	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT
100A	INDIRECT LTS RELAY COIL	126H	SPEED SIGN 5NC - 24V	137E	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)
100B	INDIRECT LTS FEEDING	126K	KNEELING SYSTEM	137F	RR VIEW MIRROR	156A	ABS SYSTEM-FEED
100C	INDIRECT LTS FEEDING	126L	KNEELING SYSTEM	137H	RR VIEW MIRROR	157	ABS SYSTEM-FEED
101	24 VOLTS POWER STARTER	126P	KNEELING SYSTEM	137J	RR VIEW MIRROR	157A	ABS SYSTEM-FEED
101	WORLD TR.- LO SIGN SOL.LO	126R	KNEELING SYSTEM	137K	RR VIEW MIRROR	157B	ABS SYSTEM
102	24 VOLTS A/C DISTRIBUTION	126S	KNEELING SYSTEM	137L	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC
102	WORLD TRANSM.-SOL. SUPPLY	126T	KNEELING SYSTEM	137M	RR VIEW MIRROR FEED	160	ALARM & SIGN.-TAG PRESS SW
102A	BOSCH ALTERNATOR FEEDING	126W	KNEELING SYSTEM	137R	WORLD TRANSM-RETARDER	161B	WORLD TRANSM-SIGNALGRD
103	WORLD TRANSM.- B.SOL.LO	126W	WORLD TRANSM-NOT USED	137T	MIRROR HEAT SW-JUMPER	162	WORLD TRANSM-PRESS. SW C3
103	LOW BUOY SYSTEM	127	WORLD TRANSM. - H SOL.	138	WORLD TR.-RETARDER TEMP	163	WORLD TR.-RETARDER ENABLE
104	WORLD TR. -G SOL.	127	24HOT WIRE PREHEAT	138	ABS SYSTEM-SENSOR	164	WORLD TR.-RET. ACTUAT. SIGN
105W	WORLD TR-SOL.-RET.OIL TT.LT	127A	PRE-HEAT WATER HEATER	138A	ABS SYSTEM-SENSOR	165	WORLD TR.-OIL LEVEL SIGNAL
107	WORLD TR. - SOL. SUPPLY	127B	PRE-HEAT WATER HEATER	139	ABS SYSTEM-VALVE	166	WORLD TRANSM. OUTPUT 7
110	WORLD TR.-F SOL. LO	127S	PRE-HEAT WATER HEATER	139	WORLD TR.-OUTPUT SPEED HI	167	WORLD TR.-OUT SPEED INTERLOCK
112	WORLD TR.-SPARE OUTPUT (+)	127W	PRE-HEAT WATER HEATER	140	WORLD TR.-TURBINE SPEED LO	169	WORLD TRANSM-PRE-SELECT #1
113W	WORLD TR.-REVERSE WARNING	128	WORLD TRANSM-B SOL.	140	ABS SYSTEM-VALVE	170	WORLD TRANSM-SHIFTER
114	INTERIOR LT-DASH LT RHEOS.	128A	PRE-HEAT WATER HEATER	141	ABS SYSTEM-VALVE	170C	LUGGAGE DOOR LOCK-T.T.LT
114A	INTERIOR LT-DASH LT RHEOS.	128B	PRE-HEAT WATER HEATER	141	WORLD TR.-ENGINE SPEED HI	170D	LUGGAGE DOOR LOCK-FEED
114B	INT. LT-DASH LT RHEOST.FEED	128W	PRE-HEAT WATER HEATER	141	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN
115	DDEC -COOLANT LEVEL	129	WORLD TRANSM-E SOL.	142	ABS SYSTEM-VALVE	170F	LUGGAGE DOOR LOCK-FEED
115W	WORLD TR.-DO NOT SHIFT SIGN	129	PRE-HEAT WATER HEATER	143	ABS SYSTEM-SENSOR	170G	LUGGAGE DOOR LOCK-FEED
116	WORLD TR.-SOL. SUPPLY	129B	PRE-HEAT WATER HEATER	143A	ABS SYSTEM-SENSOR	170K	LUGGAGE DOOR-LOCK SIGN
116B	A/C & HEAT SYSTEM-DR'S HTR	130	WORLD TRANSM-SOL. SUPPLY	143A	WORLD TRANS-BATTERY GRD	170L	LUGG DOOR LOCK-SIGN T.T.LT
116C	A/C SYS.-TRIG. DEFROST	130	EVAP. FAN MAIN CABLE	143W	WORLD TRANSM-BATTERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT
119	WORLD TRANSM-ENGINE BRAKE	131	WORLD TRANSM-D SOL.	143X	WORLD TRANSM-BATTERY GRD	170R	LUGG DOOR LOCK-SIGN. T.T.LT.
120	WORLD TRANSM-A SOL.	132	WORLD TRANSM-ENGINE BRAKE	144	ABS SYSTEM-SENSOR	170S	LUGG DOOR LOCK-SIGN T.T.LT
121	WORLD TRANSM-SOL.SUPPLY	133	GALLEY HEATING CONTAINER	144A	ABS SYSTEM-SENSOR	170T	LUGG DOOR LOCK-SIGN T.T.LT
123	WORLD TR.-NEUTRAL START	133A	GALLEY HEATING CONTAINER	145	ABS SYSTEM	170V	LUGG DOOR LOCK-SIGN T.T.LT
123A	ALARM & SIGNAL-FIRE DETECT.	133B	GALLEY HEATING CONTAINER	146	ABS SYSTEM	170W	LUGGAGE DOOR LOCK-FEED
123B	ALARM & SIGNAL-FIRE DETECT.	133C	GALLEY HEATING CONTAINER	146A	WORLD TRANSM-12V IGNITION	170X	LUGG DOOR LOCK-SIGN T.T.LT
124	WORLD TR.-SENSOR POWER	134	GALLEY HEATING CONTAINER	146AA	WORLD TRANSM-DIAGN.CONN.	170Y	LUGGAGE DOOR LOCK-FEED
124A	WORLD TRANSM-SENSOR PWR	134A	GALLEY HEATING CONTAINER	147	WORLD TRANSM-OIL TEMP	170Z	LUGGAGE DOOR LOCK
125	LAVATORY FAN	135	GALLEY HEATING CONTAINER	147	ABS SYSTEM-VALVE	171	WORLD TRANSM-SHIFTER
125	WORLD TR-RETARDER INDICAT.	135A	WORLD TR.-RES MODULE RET.	147A	ETHER COLD START	172	WORLD TRANSM-SHIFTER
125W	WORLD TR-RETARDER INDICAT.	135B	A/C & HEAT SYS.-AIR SENSOR	147C	ETHER COLD START	173	WORLD TRANSM-SHIFTER
126	24 V IGN. SPEED SWITCH	135C	A/C & HEAT SYS.-AIR SENSOR	148	ABS SYSTEM-VALVE	174	WORLD TRANSM-SHIFTER
126A	KNEELING SYSTEM	136	MICRO-WAVE OVEN SWITCH	148	WORLD TR.-OUTPUT SPEED LO	175A	WORLD TRANSM-SHIFTER
126AA	KNEELING SYSTEM	136A	GALLEY LAMP	149	WORLD TR.-TURBINE SPEED HI	176	WORLD TRANSM-SHIFTER
126B	HI-BUOY SIGNAL	136A	WORLD TRANSM-12V BATTERY	149	ABS SYSTEM-SENSOR	180	OUTSIDE TEMP. DISPLAY
126C	KNEELING SYSTEM	136AA	WORLD TRANSM-SHIFTER PWR	149A	ABS SYSTEM		
		136V	WORLD TRANSM-12V BATTERY	150	WORLD TR.-ENGINE SPEED LO		
		136W	WORLD TRANSM-12V BATTERY	150	DDEC -ECM BATTERY GRD		
		136X	WORLD TRANSM-12V BATTERY	150A	DDEC -ECM BATTERY GRD		
		137	WORLD TRANSM-RETARDER	151	DDEC -ECM BATTERY GRD		
		137	RR VIEW MIRROR				
		137A	RR VIEW MIRROR				

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
180A	OUTSIDE TEMP. DISPLAY	541	DDEC-CRUISE SET SW				
180A	WORLD TRANSM-SHIFTER	543	DDEC-CRUISE BRAKE PEDAL				
180B	OUTSIDE TEMP. DISPLAY	544	DDEC-CRUISE ON/OFF SW				
180C	OUTSIDE TEMP. DISPLAY	545	DDEC-CRUISE RESUME SW				
181	FROZEN POINT T.T.LT	555	DDEC-FAN CLUTCH SPEED#1				
181A	TEMP. CTR'L INSIDE SENSOR	556	DDEC-VEHICULE SPEED (+)				
181B	TEMP. CTR'L INSIDE SENSOR	557	DDEC-VEHICULE SPEED (-)				
181C	THERMOMET. OUTSIDE SENSOR	563	DDEC-FAN CLUTCH SPEED#2				
181D	THERMOMET. OUTSIDE SENSOR	564	DDEC-DIGTAL OUTPUT				
195	WORLD TRANSM-TRANS ID	565	DDEC-ENGINE BRAKE ACTIVE				
197	FUEL WATER FILTER	583	DDEC-ENGINE BRAKE 4 CYL.				
197A	FUEL WATER FILTER	900	DDEC-DATA LINK (+)				
201	WORLD TRANSM-SPARE	901	DDEC-DATA LINK (-)				
202	WORLD TRANSM-SPARE	908	DDEC-HYDRAU. PWM#1 OUTPUT				
203	WORLD TRANSM-SPARE	916	DDEC-SENSOR SUPPLY (5VDC)				
204	WORLD TRANSM-SPARE	952	DDEC-SENSOR RETURN				
214	WORLD TR.-BACK-UP SIGNAL	953	DDEC-BATTERY GRD				
231	WORLD TR.-NEUTRAL SIGN GRD	979	DDEC-ENGINE BRAKE 2 CYL.				
240	DDEC -ECM 12V FEEDING	2123	FLASHER SIGNAL LTS				
241	DDEC -ECM 12V FEEDING						
253	24 VOLT SIGNAL GALLEY INVERTER						
254	GALLEY REFRIGERATOR						
254A	GALLEY REFRIGERATOR						
254F	GALLEY REFRIGERATOR						
255	GALLEY COFFEEMAKER						
255A	GALLEY COFFEEMAKER						
255B	GALLEY COFFEEMAKER						
260	WINDOW AJAR-T.T.LT						
290	FAN CLUTCH RADIATOR-FEED						
290A	FAN CLUTCH RADIATOR-FEED						
291	FAN CLUTCH RADIATOR SPD 1						
292	FAN CLUTCH RADIATOR SPD 2						
292J	FAN OVERRIDE LTS SWITCH						
301	W.C.L. SYSTEM						
302	W.C.L. SYSTEM						
417	DDEC-LIMIT SPEED GOVERNOR						
419	DDEC -CHEK ENGINE LIGHT						
439	DDEC-12V IGNITION						
451	DDEC-A/C FAN CLUTCH						
505	DDEC-TACHOMETER DRIVE						
509	DDEC-STOP ENGINE LIGHT						
510	DDEC-FAST IDLE SIGNAL						
524	DDEC-ENGINE BRAKEDISABLE						
525	DDEC-FAST IDLE SIGNAL						
528	DDEC-STOP ENG. OVERRIDE						
531	DDEC-CRUISE CLUTCH CUT OUT						
540	DDEC-CRUISE ENABLE T.T.LT						