

E472A	LAMP, ENGINE COMPARTMENT	IA 0 B
E566	REST COMPARTMENT SNAKE LAMP	GA 4 B
E567	SNAKE LAMP, ELECTRIC CENTRE	IB 0 C
E568	SNAKE LAMP, MAP LIGHT	IB 0 C
E902A	DRIVER LOUDSPEAKER	LB 0 C
E902B	DRIVER LOUDSPEAKER	LB 0 C
E902C	GUIDE LOUDSPEAKER	LB 1 C
E902D	GUIDE LOUDSPEAKER	LB 1 C
E902E	LOUDSPEAKERS, ROOF RIGHT	LB 2 D
E902F	LOUDSPEAKERS, ROOF LEFT	LB 3 D
E911A	PASSENGER SPEAKERS, LEFT SIDE	IB 4 C
E911B	PASSENGER SPEAKER, RIGHT SIDE	IB 4 C
E916M	LAMP, MIDDLE DOOR EMERGENCY	HD 3 C
E917M	LAMP GUIDE, MIDDLE DOOR	HD 1 C
E919	OPEN DOOR WCL	GB 1 B
E4003MK	MIDDLE KITCHEN	FA 1 C
E4054A	LIGHT INTO THE TOILET	EA 3 C
E4054AL	LIGHT INTO THE LEFT TOILET	EB 3 B
E4054B	LIGHT INTO THE TOILET	EA 3 C
E4054BL	LIGHT INTO THE LEFT TOILET	EB 3 B
E4055A	OCCUPIED & VACANT DISPLAY	HB 2 B
E4055AL	OCCUPIED & VACCANT DISPLAY, LEFT SIDE	HB 2 E
E4055L	OCCUPIED & VACCANT DISPLAY, LEFT SIDE	EB 3 A
E4055LA	OCCUPIED & VACANT LAMP WC	EA 3 A
E4057A	LUGGAGE LAMPS	CE 0 D
E4057B	LUGGAGE LAMPS	CE 0 D
E4057C2	LAMP, LUGGAGE	CE 1 D
E4057D	LUGGAGE LAMPS	CE 1 D
E4057E	EXTRACOMPARTMENT LAMPS	CE 2 D
E4057F	LUGGAGE LAMPS	CE 2 D
E4057G	LUGGAGE LAMPS	CE 2 D
E4057H	LUGGAGE LAMPS	CE 3 D
E4057J	LAMP, REAR HATCH	CE 4 D
E4057K	LAMP,REAR HATCH, CA-LUGD2	CE 3 D
E4063	OVER SPEED LAMP	IB 3 C
E4064	DRIVER LAMP	CB 1 D
E4065	KITCHEN LIGHT	FA 4 D
E4066A	REST COMPARTMENT LEFT LIGHT	GA 0 D
E4066B	REST COMPARTMENT RIGHT LIGHT	GA 1 D
E4067	TIME & TEMPERATURE DISPLAY	IB 1 C
E4070	EMERGENCY LAMP	HA 3 B
E7004	FRIDGE	FA 3 D
E7005	WATER DISPENSER ELBER	FA 1 C
FJ6	FREE TERMINAL A&V ON DEMAND	LD 1 B
FJ6A	FREE TERMINAL A&V ON DEMNAD	LD 1 B
FJ141	FREE TERMINAL A&V ON DEMAND	LD 0 A
FL_2_3_A	LAMP, FRONT HEADLAMPS	OC 0 D
FT01	TERMIC FUSE	IE 0 B
FT02	TERMIC FUSE, KLIXON 80 A ,SDLS-80-1	IJ 0 B
G01	BATTERY 12 VCD	AB 0 C
G01B.B	BATTERY TERMINAL	AB 0 D

VOLVO

Volvo Bus Corporation

Document Title

WIRING DIAGRAM

Document Type

PRODUCT SCHEMATIC

Document No

21894999

Issue Index

02

Volume No

02

Page No

5(14)