


A9078	NA 0 A	CONTROL UNIT, CLIMATE DISPLAY
A9079	AB 2 C	PCB, TIP
A9080	BF 1 A	CONTROL UNIT I/O-B LEFT TOILET
AF1	AC 0 B	FUSES MODULE
AF2	LA 0 B	FUSES MODULE
AF3	AD 0 B	FUSES MODULE
AF4	IA 0 D	FUSES MODULE
AF5	AG 0 C	FREE FUSE MODULE
AK1	AB 1 D	RELAYS MODULE
B21	NE 1 C	SENSOR, OUTDOOR TEMPERATURE
B22	NE 1 C	SENSOR, OUTDOOR TEMPERATURE
B952	ND 0 B	SENSOR, OUTSIDE TEMPERATURE
B955	ND 1 A	SENSOR ,PASSENGER TEMPERATURE
B961A	JC 1 B	SENSOR EMERGENCY WINDOWS
B961B	JC 2 B	SENSOR EMERGENCY WINDOWS
B961C	JC 2 B	SENSOR EMERGENCY WINDOWS
B961D	JC 3 B	SENSOR EMERGENCY WINDOWS
B961E	JC 0 B	SENSOR EMERGENCY WINDOWS
B961F	JC 0 B	SENSOR EMERGENCY WINDOWS
B961G	JC 1 B	SENSOR EMERGENCY WINDOWS
B7070	OB 3 B	INDUCTIVE SENSOR,ENGINE HATCH OPEN
B7072	NA 1 D	DEFROSTER TEMP. SENSOR
B7073	NA 4 B	OUTSIDE TEMP. SENSOR
B7074	NA 0 D	DRIVER TEMP. SENSOR
B7075	NC 2 D	PASSENGER SENSOR, REHEATING SYS
Ba+	AB 3 A	B+ SIGNAL, FREE TERMINAL
Bb+	AD 0 B	B+ SIGNAL, FREE TERMINAL
COP	KA 0 B	FEED COPILOTO
D972A	GA 2 B	DRIVER INTERPHONE
D972B	GA 2 C	CABIN INTERPHONE
DAH	NE 2 B	DIODE, AUXILIARY HEATER
DRD	BC 2 D	DIODE
E10LB	OA 1 C	LICENSE PLATE LEFT
E1ORB	OA 2 C	LICENSE PLATE RIGHT
E07LR	OA 1 C	FOG LIGHT LEFT REAR
E07RR	OA 2 C	FOG LIGHT RIGHT REAR
E09RB	OA 3 C	BREAK LIGHT MIDDLE
E10L	OA 0 C	TAIL AND BREAK LIGHT LEFT
E10LB	OA 1 C	LICENSE PLATE LEFT
E10R	OA 2 C	TAIL AND BREAK LIGHT RIGHT
E10RB	OA 2 C	LICENSE PLATE RIGHT
E11LF	OB 0 C	SIDE-MARKER LAMP MIDDLE LEFT
E11RF	OB 1 C	SIDE-MARKER LAMP MIDDLE RIGHT
E11TL	OB 0 C	SIDE-MARKER LAMP REAR LEFT
E11TR	OB 1 C	SIDE-MARKER LAMP REAR RIGHT
E13	OB 2 C	DIRECTION INDICATOR

 Volvo Bus Corporation	Document Title			
	WIRING DIAGRAM			
	Document Type			
	PRODUCT SCHEMATIC			
Document No	Issue Index	Volume No	Page No	
21250316	01	02	2(11)	