

CIRCUIT BREAKER CODE (CB)

P 2 / 0 F : 1

CIRCUIT BREAKER CODE (CB)

P 2 / 0 F : 1

NO.	PAGE	AMPERE	#PREVOST	LOCATION	FUNCTION	NO.	PAGE	AMPERE	#PREVOST	LOCATION	FUNCTION
CB1	1	200A	560838	ENGINE CPT	A/C FULL AIR	CB127	15	25A	561795	FR JCT BOX	ELECTRIC DRIVER'S SEAT
CB2	1	30A	870630	ENGINE CPT	12V HOT WIRE RR JCT BOX	CB128	19	6A	561790	RR JCT BOX	UNLOAD TAG SYSTEM
CB3	1	70A	561767	ENGINE CPT	12V FEED RR JCT BOX	CB129	18	15A	561793	RR JCT BOX	WATER HEATER
CB4	1	90A	560298	ENGINE CPT	12V FEED FR JCT BOX	CB130	5	6A	561790	RR JCT BOX	FAN CLUTCH RADIATOR
CB5	1	30A	870630	ENGINE CPT	24V HOT WIRE RR JCT BOX	CB132	18	15A	561793	RR JCT BOX	WATER HEATER WEBASTO
CB6	1	90A	560298	ENGINE CPT	24V FEED RR JCT BOX	CB138	21	3A	561797	FR JCT BOX	SUN VISOR
CB7	1	90A	560298	ENGINE CPT	24V FEED FR JCT BOX						
CB8	13	120A	562397	A/C JCT BOX	CONDENSER FAN MOTOR						
CB9	13	120A	562397	A/C JCT BOX	EVAPORATOR FAN MOTOR						
CB10	2	8A	561791	FR JCT BOX	MASTER SWITCH						
CB16	2	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW						
CB18	2	6A	561791	RR JCT BOX	ENGINE-FR CTR SW						
CB19	3	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER						
CB20	3	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER						
CB21	3	6A	561790	RR JCT BOX	DDEC III 12V IGNITION						
CB26	8	10A	561792	FR JCT BOX	BACK-UP LTS						
CB27	5	8A	561791	FR JCT BOX	24V IGN DASH ACCESSORIES						
CB29	5	20A	561794	FR JCT BOX	ELECTRICAL HORNS						
CB30	5	15A	561793	FR JCT BOX	FIRE ALARM & WATER HTR TIMER						
CB31	5	8A	561791	FR JCT BOX	AIR DRYER						
CB35	6	6A	561790	FR JCT BOX	FOG & HAZARD SW						
CB36	6	15A	561793	FR JCT BOX	FOG LTS						
CB37	6	8A	561791	FR JCT BOX	HEAD & MULTI-FUNC. SW						
CB38	6	10A	561792	FR JCT BOX	MARKER LTS						
CB39	6	6A	561790	FR JCT BOX	TACHO & SPEEDO						
CB40	6	8A	561791	FR JCT BOX	FR & RR CLEARANCE & ID. LTS						
CB42	6	10A	561792	FR JCT BOX	RR MARKER, TAIL, LICENCE LTS						
CB43	6	20A	561794	FR JCT BOX	HEADLAMP (HI)						
CB44	6	15A	561793	FR JCT BOX	HEADLAMP (LO)						
CB45	7	10A	561792	FR JCT BOX	MULTI-FUNC. SW (WIPER CTR)						
CB47	7	15A	561793	FR JCT BOX	CORNERING LTS						
CB48	8	6A	561790	FR JCT BOX	STOP SW						
CB49	8	15A	561793	RR JCT BOX	LH STOP LTS						
CB51	8	20A	561794	RR JCT BOX	RH STOP & CYCLOP LTS						
CB52	9	15A	561793	FR JCT BOX	LUGGAGE LTS						
CB55	10	8A	561791	FR JCT BOX	DASH LTS RHEOSTAT						
CB59	10	8A	561791	FR JCT BOX	DRIVER'S LTS SW.						
CB70	12-13	8A	561791	FR JCT BOX	BLOWER CUT-IN RELAY						
CB72	12	10A	561792	RR JCT BOX	A/C COMPRESSOR CLUTCH						
CB73	12	15A	561793	FR JCT BOX	WATER PUMP (A/C STANDARD)						
CB73	13	15A	561793	FR JCT BOX	WATER PUMP (A/C FULL AIR)						
CB79	12-13	10A	561792	FR JCT BOX	DRIVER'S HTR FAN						
CB83	4	20A	561794	RR JCT BOX	WORLD TRANSMISSION VIM POWER						
CB91	15	8A	561791	FR JCT BOX	DRIVER'S SEAT HEATER						
CB92	16	6A	561790	FR JCT BOX	SPEED SW & LEVEL-LOW						
CB104	17	6A	561790	FR JCT BOX	ABS E.C.U.						
CB105	17	20A	561794	FR JCT BOX	ABS E.C.U.						
CB106	17	10A	561792	FR SERV JCT BOX	ABS E.C.U.						
CB107	17	10A	561792	FR SERV JCT BOX	ABS E.C.U.						
CB117	14	8A	561791	FR JCT BOX	RR VIEW MIRROR						
CB118	16	20A	561794	FR JCT BOX	LUGGAGE DOOR LOCK MOTOR						
CB119	16	3A	561797	FR JCT BOX	LUGGAGE UNLOCK TT LT & SW						
CB120	16	20A	561794	FR JCT BOX	LUGGAGE DOOR LOCK MOTOR						
CB121	14	10A	561792	FR JCT BOX	CIGAR LIGHTER						
CB122	11	6A	561790	FR JCT BOX	ENTRANCE DOOR AIR LOCK						
CB125	7	20A	561794	FR JCT BOX	DIRECTIONAL LTS LH						
CB126	7	20A	561794	FR JCT BOX	DIRECTIONAL LTS RH						