

# CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
BA	INTERIOR LTS-110V FLUORESCENT	SP 15	SPARE-RJB TO ENGINE	SP 115	SPARE-FJB TO U/DASH WIPER	0 M3	FS - ELECTRICAL MOTOR GRD
BB	INTERIOR LTS-110V FLUORESCENT	SP 16	SPARE-RJB TO ENGINE	SP 116	SPARE-FJB TO U/DASH FLOOR	0 M4	FS - ELECTRICAL MOTOR GRD
D 1	SOUND SYSTEM-FR RH SPEAKER	SP 17	SPARE-RJB TO ENGINE	SP 117	SPARE-FJB TO U/DASH FLOOR	0 M5	FS - ELECTRICAL MOTOR GRD
D 2	SOUND SYSTEM-FR RH SPEAKER	SP 18	SPARE-FJB TO RJB	W C	A/C & HEAT SYST-EVAP CTR SIGN	0 M6	FS - FJB GRD
D 3	SOUND SYSTEM-RR RH SPEAKER	SP 24	SPARE-RJB TO LAVATORY ROOF	Y C	INTERIOR LTS-110V FLUORESCENT	0 M7	FS - ELECTRICAL MOTOR GRD
D 4	SOUND SYSTEM-RR RH SPEAKER	SP 25	SPARE-RJB TO LAVATORY ROOF	Y D	INTERIOR LTS-110V FLUORESCENT	0 M	RS - ENGINE CPT ACCES. GRD
D 5	SOUND SYSTEM-RR RH SPEAKER	SP 26	SPARE-RJB TO LAVATORY ROOF	0	BC - BAT. CPT CHASSIS GRD	0 MR	24V DISC. SW. RLY GRD SIGNAL
D 6	SOUND SYSTEM-RR RH SPEAKER	SP 27	SPARE-RJB TO LH HAT RACK	0	CONDENSER CPT GRD	0 MS	24V DISC. SW. RLY GRD SIGNAL
D 7	SOUND SYSTEM-RR RH SPEAKER	SP 28	SPARE-RJB TO LH HAT RACK	0	RS - RR JCT BOX RLY GRD	0 N	RS - ENGINE CPT ACCES. GRD
D 8	SOUND SYSTEM-RR RH SPEAKER	SP 31	SPARE-RJB TO RH HAT RACK	0	GALLEY GRD	0 P	RS - ENGINE CPT ACCES. GRD
D 3 4	SOUND SYSTEM-RR RH SPEAKER	SP 32	SPARE-RJB TO RH HAT RACK	0 A	BC - SHIELD GRD	0 R	FS - SOUND SYS. JCT PANEL GRD
D 6 7	SOUND SYSTEM-RR RH SPEAKER	SP 33	SPARE-FJB TO RJB	0 A	RS - RR JCT BOX RLY GRD	0 R	RS - RJB GRD
G 1	SOUND SYSTEM-RR RH SPEAKER	SP 38	SPARE-FJB TO RJB	0 A	FRS - FR ROOF ACCES. GRD	0 R	RS - ENGINE CPT ACCES. GRD
G 2	SOUND SYSTEM-FR LH SPEAKER	SP 43	SPARE-FJB TO RJB	0 A	RS - LUG. CPT ACCES. GRD	0 RE	RADIO & CTRL HEAD CHASSIS GRD
G 3	SOUND SYSTEM-FR LH SPEAKER	SP 45	SPARE-FJB TO RJB	0 A A	RS - VOLTAGE REGULATOR GRD	0 RH	RS - RR END LAMPS RH GRD
G 4	SOUND SYSTEM-RR LH SPEAKER	SP 46	SPARE-RJB TO LH FR ROOF	0 B	EC - ENGINE GRD	0 S	12 VOLT RUN - GND RELAY
G 5	SOUND SYSTEM-RR LH SPEAKER	SP 48	SPARE-RJB TO DASH CENTER PANEL	0 B	FRS - FR ROOF HEAT WIND GRD	0 S2	SOUND SYSTEM RADIO GRD
G 6	SOUND SYSTEM-RR LH SPEAKER	SP 56	SPARE-ENGINE TO RH SW PANEL	0 B	RS - LUG. CPT ACCES. GRD	0 S3	SOUND SYSTEM VIDEO GRD
G 7	SOUND SYSTEM-RR LH SPEAKER	SP 57	SPARE-DASH CENTER PANEL TO ENG.	0 B E	RJB - BAT. EQUAL. BAT GRD	0 S S	SOUNDS SYSTEM BATT. GRD
G 8	SOUND SYSTEM-RR LH SPEAKER	SP 58	SPARE-DASH CENTER PANEL TO ENG.	0 C	EC - STARTER MOTOR GRD	0 T	FS - DASH ACCES. GRD
G 3 4	SOUND SYSTEM-RR LH SPEAKER	SP 59	SPARE-FJB TO ENGINE	0 C	FS - SERV. CPT ACCES. GRD	0 T 1	FS - DASH ACCES. GRD
G 6 7	SOUND SYSTEM-RR LH SPEAKER	SP 61	SPARE-FJB TO DASH RH PANEL	0 C	BC - FAN CONDENSER GRD	0 T 2	FS - DASH ACCES. GRD
L 1 A	INTERIOR LTS-110V FLUORESCENT	SP 68	SPARE-FJB TO ENGINE	0 C R	24V DISC. SW. RLY GRD SIGNAL	0 T 3	FS - DASH ACCES. GRD
L 1 B	INTERIOR LTS-110V FLUORESCENT	SP 69	SPARE-FJB TO FR AXLE	0 C S	24V DISC. SW. RLY GRD SIGNAL	0 T 4	FS - DASH ACCES. GRD
L 2 A	INTERIOR LTS-110V FLUORESCENT	SP 70	SPARE-FJB TO FR AXLE	0 C 1	FS - SERV. CPT ACCES. GRD	0 V	RR JCT BOX CPT GRD STUD
L 2 B	INTERIOR LTS-110V FLUORESCENT	SP 71	SPARE-FJB TO RH SW PANEL	0 C 2	FS - SERV. CPT ACCES. GRD	0 VA	BATTERY TO EQUALISER 0V
L 8	ENG. BLK & WATER TANK-HEATER	SP 72	SPARE-FJB TO FR SERV CPT	0 C 3	FS - SERV. CPT ACCES. GRD	0 W	FS - WT GND & SHIELD
L 9	ENG. BLK & WATER TANK-HEATER	SP 7 4	SPARE-FJB TO LH CONSOLE	0 C 4	FS - FJB CPT ACCES. GRD	0 W	RS - RR JCT BOX (WCL) GRD
L 0	110V RECEPTACLE- 110V FLUOR.	SP 77	SPARE-FJB TO EVAPORATOR CPT	0 D	BC - FAN CONDENSER GRD	0 W C	RS - RR JCT BOX GRD (WCL)
L 1	110V RECEPTACLE- 110V FLUOR.	SP 7 8	SPARE-FJB TO CONDENSER CPT	0 D	RS - HAT RACK ACCES. LH GRD	0 X	RS - RR JCT BOX GRD
L 2	110V RECEPTACLE- 110V FLUOR.	SP 7 9	SPARE-FJB TO CONDENSER CPT	0 D F	RS - RR SIDE FLASH & MARK GRD	0 Y	ABS FR JCT BOX CPT GRD STUD
RA	INTERIOR LTS-110V FLUORESCENT	SP 8 7	SPARE-RJB TO LH HAT RACK	0 D R	RS - RJB DOCKING LT RESISTORS	0 Y	RR JCT BOX GRD
RB	INTERIOR LTS-110V FLUORESCENT	SP 8 8	SPARE-RJB TO RH HAT RACK	0 E	RS - HAT RACK ACCES. LH GRD	0 Y 1	ABS FR JCT BOX CPT GRD STUD
SH 1	SHIELD CHASSIS GRD	SP 9 2	SPARE-RJB TO CONDENSER CPT	0 F	RS - HAT RACK ACCES. RH GRD	0 Z	RR JCT BOX CPT GRD STUD
SH 2	SHIELD CHASSIS GRD	SP 9 3	SPARE-RJB TO EVAPORATOR CPT	0 G	RS - HAT RACK ACCES. RH GRD	0 0	FJB & RJB BATT. GRD
SH 3	SHIELD CHASSIS GRD	SP 9 4	SPARE-RJB TO RR ROOF	0 H	RS - LAVATORY ACCES. GRD	0 0 A	FBG - T.T.LT. MODULES BATT. GRD
SH 4	SHIELD CHASSIS GRD	SP 9 5	SPARE-RJB TO FR AXLE	0 J	FS - LH CONSOLE SW GRD	0 0 Y	FS - ABS MODULE BATT. GRD
SP 2	SPARE-FJB TO FR SERV CPT	SP 9 6	SPARE-RJB TO LUGG CPT #2	0 J	RS - RR ROOF ACCES. GRD	0 0 S S	SOUND SYSTEM BATT. GRD
SP 3	SPARE-FJB TO CENTER DASH	SP 9 7	SPARE-RJB TO LUGG CPT #3	0 K	RS - RR ROOF ACCES. GRD	1	TACHO SYSTEM - RPM SIGNAL +
SP 4	SPARE-FJB TO CENTER DASH	SP 9 8	SPARE-RJB TO LUGG CPT #3	0 K	RS - RJB A/C JCT PANEL GRD	2 A	A/C & HEAT SYSTEM-COOL 1 SIGN
SP 5	SPARE-RJB TO LUGG CPT #2	SP 1 0 4	SPARE-RJB TO ENGINE CPT	0 L	FS - FR SERVICE CPT LTS GRD	2 B	A/C & HEAT SYSTEM-COOL SIGN
SP 6	SPARE-RJB TO LUGG CPT #1	SP 1 0 5	SPARE-FJB TO ENGINE	0 L 1	FS - FR SERVICE CPT LTS GRD	2 H	A/C & HEAT SYSTEM-HI PRESS SW
SP 7	SPARE-RJB TO LUGG CPT #1	SP 1 0 6	SPARE-RJB TO BATT. CPT.	0 L 2	FS - FR SERVICE CPT LTS GRD	2 HL	A/C & HEAT SYSTEM-LO & HI PRESS SW
SP 8	SPARE-RJB TO LUGG CPT #1	SP 1 0 7	SPARE-RJB TO BATT. CPT.	0 L 3	FS - FJB GRD	2 L	A/C & HEAT SYSTEM-LO PRESS SW
SP 9	SPARE-RJB TO LUGG CPT #2	SP 1 0 8	SPARE-RJB TO BATT. CPT.	0 L 4	FS - FJB GRD	4	HOSTESS & PASSENGER CHIME
SP 1 0	SPARE-RJB TO LUGG CPT #1	SP 1 0 9	SPARE-RJB TO ENGINE CPT.	0 L 5	FS - CIGAR LIGHTER	4 A	HOSTESS & PASSENGER CHIME
SP 1 1	SPARE-FJB TO RJB	SP 1 1 0	SPARE-RJB TO ENGINE CPT.	0 L	RS - ENGINE CPT ACCES. GRD	4 B	PASSENGER CHIME
SP 1 2	SPARE-RJB TO ENGINE	SP 1 1 1	SPARE-RJB TO ENGINE CPT.	0 L	ENTRANCE DOOR (SEDAN) GRD	4 C	HOSTESS CHIME
SP 1 3	SPARE-RJB TO ENGINE	SP 1 1 2	SPARE-RJB TO ENGINE CPT.	0 L H	RS - RR END LAMPS LH GRD	5	INTERIOR LTS-AISLE & EMERG. EXIT
SP 1 4	SPARE-FJB TO RJB	SP 1 1 4	SPARE-FJB TO U/DASH WIPER	0 M	FS - ELECTRICAL MOTOR GRD	5	UPPER WINDSHIELD DEFROSTER

# CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
5 D	UPPER WINDSHIELD DEFROSTER	12 K	12 VOLT IGN. TTLT & HVAC MODULE	23 A	EXTERIOR LTS-DIRECTIONNAL RH	24 V5	RR JCT BOX 24V DISC SW
5 E	UPPER WINDSHIELD DEFROSTER	12 1A	12V IGNITION DISTRIBUTION	23 B	EXTERIOR LTS-DIRECTIONNAL RH	24 VD	24V HOT WIRE DISTRIBUTION
5 N	INTERIOR LTS-EMERGENCY EXIT	12 1A	FR JCT BOX 12V IGNITION	23 C	EXTERIOR LTS-CORNERING RH	24 VF	BAT CPT 24V SW TO FJB & IC
5 NC	SPEED SIGNAL LOWER 5MPH	12 1B	FR JCT BOX 12V IGNITION	23 N	EXTERIOR LTS-CORNERING RH	24 VA	BATTERY TO EQUALIZER 24V
5 NO	SPEED SIGNAL HIGHER 5MPH	12 1F	FR JCT BOX 12V IGNITION	23 P	EXTERIOR LTS-CORNERING RH	24 VI	RR JCT BOX 24V IGNITION
6	INTERIOR LTS-AISLE	12 LX	CLUSTER	24	BAT CPT 24V BATTERY	24 VR	BAT CPT 24V DISC SW TO RJB
7 B	ENTRANCE DOOR (SEDAN)	12 P	LH CONSOLE POWER OUTLET	24	FR JCT BOX 24V DISC SW	24 W	RR JCT BOX 24V DISC SW (WCL)
7 D	ENTRANCE DOOR (SEDAN)	12 R	BAT CPT 12V DISC RLY TO RJB	24 A	BOOSTER BLOCK 24V DISC SW	24 WC	BATT.CPT TO HYD. PUMP (WCL)
7 DA	ENTRANCE DOOR (SEDAN)	12 R	MEMORY BATTERY RADIO	24 A	FR JCT BOX 24V DISC SW	24 WL	24V BATTERY-HYD. PUMP (WCL)
9	INTERIOR LTS-ENGINE CPT	12 S	SOUND SYSTEM 12V RADIO	24 A	RR JCT BOX 24V DISC SW	25	12VAC GEN RLY ON SIGNAL
9 A	INTERIOR LTS-ENGINE CPT	12 S1	SOUND SYSTEM 12V RADIO	24 B	24V STARTER RLY FEEDING	25	12VAC GEN RLY ON SIGNAL
9 B	INTERIOR LTS-ENGINE CPT	12 S2	SOUND SYSTEM 12V RADIO	24 B	FR JCT BOX 24V DISC SW	25 A	NOT GENERATOR-WARNING LT
9 E	INTERIOR LTS-FR SERVICE CPT	12 SB	SOUND SYSTEM 12V FEEDING	24 B	RR JCT BOX 24V DISC SW	25 A	ETHER SWITCH
9 F	INTERIOR LTS-FR SERVICE CPT	12 SS	SOUND SYSTEM 12V FEEDING	24 BC	24 VOLT BATT. CHARGER	25 B	EXTERIOR LTS-DAYTIME RUN LTS
10	INTERIOR LTS-LUGGAGE CPT	12 VA	BATTERY TO EQUALIZER 12V	24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE	25 F	12 VOLT IGN. DISTRIBUTION
10 A	INTERIOR LTS-LUGGAGE CPT	12 VD	12V HOT WIRE DISTRIBUTION	24 C	FR JCT BOX 24V DISC SW	26 A	CIGAR LIGHTER
10 B	INTERIOR LTS-LUGGAGE CPT	12 VF	BAT CPT 12V FJB & IC	24 C	RR JCT BOX 24V DISC SW	26	DRIVER'S WINDOW LIFTER
10 D	INTERIOR LTS-LUGGAGE CPT	12 VI	12V IGNITION DISTRIBUTION	24 D	BAT CPT 24V HOT WIRE	26 B	DRIVER'S WINDOW LIFTER
10 F	INTERIOR LTS-LUGGAGE CPT	12 VR	BAT CPT 12V DISC RLY TO RJB	24 D	FR JCT BOX 24V HOT WIRE	26 C	DRIVER'S WINDOW LIFTER
10 H	INTERIOR LTS-LUGGAGE CPT	12 W	12V BATTERY DDEC III	24 D	RR JCT BOX 24V HOT WIRE	27	LAVATORY-EMERGENCY SONALERT
10 K	INTERIOR LTS-LUGGAGE CPT	12 W	ENTRANCE DOOR (SEDAN)	24 DA	A/C JCT BOX 24V HOT WIRE	28 A	A/C & HEAT SYSTEM-HI PRESSURE
10 R	INTERIOR LTS-LUGGAGE DOOR AJAR	12 WA	ENTRANCE DOOR (SEDAN)	24 E	BAT CPT 24V DISC SW	29	A/C & HEAT SYSTEM-DRIVER'S HTR
11	FR DESTINATION SIGN	12 X	FR JCT BOX 12V DISC SW	24 E	FR JCT BOX 24V DISC SW	29 A	A/C & HEAT SYSTEM-DRIVER'S HTR
11 A	FR DESTINATION SIGN	12 X2	FR JCT BOX 12V DISC SW	24 E	RR JCT BOX 24V DISC SW	29 B	A/C & HEAT SYSTEM-DRIVER'S HTR
11 B	FR DESTINATION SIGN	12 Y	FR JCT BOX 12V DISC SW	24 F	FR JCT BOX 24V DISC SW	29 H	HVAC DASH MODULE
11 C	FR DESTINATION SIGN	13 A	ALARM & SIGNAL-LO AIR PRIM.	24 F	RR JCT BOX 24V DISC SW	30 A	GALLEY
11 D	FR DESTINATION SIGN	13 B	ALARM & SIGNAL-LO AIR SEC.	24 G	FR JCT BOX 24V DISC SW	31 A	A/C & HEAT SYSTEM-UNLOADER
11 E	FR DESTINATION SIGN	14	LAVATORY-FLUSHING PUMP	24 G	RR JCT BOX 24V DISC SW	31 B	A/C & HEAT SYSTEM-UNLOADER
11 K	FR DESTINATION SIGN	14 A	LAVATORY-FLUSHING PUMP	24 H	FR JCT BOX 24V DISC SW	31 B	WIPER & WASHER SYSTEM
12	12V BAT ELECTRONIC JCT BLOCK	15	EXTERIOR LTS-MULTI FUNC LEVEL	24 H	RR JCT BOX 24V DISC SW	31 C	WIPER & WASHER SYSTEM
12	BAT CPT 12V BATTERY	15 A	WIPER & WASHER UPPER WINDSHIELD	24 I	FR JCT BOX 24V IGNITION	31 D	WIPER & WASHER SYSTEM
12 A	FR JCT BOX 12V DISC SW	16	SPEED - SIGNAL +	24 I	RR JCT BOX 24V IGNITION	31 E	WIPER & WASHER SYSTEM
12 A	RR JCT BOX 12V DISC SW	16 A	SPEED - SIGNAL +	24 IA	FR JCT BOX 24V IGNITION	31 J	WIPER & WASHER SYSTEM
12 B	12V BAT ELECTRICAL JCT BLOCK	16 T	SPEED - SIGNAL +	24 IA	RR JCT BOX 24V IGNITION	31 X	WIPER & WASHER SYSTEM
12 B	RR JCT BOX 12V DISC SW	17	EXTERIOR LTS-FLASHER UNIT	24 IB	FR JCT BOX 24V IGNITION	32	EXTERIOR LTS-BACK-UP
12 B	FR JCT BOX 12V DISC SW	17 A	EXTERIOR LTS-FLASHER UNIT	24 IB	RR JCT BOX 24V IGNITION	32 B	EXTERIOR LTS-BACK-UP
12 BE	BAT. EQUALIZER MONITOR	19	DIFFERENTIAL OIL TEMP	24 IC	FR JCT BOX 24V IGNITION	32 C	BACK-UP PWR & SIGNAL
12 C	FR JCT BOX 12V DISC SW	20	SPEED - SIGNAL -	24 IF	FJB 24VOLT IGNITION	32 D	BACK-UP ALARM
12 C	RR JCT BOX 12V DISC SW	20 T	SPEED - SIGNAL -	24 P	FR JCT BOX 24V DISC SW	35	ENTRANCE DOOR (SEDAN)
12 D	BAT CPT 12V BATTERY	20 W	SPEED - SIGNAL -	24 S	24V DISC SW RLY SIGNAL	35 B	ENTRANCE DOOR (SEDAN)
12 DT	TTLT MODULE	21	EXTERIOR LTS-DIRECTIONNAL LH	24 S1	SOUND SYSTEM 24V AMPLIFIER	35 BB	ENTRANCE DOOR (SEDAN)
12 E	FR JCT BOX 12V DISC SW	21 A	EXTERIOR LTS-DIRECTIONNAL LH	24 S2	SOUND SYSTEM 24V AMPLIFIER	35 D	ENTRANCE DOOR (SEDAN)
12 E	RR JCT BOX 12V DISC SW	21 B	EXTERIOR LTS-HAZARD	24 S3	SOUND SYSTEM 24V VIDEO	36	JACOB BRAKE SYSEM
12 F	BAT CPT 12V FJB & IC	21 C	EXTERIOR LTS-CORNERING LH	24 S4	SOUND SYSTEM 24V VIDEO	36 A	JACOB BRAKE SYSEM
12 F	FR JCT BOX 12V DISC SW	21 H	EXTERIOR LTS-DIRECTIONNAL LH	24 SB	SOUND SYSTEM 24V FEEDING	38	INTERIOR LTS-24V FLUORESCENT
12 F	RR JCT BOX 12V DISC SW	21 K	EXTERIOR LTS-CORNERING	24 SS	SOUND SYSTEM 24V FEEDING	38 A	INTERIOR LTS-24V FLUORESCENT
12 G	FR JCT BOX 12V DISC SW	21 N	EXTERIOR LTS-CORNERING LH	24 T	RR JCT BOX 24V DISC SW	38 C	INTERIOR LTS-24V FLUORESCENT
12 J	FR JCT BOX 12V DISC SW	21 P	EXTERIOR LTS-CORNERING LH	24 V2	RR JCT BOX 24V DISC SW	38 D	INTERIOR LTS-24V FLUORESCENT
12 I	12V IGNITION DISTRIBUTION	23	EXTERIOR LTS-DIRECTIONNAL RH	24 V3	RR JCT BOX 24V DISC SW	39	INTERIOR LTS-24V LH CONSOLE SW
12 I	RR JCT BOX 12V IGNITION	23	EXTERIOR LTS-DIRECTIONNAL RH	24 V4	RR JCT BOX 24V DISC SW	39 A	INTERIOR LTS-DRIVER'S LTS

# CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
39 P	READING LIGHTS	59 A	JACOB BRAKE SYSTEM	77 A	A/C & HEAT SYSTEM-DRIVER'S HTR	104	WORLD TRANSM-SOL. FORWARD
41	A/C & HEAT SYSTEM-COND FAN MOT	61	EXTERIOR LTS-24V FEED SW	77 B	A/C & HEAT SYSTEM-COMPRESSOR	105	WORLD TRANSM-RETARDER & SUMP
41 A	A/C & HEAT SYSTEM-COND FAN MOT	61 A	EXTERIOR LTS-HEAD SIGNAL	77 C	A/C & HEAT SYSTEM-COMPRESSOR	105 W	WORLD TRANSM-RETARDER & SUMP
41 B	A/C & HEAT SYSTEM-COND FAN MOT	62	LAVATORY-OCCUPIED LT	77 H	A/C & HEAT SYSTEM-COMPRESSOR	106	WORLD TRANSM-OIL LEVEL HI
42	A/C & HEAT SYSTEM-COND FAN MOT	62 A	LAVATORY-FLUOR LT	81	EXTERIOR LTS-STOP SW	107	CHARG SYST-VOLTAGE REGUL. "F"
42 A	A/C & HEAT SYSTEM-COND FAN MOT	62 B	LAVATORY-FLUOR LT	82	EXTERIOR LTS-STOP SIGNAL	107	WORLD TRANSM-LOCKUP SOL. HI
43	A/C & HEAT SYSTEM-COND FAN MOT	62 E	LAVATORY-OCCUP & FLUOR LT	82 A	EXTERIOR LTS-STOP SIGNAL	108	WORLD TRANSM-REM. PWR WAKE UP
44	EXTERIOR LTS-FOG	63	EXTERIOR LTS-CLEARANCE	82 B	EXTERIOR LTS-STOP LTS	109	WORLD TRANSM-RET. SOL. LO
44 A	EXTERIOR LTS-FOG	63 A	EXTERIOR LTS-CLEARANCE	82 K	EXTERIOR LTS-STOP PARK BRK	110	ALARM & SIGNAL-WATER TEMP
44 B	EXTERIOR LTS-FOG	63 B	EXTERIOR LTS-CLEARANCE	82 L	EXTERIOR LTS-LH STOP	110	WORLD TRANSM-LOCKUP SOL. LO
44 C	EXTERIOR LTS-FOG & HAZARD	63 C	EXTERIOR LTS-MARKER SIGNAL	82 R	EXTERIOR LTS-LH STOP	111	WORLD TRANSM-SOL. C6
45 B	A/C & HEAT SYSTEM-HEAT SIGN	63 D	EXTERIOR LTS-MARKER & TAIL	83	ENGINE CTR-KEY SW ACCES SIGN	112	WORLD TRANSM-SPARE OUTPUT (+)
45 D	A/C & HEAT SYSTEM-WATER VALVE	63 E	EXTERIOR LTS-CLEARANCE	84	ENGINE CTR-KEY SW ACCES SIGN	113	ALARM & SIGNAL-OIL PRESS
45 E	A/C & HEAT SYSTEM-HEAT 1 SIGN	63 F	EXTERIOR LTS-MARKER BLINKER	85	ENGINE CTR-KEY SWIGNITION SIGN	113	WORLD TRANSM-REVERSE WARNING
45 G	A/C & HEAT SYSTEM-DRIVER'S HTR	63 H	EXTERIOR LTS-TAIL	85	24V IGNITION SIGNAL	114	INTERIOR LTS-DASH LT REGUL.
45 H	A/C & HEAT SYSTEM-DRIVER'S HTR	64	DRIVERS FAN	85 A	24V IGN DASH INSTRUMENTATION	114	WORLD TRANSM-SPARE OUTPUT (-)
45 W	A/C & HEAT SYSTEM-COND. DOOR AJAR	64 B	DRIVERS FAN	85 B	ENGINE CTR-24V IGNITION	114 A	INTERIOR LTS-DASH LT
46	EXTERIOR LTS-MARKER	64 C	DRIVERS FAN	85 C	PARKING BRAKE SWITCH	114 B	INTERIOR LTS-DASH LT REGUL.
46 A	EXTERIOR LTS-MARKER	65	FOOT DAMPER MOTOR	85 F	ENGINE CTR-ENGINE CTR SW IGN	114 D	INTERIOR LTS-DASH LT REGUL.
46 B	EXTERIOR LTS-MARKER	65 A	FOOT DAMPER MOTOR	85 F	LO AIR SONALERT	114 E	INTERIOR LTS-DASH LT REGUL.
46 B	EXTERIOR LTS-MARKER	65 P	PASSENGER REC. DAMPER	85 W	24V IGN ANTI SKID	115	ALARM & SIGNAL-TAG PRESS
46 C	EXTERIOR LTS-MARKER	65 D	DRIVER REC. DAMPER	85 X	24V IGN ANTI SKID	115	DDEC III-COOLANT LEVEL
47	A/C & HEAT SYSTEM-DRIVER'S HTR	66	O_PASS. ON/OFF	85 Y	ANTI SKID-WARNING LT	115	WORLD TRANSM-DO NOT SHIFT SIGN
48	ENTRANCE DOOR (SEDAN)	67	24 VOLT RUN DISTRIBUTION	86	ENGINE CTR-STARTER SOL SIGN	115 C	DDEC III-COOLANT LEVEL
48 A	ENTRANCE DOOR (SEDAN)	67 A	A/C & HEAT SYSTEM	86 A	ENGINE CTR-STARTER SOL SIGN	115 W	WORLD TRANSM-DO NOT SHIFT SIGN
49	ENTRANCE DOOR (SEDAN)	67 B	A/C & HEAT SYSTEM	88	ENGINE CTR-RR START SIGNAL	116	WORLD TRANSM-LO SIGNAL SOL. HI
49 A	ENTRANCE DOOR (SEDAN)	67 C	HEATING WINDSHIELD	89	ENGINE CTR-RR START SIGNAL	116 B	A/C & HEAT SYSTEM-DRIVER'S HTR
50	AIR DRYER	67 K	A/C & HEAT SYSTEM-COND FAN CTR	90 B	A/C & HEAT SYSTEM-COND FAN MOT	117	WORLD TRANSM-SPARE INPUT (-)
52	ALARM & SIGNAL-ELEC. HORN	67 L	A/C & HEAT SYSTEM-COND FAN CTR	90 B	ENGINE CTR-MAST KEY SW FEED	117 A	ALARM & SIGNAL-TRANSM OIL TEMP
52 A	ALARM & SIGNAL-ELEC. HORN	67 V	A/C & HEAT SYSTEM-WATER VALVE	90 C	A/C & HEAT SYSTEM-COND FAN MOT	117 A	ALARM & SIGNAL-TRANSM OIL TEMP
52 B	ALARM & SIGNAL- AIR HORN	68	DASH & DEFROST DAMPER MOTOR	90 F	CHARG SYST-VOLTAGE REGUL. "B"	118	WORLD TRANSM-SPARE INPUT (+)
52 C	ALARM & SIGNAL- AIR HORN	68 A	DASH & DEFROST DAMPER MOTOR	90 H	A/C & HEAT SYSTEM-EVAP FAN MOT	119	WORLD TRANSM-ENG BRK INPUT (+)
53	ALARM & SIGNAL-ELEC. HORN	70	INTERIOR LTS-HAT RACK & RR RUN.	90 J	A/C & HEAT SYSTEM-COND FAN MOT	120	WORLD TRANSM-SOL. C1
53 A	WIPER & WASHER SYSTEM	72	SUN VISOR-FEEDING	91	PARKING BRAKE SW SIGNAL	121	WORLD TRANSM-SOL. GRD 2
53 B	WIPER & WASHER SYSTEM	72 A	SUN VISOR-RH	91 A	DDEC-FAST IDLE SIGNAL	122	A/C & HEAT SYSTEM-DRIVER'S HTR
53 C	WIPER & WASHER SYSTEM	72 B	SUN VISOR-RH	91 S	SONALERT PARKING BRAKE	122	A/C & HEAT SYSTEM-FRESH AIR
53 E	WIPER & WASHER SYSTEM	72 C	SUN VISOR-LH	91 W	PARK, BRAKE SW SIGN (WCL)	122	WORLD TRANSM-SOL. GRD 4
53 J	WIPER & WASHER SYSTEM	72 D	SUN VISOR-LH	92	BATTERY EQUALIZER-CHECK BALANCE	122 A	A/C & HEAT SYSTEM-FRESH AIR
55	EXTERIOR LTS-HI BEAM	73	LAVATORY-FEEDING	93	BATTERY EQUALIZER-CHECK LO/HI	123	WORLD TRANSM-NEUTRAL START
57	EXTERIOR LTS-HI BEAM	74	INTERIOR LTS-READING RH	95 A	ENGINE BRAKE & RETARDER SYSTEM	123 A	ALARM & SIGNAL-FIRE DETECTOR
57 A	A/C & HEAT SYSTEM-WATER PUMP	74 A	INTERIOR LTS-READING RH	97	TACHOMETER (-)	123 B	ALARM & SIGNAL-FIRE DETECTOR
57 A	EXTERIOR LTS-HI BEAM	74 D	INTERIOR LTS-READING SIGNAL	100	INTERIOR LTS-GENERAL	124	WORLD TRANSM-THROTTLE (HI)
57 B	A/C & HEAT SYSTEM-WATER PUMP	75	INTERIOR LTS-READING LH	100 A	INTERIOR LTS-GENERAL	125	WORLD TRANSM-RET. INDICATOR
57 C	PRE-HEAT WATER HEATER	75 A	INTERIOR LTS-READING LH	100 B	INTERIOR LTS-GENERAL	125	GALLEY LAMP
57 CA	A/C & HEAT SYSTEM-HEAT SIGN	76	FUEL TANK GAUGE	101	24V STARTER SOL FEEDING	125 T	GALLEY LAMP
57 CC	A/C & HEAT SYSTEM-HEAT SIGN	76 B	LOW FUEL LT & ETHER COLD START	101	WORLD TRANSM-LO SIGN SOL. LO	125 W	WORLD TRANSM-RET. INDICATOR
58	EXTERIOR LTS-LO BEAM	76 C	LOW FUEL LT	102	24V STARTER TO GENERATOR	126	KNEELING SYSTEM
58 A	EXTERIOR LTS-LO BEAM	76 P	FUEL PRIME PUMP	102	WORLD TRANSM-SOL. GRD 1	126 A	KNEELING SYSTEM
58 B	EXTERIOR LTS-LO BEAM	76 M	FUEL PRIME PUMP	102	WORLD TRANSM-SOL. C3	126 B	KNEELING SYSTEM
58 E	EXTERIOR LTS-LO BEAM	77	A/C & HEAT SYSTEM-HI PRESSURE	103	LOW BUOY	126 C	KNEELING SYSTEM

# CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
126 D	KNEELING SYSTEM	137 A	MIRROR (SPARTAN & RAMCO)	154	ABS SYSTEM	214	WORLD TRANSM-BACK UP SIGNAL
126 E	KNEELING SYSTEM	137 B	RR VIEW MIRROR (SPARTAN)	154	WORLD TRANSM-ABS RET. INPUT	225	LAVATORY FAN
126 F	KNEELING SYSTEM	137 C	RR VIEW MIRROR (SPARTAN)	155	ABS SYSTEM	225 A	LAVATORY FAN
126 G	KNEELING SYSTEM	137 D	RR VIEW MIRROR (SPARTAN)	155	WORLD TRANSM-SPARE INPUT (-)	231	NEUTRAL SIGNAL GRD
126 H	KNEELING SYSTEM	137 E	RR VIEW MIRROR (SPARTAN)	156	ABS SYSTEM	231 A	NEUTRAL COIL RELAY FEED SIGNAL
126 K	KNEELING SYSTEM	137 G	RR VIEW MIRROR (SPARTAN)	156	WORLD TRANSM-THROTTLE POS.	231 W	NEUTRAL SIGNAL GRD (WCL)
126 P	KNEELING SYSTEM	138	ABS SYSTEM	156 A	ABS SYSTEM	240	DDEC III-ECM 12V FEEDING
126 R	KNEELING SYSTEM	138	WORLD TRANSM-RETARDER TEMP	157	ABS SYSTEM	241	DDEC III-ECM 12V FEEDING
126 W	5 MPH N.C. SIGNAL (WCL)	138 A	ABS SYSTEM	157	WORLD TRANSM-SPEEDO SIGNAL	251 A	DDEC III - DATA LOGGER 12 H.W.
126 S	KNEELING SYSTEM	139	ABS SYSTEM	157 A	ABS SYSTEM	251	DDEC III - PRODRIVER 12V H.W.
126 T	KNEELING SYSTEM	139	WORLD TRANSM-OUTPUT SPEED HI	157 B	ABS SYSTEM	253	GALLEY-MICROWAVE
127	WORLD TRANSM-LUBE PRESS SW.	140	ABS SYSTEM	158	WORLD TRANSM-DIMMER	254	GALLEY-12V FRIGO NORCOLD
127	PRE-HEAT WATER HEATER	140	WORLD TRANSM-OUTPUT SPEED LO	160	ALARM & SIGNAL-TAG PRESS SW	254 A	GALLEY-FRIGO
127 A	PRE-HEAT WATER HEATER	141	ABS SYSTEM	160	WORLD TRANSM-SER. INTERFACE (-)	255	GALLEY-COFEEMAKER
127 B	PRE-HEAT WATER HEATER	141	WORLD TRANSM-ENGINE SPEED HI	161	WORLD TRANSM-SIGNAL GRD	255 A	GALLEY-COFEEMAKER
127	WORLD TRANSM-RETARDER FEED SOL.	142	ABS SYSTEM	161 B	WORLD TRANSM-SIGNAL GRD	257	WINDSHIELD HEATED
127 S	PRE-HEAT WATER HEATER	142	WORLD TRANSM-SERIAL COM. A	162	WORLD TRANSM-PRESS. SW C3	257 A	WINDSHIELD HEATED
127 W	PRE-HEAT WATER HEATER	143	ABS SYSTEM	163	WORLD TRANSM-RETARDER ENABLE	257 B	WINDSHIELD HEATED
128	PRE-HEAT WATER HEATER	143	WORLD TRANSM-ECU BATTERY GRD	164	WORLD TRANSM-RET. ACTUATOR SIGN	257 C	WINDSHIELD HEATED
128 A	PRE-HEAT WATER HEATER	143 A	ABS SYSTEM	165	A/C & HEAT SYSTEM-TRANSMITER	257 D	WINDSHIELD HEATED SPARE
128 B	PRE-HEAT WATER HEATER	143 W	WORLD TRANSM-BATTERY GRD	165	WORLD TRANSM-OIL LEVEL SIGNAL	257 E	WINDSHIELD HEATED SPARE
128 W	PRE-HEAT WATER HEATER	143 X	WORLD TRANSM-BATTERY GRD	165 A	A/C & HEAT SYSTEM-TRANSMITER	258	WINDSHIELD HEATED
128	WORLD TRANSM-SOL. C2	144	ABS SYSTEM	165 B	A/C & HEAT SYSTEM-TRANSMITER	258 A	WINDSHIELD HEATED
129	PRE-HEAT WATER HEATER	144	WORLD TRANSM-ECU CHASSIS GRD	165 C	A/C & HEAT SYSTEM-TRANSMITER	259	WINDSHIELD HEATED
129	WORLD TRANSM-SOL. C5	144 A	ABS SYSTEM	165 D	A/C & HEAT SYSTEM-TRANSMITER	259 A	WINDSHIELD HEATED
130	WORLD TRANSM-SOL. GRD 3	145	ABS SYSTEM	166 B	A/C & HEAT SYSTEM-EVAP. MOD.	260	WINDOW AJAR
131	WORLD TRANSM-SOL. C4	146	ABS SYSTEM	167	A/C & HEAT SYSTEM-TEMP. CTR	290	FAN CLUTCH RADIATOR
132	WORLD TRANSM-ENG BRK OUTPUT (-)	146	WORLD TRANSM-IGNITION SENSE	167 A	A/C & HEAT SYSTEM-TEMP. CTR	290	FAN CLUTCH RADIATOR
132 W	WORLD TRANSM-ENG BRK OUTPUT (-)	146 W	WORLD TRANSM-12V IGNITION	168	A/C & HEAT SYSTEM-HUMIDISTAT	291	FAN CLUTCH RADIATOR SPD 1
133	GALLEY-HEAT CONTAINERS	146 X	WORLD TRANSM-12V IGNITION	168	WORLD TRANSM-SER. INTERFACE (+)	292	FAN CLUTCH RADIATOR SPD 2
133 A	GALLEY-HEAT CONTAINERS	147	ABS SYSTEM	168 A	A/C & HEAT SYSTEM-HUMIDISTAT	300	DOOR AJAR MAGN.SW. (WCL)
133 B	GALLEY-HEAT CONTAINERS	147	ETHER COLD START	170	LUGGAGE DOOR LOCK	300 A	POWER SYSTEM SW. (WCL)
133 C	GALLEY-HEAT CONTAINERS	147	WORLD TRANSM-OIL TEMP	170 C	LUGGAGE DOOR LOCK	300 B	DOOR AJAR ALARM (WCL)
133	WORLD TRANSM-RET. ACTUATOR HI	147 C	ETHER COLD START	170 E	LUGGAGE DOOR LOCK	301	POWER SYSTEM SW. (WCL)
134	GALLEY-HEAT CONTAINERS	148	ABS SYSTEM	170 H	LUGGAGE DOOR LOCK	302	DOOR AJAR T.T.LT. (WCL)
134 A	GALLEY-HEAT CONTAINERS	148	WORLD TRANSM-OUTPUT SPEED LO	181 A	THERMOMETER INSIDE SENSOR	302 A	DOOR AJAR ALARM SIGN.(WCL)
134	WORLD TRANSM-RET. APPLY SOL. HI	149	ABS SYSTEM	181 B	THERMOMETER INSIDE SENSOR	302 B	DOOR AJAR MAGN.SW. (WCL)
135	A/C & HEAT SYSTEM-AIR SENSOR	149	WORLD TRANSM-TURBINE SPEED HI	181 C	THERMOMETER OUTSIDE SENSOR	303	REMOTE WALL SW. DWN (WCL)
135 A	A/C & HEAT SYSTEM-AIR SENSOR	149 A	ABS SYSTEM	181 D	THERMOMETER OUTSIDE SENSOR	304	REMOTE WALL SW. UP (WCL)
135 D	A/C & HEAT SYSTEM-AIR SENSOR	150	DDEC III-ECM BATTERY GRD	197	FUEL WATER FILTER	305	PARK. BRAKE SOL. VALVE (WCL)
135 C	A/C & HEAT SYSTEM-AIR SENSOR	150	WORLD TRANSM-ENGINE SPEED LO	197 A	FUEL WATER FILTER	305 A	PARK. BRAKE SAFETY SW. (WCL)
135	WORLD TRANSM-ANALOG GRD	150 A	DDEC III-ECM BATTERY GRD	197 B	FUEL WATER FILTER	306	CONTROL SYSTEM (WCL RICON)
135 D	WORLD TRANSM-RETARDER RES MOD	151	ABS SYSTEM	198	FILTER FUEL HEATER	307	CONTROL SYSTEM (WCL RICON)
135 C	WORLD TRANSM-RETARDER TEMP	151	DDEC III-ECM BATTERY GRD	199	AIR FILTER RESTRICTION SENDER	308	CONTROL SYSTEM (WCL RICON)
136	GALLEY-ACCESSORIES	151	WORLD TRANSM-SERIAL COM. B	201	WORLD TRANSM-SPARE	309	CONTROL SYSTEM (WCL RICON)
136	WORLD TRANSM-ECU POWER	151 A	ABS SYSTEM	202	WORLD TRANSM-SPARE	417	DDEC III-LIMIT SPEED GOVERNOR
136 V	WORLD TRANSM-12V BATTERY	152	ABS SYSTEM	203	WORLD TRANSM-SPARE	419	DDEC III-CHECK ENGINE LIGHT
136 W	WORLD TRANSM-12V BATTERY	152 A	ABS SYSTEM	204	WORLD TRANSM-SPARE	439	DDEC III-12V IGNITION
136 X	WORLD TRANSM-12V BATTERY	153	ABS SYSTEM	205	WORLD TRANSM-SPARE	440	DDEC III-12V IGNITION
137	WORLD TRANSM-RETARDER	153	WORLD TRANSM-SPARE INPUT (-)	206	WORLD TRANSM-SPARE	440 A	DDEC III-12V IGNITION

## CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
4 5 1	DDEC III-A/C FAN CLUTCH						
5 0 5	DDEC III-TACHOMETER DRIVE						
5 0 9	DDEC III-STOP ENGINE LIGHT						
5 1 0	DDEC III-FAST IDLE SIGNAL						
5 2 4	DDEC III-ENGINE BRAKE DISABLE						
5 2 5	DDEC III-FAST IDLE SIGNAL						
5 2 8	DDEC III-STOP ENG. OVERRIDE						
5 3 1	DDEC III-CRUISE CLUTCH RELEASE						
5 4 0	DDEC III-CRUISE ENABLE LTS.						
5 4 1	DDEC III-CRUISE SET SW						
5 4 3	DDEC III-CRUISE STOP SW CUT IN						
5 4 4	DDEC III-CRUISE ON/OFF SW						
5 4 5	DDEC III-CRUISE RESUME SW						
5 5 5	DDEC III-FAN CLUTCH SPEED# 1						
5 5 6	DDEC III-VEHICLE SPEED (+)						
5 5 7	DDEC III-VEHICLE SPEED (-)						
5 6 3	DDEC III-FAN CLUTCH SPEED# 2						
5 6 4	DDEC III-DIGITAL OUTPUT						
5 6 5	DDEC III-ENGINE BRAKE ACTIVE						
5 8 3	DDEC III-ENGINE BRAKE 4 CYL.						
9 0 0	DDEC III-DATA LINK (+)						
9 0 1	DDEC III-DATA LINK (-)						
9 0 8	DDEC III-HYDRAULIC PWM#1 OUTPUT						
9 1 6	DDEC III-SENSOR SUPPLY (5VDC)						
9 5 2	DDEC III-SENSOR RETURN						
9 5 3	DDEC III-BATTERY GRD						
9 7 9	DDEC III-ENGINE BRAKE 2 CYL.						