

220-2phases  
CONVERTER GENERATOR

220-2phases  
SHORE POWER

480-3phases  
DRIVE-BELT GENERATOR

L1 N L2

L1 N L2

L1 L2 L3

AUTO-SWITCH

AUTO-SWITCH  
SEE P.15.5SP00

INSIDE CONVERTER  
INVERTER

IMD BOX

MOD#1

MOD#2

L1 N L2

BUS BAR

40A

40A

220V

480V