

## WIRING DIAGRAM INDEX

<p><b>A</b> A/C &amp; HEAT – DRIVER'S AIR      Page: 15.1            A/C &amp; HEAT – FULL AIR      Page: 15.2            AIR DRYER      Page: 8.1            ALARM &amp; SIGNAL      Page: 7.2            ABS      Page: 22.1            ARRANGEMENT - CABLE      Page: B            ARRANGEMENT - HARNESS      Page: C            ARRANGEMENT - SPARE WIRE      Page: D</p>	<p><b>D</b> DASH INSTRUMENT      Page: 7.1            DDEC IV      Page: 5.1            DISCONNECT SWITCH 12V, 24V      Page: 1.1            DISTRIB. 24V DISC., IGN &amp; HOT WIRE      Page: 1.1            DISTRIB. 12V DISC., IGN &amp; HOT WIRE      Page: 2.1            DRIVER'S SEAT ADJUST      Page: 13.1</p>	<p><b>L</b> LEVEL – LOW SYSTEM      Page: 18.1            LUGGAGE DOOR LOCK      Page: 12.1</p>
<p><b>B</b> BACK-UP ALARM      Page: 9.3            BATTERY STANDARD      Page: 1.2</p>	<p><b>E</b> ENGINE BLOCK HEATER      Page: 20.1            ENGINE BRAKE SYSTEM      Page: 21.1            ENGINE CONTROL      Page: 4.1            ENTRANCE DOOR ELCTRICAL LOCK      Page: 12.1            ENTRANCE DOOR AIR LOCK      Page: 20.1            ETHER COLD START      Page: 8.1            EXTERIOR LIGHTING      Page: 9.1</p>	<p><b>M</b> MIRROR-REAR VIEW      Page: 16.1</p>
<p><b>C</b> CENTER DOOR-AIR LOCK      Page: 20.1            CHARGING SYSTEM      Page: 4.2            CIGAR LIGHTER &amp; 12V OUTLET      Page: 13.1            CLUSTER      Page: 7.1            CODE - CIRCUIT NUMBER      Page: E            CODE - CIRCUIT BREAKER      Page: F            CODE - CONNECTOR      Page: G            CODE - DIODE      Page: H            CODE - FUSE      Page: L            CODE - RELAY      Page: I            CODE - RESISTOR      Page: J            CODE – TRUTH TABLE      Page: M            CODE - WIRING KEY      Page: K            CRUISE CONTROL - DDEC      Page: 5.1</p>	<p><b>F</b> FAN-CLUTCH RADIATOR      Page: 8.1            FAST IDLE - DDEC      Page: 5.1            FIRE DETECTOR      Page: 7.2            FUEL WATER FILTER      Page: 8.1            FUEL PRIME PUMP      Page: 19.1</p>	<p><b>P</b> PARKING BRAKE SWITCH &amp; ALARM      Page: 8.1            POWER 12V OUTLET      Page: 13.1</p>
	<p><b>G</b> GROUND SYSTEM      Page: 3.1</p>	<p><b>R</b> RETARDER - WORLD TRANSM.      Page: 21.1</p>
	<p><b>H</b> HORN      Page: 7.2</p>	<p><b>S</b> SPEED SIGNAL      Page: 17.1            SPEEDOMETER      Page: 7.1            STEERING CONTROL      Page: 17.1            SUN VISOR      Page: 19.1</p>
	<p><b>I</b> INTERIOR LIGHTING      Page: 11.1</p>	<p><b>T</b> TACHOMETER      Page: 7.1            TRANSMISSION – WTEC 3      Page: 6.1            TELL TALE LIGHT MODULES      Page: 23.1</p>
	<p><b>K</b> KEYLESS ENTRY SYSTEM      Page: 12.1</p>	<p><b>W</b> WINDOW AJAR      Page: 20.1            WINDOW LIFTER      Page: 19.1            WIPER &amp; WASHER      Page: 10.1</p>