

CIRCUIT NUMBER CODE

| NO. | DESCRIPTION | NO. | DESCRIPTION | NO. | DESCRIPTION | NO. | DESCRIPTION |
|------|----------------------------|-------|---------------------------------|-------|------------------------------|-------|---------------------------------|
| IPJ1 | CLUSTER - BULB TEST POS | SP62 | SPARE WIRE | 0T2 | WINDOW AWNING | 12DDR | RR JCT BOX 12V HOT WIRE DDR CON |
| IPJ2 | CLUSTER - BULB TEST NEG. | SP63 | SPARE WIRE | 0T3 | ALTERNATOR MODULE | 12DT | T.T. LT MODULE |
| IPJ3 | CLUSTER - SV SIGNAL | SP69 | SPARE WIRE | 0T4 | 12V OUTLET - CTR MODULE | 12E | RR JCT BOX 12V DISC SW |
| IPJ4 | CLUSTER - RETURN TO ZERO | SP70 | SPARE WIRE | 0T5 | FS-HVAC DASH MODULE. GND | 12F | FR JCT PANEL 12V DISC SW |
| IPJ5 | CLUSTER - FUEL LEVEL GAUGE | SP71 | SPARE WIRE | 0W | FJB - TRANSM. RLY GRD | 12G | FR JCT PANEL 12V DISC SW |
| IPJ6 | CLUSTER - BULB TEST POS. | SP72 | SPARE WIRE | 0W | TRANSM ACC. - FR.SERV. CPT | 12H | 12V DASH ACCESS. |
| IPJ7 | CLUSTER - BULB TEST NEG. | SP74 | SPARE WIRE | 0WA | PRE-HEAT WATER HEATER | 12I | RR JCT BOX 12V IGNITION |
| IPJ8 | CLUSTER - MASTER WARNING | SP83 | SPARE WIRE | 0Y1 | ASB SYSTEM-GRD | 12I | FR JCT PANEL 12V IGNITION |
| LX5 | CLUSTER - COMPUTER MODE | SP84 | SPARE WIRE | 0Y2 | ASB SYSTEM-GRD | 12IA | FR JCT PANEL 12V IGNITION |
| LX6 | CLUSTER - COMPUTER DOWN | SP114 | SPARE WIRE | 0Y3 | ASB SYSTEM-GRD | 12IA | RR JCT PANEL 12V IGNITION |
| LX7 | CLUSTER - COMPUTER SET | SP115 | SPARE WIRE | 0Y4 | ASB SYSTEM-GRD | 12IF | FR JCT PANEL 12V IGNITION |
| LX16 | CLUSTER - COMPUTER UP | SP116 | SPARE WIRE | 0Y5 | ASB SYSTEM-GRD | 12J | FR JCT PANEL 12V DISC.SW. |
| LX21 | CLUSTER - COMPUTER COM. | SP117 | SPARE WIRE | 0Y6 | ASB SYSTEM-GRD | 12JA | FR JCT PANEL 12V DISC.SW. |
| RT | T.T.L.T. MODULE - TEST SW. | TW1 | SPR. W. TWISTER 50T/M WITH TW2 | 0Y7 | ASB SYSTEM-GRD | 12K | FR JCT PANEL 12V DISC.SW. |
| SP1 | SPARE WIRE | TW2 | SPR. W. TWISTER 50T/M WITH TW1 | 00 | ASB SYSTEM-GRD | 12LX | 12V HOTWIRE CLUST. & MOD A/C |
| SP2 | SPARE WIRE | 0 | A/C EVAP. CPT GRD | 00A | BATTERY GRD-DASH ACC. | 12LX | CLUSTER 12V HOT WIRE |
| SP3 | SPARE WIRE | 0 | JUMPER - CLUTCH SIGN. | 2A | A/C & HEAT SYSTM | 12P | 12V POWER OUTLET |
| SP4 | SPARE WIRE | 0 | RJB - INSIDE GRD | 2B | A/C & HEAT SYSTEM | 12T | RR JCT BOX 12V DISC SW |
| SP5 | SPARE WIRE | 0A | FR. ROOF ACC. GRD | 2D | A/C & HEAT SYSTEM | 12VD | 12V HOT WIRE |
| SP6 | SPARE WIRE | 0B | A/C - CONDENSER GRD | 2E | A/C & HEAT SYSTEM | 12VI | RR JCT PANEL 12V IGNITION |
| SP7 | SPARE WIRE | 0B | ENG. CPT ACC. GRD | 2H | A/C & HEAT SYS-LO-PRESS SW. | 12W | 12V HOT WIRE DDEC III FEED |
| SP8 | SPARE WIRE | 0BE | OV BATTERY MONITOR | 2L | A/C & HEAT SYS-HI-PRESS SW. | 15 | EXT. LTS-MULTI FUNC LEVEL |
| SP9 | SPARE WIRE | 0C | R.J.B. - GRB | 3A | A/C & HEAT SYSTEM-EVAPORATOR | 15 | WIPER & WASHER SYSTEM |
| SP10 | SPARE WIRE | 0C | F.R. SERV. CPT-ACCESSOIRIES | 5N0 | SPEED SIGNAL HIGHER 5MPH | 16 | SPEEDOMETER (+) |
| SP11 | SPARE WIRE | 0C1 | ENTRANCE DOOR KEYLESS | 5NC | SPEED SIGNAL LOWER 5MPH | 16T | SPEED SW SIGNAL IN (+) |
| SP12 | SPARE WIRE | 0C4 | F.J.B. GRD | 6 | EXTERIOR LTS-DOCKING | 17 | EXTERIOR LTS-FLASHER UNIT |
| SP13 | SPARE WIRE | 0CJ | CRUISE SW. JUMPER | 6A | EXTERIOR LTS-CORNERING | 17A | EXTERIOR LTS-FLASHER UNIT |
| SP14 | SPARE WIRE | 0D | A/C JCT BOX - COND FAN GRD | 6B1 | EXTERIOR LTS-CORNERING RH | 17C | JUMPER LTS SW. - HAZARD |
| SP15 | SPARE WIRE | 0F | SILENT 1000 | 6C1 | EXTERIOR LTS-CORNERING RH | 20 | SPEEDOMETER SIGNAL (-) |
| SP16 | SPARE WIRE | 0G | ABS GRD CX1 | 6D | EXTERIOR LTS-DOCKING | 20T | SPEED SW SIGNAL IN (-) |
| SP17 | SPARE WIRE | 0H | ENG. CPT. - ACC. GRD | 9 | INTERIOR LTS-ENGINE CPT | 21 | EXTERIOR LTS-DIRECT. LH |
| SP18 | SPARE WIRE | 0L | ENG.CPT -CLEAR.LTS RR ROOF | 9 | INTERIOR LTS-RR JCT BOX | 21A | EXTERIOR LTS-LH |
| SP19 | SPARE WIRE | 0L | R.J.B. - GRD | 9F | INTERIOR LTS - FR-SERV. CPT | 21A | EXTERIOR LTS-CORNERING-LH |
| SP21 | SPARE WIRE | 0L | FR - SIDE MARK. & FLASH GRD | 10 | A/C & HEAT SYSTEM -LO PRES. | 21B | EXTERIOR LTS-DIRECT. LH |
| SP23 | SPARE WIRE | 0L1 | ENG.CPT-SIDE MARK. & FL. GRD | 10 | INTERIOR LTS-LUGGAGE CPT | 21BB | EXTERIOR LTS-DIRECT. LH |
| SP24 | SPARE WIRE | 0L2 | HEAD LTS | 10 | INTERIOR LTS-FR SERV. CPT | 21H | EXTERIOR LTS-HAZARD SIGNAL |
| SP25 | SPARE WIRE | 0L3 | FR.SERV.DR. & ENT.DOOR GRD ACC. | 10A | INTERIOR LTS-LUGGAGE CPT | 21M | AUX. LTS - DIRECTIONAL LH |
| SP30 | SPARE WIRE | 0L4 | FOG LTS RESISTOR GRD | 10B | INTERIOR LTS-LUGGAGE CPT | 21P | CORN. LTS - DIRECT. SIGN. LH |
| SP33 | SPARE WIRE | 0L5 | LH CONSOL - ACC. GRD | 10C | INTERIOR LTS-LUGGAGE CPT | 23 | EXTERIOR LTS-DIRECT. RH |
| SP38 | SPARE WIRE | 0LV | WINDSHIELD WASHER LEVEL | 10D | INTERIOR LTS-LUGGAGE CPT | 23A | EXTERIOR LTS-DIRECT. RH |
| SP40 | SPARE WIRE | 0M | WIPER 2 MIRROR MOTOR | 10E | INTERIOR LTS-LUGGAGE CPT | 23A | EXTERIOR LTS - CORNER. LTS |
| SP41 | SPARE WIRE | 0M3 | DEFROST GRD | 10R | CENTER DOOR T.T.L.T. | 23BB | EXTERIOR LTS - DIRECT. RH |
| SP42 | SPARE WIRE | 0M4 | HORN & DR'S WINDOW LIFTER | 12A | FR JCT PANEL 12V DISC SW | 23C | EXTERIOR LTS-CORNERING RH |
| SP43 | SPARE WIRE | 0M5 | SUN VISOR MOTOR | 12B | FR JCT PANEL 12V DISC SW | 23H | EXTERIOR LTS-HAZARD SIGNAL |
| SP45 | SPARE WIRE | 0M7 | DR'S WIND.LIFT. & RH MIR. SW | 12BAT | 12V HOT-WIRE ACC - JCT BLK | 23M | AUX LTS - DIRECTIONAL RH |
| SP48 | SPARE WIRE | 0M7A | LH MIRROR SW. | 12BE | 12V BATTERY MONITOR | 23P | CORN. LTS - DIRECT SIGN RH |
| SP56 | SPARE WIRE | 0P | ENG.CDT - PRE-HEATER | 12C | FR JCT PANEL 12V DISC SW | 24 | FR JCT PANEL 24V DISC. SW. |
| SP57 | SPARE WIRE | 0T | SPEED SW. CONNECTOR | 12C | RR JCT BOX 12V DISC SW | 24A | RR JCT PANEL 24V DISC. SW |
| SP60 | SPARE WIRE | 0T1 | DASH ACC. | 12D | FR JCT PANEL 12V HOT WIRE | 24A | FR JCT PANEL 24V DISC. SW |
| SP61 | SPARE WIRE | 0T2 | CLUSTER ACC. | 12DD | FR JCT PANEL 12V HOT WIRE | 24B | FR JCT PANEL 24V DISC. SW |

CIRCUIT NUMBER CODE

| NO. | DESCRIPTION | NO. | DESCRIPTION | NO. | DESCRIPTION | NO. | DESCRIPTION |
|------|------------------------------|-----|-----------------------------|-----|-----------------------------|------|------------------------------|
| 24BE | BATTERY MONITOR | 44C | EXT. LTS-FOG,HVAC & HAZ. SW | 66 | A/C PASSENGER - ON/OFF | 97 | TACHOMETER SIGN.-NOT USED |
| 24C | FR JCT PANEL 24V DISC SW | 44D | EXTERIOR LTS - FOG | 67A | A/C & HEAT SYSTEM | 101 | WORLD TR.- LO SIGN SOL.LO |
| 24D | FR JCT BOX 24V HOT WIRE | 44E | EXTERNAL LTS - FOG | 68 | DASH & DEFROST DAMPER MOT | 102 | WORLD TRANSM.-SOL. SUPPLY |
| 24F | RR JCT PANEL 24V DISC SW | 45A | A/C & HEAT SYSTEM FULL AIR | 68A | DASH & DEFROST DAMPER MOT | 103 | WORLD TRANSM.- B.SOL.LO |
| 24I | FR JCT PANEL 24V IGNITION | 45B | A/C & HEAT SYS.-WATER PUMP | 72 | SUN VISOR - FEED | 104 | LEVEL-LOW SYS- DR'S SOL. |
| 24I | RR JCT PANEL 24V IGNITION | 45C | A/C & HEAT SYS.-WATER VALV | 72A | SUN VISOR RH | 104 | WORLD TR. -SOL. FORWARD |
| 24IA | FR JCT PANEL 24V IGNITION | 45D | A/C & HEAT SYS.-WATER VALV | 72B | SUN VISOR RH | 105W | WORLD TR.-SOL.-RET.OIL TT.LT |
| 24IB | FR JCT PANEL 24V IGNITION | 45E | A/C & HEAT SYS.-WATER PUMP | 72C | SUN VISOR LH | 107 | WORLD TR.-LOCKUP SOL. HI |
| 24IF | FR JCT PANEL 24V IGNITION | 45G | A/C & HEAT SYS.-DR'S HTR | 72D | SUN VISOR LH | 108 | WORLD TR.-LOCKUP SOL. |
| 24P | FR JCT PANEL 24V DISC SW | 45J | A/C & HEAT SYS.-WATER PUMP | 76 | FUEL TANK GAUGE | 110 | WORLD TR.-LOCKUP SOL. LO |
| 24R | 24V RR JCT BLK TO STARTER | 46 | EXTERIOR LTS-MARKER | 76C | LOW FUEL T.T.LT | 112 | WORLD TR.-SPARE OUTPUT (+) |
| 24T | RR JCT PANEL 24V DISC SW | 46A | EXTERIOR LTS-AUX LTS RESIS. | 76L | LOW FUEL T.T.LT | 112 | WORLD TR.-SPARE OUTPUT (+) |
| 24VD | 24V HOT WIRE FEED | 46C | EXTERIOR LTS-MARKER | 77A | A/C & HEAT SYS. - THERMOST. | 113W | WORLD TR.-REVERSE WARNING |
| 25A | TT.LT. MODULE - LED | 46D | EXTERIOR LTS-AUX LTS RESIS. | 77B | A/C SYS. - LIQ. SOL. VALVE | 114 | WORLD TR.-SPARE OUTPUT (-) |
| 25B | EXT. LTS-DAYTIME RUN LTS | 48A | ENTRANCE DOOR AIR LOCK | 77C | A/C & HEAT SYS.-COMPRESSOR | 114 | INTERIOR LT-DASH LT RHEOS. |
| 25D | GENERATOR SKTN. ON - HVAC | 48B | ENTRANCE DOOR AIR LOCK | 77H | A/C SYS.-LIQ. SOL. VALVE | 114A | INTERIOR LT-DASH LT RHEOS. |
| 26 | DR'S & ENT. WINDOW LIFTER | 48C | ENTRANCE DOOR AIR LOCK | 77H | A/C & HEAT SYS.-THERMOSTAT | 114B | INT. LT-DASH LT RHEOST.FEED |
| 26A | CIGAR LIGHT. & POW.OUTLET LH | 50 | AIR DRYER | 81 | EXTERIOR LTS-STOP SW | 115 | DDEC III-COOLANT LEVEL |
| 26B | DRIVER'S WINDOW LIFTER | 52 | ALARM & SIGNAL-ELEC.HORN | 82 | EXTERIOR LTS-STOP SIGNAL | 115W | WORLD TR.-DO NOT SHIFT SIGN |
| 26C | DRIVER'S WINDOW LIFTER | 52A | ALARM & SIGNAL-ELEC.HORN | 82A | EXTERIOR LTS-STOP SIGNAL | 116 | WORLD TR.-LO SIGNAL SOL. HI |
| 26D | ENT. DOOR WINDOW LIFTER | 53 | ALARM & SIGNAL-ELEC.HORN | 82B | EXTERIOR LTS-STOP LTS | 116B | A/C & HEAT SYSTEM-DR'S HTR |
| 26E | ENT. DOOR WINDOW LIFTER | 53B | WIPER & WASHER SYSTEM | 82L | EXT. LTS-STOP LTS & CYCLOP | 116C | A/C SYS.-TRIG. DEFROST |
| 26F | ENT. DOOR WINDOW LIFTER | 53C | WIPER & WASHER SYSTEM | 82R | EXTERIOR LTS-STOP LTS | 117A | ALARME & SIGN.-TR. OIL TEMP |
| 28H | T.T.LT MODULE - HI A/C PRES. | 53E | WIPER & WASHER SYSTEM | 83 | ENG. CTR-MAST. KEY SW ACC. | 119 | WORLD TRANSM-ENGINE BRAKE |
| 28T | T.T.LT MODULE - LO A/C PRES. | 53J | WIPER & WASHER SYSTEM | 84 | ENG. CTR-MAST KEY SW START | 120 | WORLD TRANSM-SOL. C1 |
| 29 | A/C & HEAT SYS.-DR'S HTR | 53K | KEYLESS SYSTEM | 84A | ENG. CTR-MAST KEY SW START | 121 | WORLD TRANSM-SOL.GRD 2 |
| 29H | HVAC DASH MODILE | 55 | EXTERIOR LTS-HI BEAM | 84J | ENG. CTR-MAST KEY SW START | 123 | WORLD TR.-NEUTRAL START |
| 31B | WIPER & WASHER SYSTEM | 57 | EXTERIOR LTS-HI BEAM | 85 | 24V IGNITION SIGNAL | 123A | ALARM & SIGNAL-FIRE DETECT. |
| 31C | WIPER & WASHER SYSTEM | 57A | EXTERIOR LTS-HI BEAM | 85A | 24V IGN DASH INSTRUMENT. | 123B | ALARM & SIGNAL-FIRE DETECT. |
| 32 | EXTERIOR LTS-BACK-UP | 57B | A/C & HEAT SYS.-WATER PUMP | 85C | 24V IGNITION - FEED | 124 | WORLD TR.-THROTTLE (HI) |
| 32B | EXTERIOR LTS-BACK-UP | 57C | PRE-HEAT WATER HEATER | 85W | WORLD TRANSM. - 24V IGN. | 124A | WORLD TRANSM-SENSOR PWR |
| 32F | BACK-UP CANCEL SW. | 57C | A/C & HEAT SYS.-WATER PUMP | 85X | ABS-24V IGN | 125 | WORLD TR-RETARDER INDICAT. |
| 32G | BACK-UP ALARM | 57E | A/C & HEAT SYS.-WATER VALV | 85Y | ABS-WARNING LT | 125W | WORLD TR-RETARDER INDICAT. |
| 32J | BACK-UP SW. - JUMPER | 57W | PRE-HEAT WATER HEATER | 86 | ENG. CTR-STARTER SOL SIGN | 126 | WORLD TR.-LUBE PRESS SW. |
| 35B | DRIVER'S LTS - KEYLESS SIGN | 58 | EXTERIOR LTS-LO BEAM | 86A | ENG. CTR-STARTER SOL SIGN | 126 | 24VIGN-LEV.LOW & WORLD TR. |
| 36 | ENGINE BRAKE SYSTEM | 58A | EXTERIOR LTS-LO BEAM | 87B | ENGINE CTR-24V IGNITION | 126F | LEVEL LOW SYSTEM |
| 36A | ENGINE BRAKE SYSTEM & RET. | 58B | EXTERIOR LTS-LO BEAM | 88 | ENGINE CTR-RR START SIGNAL | 126H | SPEED SIGN 5NC - NOT USED |
| 39 | INTERIOR LTS-DRIVER'S LTS | 59A | ENGINE BRAKE SYSTEM | 89 | ENGINE CTR-RR START SIGNAL | 126W | WORLD TRANSM-NOT USED |
| 39B | INTERIOR LTS-DRIVER'S LTS | 61 | EXTERIOR LTS-24V FEED SW | 90 | CONVERTER - CABLE SPARG | 127 | 24HW DR'S LT PREHEAT & HVAC |
| 39C | INTERIOR LTS-DRIVER'S LTS | 61A | EXTERIOR LTS-HEAD SIGNAL | 90A | ENG. CTR-MAST KEY SW FEED | 127A | PRE-HEAT WATER HEATER |
| 39D | INTERIOR LTS - FRIVER' LTS | 63 | EXTERIOR LTS-CLEAR. FEED | 90B | A/C & H. SYS.-COND FAN MOT | 127W | PRE-HEAT WATER HEATER |
| 39K | DR'S LTS - KEYLESS SIGN. | 63B | EXTERIOR LTS-CLEARANCE | 90B | ENG. CTR-MAST KEY SW FEED | 128 | WORLD TRANSM-SOL. C2 |
| 41 | A/C SYS.-COND FAN MOTOR | 63C | EXT. LTS-MARKER SIGNAL | 91 | PARKING BRAKE SW SIGNAL | 128A | PRE-HEAT WATER HEATER |
| 41A | A/C SYS.-COND FAN MOTOR | 63F | EXT. LTS-MARKER BLINKER | 91A | DDEC III-FAST IDLE SIGNAL | 128B | PRE-HEAT WATER HEATER |
| 41B | A/C SYS.-COND FAN MOTOR | 64 | DRIVER'S FAN SPEED CTR | 91C | PARKING BRAKE - T.T.LT | 128W | PRE-HEAT WATER HEATER |
| 42A | A/C SYS.-COND FAN MOTOR | 64A | DRIVER'S FAN SPEED CTR | 91J | FAST IDLE - JUMPER SW. | 129 | WORLD TRANSM-SOL. C5 |
| 43 | A/C & HEAT SYS. - FAN SPEED | 64B | DRIVER'S FAN SPEED CTR | 92 | BATT. EQUAL.-CHECK BALANCE | 129 | PRE-HEAT WATER HEATER |
| 44 | EXTERIOR LTS-FOG | 65 | FOOT DAMPER MOTOR | 93 | BATT. EQUALIZ.-CHECK LO/HI | 129B | PRE-HEAT WATER HEATER |
| 44A | EXTERIOR LTS-FOG | 65A | FOOT DAMPER MOTOR | 95A | ENG. BRAKE & RETARDER SYS. | 130 | WORLD TRANSM-SOL. GRD 3 |
| 44B | EXTERIOR LTS-FOG | 65D | DRIVER'S REC. DAMPER | 95B | ENG. BRAKE & RETARDER SYS. | 131 | WORLD TRANSM-SOL.C4 |

CIRCUIT NUMBER CODE

| NO. | DESCRIPTION | NO. | DESCRIPTION | NO. | DESCRIPTION | NO. | DESCRIPTION |
|-------|----------------------------|-------|-----------------------------|------|----------------------------|------|----------------------------|
| 132 | WORLD TRANSM-ENGINE BRAKE | 146A | WORLD TRANSM-12V IGNITION | 170T | LUGG DOOR LOCK-SIGN T.T.LT | 286A | KEYLESS SYS-CENTER DOOR |
| 132A | LEVEL LOW SYSTEM | 146AA | WORLD TRANSM-DIAGN.CONN. | 170V | LUGG DOOR LOCK-SIGN T.T.LT | 290 | FAN CLUTCH RADIATOR-FEED |
| 132B | LEVEL LOW SYSTEM | 147 | WORLD TRANSM-OIL TEMP | 170W | LUGGAGE DOOR LOCK-FEED | 290A | FAN CLUTCH RADIATOR-FEED |
| 132C | LEVEL LOW SYSTEM | 147 | ABS SYSTEM-VALVE | 170X | LUGG DOOR LOCK-SIGN T.T.LT | 291 | FAN CLUTCH RADIATOR SPD 1 |
| 132D | LEVEL LOW SYSTEM | 147A | ETHER COLD START | 170Y | LUGGAGE DOOR LOCK-FEED | 292 | FAN CLUTCH RADIATOR SPD 2 |
| 132E | LEVEL LOW SYSTEM | 147A | DAYTIME LST-ALT.SIGNAL | 170Z | LUGGAGE DOOR LOCK | 292A | FAN CLUTCH RADIATOR SPD 2 |
| 132F | LEVEL LOW SYSTEM | 147C | ETHER COLD START | 171 | WORLD TRANSM-SHIFTER | 294 | KEYLESS SYSTEM-ANTI-THEFT |
| 135 | WORLD TRANSM-RET.TEMP. | 148 | ABS SYSTEM-VALVE | 172 | WORLD TRANSM-SHIFTER | 295 | KEYLESS SYS-LED INDICATOR |
| 135A | WORLD TR.-RES MODULE RET. | 148 | WORLD TR.-OUTPUT SPEED LO | 173 | WORLD TRANSM-SHIFTER | 417 | DDEC-LIMIT SPEED GOVERNOR |
| 135B | A/C & HEAT SYS.-AIR SENSOR | 149 | WORLD TR.-TURBINE SPEED HI | 174 | WORLD TRANSM-SHIFTER | 419 | DDEC -CHEK ENGINE LIGHT |
| 135C | A/C & HEAT SYS.-AIR SENSOR | 149 | ABS SYSTEM-SENSOR | 175A | WORLD TRANSM-SHIFTER | 439 | DDEC-12V IGNITION |
| 136A | WORLD TRANSM-12V BATTERY | 149A | ABS SYSTEM | 176 | WORLD TRANSM-SHIFTER | 451 | DDEC-A/C FAN CLUTCH |
| 136AA | WORLD TRANSM-SHIFTER PWR | 150 | WORLD TR.-ENGINE SPEED LO | 180 | WORLD TRANSM-SHIFTER | 505 | DDEC-TACHOMETER DRIVE |
| 136V | WORLD TRANSM-12V BATTERY | 150 | DDEC III-ECM BATTERY GRD | 180 | OUTSIDE TEMP. DISPLAY | 509 | DDEC-STOP ENGINE LIGHT |
| 136W | WORLD TRANSM-12V BATTERY | 150A | DDEC III-ECM BATTERY GRD | 180A | OUTSIDE TEMP. DISPLAY | 510 | DDEC-FAST IDLE SIGNAL |
| 137 | WORLD TRANSM-RETARDER | 151 | DDEC III-ECM BATTERY GRD | 180A | WORLD TRANSM-SHIFTER | 524 | DDEC-ENGINE BRAKEDISABLE |
| 137 | RR VIEW MIRROR | 151 | ABS SYSTEM-SPARE | 180B | OUTSIDE TEMP. DISPLAY | 525 | DDEC-FAST IDLE SIGNAL |
| 137A | RR VIEW MIRROR | 152 | ABS SYSTEM-SPARE | 180C | OUTSIDE TEMP. DISPLAY | 528 | DDEC-STOP ENG. OVERRIDE |
| 137B | RR VIEW MIRROR | 153 | ELECTRICAL DRIVER'S SEAT | 181 | FROZEN POINT T.T.LT | 531 | DDEC-CRUISE CLUTCH CUT OUT |
| 137C | RR VIEW MIRROR | 154 | WORLD TRANSM-ABS INPUT (-) | 181A | THERMOMETER INSIDE SENSOR | 540 | DDEC-CRUISE ENABLE T.T.LT |
| 137D | RR VIEW MIRROR | 156A | ABS SYSTEM-FEED | 181B | THERMOMETER INSIDE SENSOR | 541 | DDEC-CRUISE SET SW |
| 137D | RR VIEW MIRROR | 157 | ABS SYSTEM-FEED | 181C | THERMOMET. OUTSIDE SENSOR | 542 | INPUT PARK BRAKE INTERLOCK |
| 137E | RR VIEW MIRROR | 157A | ABS SYSTEM-FEED | 181D | THERMOMET. OUTSIDE SENSOR | 543 | DDEC-CRUISE STOP SW CUT IN |
| 137F | RR VIEW MIRROR | 157B | ABS SYSTEM | 195 | WORLD TRANSM-TRANS ID | 544 | DDEC-CRUISE ON/OFF SW |
| 137H | RR VIEW MIRROR | 159 | WORLD TRANSM-DIAGNOSTIC | 197 | FUEL WATER FILTER | 545 | DDEC-CRUISE RESUME SW |
| 137J | RR VIEW MIRROR | 160 | ALARM & SIGN.-TAG PRESS SW | 197A | FUEL WATER FILTER | 555 | DDEC-FAN CLUTCH SPEED#1 |
| 137K | RR VIEW MIRROR | 161B | WORLD TRANSM-SIGNALGRD | 201 | WORLD TRANSM-SPARE | 556 | DDEC-VEHICULE SPEED (+) |
| 137L | RR VIEW MIRROR | 162 | WORLD TRANSM-PRESS. SW C3 | 202 | WORLD TRANSM-SPARE | 557 | DDEC-VEHICULE SPEED (-) |
| 137M | RR VIEW MIRROR FEED | 163 | WORLD TR.-RETARDER ENABLE | 203 | WORLD TRANSM-SPARE | 563 | DDEC-FAN CLUTCH SPEED#2 |
| 137R | WORLD TRANSM-RETARDER | 164 | WORLD TR.-RET. ACTUAT. SIGN | 204 | WORLD TRANSM-SPARE | 564 | DDEC-DIGTAL OUTPUT |
| 137T | MIRROR HEAT SW-JUMPER | 165 | WORLD TR.-OIL LEVEL SIGNAL | 214 | WORLD TR.-BACK-UP SIGNAL | 565 | DDEC-ENGINE BRAKE ACTIVE |
| 138 | WORLD TR.-RETARDER TEMP | 166B | A/C & HEAT SYS.-EVAP. MOD. | 231 | WORLD TR.-NEUTRAL SIGN GRD | 583 | DDEC-ENGINE BRAKE 4 CYL. |
| 138 | ABS SYSTEM-SENSOR | 167 | WORLD TR.-SPEED 5N0, 5NC | 240 | DDEC III-ECM 12V FEEDING | 900 | DDEC-DATA LINK (+) |
| 138A | ABS SYSTEM-SENSOR | 169 | WORLD TRANSM-INPUT 12 | 241 | DDEC III-ECM 12V FEEDING | 901 | DDEC-DATA LINK (-) |
| 139 | ABS SYSTEM-VALVE | 170 | WORLD TRANSM-SHIFTER | 260 | WINDOW AJAR-T.T.LT | 908 | DDEC-HYDRAU. PWM#1 OUTPUT |
| 139 | WORLD TR.-OUTPUT SPEED HI | 170C | LUGGAGE DOOR LOCK-T.T.LT | 270 | KEYLESS MODULE-FEED | 916 | DDEC-SENSOR SUPPLY (5VDC) |
| 140 | WORLD TR.-OUTPUT SPEED LO | 170D | LUGGAGE DOOR LOCK-FEED | 270A | ENTRANCE DOOR AIR LOCK | 952 | DDEC-SENSOR RETURN |
| 140 | ABS SYSTEM-VALVE | 170E | LUG. DOOR LOCK-UNLOCK SIGN | 272 | KEYLESS SYSTEM-KEYBOARD | 953 | DDEC-BATTERY GRD |
| 141 | ABS SYSTEM-VALVE | 170F | LUGGAGE DOOR LOCK-FEED | 274 | KEYLESS SYSTEM-KEYBOARD | 979 | DDEC-ENGINE BRAKE 2 CYL. |
| 141 | WORLD TR.-ENGINE SPEED HI | 170G | LUGGAGE DOOR LOCK-FEED | 276 | KEYLESS SYSTEM-KEYBOARD | 2123 | FLASHER SIGNAL LTS |
| 142 | ABS SYSTEM-VALVE | 170H | LUGGAGE DOOR-LOCK SIGN | 277 | KEYLESS SYS-DR'V LTS SIGN | | |
| 143 | ABS SYSTEM-SENSOR | 170K | LUGGAGE DOOR-LOCK SIGN | 278 | KEYLESS SYSTEM-KEYBOARD | | |
| 143A | ABS SYSTEM-SENSOR | 170LA | LUGG DOOR LOCK-T.T.LT WE | 280 | KEYLESS SYSTEM-KEYBOARD | | |
| 143A | WORLD TRANS-BATERY GRD | 170LB | LUGG DOOR LOCK-T.T.LT WE | 283 | KEYLESS SYSTEM-ANTI-THEFT | | |
| 143W | WORLD TRANSM-BATTERY GRD | 170L | LUGG DOOR LOCK-SIGN T.T.LT | 283A | KEYLESS SYS-ENT. DOOR SIGN | | |
| 143X | WORLD TRANSM-BATTERY GRD | 170M | LUGG DOOR LOCK-SIGN T.T.LT | 284A | KEYLESS SYSTEM | | |
| 144 | ABS SYSTEM-SENSOR | 170N | LUGG DOOR LOCK-SIGN T.T.LT | 285 | KEY. SYS-UNLOCK ENT. DOOR | | |
| 144A | ABS SYSTEM-SENSOR | 170P | LUGG DOOR LOCK-SIGN T.T.LT | 285B | KEYLESS SYSTEM | | |
| 145 | ABS SYSTEM-VALUE | 170R | LUGG DOOR LOCK-ENTR. DOOR | 285C | KEYLESS SYSTEM | | |
| 146 | ABS SYSTEM-VALUE | 170S | LUGG DOOR LOCK-SIGN T.T.LT | 286 | LUGG DOOR LOCK-ENT. DOOR | | |