

## WIRING DIAGRAM INDEX

<b>A</b> A/C & HEAT SYSTEM (FULL AIR) Page: 15.1 A/C & HEAT SYSTEM (DRIVER ONLY) Page: 15.4 ALARM & SIGNAL Page: 7 ALTERNATOR DELCO & STARTER Page: 4.1 ALTERNATOR BOSCH & STARTER Page: 4.2 ABS Page: 22 ARRANGEMENT - CABLE Page: B ARRANGEMENT - HARNESS Page: C ARRANGEMENT - SPARE WIRE Page: D	DRIVER'S & CO-PILOT SEAT-HEATER Page: 13  <b>E</b> ENGINE BLOCK HEATER Page: 14 ENGINE BRAKE SYSTEM Page: 21 ENGINE CONTROL Page: 4 ETHER COLD START Page: 8 EXTERIOR LIGHTING Page: 9  <b>F</b> FAN-CLUTCH RADIATOR Page: 8 FAST IDLE - DDEC Page: 5 FIRE DETECTOR Page: 7.2 FUEL WATER FILTER Page: 8 FUEL PRIME PUMP Page: 14	<b>S</b> SPEEDOMETER (VDO) Page: 17 SUN VISOR Page: 19 STEERING CONTROL Page: 17.1  <b>T</b> TACHOMETER (VDO) Page: 17 TELL TALE LIGHT MODULES Page: 23 THERMOMETER-DIGITAL Page: 23 TRANSMISSION - WORLD Page: 6  <b>W</b> WIPER & WASHER Page: 10 W.C.L. RICON 9000 Page: 24.1
<b>B</b> BACK-UP ALARM Page: 9.3 BACK-UP MONITOR Page: 20	<b>G</b> GROUND SYSTEM Page: 3  <b>I</b> INTERIOR LIGHTING Page: 11  <b>K</b> KEYLESS ENTRY SYSTEM Page: 12	
<b>C</b> CIGAR LIGHTER Page: 19 CODE - CIRCUIT NUMBER Page: E CODE - CIRCUIT BREAKER Page: F CODE - CONNECTOR Page: G CODE - DIODE Page: H CODE - RELAY Page: I CODE - RESISTOR Page: J CODE - WIRING KEY Page: K CODE - FUSE Page: L CODE - MODULE Page: M CRUISE CONTROL - DDEC Page: 5	<b>L</b> LEVEL LOW SYSTEM Page: 18 LUGGAGE DOOR LOCK Page: 12  <b>M</b> MIRROR-REAR VIEW Page: 16	
<b>D</b> DDEC III Page: 5 DISTRIBUTION 12V Page: 2 DISTRIBUTION 24V Page: 1 DRIVER'S WINDOW LIFTER Page: 19 DRIVER'S SEAT-ELECT. ADJUST Page: 13	<b>P</b> PARKING BRAKE ALARM Page: 8 PARKING BRAKE SWITCH Page: 8 PRODRIVER Page: 8  <b>R</b> RETARDER - WORLD TRANSM. Page: 21	