

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
L 8	ENG. BLK HEATER	SP 94	SPARE-RJB TO RR ROOF	0 L2	FS - FR SERVICE CPT LTS GRD	9 A	INTERIOR LTS-ENGINE CPT
L 9	ENG. BLK HEATER	SP 95	SPARE-RJB TO RR ROOF	0 L3	FS - FJB GRD	9 B	INTERIOR LTS-ENGINE CPT
SP 2	SPARE-FJB TO FR SERV CPT	SP 96	SPARE-RJB TO LUGG CPT #2	0 L4	FS - FJB GRD	9 E	INTERIOR LTS-FR SERVICE CPT
SP 3	SPARE-FJB TO CENTER DASH	SP 97	SPARE-RJB TO LUGG CPT #3	0 L5	FS - CIGAR LIGHTER	9 F	INTERIOR LTS-FR SERVICE CPT
SP 4	SPARE-FJB TO CENTER DASH	SP 98	SPARE-RJB TO LUGG CPT #3	0 L	RS - ENGINE CPT ACCES. GRD	10	INTERIOR LTS-LUGGAGE CPT
SP 5	SPARE-RJB TO LUGG CPT #2	SP 104	SPARE-RJB TO ENGINE CPT	0 L	ENTRANCE DOOR GRD	10 A	INTERIOR LTS-LUGGAGE CPT
SP 6	SPARE-RJB TO LUGG CPT #1	SP 105	SPARE-FJB TO ENGINE	0 LH	RS - RR END LAMPS LH GRD	10 B	INTERIOR LTS-LUGGAGE CPT
SP 7	SPARE-RJB TO LUGG CPT #1	SP 106	SPARE-RJB TO BATT. CPT.	0 M	FS - ELECTRICAL MOTOR GRD	10 C	INTERIOR LTS-LUGGAGE CPT
SP 8	SPARE-RJB TO LUGG CPT #1	SP 107	SPARE-RJB TO BATT. CPT.	0 M3	FS - ELECTRICAL MOTOR GRD	10 D	INTERIOR LTS-LUGGAGE CPT
SP 9	SPARE-RJB TO LUGG CPT #2	SP 108	SPARE-RJB TO BATT. CPT.	0 M4	FS - ELECTRICAL MOTOR GRD	10 F	INTERIOR LTS-LUGGAGE CPT
SP 10	SPARE-RJB TO LUGG CPT #1	SP 109	SPARE-RJB TO ENGINE CPT.	0 M5	FS - ELECTRICAL MOTOR GRD	10 H	INTERIOR LTS-LUGGAGE CPT
SP 11	SPARE-FJB TO RJB	SP 110	SPARE-RJB TO ENGINE CPT.	0 M6	FS - FJB GRD	10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
SP 12	SPARE-RJB TO ENGINE	SP 111	SPARE-RJB TO ENGINE CPT.	0 M7	FS - ELECTRICAL MOTOR GRD	12	12V BAT ELECTRONIC JCT BLOCK
SP 13	SPARE-RJB TO ENGINE	SP 112	SPARE-RJB TO ENGINE CPT.	0 M	RS - ENGINE CPT ACCES. GRD	12	BAT CPT 12V BATTERY
SP 14	SPARE-FJB TO RJB	SP 114	SPARE-FJB TO U/DASH WIPER	0 MR	24V DISC. SW. RLY GRD SIGNAL	12 A	FR JCT BOX 12V DISC SW
SP 15	SPARE-RJB TO ENGINE	SP 115	SPARE-FJB TO U/DASH WIPER	0 MS	24V DISC. SW. RLY GRD SIGNAL	12 A	RR JCT BOX 12V DISC SW
SP 16	SPARE-RJB TO ENGINE	SP 116	SPARE-FJB TO U/DASH FLOOR	0 N	RS - ENGINE CPT ACCES. GRD	12 B	12V BAT ELECTRICAL JCT BLOCK
SP 17	SPARE-RJB TO ENGINE	SP 117	SPARE-FJB TO U/DASH FLOOR	0 P	RS - ENGINE CPT ACCES. GRD	12 B	RR JCT BOX 12V DISC SW
SP 18	SPARE-FJB TO RJB	W C	A/C & HEAT SYST-EVAP CTR SIGN	0 R	RS - RJB GRD	12 B	FR JCT BOX 12V DISC SW
SP 24	SPARE-RJB TO LAVATORY ROOF	0	BC - BAT. CPT CHASSIS GRD	0 R	RS - ENGINE CPT ACCES. GRD	12 BE	BAT. EQUALIZER MONITOR
SP 25	SPARE-RJB TO LAVATORY ROOF	0	CONDENSER CPT GRD	0 RH	RS - RR END LAMPS RH GRD	12 C	FR JCT BOX 12V DISC SW
SP 26	SPARE-RJB TO LAVATORY ROOF	0	RS - RR JCT BOX RLY GRD	0 S	12 VOLT RUN- GND RLY	12 C	RR JCT BOX 12V DISC SW
SP 27	SPARE-RJB TO LH HAT RACK	0 A	BC - SHIELD GRD	0 T	FS - DASH ACCES. GRD	12 D	BAT CPT 12V BATTERY
SP 28	SPARE-RJB TO LH HAT RACK	0 A	RS - RR JCT BOX RLY GRD	0 T1	FS - DASH ACCES. GRD	12 DT	TTL MODULE
SP 31	SPARE-RJB TO RH HAT RACK	0 A	FRS - FR ROOF ACCES. GRD	0 T2	FS - DASH ACCES. GRD	12 E	FR JCT BOX 12V DISC SW
SP 32	SPARE-RJB TO RH HAT RACK	0 A	RS - LUG. CPT ACCES. GRD	0 T3	FS - DASH ACCES. GRD	12 E	RR JCT BOX 12V DISC SW
SP 33	SPARE-FJB TO RJB	0 AA	RS - VOLTAGE REGULATOR GRD	0 T4	FS - DASH ACCES. GRD	12 F	BAT CPT 12V FJB & IC
SP 38	SPARE-FJB TO RJB	0 B	EC - ENGINE GRD	0 V	RR JCT BOX CPT GRD STUD	12 F	FR JCT BOX 12V DISC SW
SP 43	SPARE-FJB TO RJB	0 B	FRS - FR ROOF HEAT WIND GRD	0 VA	BATTERY TO EQUALISER 0V	12 F	FR JCT BOX 12V DISC SW
SP 45	SPARE-FJB TO RJB	0 B	RS - LUG. CPT ACCES. GRD	0 W	FS - WT GND & SHIELD	12 G	FR JCT BOX 12V DISC SW
SP 46	SPARE-RJB TO LH FR ROOF	0 BE	RJB - BAT. EQUAL. BAT GRD	0 W	RS - RR JCT BOX (WCL) GRD	12 J	FR JCT BOX 12V DISC SW
SP 48	SPARE-RJB TO DASH CENTER PANEL	0 C	EC - STARTER MOTOR GRD	0 WC	RS - RR JCT BOX GRD (WCL)	12 K	HVAC MODULE
SP 56	SPARE-ENGINE TO RH SW PANEL	0 C	FS - SERV. CPT ACCES. GRD	0 X	RS - RR JCT BOX GRD	12 I	12V IGNITION DISTRIBUTION
SP 57	SPARE-DASH CENTER PANEL TO ENG.	0 C	BC - FAN CONDENSER GRD	0 Y	ABS FR JCT BOX CPT GRD STUD	12 I	RR JCT BOX 12V IGNITION
SP 58	SPARE-DASH CENTER PANEL TO ENG.	0 CR	24V DISC. SW. RLY GRD SIGNAL	0 Y	RR JCT BOX GRD	12 IA	12V IGNITION DISTRIBUTION
SP 59	SPARE-FJB TO ENGINE	0 CS	24V DISC. SW. RLY GRD SIGNAL	0 Y1	ABS FR JCT BOX CPT GRD STUD	12 IA	FR JCT BOX 12V IGNITION
SP 61	SPARE-FJB TO DASH RH PANEL	0 C1	FS - SERV. CPT ACCES. GRD	0 Z	RR JCT BOX CPT GRD STUD	12 IB	FR JCT BOX 12V IGNITION
SP 68	SPARE-FJB TO ENGINE	0 C2	FS - SERV. CPT ACCES. GRD	00	FJB & RJB BATT. GRD	12 LX	CLUSTER FEED
SP 69	SPARE-FJB TO FR AXLE	0 C3	FS - SERV. CPT ACCES. GRD	00 A	FBG - T.T.LT. MODULES BATT. GRD	12 IF	FR JCT BOX 12V IGNITION
SP 70	SPARE-FJB TO FR AXLE	0 C4	FS - FJB. CPT ACCES. GRD	00 Y	FS - ABS MODULE BATT. GRD	12 P	LH CONSOLE POWER OUTLET
SP 71	SPARE-FJB TO RH SW PANEL	0 D	BC - FAN CONDENSER GRD	00 SS	SOUND SYSTEM BATT. GRD	12 R	BAT CPT 12V DISC RLY TO RJB
SP 72	SPARE-FJB TO FR SERV CPT	0 D	RS - HAT RACK ACCES. LH GRD	1	TACHO SYSTEM - RPM SIGNAL +	12 VA	BATTERY TO EQUALIZER 12V
SP 74	SPARE-FJB TO LH CONSOLE	0 DF	RS - RR SIDE FLASH & MARK GRD	2 A	A/C & HEAT SYSTEM-COOL 1 SIGN	12 VD	12V HOT WIRE DISTRIBUTION
SP 77	SPARE-FJB TO EVAPORATOR CPT	0 DR	RS - RJB DOCKING LT RESISTORS	2 B	A/C & HEAT SYSTEM-COOL SIGN	12 VF	BAT CPT 12V FJB & IC
SP 78	SPARE-FJB TO CONDENSER CPT	0 J	FS - LH CONSOLE SW GRD	2 H	A/C & HEAT SYSTEM-HI PRESS SW	12 VI	12V IGNITION DISTRIBUTION
SP 79	SPARE-FJB TO CONDENSER CPT	0 J	RS - RR ROOF ACCES. GRD	2 HL	A/C & HEAT SYSTEM-LO & HI PRESS SW	12 VR	BAT CPT 12V DISC RLY TO RJB
SP 87	SPARE-RJB TO LH HAT RACK	0 K	RS - RR ROOF ACCES. GRD	2 L	A/C & HEAT SYSTEM-LO PRESS SW	12 W	12V BATTERY DDEC III
SP 88	SPARE-RJB TO RH HAT RACK	0 K	RS - RJB A/C JCT PANEL GRD	5 NC	SPEED SIGNAL LOWER 5MPH	12 X	FR JCT BOX 12V DISC SW
SP 92	SPARE-RJB TO CONDENSER CPT	0 L	FS - FR SERVICE CPT LTS GRD	5 NO	SPEED SIGNAL HIGHER 5MPH	12 X2	FR JCT BOX 12V DISC SW
SP 93	SPARE-RJB TO EVAPORATOR CPT	0 L1	FS - FR SERVICE CPT LTS GRD	9	INTERIOR LTS-ENGINE CPT	12 Y	FR JCT BOX 12V DISC SW

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
13 A	ALARM & SIGNAL-LO AIR PRIM.	24 H	FR JCT BOX 24V DISC SW	32 D	BACK-UP ALARM	58 A	EXTERIOR LTS-LO BEAM
13 B	ALARM & SIGNAL-LO AIR SEC.	24 H	RR JCT BOX 24V DISC SW	35	ENTRANCE DOOR	58 B	EXTERIOR LTS-LO BEAM
15	EXTERIOR LTS-MULTI FUNC LEVEL	24 I	FR JCT BOX 24V IGNITION	35 B	ENTRANCE DOOR	58 E	EXTERIOR LTS-LO BEAM
15 A	WIPER & WASHER UPPER WINDSHIELD	24 I	RR JCT BOX 24V IGNITION	36	JACOB BRAKE SYSREM	59 A	JACOB BRAKE SYSTEM
16	SPEED - SIGNAL +	24 I A	FR JCT BOX 24V IGNITION	36 A	JACOB BRAKE SYSREM	61	EXTERIOR LTS-24V FEED SW
16 A	SPEED - SIGNAL +	24 I A	RR JCT BOX 24V IGNITION	39	INTERIOR LTS-24V LH CONSOLE SW	61 A	EXTERIOR LTS-HEAD SIGNAL
16 T	SPEED - SIGNAL +	24 I B	FR JCT BOX 24V IGNITION	39 A	INTERIOR LTS-DRIVER'S LTS	63	EXTERIOR LTS-CLEARANCE
17	EXTERIOR LTS-FLASHER UNIT	24 I B	RR JCT BOX 24V IGNITION	39 K	DRIVER'S LTS KEYLESS	63 A	EXTERIOR LTS-CLEARANCE
17 A	EXTERIOR LTS-FLASHER UNIT	24 I F	FJB 24V IGNITION	41	A/C & HEAT SYSTEM-COND FAN MOT	63 B	EXTERIOR LTS-CLEARANCE
19	DIFFERENTIAL OIL TEMP	24 I C	FR JCT BOX 24V IGNITION	41 A	A/C & HEAT SYSTEM-COND FAN MOT	63 C	EXTERIOR LTS-MARKER SIGNAL
20	SPEED - SIGNAL -	24 P	FR JCT BOX 24V DISC SW	41 B	A/C & HEAT SYSTEM-COND FAN MOT	63 D	EXTERIOR LTS-MARKER & TAIL
20 T	SPEED - SIGNAL -	24 S	24V DISC SW RLY SIGNAL	42	A/C & HEAT SYSTEM-COND FAN MOT	63 E	EXTERIOR LTS-CLEARANCE
20 W	SPEED - SIGNAL -	24 T	RR JCT BOX 24V DISC SW	43	A/C & HEAT SYSTEM-COND FAN MOT	63 F	EXTERIOR LTS-MARKER BLINKER
21	EXTERIOR LTS-DIRECTIONNAL LH	24 V 2	RR JCT BOX 24V DISC SW	42 A	A/C & HEAT SYSTEM-COND FAN MOT	63 H	EXTERIOR LTS-TAIL
21 A	EXTERIOR LTS-DIRECTIONNAL LH	24 V 3	RR JCT BOX 24V DISC SW	44	EXTERIOR LTS-FOG	64	DRIVER'S FAN
21 B	EXTERIOR LTS-HAZARD	24 V 4	RR JCT BOX 24V DISC SW	44 A	EXTERIOR LTS-FOG	64 B	DRIVER'S FAN
21 C	EXTERIOR LTS-CORNERING LH	24 V 5	RR JCT BOX 24V DISC SW	44 B	EXTERIOR LTS-FOG	64 C	DRIVER'S FAN
21 H	EXTERIOR LTS-DIRECTIONNAL LH	24 V D	24V HOT WIRE DISTRIBUTION	44 C	EXTERIOR LTS-FOG & HAZARD	65	FOOT DAMPER MOTOR
21 K	EXTERIOR LTS-CORNERING	24 V F	BAT CPT 24V SW TO FJB & IC	45 B	A/C & HEAT SYSTEM-HEAT SIGN	65 A	FOOT DAMPER MOTOR
21 N	EXTERIOR LTS-CORNERING LH	24 V A	BATTERY TO EQUALIZER 24V	45 D	A/C & HEAT SYSTEM-WATER VALVE	65 D	DRIVER'S REC. DAMPER
21 P	EXTERIOR LTS-CORNERING LH	24 V I	RR JCT BOX 24V IGNITION	45 E	A/C & HEAT SYSTEM-HEAT 1 SIGN	65 P	PASSENGER REC. DAMPER
23	EXTERIOR LTS-DIRECTIONNAL RH	24 V R	BAT CPT 24V DISC SW TO RJB	45 G	A/C & HEAT SYSTEM-DRIVER'S HTR	66	O_PASS. ON/OFF
23	EXTERIOR LTS-DIRECTIONNAL RH	25	12VAC GEN RLY ON SIGNAL	45 H	A/C & HEAT SYSTEM-DRIVER'S HTR	67	A/C & HEAT SYSTEM
23 A	EXTERIOR LTS-DIRECTIONNAL RH	25	12VAC GEN RLY ON SIGNAL	45 W	A/C & HEAT SYSTEM-COND. DOOR AJAR	67 A	A/C & HEAT SYSTEM
23 B	EXTERIOR LTS-DIRECTIONNAL RH	25 A	ETHER SWITCH	46	EXTERIOR LTS-MARKER	67 B	A/C & HEAT SYSTEM
23 C	EXTERIOR LTS-CORNERING RH	25 A	NOT GENERATOR-WARNING LT	46 A	EXTERIOR LTS-MARKER	67 C	HEAT WINDS.
23 N	EXTERIOR LTS-CORNERING RH	25 F	12V IGNITION DISTRIBUTION	46 B	EXTERIOR LTS-MARKER	67 K	A/C & HEAT SYSTEM-COND FAN CTR
23 P	EXTERIOR LTS-CORNERING RH	25 B	EXTERIOR LTS-DAYTIME RUN LTS	46 B	EXTERIOR LTS-MARKER	67 L	A/C & HEAT SYSTEM-COND FAN CTR
24	BAT CPT 24V BATTERY	26	CIGAR LIGHTER	46 C	EXTERIOR LTS-MARKER	67 V	A/C & HEAT SYSTEM-WATER VALVE
24	FR JCT BOX 24V DISC SW	26	DRIVER'S WINDOW LIFTER	47	A/C & HEAT SYSTEM-DRIVER'S HTR	68	DASH & DEFROST DAMPER MOTOR
24 A	BOOSTER BLOCK 24V DISC SW	26 B	DRIVER'S WINDOW LIFTER	50	AIR DRYER	68 A	DASH & DEFROST DAMPER MOTOR
24 A	FR JCT BOX 24V DISC SW	26 C	DRIVER'S WINDOW LIFTER	52	ALARM & SIGNAL-ELEC. HORN	70	INTERIOR LTS-HAT RACK & RR RUN.
24 A	RR JCT BOX 24V DISC SW	27	PARKING BRAKE SONALERT	52 A	ALARM & SIGNAL-ELEC. HORN	72	SUN VISOR-FEEDING
24 B	24V STARTER RLY FEEDING	27 A	PARKING BRAKE SONALERT	52 B	ALARM & SIGNAL-AIR HORN	72 A	SUN VISOR-RH
24 B	FR JCT BOX 24V DISC SW	28 A	A/C & HEAT SYSTEM-HI PRESSURE	52 C	ALARM & SIGNAL-AIR HORN	72 B	SUN VISOR-RH
24 B	RR JCT BOX 24V DISC SW	29	A/C & HEAT SYSTEM-DRIVER'S HTR	53	ALARM & SIGNAL-ELEC. HORN	72 C	SUN VISOR-LH
24 B E	RJB CPT-BAT EQ MONITOR HOT WIRE	29 A	A/C & HEAT SYSTEM-DRIVER'S HTR	53 A	WIPER & WASHER SYSTEM	72 D	SUN VISOR-LH
24 C	FR JCT BOX 24V DISC SW	29 H	HVAC DASH MODULE	53 B	WIPER & WASHER SYSTEM	76	FUEL TANK GAUGE
24 C	RR JCT BOX 24V DISC SW	29 B	A/C & HEAT SYSTEM-DRIVER'S HTR	53 C	WIPER & WASHER SYSTEM	76 B	LOW FUEL LT & ETHER COLD START
24 D	BAT CPT 24V HOT WIRE	31 A	A/C & HEAT SYSTEM-UNLOADER	53 E	WIPER & WASHER SYSTEM	76 C	LOW FUEL LT
24 D	FR JCT BOX 24V HOT WIRE	31 B	A/C & HEAT SYSTEM-UNLOADER	53 J	WIPER & WASHER SYSTEM	76 P	FUEL PRIME PUMP
24 D	RR JCT BOX 24V HOT WIRE	31 B	WIPER & WASHER SYSTEM	55	EXTERIOR LTS-HI BEAM	76 M	FUEL PRIME PUMP
24 D A	A/C JCT BOX 24V HOT WIRE	31 C	WIPER & WASHER SYSTEM	57	EXTERIOR LTS-HI BEAM	77	A/C & HEAT SYSTEM-HI PRESSURE
24 E	BAT CPT 24V DISC SW	31 D	WIPER & WASHER SYSTEM	57 A	A/C & HEAT SYSTEM-WATER PUMP	77 A	A/C & HEAT SYSTEM-DRIVER'S HTR
24 E	FR JCT BOX 24V DISC SW	31 E	WIPER & WASHER SYSTEM	57 A	EXTERIOR LTS-HI BEAM	77 B	A/C & HEAT SYSTEM-COMPRESSOR
24 E	RR JCT BOX 24V DISC SW	31 J	WIPER & WASHER SYSTEM	57 B	A/C & HEAT SYSTEM-WATER PUMP	77 C	A/C & HEAT SYSTEM-COMPRESSOR
24 F	FR JCT BOX 24V DISC SW	31 X	WIPER & WASHER SYSTEM	57 C	PRE-HEAT WATER HEATER	77 H	A/C & HEAT SYSTEM-COMPRESSOR
24 F	RR JCT BOX 24V DISC SW	32	EXTERIOR LTS-BACK-UP	57 C A	A/C & HEAT SYSTEM-HEAT SIGN	81	EXTERIOR LTS-STOP SW
24 G	FR JCT BOX 24V DISC SW	32 B	EXTERIOR LTS-BACK-UP	57 C C	A/C & HEAT SYSTEM-HEAT SIGN	82	EXTERIOR LTS-STOP SIGNAL
24 G	RR JCT BOX 24V DISC SW	32 C	BACK-UP PWR & SIGNAL	58	EXTERIOR LTS-LO BEAM	82 A	EXTERIOR LTS-STOP SIGNAL

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
82 B	EXTERIOR LTS-STOP LTS	111	WORLD TRANSM-SOL. C6	130	WORLD TRANSM-SOL. GRD 3	144	ABS SYSTEM
82 K	EXTERIOR LTS-STOP PARK BRK	112	WORLD TRANSM-SPARE OUTPUT (+)	131	WORLD TRANSM-SOL. C4	144	WORLD TRANSM-ECU CHASSIS GRD
82 L	EXTERIOR LTS-LH STOP	113	ALARM & SIGNAL-OIL PRESS	132	WORLD TRANSM-ENG BRK OUTPUT (-)	144 A	ABS SYSTEM
82 R	EXTERIOR LTS-LH STOP	113	WORLD TRANSM-REVERSE WARNING	132 A	LEVEL LOW SYSTEM	145	ABS SYSTEM
83	ENGINE CTR-KEY SW ACCES SIGN	114	INTERIOR LTS-DASH LT REGUL.	132 B	LEVEL LOW SYSTEM	146	ABS SYSTEM
84	ENGINE CTR-KEY SW ACCES SIGN	114	WORLD TRANSM-SPARE OUTPUT (-)	132 C	LEVEL LOW SYSTEM	146	WORLD TRANSM-IGNITION SENSE
85	ENGINE CTR-KEY SWIGNITION SIGN	114 A	INTERIOR LTS-DASH LT	132 D	LEVEL LOW SYSTEM	146 W	WORLD TRANSM-12V IGNITION
85	24V IGNITION SIGNAL	114 B	INTERIOR LTS-DASH LT REGUL.	132 E	LEVEL LOW SYSTEM	146 X	WORLD TRANSM-12V IGNITION
85 A	24V IGN DASH INSTRUMENTATION	114 D	INTERIOR LTS-DASH LT REGUL.	132 F	LEVEL LOW SYSTEM	147	ABS SYSTEM
85 B	ENGINE CTR-24V IGNITION	114 E	INTERIOR LTS-DASH LT REGUL.	132 G	LEVEL LOW SYSTEM	147	ETHER COLD START
85 C	PARKING BRAKE SWITCH	115	ALARM & SIGNAL-TAG PRESS	132 H	LEVEL LOW SYSTEM	147	WORLD TRANSM-OIL TEMP
85 F	ENGINE CTR-ENGINE CTR SW IGN	115	DDEC III-COOLANT LEVEL	132 J	LEVEL LOW SYSTEM	147 C	ETHER COLD START
85 F	LO AIR SONALERT	115	WORLD TRANSM-DO NOT SHIFT SIGN	132 K	LEVEL LOW SYSTEM	148	ABS SYSTEM
85 W	24V IGN ABS	115 C	DDEC III-COOLANT LEVEL	132 W	WORLD TRANSM-ENG BRK OUTPUT (-)	148	WORLD TRANSM-OUTPUT SPEED LO
85 X	24V IGN ABS	115 W	WORLD TRANSM-DO NOT SHIFT SIGN	133	WORLD TRANSM-RET. ACTUATOR HI	149	ABS SYSTEM
85 Y	ABS-WARNING LT	116	WORLD TRANSM-LO SIGNAL SOL. HI	134	WORLD TRANSM-RET. APPLY SOL. HI	149	WORLD TRANSM-TURBINE SPEED HI
86	ENGINE CTR-STARTER SOL SIGN	116 B	A/C & HEAT SYSTEM-DRIVER'S HTR	135	A/C & HEAT SYSTEM-AIR SENSOR	149 A	ABS SYSTEM
86 A	ENGINE CTR-STARTER SOL SIGN	117	WORLD TRANSM-SPARE INPUT (-)	135	WORLD TRANSM-ANALOG GRD	150	DDEC III-ECM BATTERY GRD
88	ENGINE CTR-RR START SIGNAL	117 A	ALARM & SIGNAL-TRANSM OIL TEMP	135 A	A/C & HEAT SYSTEM-AIR SENSOR	150	WORLD TRANSM-ENGINE SPEED LO
89	ENGINE CTR-RR START SIGNAL	117 A	ALARM & SIGNAL-TRANSM OIL TEMP	135 D	A/C & HEAT SYSTEM-AIR SENSOR	150 A	DDEC III-ECM BATTERY GRD
90 B	A/C & HEAT SYSTEM-COND FAN MOT	118	WORLD TRANSM-SPARE INPUT (+)	135 C	A/C & HEAT SYSTEM-AIR SENSOR	151	ABS SYSTEM
90 B	ENGINE CTR-MAST KEY SW FEED	119	WORLD TRANSM-ENG BRK INPUT (+)	135 D	WORLD TRANSM-RETARDER RES MOD	151	DDEC III-ECM BATTERY GRD
90 C	A/C & HEAT SYSTEM-COND FAN MOT	120	WORLD TRANSM-SOL. C1	135 C	WORLD TRANSM-RETARDER TEMP	151	WORLD TRANSM-SERIAL COM. B
90 F	CHARG SYST-VOLTAGE REGUL. "B"	121	WORLD TRANSM-SOL. GRD 2	136	WORLD TRANSM-ECU POWER	151 A	ABS SYSTEM
90 H	A/C & HEAT SYSTEM-EVAP FAN MOT	122	A/C & HEAT SYSTEM-DRIVER'S HTR	136 V	WORLD TRANSM-12V BATTERY	152	ABS SYSTEM
90 J	A/C & HEAT SYSTEM-COND FAN MOT	122	A/C & HEAT SYSTEM-FRESH AIR	136 W	WORLD TRANSM-12V BATTERY	152 A	ABS SYSTEM
91	PARKING BRAKE SW SIGNAL	122	WORLD TRANSM-SOL. GRD 4	136 X	WORLD TRANSM-12V BATTERY	153	ABS SYSTEM
91 A	DDEC-FAST IDLE SIGNAL	122 A	A/C & HEAT SYSTEM-FRESH AIR	137	WORLD TRANSM-RETARDER	153	WORLD TRANSM-SPARE INPUT (-)
91 S	SONALERT PARKING BRAKE	123	WORLD TRANSM-NEUTRAL START	137 A	MIRROR (SPARTAN & RAMCO)	154	ABS SYSTEM
91 W	PARK, BRAKE SW SIGN (WCL)	123 A	ALARM & SIGNAL-FIRE DETECTOR	137 B	RR VIEW MIRROR (SPARTAN)	154	WORLD TRANSM-ABS RET. INPUT
92	BATTERY EQUALIZER-CHECK BALANCE	123 B	ALARM & SIGNAL-FIRE DETECTOR	137 C	RR VIEW MIRROR (SPARTAN)	155	ABS SYSTEM
93	BATTERY EQUALIZER-CHECK LO/HI	124	WORLD TRANSM-THROTTLE (HI)	137 D	RR VIEW MIRROR (SPARTAN)	155	WORLD TRANSM-SPARE INPUT (-)
95 A	ENGINE BRAKE & RETARDER SYSTEM	125	WORLD TRANSM-RET. INDICATOR	137 E	RR VIEW MIRROR (SPARTAN)	156	ABS SYSTEM
97	TACHOMETER (-)	125 W	WORLD TRANSM-RET. INDICATOR	137 G	RR VIEW MIRROR (SPARTAN)	156	WORLD TRANSM-THROTTLE POS.
101	24V STARTER SOL FEEDING	126	LEVEL LOW SYSTEM	138	ABS SYSTEM	156 A	ABS SYSTEM
101	WORLD TRANSM-LO SIGN SOL. LO	126	WORLD TRANSM-LUBE PRESS SW.	138	WORLD TRANSM-RETARDER TEMP	157	ABS SYSTEM
102	24V STARTER TO GENERATOR	127	WORLD TRANSM-LUBE PRESS SW.	138 A	ABS SYSTEM	157	WORLD TRANSM-SPEEDO SIGNAL
102	WORLD TRANSM-SOL. GRD 1	127	PRE-HEAT WATER HEATER	139	ABS SYSTEM	157 A	ABS SYSTEM
102	WORLD TRANSM-SOL. C3	127 A	PRE-HEAT WATER HEATER	139	WORLD TRANSM-OUTPUT SPEED HI	157 B	ABS SYSTEM
104	WORLD TRANSM-SOL. FORWARD	127 B	PRE-HEAT WATER HEATER	140	ABS SYSTEM	158	WORLD TRANSM-DIMMER
104	LEVEL LOW SYSTEM	127	WORLD TRANSM-RETARDER FEED SOL.	140	WORLD TRANSM-OUTPUT SPEED LO	160	ALARM & SIGNAL-TAG PRESS SW
105	WORLD TRANSM-RETARDER & SUMP	127 S	PRE-HEAT WATER HEATER	141	ABS SYSTEM	160	WORLD TRANSM-SER. INTERFACE (-)
105 W	WORLD TRANSM-RETARDER & SUMP	127 W	PRE-HEAT WATER HEATER	141	WORLD TRANSM-ENGINE SPEED HI	161	WORLD TRANSM-SIGNAL GRD
106	WORLD TRANSM-OIL LEVEL HI	128	PRE-HEAT WATER HEATER	142	ABS SYSTEM	161 B	WORLD TRANSM-SIGNAL GRD
107	CHARG SYST-VOLTAGE REGUL. "F"	128 A	PRE-HEAT WATER HEATER	142	WORLD TRANSM-SERIAL COM. A	162	WORLD TRANSM-PRESS. SW C3
107	WORLD TRANSM-LOCKUP SOL. HI	128 B	PRE-HEAT WATER HEATER	143	ABS SYSTEM	163	WORLD TRANSM-RETARDER ENABLE
108	WORLD TRANSM-REM. PWR WAKE UP	128 W	PRE-HEAT WATER HEATER	143	WORLD TRANSM-ECU BATTERY GRD	164	WORLD TRANSM-RET. ACTUATOR SIGN
109	WORLD TRANSM-RET. SOL. LO	128	WORLD TRANSM-SOL. C2	143 A	ABS SYSTEM	165	A/C & HEAT SYSTEM-TRANSMITER
110	ALARM & SIGNAL-WATER TEMP	129	PRE-HEAT WATER HEATER	143 W	WORLD TRANSM-BATTERY GRD	165	WORLD TRANSM-OIL LEVEL SIGNAL
110	WORLD TRANSM-LOCKUP SOL. LO	129	WORLD TRANSM-SOL. C5	143 X	WORLD TRANSM-BATTERY GRD	165 A	A/C & HEAT SYSTEM-TRANSMITER

CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
165 B	A/C & HEAT SYSTEM-TRANSMITER	205	WORLD TRANSM-SPARE	509	DDEC III-STOP ENGINE LIGHT		
165 C	A/C & HEAT SYSTEM-TRANSMITER	206	WORLD TRANSM-SPARE	510	DDEC III-FAST IDLE SIGNAL		
165 D	A/C & HEAT SYSTEM-TRANSMITER	214	WORLD TRANSM-BACK UP SIGNAL	524	DDEC III-ENGINE BRAKE DISABLE		
166 B	A/C & HEAT SYSTEM-EVAP. MOD.	231	NEUTRAL SIGNAL GRD	525	DDEC III-FAST IDLE SIGNAL		
167	A/C & HEAT SYSTEM-TEMP. CTR	231 A	NEUTRAL COIL RELAY FEED SIGNAL	528	DDEC III-STOP ENG. OVERRIDE		
167 A	A/C & HEAT SYSTEM-TEMP. CTR	231 W	NEUTRAL SIGNAL GRD (WCL)	531	DDEC III-CRUISE CLUTCH RELEASE		
168	A/C & HEAT SYSTEM-HUMIDISTAT	240	DDEC III-ECM 12V FEEDING	540	DDEC III-CRUISE ENABLE LTS.		
168	WORLD TRANSM-SER. INTERFACE (+)	241	DDEC III-ECM 12V FEEDING	541	DDEC III-CRUISE SET SW		
168 A	A/C & HEAT SYSTEM-HUMIDISTAT	251	DDEC III - PRODRIVER 12V H.W.	543	DDEC III-CRUISE STOP SW CUT IN		
170 C	LUGGAGE DOOR LOCK	251 A	DDEC III -DATA LOGGER 12V H.W.	544	DDEC III-CRUISE ON/OFF SW		
170 D	LUGGAGE DOOR LOCK	257	WINDSHIELD HEATED	545	DDEC III-CRUISE RESUME SW		
170 E	LUGGAGE DOOR LOCK	257 A	WINDSHIELD HEATED	555	DDEC III-FAN CLUTCH SPEED# 1		
170 F	LUGGAGE DOOR LOCK	257 B	WINDSHIELD HEATED	556	DDEC III-VEHICLE SPEED (+)		
170 G	LUGGAGE DOOR LOCK	257 C	WINDSHIELD HEATED	557	DDEC III-VEHICLE SPEED (-)		
170 H	LUGGAGE DOOR LOCK	257 D	WINDSHIELD HEATED SPARE	563	DDEC III-FAN CLUTCH SPEED# 2		
170 K	LUGGAGE DOOR LOCK	257 E	WINDSHIELD HEATED SPARE	564	DDEC III-DIGITAL OUTPUT		
170 L	LUGGAGE DOOR LOCK	258	WINDSHIELD HEATED	565	DDEC III-ENGINE BRAKE ACTIVE		
170 M	LUGGAGE DOOR LOCK	258 A	WINDSHIELD HEATED	583	DDEC III-ENGINE BRAKE 4 CYL.		
170 N	LUGGAGE DOOR LOCK	259	WINDSHIELD HEATED	900	DDEC III-DATA LINK (+)		
170 P	LUGGAGE DOOR LOCK	259 A	WINDSHIELD HEATED	901	DDEC III-DATA LINK (-)		
170 R	LUGGAGE DOOR LOCK	270	KEYLESS ENTRY SYSTEM	908	DDEC III-HYDRAULIC PWM#1 OUTPUT		
170 S	LUGGAGE DOOR LOCK	272	KEYLESS ENTRY SYSTEM	916	DDEC III-SENSOR SUPPLY (5VDC)		
170 V	LUGGAGE DOOR LOCK	274	KEYLESS ENTRY SYSTEM	952	DDEC III-SENSOR RETURN		
170 W	LUGGAGE DOOR LOCK	275	KEYLESS ENTRY SYSTEM	953	DDEC III-BATTERY GRD		
170 X	LUGGAGE DOOR LOCK	276	KEYLESS ENTRY SYSTEM	979	DDEC III-ENGINE BRAKE 2 CYL.		
170 Y	LUGGAGE DOOR LOCK	277	KEYLESS ENTRY SYSTEM				
170 Z	LUGGAGE DOOR LOCK	278	KEYLESS ENTRY SYSTEM				
173	BACK-UP MONITOR	279	KEYLESS ENTRY SYSTEM				
174	BACK-UP MONITOR	280	KEYLESS ENTRY SYSTEM				
175	BACK-UP MONITOR	283	KEYLESS ENTRY SYSTEM				
175 A	BACK-UP MONITOR	283 A	KEYLESS ENTRY SYSTEM				
175 B	BACK-UP MONITOR	284 A	KEYLESS ENTRY SYSTEM				
175 C	BACK-UP MONITOR	285	KEYLESS ENTRY SYSTEM				
180	DRIVER'S SEAT HEATER	286	KEYLESS ENTRY SYSTEM				
180 A	DRIVER'S SEAT HEATER	286 A	KEYLESS ENTRY SYSTEM				
180 B	CO-PILOT SEAT HEATER	290	FAN CLUTCH RADIATOR				
180 C	CO-PILOT SEAT HEATER	290	FAN CLUTCH RADIATOR				
181 A	THERMOMETER INSIDE SENSOR	291	FAN CLUTCH RADIATOR SPD 1				
181 B	THERMOMETER INSIDE SENSOR	291	KEYLESS ENTRY SYSTEM				
181 C	THERMOMETER OUTSIDE SENSOR	292	FAN CLUTCH RADIATOR SPD 2				
181 D	THERMOMETER OUTSIDE SENSOR	293	KEYLESS ENTRY SYSTEM				
197	FUEL WATER FILTER	294	ANTI-THEFT SYSTEM KEYLESS				
197 A	FUEL WATER FILTER	295	LED FEED ALARM -KEYLESS				
197 B	FUEL WATER FILTER	417	DDEC III-LIMIT SPEED GOVERNOR				
198	FILTER FUEL HEATER	419	DDEC III-CHECK ENGINE LIGHT				
199	AIR FILTER RESTRICTION SENDER	439	DDEC III-12V IGNITION				
201	WORLD TRANSM-SPARE	440	DDEC III-12V IGNITION				
202	WORLD TRANSM-SPARE	440 A	DDEC III-12V IGNITION				
203	WORLD TRANSM-SPARE	451	DDEC III-A/C FAN CLUTCH				
204	WORLD TRANSM-SPARE	505	DDEC III-TACHOMETER DRIVE				