

# FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V IGNITION
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM
F 5	8.1	10A	562407	RR. JCT. BOX	AIR DRYER
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS
F 12					
F 13					
F 14	11.2	15A	562602	FR. JCT. BOX	DRIVER'S LTS
F 15					
F 16					
F 17					
F 18					
F 19					
F 20					
F 21	14.2	10A	560061	RR. JCT. BOX	FUEL PRIME PUMP
F 22	19.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET
F 23	19.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER
F 24	19.1	15A	562407	FR. JCT. BOX	CIGAR LIGHTER
F 25	19.1	3A	562599	FR. JCT. BOX	SUN VISOR
F 26	14.1	5A	562259	FR. JCT. BOX	WATER HTR TIMER
F 27					
F 28					
F 29					
F 30					
F 31					
F 32					
F 33					
F 34					
F 35					
F 36					
F 37					
F 38					
F 39					
F 40	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSHIELD LH
F 41	13.1	20A	562605	FR. JCT. BOX	HEATED WINDSHIELD RH
F 42					
F 43					
F 44					
F 45					
F 46	16.1	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 24V SPARTAN
F 47	16.2 16.3	7.5A	562602	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO
F 48					
F 49	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER
F 50	14.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO
F 51					
F 52					
F 53	20.1	3A	560893	RR. JCT. BOX	BACK-UP MONITOR DOOR SOLENOID
F 54					
F 55	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA HEATER
F 56	20.1	7.5A	562602	RR. JCT. BOX	BACK-UP MONITOR CAMERA
F 57	4.1	1A	560893	RR. JCT. BOX	GENERATOR RUN RELAY

# FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
-----	------	------	--------	----------	----------