


F58  
5A

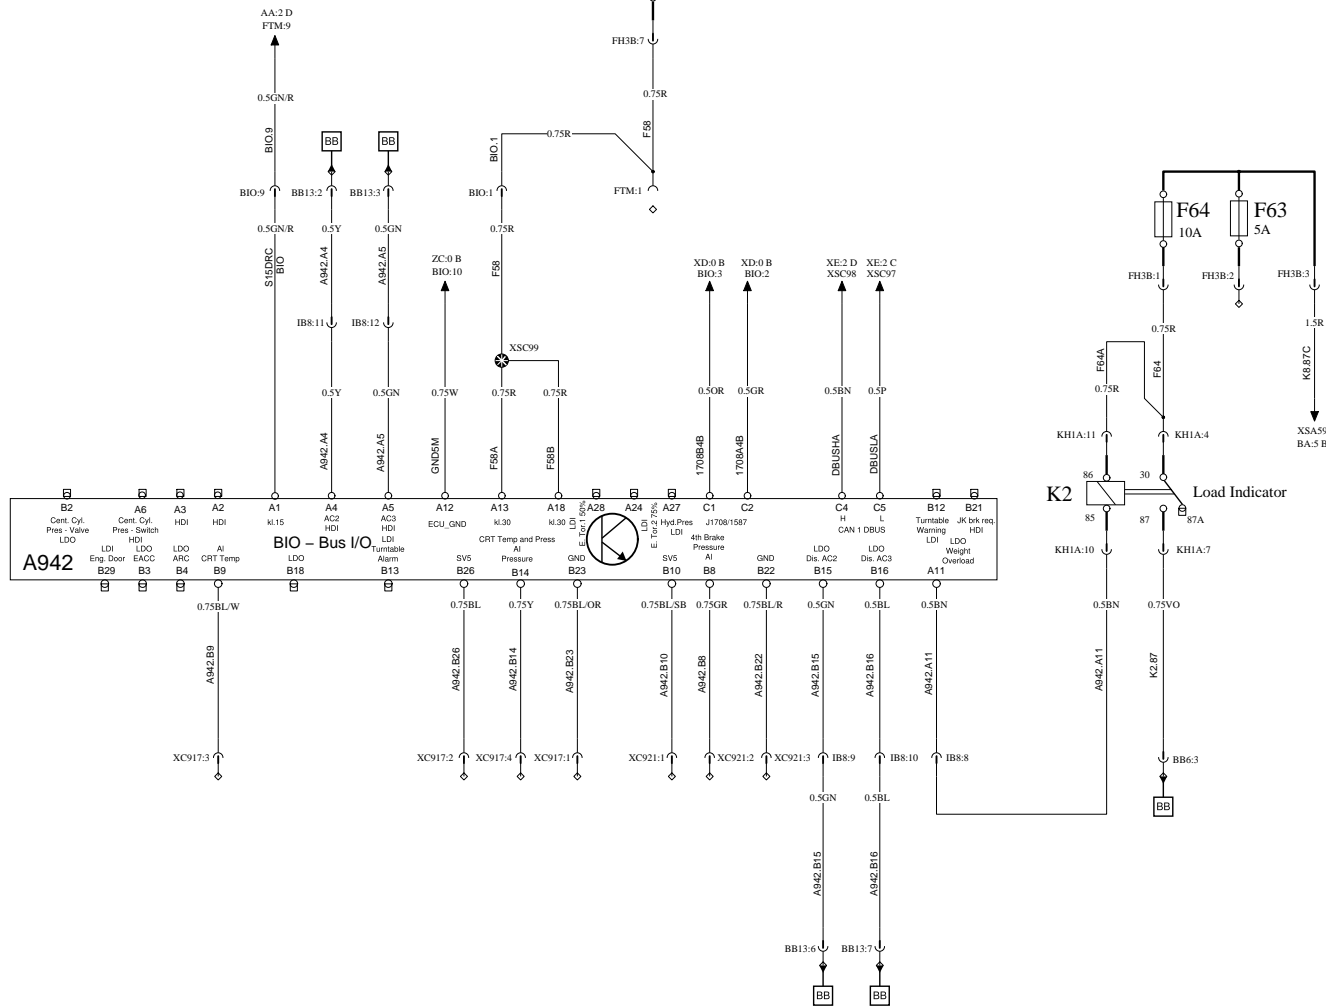

B2	A6	A3	A2	A1	A4	A5	A12	A13	A18	A28	A24	A27	C1	C2	C4	C5	B12	B21	
Cent. Cyl. Pres - Valve LDO	Cent. Cyl. Pres - Switch HDI	HDI	HDI	k1.15	AC2 HDI	AC3 HDI	ECU_GND	k1.30	k1.30	AC2 HDI	Hyd.Pres LDI	4th Brake Pressure AI	J1708/1587	LDI	LDO CAN 1 DBUS	LDO Dis. AC2	LDO Dis. AC3	Turntable Warning LDI	JK brk req HDI
B29	B3	B4	B9	B18	B13	B13	B26	B14	B23	B10	B8	B22	B15	B16	A11				