

Important Notice: This maintenance is recommended by Prévost Car to maintain your vehicle in good conditions. Note that no reimbursement is awarded for carrying out vehicles maintenance.


APPLICATION

Model	
XL-40, XL-45 & Entertainer	
Bus Shell	From 2PCE33491 <u>W1026546</u> up to 2PCE33492 <u>Y</u> 102 <u>7028</u> incl.
Model Year : 1998 - 2000	
XLII-40, XLII-45 & Entertainer	
Bus Shell	From 2PCW33498 <u>Y</u> 102 <u>6924</u> up to 2PCY33495 <u>Y</u> 102 <u>7330</u> incl.
Model Year : 2000 - 2000	
H3-45 VIP	
Bus Shell	From 2PCV33499 <u>X</u> 101 <u>2458</u> up to 2PCV33494 <u>Y</u> 101 <u>3972</u> incl.
Model Year : 1999 - 2000	

DESCRIPTION

This maintenance information is part of the normal suspension maintenance for your vehicle. Add the supplement to section 16 of your maintenance manual.

UPPER A-ARM BALL JOINT MAINTENANCE			
DESCRIPTION	INTERVAL	REMARK	
Make a visual inspection of the sealing boot • , check for perforations and grease leaks	Every 10 000 km	Replace boot if perforated	
Lubricate at fitting • (if present) until fresh grease appears at the relief valve •	Every 10 000 km	Molykote Longterm 2/78 grease (preferably)or lithium NLGL No.2 or No.1 (acceptable)	
Check for a play between ball \bullet and socket \bullet (take note that a play of $^{1}/_{32}$ " to $^{1}/_{16}$ " is normal and acceptable	Every 30 000 km	Replace ball joint if there is an excessive play	

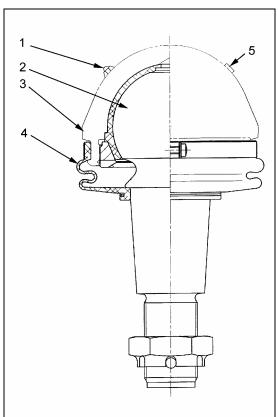

UPPER A-ARM BALL JOINT BALL JOINT

Waste disposal :

Discard according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)