PREVOST

Instruction Sheet

IS-11015B

70A POWER RELAY REPLACEMENT

Power relay p/n 561991 is superseded with improved power relay p/n 564218 and relay base p/n 564210

REVISION: B THIS VERSION SUPERSEDES PREVIOUS VERSION.

Revision section corrected.

MATERIAL

Kit #068380 includes the following parts:

| Part No. | Description | Qty |
|----------|------------------------|-----|
| 564210 | Base, Relay | 1 |
| 564218 | Relay, 24 VDC - 40 A | 1 |
| IS-11015 | Instruction Sheet | 1 |
| FI-11015 | Feuille d'instructions | 1 |

NOTE

Material can be obtained through regular channels.

PROCEDURE



DANGER

 
Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

- Disconnect the present 70A power relay base.
- Tag electrical wires and disconnect them from the relay base by inserting a small screwdriver in holes on top of the relay base.



FORMER RELAY BASE

- 3. Remove the screw and old relay. Retain screw for installation.
- 4. Connect electrical wires in the new relay base #564210. The terminals are compatible.



RELAY BASE PORTS

NOTE

Relay Base Terminals 8-12 AWG, use #562368 if needed 16-20 AWG, use #562540 if needed

- 5. Put the new relay base and install in existing mounting hole with the screw.
- 6. Connect the new relay #564218.



NEW RELAY AND BASE

PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)