

MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
A/C Clutch SO9	PSID #4	3, 4, 5, 6	A52.J1:20	18,2	Flsh Audibl Rly R16	PSID #37	3, 4, 5, 6	A45.J1:8	26,1
A/C Pres HiSd SE23	PSID #28	3, 4	A52.J1:13	18,2	Fog's Lights LH L95	PSID #134	3, 4, 6	A45.J1:4	26,3
A/C Pres LoSd SE24	PSID #29	3, 4	A52.J1:14	18,2	Fog's lights RH L96	PSID #136	3, 4, 6	A48.J1:8	26,3
Backup Light & Alm	PSID #167	3, 4, 6	A50.J1:20	26,3	Foot trap Mo4	PSID #14	3, 4, 6	A45.J1:2	18,1
Blinker SW1	PSID #139	3, 4	A43.J1:20	26,1	FR Clearance lights	PSID #137	3, 4, 6	A44.J1:8	26,1
Brk Lts Sens SE19	PSID #119	3, 4	A36.JB:13	12,1	Fr Flsh-Mkr LH L62	PSID #128	3, 4, 6	A45.J1:3	26,1
Center Flash LH L70	PSID #124	3, 4, 6	A50.J1:5	26,2	Fr Side Flsh RH L64	PSID #10	3, 4, 6	A48.J1:20	26,1
Center Flash RH L68	PSID #125	3, 4, 6	A50.J1:7	26,2	Fr Start SW83	PSID #58	3, 4	A36.JB:22	3,2
Center Mkr L67-L70	PSID #27	3, 4, 6	A50.J1:8	26,2	Front Flash RH L61	PSID #126	3, 4, 6	A48.J1:6	26,1
Cond Rly spd1 R10	PSID #41	3, 4, 5, 6	A54.J1:5	18,2	FrontMkr Lts LH L62	PSID #148	3, 4, 6	A45.J1:21	26,1
Cond Rly spd2 R9	PSID #42	3, 4, 5, 6	A54.J1:1	18,2	FrontMkr Lts RH L61	PSID #149	3, 4, 6	A48.J1:7	26,1
Condensor Door Sw7	PSID #7	3, 4	A49.J1:3		FrStart Enable SW58	PSID #56	3, 4	A53.J1:9	3,2
Cornering Dash Sw30	PSID #200	3, 4	A55.J1:7	26,3	Hazard Switch Sw4	PSID #138	3, 4	A36.JB:4	26,1
Cyclope Lt L81	PSID #116	3, 4, 6	A51.J1:7	26,2	Hd Light Call SW1	PSID #140	3, 4	A43.J1:3	26,1
Defr water Pmp Mo50	SID #41	3, 4	A47.J1:20	18,1	HdLamp Wsh Pmp Mo54	SID #48	3, 4, 6	A46.J1:21	31,1
Diff Lock sol So35	SID #36	3, 4, 6	A52.J1:4	23,1	Head Lights Pos1SW2	PSID #143	3, 4	A43.J1:4	26,1
Docking Dash Sw31	PSID #3	3, 4	A55.J1:8	26,3	Head Lt Sw Pos2 Sw2	PSID #11	3, 4	A45.J1:12	26,1
Driver Def Fan L198	PSID #180	3, 4, 5, 6	A47.J1:1	18,1	Hi Low Beam Sw1	PSID #6	3, 4	A43.J1:8	26,1
Driver heat Sol SO8	PSID #16	3, 4, 5, 6	A46.J1:6	18,1	High Beam LH L60	PSID #141	3, 4, 5, 6	A45.J1:6	26,1
Driver Light L16	PSID #104	3, 4, 5, 6	A47.J1:6	19,1	High Beam RH L59	PSID #145	3, 4, 5, 6	A48.J1:3	26,1
Driver Light SW24	PSID #105	3, 4	A41.J1:2	19,1	LH Corner Lts L97	PSID #120	3, 4, 5, 6	A45.J1:5	26,3
Driver Rfg Sol SO7	PSID #13	3, 4, 5, 6	A46.J1:5	18,1	LH Docking LightL93	PSID #122	3, 4, 5, 6	A51.J1:4	26,3
Driver Sensor SE21	PSID #12	3, 4, 5	A55.J1:1	18,1	Low Beam LH L60	PSID #142	3, 4, 6	A45.J1:7	26,1
Drv air Trap MO3	PSID #5	3, 4, 6	A44.J1:2	18,1	Low Beam RH L59	PSID #146	3, 4, 6	A48.J1:4	26,1
Drv Rec Cylind L203	PSID #30	3, 4, 5, 6	A47.J1:2	18,1	Low Wip Spd1 Mo22	PSID #184	3, 4, 5, 6	A47.J1:3	31,1
Elec Horn L185 L186	PSID #83	3, 4, 5, 6	A45.J1:20	9,1	Lower Stop Lamps	PSID #153	3, 4, 6	A50.J1:6	26,2
Elec.Horn SW61 SW62	PSID #82		4 A41.J1:3	9,1	Lower Washer pmp	PSID #181	4, 6	A46.J1:3	31,1
Emergency Relay R21	PSID #44	3, 4, 5, 6	A36.JA:24	3,2	Lower Washer SW1	PSID #188	3, 4	A46.J1:9	31,1
Eng Brk Active Sig	PSID #45	3, 4	A42.J1:18		Lower Wip Int SW1	PSID #183	3, 4	A42.J1:8	31,1
Eng Cmpt Bulb L173	PSID #106	3, 4, 5, 6	A52.J1:5	25,1	Lugg doors lock R30	SID #44	3, 4, 5, 6	A36.JA:7	24,2
Eng Cmpt Sw	PSID #107	3, 4	A52.J1:11	25,1	Lugg doors unl R32	SID #45	3, 4, 5, 6	A36.JA:6	24,2
Eng Ether SW23	PSID #50	3, 4	A42.J1:5	13,1	OutDoor Sens SE20	PSID #161	3, 4, 5	A54.J1:14	18,1
Eng Fan Dash SW22	PSID #55	3, 4	A36.JB:14		Park brak Sens Se18	PSID #162	3, 4	A36.JB:9	12,1
Eng Fan Spd1 Req	PSID #51	3, 4	A52.J1:9	13,1	Pass def fan Mo25	SID #38	3, 4, 5, 6	A47.J1:7	18,1
Eng Fan Spd2 Req	PSID #52	3, 4	A52.J1:10	13,1	Pass Heat Sol SO13	PSID #24	3, 4, 6	A54.J1:8	18,2
Eng. Ether Sol SO1	PSID #49	3, 4, 6	A52.J1:6	13,1	Pass Rfg Sol SO11	PSID #23	3, 4, 5, 6	A54.J1:3	18,2
Engine Fan Spd1 MO2	PSID #53	3, 4, 5, 6	A52.J1:1	13,1	Pass. Wtr pump MO12	PSID #17	4, 6	A54.J1:4	18,2
Engine Fan Spd2 MO2	PSID #54	3, 4, 5, 6	A52.J1:2	13,1	Rear CutOut Sw82	PSID #18	3, 4	A36.JB:21	3,2
Evap Motor Rly R12	PSID #77	3, 4, 5, 6	A54.J1:7	18,2	RearFlsh LH L71 L75	PSID #131	3, 4, 6	A51.J1:21	26,2
Evap Spd Ctrl MO9	PSID #78	4, 6	A54.J1:2	18,2	RearFlsh RH L73 L76	PSID #132	3, 4, 6	A51.J1:3	26,2
Fire Sensor	PSID #79	3, 4	A41.J1:10	9,1	Retarder signal	PSID #164	3, 4	A50.J1:12	15,1
Flash RH SW1	PSID #133	3, 4	A48.J1:12	26,1	Rev lights L91 L92	SID #43	3, 4, 5, 6	A50.J1:3	26,3
Flasher LH Sw1	PSID #130	3, 4	A45.J1:9	26,1	RH Corner Light L98	PSID #121	3, 4, 5, 6	A48.J1:5	26,3

MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page					
RH Docking LightL94	PSID #123	3, 4, 5, 6	A51.J1:5	26,3					
RJB fan Mo53	SID #37	3, 4, 6	A46.J1:7	11,1					
Rr Clearance lights	PSID #151	3, 4, 6	A50.J1:4	26,2					
Rr Start SW59	PSID #59	3, 4	A53.J1:11	3,2					
RrStart Enable SW58	PSID #57	3, 4	A53.J1:10	3,2					
Ser Brake Trans A1	SID #49	3, 4, 6	A51.J1:1	15,1					
SldO 5v supply	SID #23	3, 4	A56.J1:15	20,1					
SldO Close Sw	SID #18	3, 4	A56.J1:10	20,1					
SldO Limit In Se	SID #19	3, 4	A56.J1:11	20,1					
SldO Limit Out Se	SID #20	3, 4	A56.J1:14	20,1					
SldO Mot Neg Rly	SID #15	3, 4, 5, 6	A56.J1:7	20,1					
SldO Mot Pos Rly	SID #16	3, 4, 5, 6	A56.J1:20	20,1					
SldO Mot SpeedA Ctr	SID #9	3, 6	A56.J1:1	20,1					
SldO Mot SpeedB Ctr	SID #10	3, 6	A56.J1:2	20,1					
SldO Open Sw	SID #17	3, 4	A56.J1:9	20,1					
SldO Park Br Signal	SID #8	3, 4	A56.J1:12	20,1					
SldO Remote Led	SID #11	3, 4, 5, 6	A56.J1:3	20,1					
SldO Seal Def Sol	SID #13	3, 4, 5, 6	A56.J1:5	20,1					
SldO Seal Inf Sol	SID #12	3, 4, 5, 6	A56.J1:4	20,1					
SldO Secu Pin Sol	SID #21	3, 4, 5, 6	A56.J1:21	20,1					
SldO Vacc Gen Sol	SID #14	3, 4, 5, 6	A56.J1:6	20,1					
SldO Vacuum Sensor	SID #5	3, 4	A56.J1:13	20,1					
Starter Relay SO2	PSID #60	4, 6	A53.J1:6	3,2					
Starter Relay SO2	PSID #60	3, 6	A53.J1:1	3,2					
Stop Eng Signal In	PSID #62	3	A42.J1:9						
SunVisor RlyR41-R45	SID #54	3, 4, 5, 6	A55.J1:13	32,1					
Tail Lights	PSID #152	3, 4, 6	A51.J1:8	26,2					
Trans Neutral Sens	PSID #168	3, 4	A50.J1:11	15,1					
Under Floor lights	PSID #112	4, 6	A46.J1:20	25,1					
Unloader LH L200	PSID #31	3, 4, 6	A52.J1:8	18,2					
Unloader RH L199	PSID #32	3, 4, 6	A52.J1:21	18,2					
Upper Brk Lamp	PSID #43	3, 4, 6	A51.J1:6	26,2					
Upper Def Fan MO5	PSID #33	4, 6	A46.J1:8	18,1					