

RELAYS LIST

No	Location	Part #	Function	Page				
R1	RJB	562364	MasterRelay	3.1				
R3	RJB	563348	12vIgn&AccRelay	3.1				
R10	Evap.Cmpt.	563348	CondensorPowerRelay	18.2				
R11	RJBVECR	563332	Ignition_Relay	5.1				
R12	Evap.Cmpt.	563348	EvaporatorRelay	18.2				
R17	RJB	561991	12vRrWUpRelay	3.3				
R18	FJB	561991	24vFrWUpRelay	3.3				
R19	FJB	561991	12vFrWUpRelay	3.3				
R21	RJB	563269	EmergencyCutoutRelay	3.2				
R22	FJB	563269	VECU_Relay	3.3				
R23	RHConsole	563332	LowerWiperRelay	34.1				
R24	FJB	563332	UpperWiperRelay	34.1				
R25	RJBVECR	563332	Ecmlgn	5.1				
R29	RJB	563348	Preheater_Volvo	14.2				
R30	RJB	563332	LuggagesDoorsLocksRelay	33.1				
R31	RJB	563332	LuggagesDoorsLocksRelay	33.1				
R32	RJB	563332	LuggagesDoorsLocksRelay	33.1				
R33	RJB	563332	LuggagesDoorsLocksRelay	33.1				
R34	RJB	561991	12v_Rr_Engine_Ecu	3.3				
R36	Right_Hand_Console	563332	Entrance_Door	29.1				
R37	Right_Hand_Console	563332	Entrance_Door	29.1				
R41	FJB	563332	SunVisor_Relay	38.1				
R42	FJB	563332	SunVisor_Relay	38.1				
R43	FJB	563332	SunVisor_Relay	38.1				
R_Starter	RJB	564095	Starter	3.2				
RSo1	LuggagesCmpt	563445	RlyCloseSlide-Out1	20.1				
RSo2	LuggagesCmpt	563445	RlyOpenSlide-Out1	20.1				
RSo3	LuggagesCmpt	563445	RlyCloseSlide-Out2	20.1				
RSo4	LuggagesCmpt	563445	RlyOpenSlide-Out2	20.1				
RSo5	Luggagescmpt	563445	RlyCloseSlide-Out3	20.2				
RSo6	Luggagescmpt	563445	RlyOpenSlide-Out3	20.2				
RSo7	Luggagescmpt	563445	RlyOpenSlide-Out	20.2				
RSo8	Luggagescmpt	563445	RlyOpenSlide-Out	20.2				