

# FUSES CODE

No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION	No.	PAGE	AMP.	#PREV.	LOCATION	FUNCTION
F 1	6.1	10A	562407	RR. JCT. BOX	WORLD TRANSMISSION 12V BATTERY	F 72	23.1	10A	562407	GALLEY PANEL	GALLEY REFRIGERATOR COMPRESSOR
F 2	6.1	10A	562407	RR. JCT. BOX	WORLD TRANS.& EATON TRANS.12V IGNITION	F 73	23.1	35A	562608	GALLEY PANEL	GALLEY COFFEMAKER
F 3	7.2	20A	562605	FR. JCT. BOX	ELECTRICAL HORNS	F 74	23.1	7.5	560598	BAT. CPT.	GALLEY REFRIGERATOR
F 4	7.2	5A	562259	FR. JCT. BOX	FIRE ALARM	F 75					
F 5						F 76	20.8	3A	562599	SOUND SYS JC	DVD KARAOKE
F 6	5.1	5A	562602	FR. JCT. BOX	CRUISE DECEL SW.	F 77					
F 7	8.1	5A	562602	FR. JCT. BOX	PARKING BRAKE PRESSURE SW.	F 81	6.3	10A	562407	RR. JCT. BOX	Z F TRANSM.
F 7S	4.2	3A	560893	STARTER	STARTER « ON » TTLT	F 82	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 8	9.2	10A	562407	FR. JCT. BOX	CORNERING LTS	F 83	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 9	9.3	15A	562604	RR. JCT. BOX	DOCKING LTS	F 84	6.3	10A	562407	RR. JCT. BOX	ZF TRANSM.
F 10	9.3	15A	562604	FR. JCT. BOX	FOG LTS						
F 11	11.1	5A	562259	FR. JCT. BOX	FRONT SERVICE CPT LTS						
F 12	11.2	10A	562407	RR. JCT. BOX	aisle LTS	F ZF1	15.1	3A	560893	FR.JCT.BOX	STEERING CONTROL
F 13	11.2	7.5A	562602	RR. JCT. BOX	EMERGENCY EXIT LTS						
F 14	11.3	15A	562602	FR. JCT. BOX	DRIVER'S LTS						
F 15	11.3	15A	562604	RR. JCT. BOX	READING LTS RH						
F 16	11.3	15A	562604	RR. JCT. BOX	READING LTS LH						
F 17	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING R.H.						
F 18	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT RH						
F 19	11.4	10A	562407	RR. JCT. BOX	24V FLUORESCENT LH						
F 20	11.3	5A	562599	FR. JCT. BOX	GENERAL & READING LTS. SW.						
F 21	12.1	10A	560061	RR. JCT. BOX	PRIME PUMP						
F 22	14.1	10A	562407	FR. JCT. BOX	POWER 12V OUTLET						
F 23	14.1	15A	562604	FR. JCT. BOX	DRIVER'S WINDOW LIFTER						
F 24	14.1	15A	562604	FR. JCT. BOX	CIGAR LIGHTER						
F 25	14.1	3A	562599	FR. JCT. BOX	SUN VISOR						
F 26	26.1	7.5A	562259	FR. JCT. BOX	WATER HTR WEBASTO TIMER						
F 27	17.1	5A	562259	RR. JCT. BOX	GALLEY LAMP & LAVATORY NIGHT LTS.						
F 28	17.1	10A	562407	RR. JCT. BOX	LAVATORY PUMP						
F 29	17.1	7.5A	562602	RR. JCT. BOX	LAVATORY LTS						
F 31	17.1	5A	562259	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRONIC						
F 31	17.1	7.5A	562602	FR. JCT. BOX	FRONT DESTINATION SIGN ELECTRIC						
F 32	11.3	5A	562259	FR. JCT. BOX	PASSENGER NO SMOKING LTS						
F 33	18.1	5A	562259	FR. JCT. BOX	KNEELING SYSTEM						
F 34	19.1	3A	562599	FR. JCT. BOX	LUGGAGE DOOR LOCK						
F 39	22.1	20A	562605	FR. JCT. BOX	UPPER WINDSHIELD FAN AND PUMP DEFROST						
F 40											
F 41											
F 42	20.5	3A	562599	FR. JCT. BOX	WIRELESS MIC CHARGER						
F 43	1.2	3A	562599	FR. JCT. BOX	12V SIGNAL TO BATT MONITOR						
F 44	1.2	3A	562599	FR. JCT. BOX	24V SIGNAL TO BATT MONITOR						
F 46											
F 47	24.2,24.3	7.5A	562407	FR. JCT. BOX	MIRROR ADJUST & HEATED 12V RAMCO						
F 48	25.2	10A	562407	RR. JCT. BOX	WHEEL CHAIR LIFT POWER CONTROL						
F 49	26.1	15A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO						
F 50	26.1	20A	562605	RR. JCT. BOX	PRE-HEAT WATER HEATER WEBASTO						
F 51	11.2	7.5A	562602	RR. JCT. BOX	HAT RACK CPT LTS						
F 57	17.1	5A	562259	RR. JCT. BOX	LAVATORY FLUORESCENT						
F 58	11.3	10A	562407	RR. JCT. BOX	INDIRECT LIGHTING L.H.						
F 59											
F 60	17.1	10A	562407	RR. JCT. BOX	LAVATORY FAN						
F 61	27.1	1A	560893	FR. JCT. BOX	INTERCOM						
F 62	2.1	3A	562599	RR. JCT. BOX	PRO-LINK & FIRE ALARM						
F 63	27.1	3A	560893	MON. CLARION	BACK-UP MONITOR CLARION						
F 70	23.1	7.5A	562602	GALLEY PANEL	GALLEY RH CONTAINER						
F 71	23.1	7.5A	562602	GALLEY PANEL	GALLEY LH CONTAINER						

# FUSES CODE

No. PAGE AMP. #PREV. LOCATION FUNCTION

No. PAGE AMP. #PREV. LOCATION FUNCTION