

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
IPJ1	CLUSTER - BULB TEST POS	SP62	SPARE WIRE	OP1	A/C COMPRESSOR GRD	12C	RR JCT BOX 12V DISC SW
IPJ2	CLUSTER - BULB TEST NEG.	SP63	SPARE WIRE	0T	SPEED SW. CONNECTOR	12D	FR JCT PANEL 12V HOT WIRE
IPJ3	CLUSTER - SV SIGNAL	SP69	SPARE WIRE	0T1	DASH ACC.	12DD	FR JCT PANEL 12V HOT WIRE
IPJ4	CLUSTER - RETURN TO ZERO	SP70	SPARE WIRE	0T2	CLUSTER ACC.	12DDR	RR JCT BOX 12V HOT WIRE DDR CON
IPJ5	CLUSTER - FUEL LEVEL GAUGE	SP71	SPARE WIRE	0T2	WINDOW AWNING	12DT	T.T. LT MODULE
IPJ6	CLUSTER - BULB TEST POS.	SP72	SPARE WIRE	0T3	ALTERNATOR MODULE	12E	RR JCT BOX 12V DISC SW
IPJ7	CLUSTER - BULB TEST NEG.	SP74	SPARE WIRE	0T4	12V OUTLET - CTR MODULE	12F	FR JCT PANEL 12V DISC SW
IPJ8	CLUSTER - MASTER WARNING	SP83	SPARE WIRE	0T5	FS-HVAC DASH MODULE. GND	12G	FR JCT PANEL 12V DISC SW
LX5	CLUSTER - COMPUTER MODE	SP84	SPARE WIRE	0T6	FS-DDR GROUND	12H	12V DASH ACCESS.
LX6	CLUSTER - COMPUTER DOWN	SP114	SPARE WIRE	0W	FJB - TRANSM. RLY GRD	12I	RR JCT BOX 12V IGNITION
LX7	CLUSTER - COMPUTER SET	SP115	SPARE WIRE	0W	TRANSM ACC. - FR.SERV. CPT	12I	FR JCT PANEL 12V IGNITION
LX16	CLUSTER - COMPUTER UP	SP116	SPARE WIRE	0Y1	ASB SYSTEM-GRD	12IA	FR JCT PANEL 12V IGNITION
LX21	CLUSTER - COMPUTER COM.	SP117	SPARE WIRE	0Y2	ASB SYSTEM-GRD	12IA	RR JCT PANEL 12V IGNITION
RT	T.T.L.T. MODULE - TEST SW.	TW1	SPR. W. TWISTER 50T/M WITH TW2	0Y3	ASB SYSTEM-GRD	12IE	ABS-FR JCT PANEL 12V IGN.
SP1	SPARE WIRE	TW2	SPR. W. TWISTER 50T/M WITH TW1	0Y4	ASB SYSTEM-GRD	12IF	FR JCT PANEL 12V IGNITION
SP2	SPARE WIRE	0	A/C EVAP.CPT - CPT GRD	0Y5	ASB SYSTEM-GRD	12J	FR JCT PANEL 12V DISC.SW.
SP3	SPARE WIRE	0	JUMPER - CLUTCH SIGN.	0Y6	ASB SYSTEM-GRD	12JA	FR JCT PANEL 12V DISC.SW.
SP4	SPARE WIRE	0	RJB - INSIDE GRD	00A	BATTERY GRD-DASH ACC.	12K	FR JCT PANEL 12V DISC.SW.
SP5	SPARE WIRE	0A	FR. ROOF ACC. GRD	2A	A/C & HEAT SYSTEM	12LX	12V HOTWIRE CLUST.& MOD A/C
SP6	SPARE WIRE	0A	W0,W5 EVAP. MOTOR FAN GRD	2B	A/C & HEAT SYSTEM	12LX	CLUSTER 12V HOT WIRE
SP7	SPARE WIRE	0AW	AWNING WINDOWS	2D	A/C & HEAT SYSTEM	12M	ABS-FR JCT PANEL 12V DISC.SW.
SP8	SPARE WIRE	0B	A/C - CONDENSER GRD	2E	A/C & HEAT SYSTEM	12P	12V POWER OUTLET
SP9	SPARE WIRE	0B	ENG. CPT ACC. GRD	2F	A/C & HEAT SYSTEM - EVAP. FAN	12T	RR JCT BOX 12V DISC SW
SP10	SPARE WIRE	0BE	OV BATTERY MONITOR	2H	A/C & HEAT SYS-LO-PRESS SW.	12VD	12V HOT WIRE
SP11	SPARE WIRE	0C	R.J.B. - GRB	2L	A/C & HEAT SYS-HI-PRESS SW.	12VI	RR JCT PANEL 12V IGNITION
SP12	SPARE WIRE	0C	F.R. SERV. CPT-ACCESSOIRIES	3A	A/C & HEAT SYSTEM-EVAPORATOR	12W	12V HOT WIRE DDEC III FEED
SP13	SPARE WIRE	0C1	ENTRANCE DOOR KEYLESS	5N0	SPEED SIGNAL HIGHER 5MPH	15	EXT. LTS-MULTI FUNC LEVEL
SP14	SPARE WIRE	0C4	F.J.B. GRD	5NC	SPEED SIGNAL LOWER 5MPH	15	WIPER & WASHER SYSTEM
SP15	SPARE WIRE	0CJ	CRUISE SW. JUMPER	6	EXTERIOR LTS-DOCKING	16	SPEEDOMETER (+)
SP16	SPARE WIRE	0D	A/C JCT BOX - COND FAN GRD	6A	EXTERIOR LTS-CORNERING	16T	SPEED SW SIGNAL IN (+)
SP17	SPARE WIRE	0E	WE EVAP. MOTOR FAN GRD	6B1	EXTERIOR LTS-CORNERING RH	17	EXTERIOR LTS-FLASHER UNIT
SP18	SPARE WIRE	0F	SILENT 1000	6C1	EXTERIOR LTS-CORNERING RH	17A	EXTERIOR LTS-FLASHER UNIT
SP19	SPARE WIRE	0G	ABS GRD CX1	6D	EXTERIOR LTS-DOCKING	17C	JUMPER LTS SW. - HAZARD
SP21	SPARE WIRE	0H	ENG. CPT. - ACC. GRD	9	INTERIOR LTS-ENGINE CPT	18	UPPER FAN DEFROST
SP23	SPARE WIRE	0L	ENG.CPT -CLEAR.LTS RR ROOF	9	INTERIOR LTS-RR JCT BOX	19	UPPER FAN DEFROST
SP24	SPARE WIRE	0L	R.J.B. - GRD	9F	INTERIOR LTS - FR-SERV. CPT	20	SPEEDOMETER SIGNAL (-)
SP25	SPARE WIRE	0L	FR - SIDE MARK. & FLASH GRD	10	A/C & HEAT SYSTEM -LO PRES.	20T	SPEED SW SIGNAL IN (-)
SP30	SPARE WIRE	0L1	ENG.CPT-SIDE MARK. & FL. GRD	10	INTERIOR LTS-LUGGAGE CPT	21	EXTERIOR LTS-DIRECT. LH
SP33	SPARE WIRE	0L2	HEAD LTS	10	INTERIOR LTS-FR SERV. CPT	21A	EXTERIOR LTS-LH
SP38	SPARE WIRE	0L3	FR.SERV.DR. & ENT.DOOR GRD ACC.	10A	INTERIOR LTS-LUGGAGE CPT	21A	EXTERIOR LTS-CORNERING-LH
SP40	SPARE WIRE	0L4	FOG LTS RESISTOR GRD	10B	INTERIOR LTS-LUGGAGE CPT	21B	EXTERIOR LTS-DIRECT. LH
SP41	SPARE WIRE	0L5	LH CONSOL - ACC. GRD	10C	INTERIOR LTS-LUGGAGE CPT	21BB	EXTERIOR LTS-DIRECT. LH
SP42	SPARE WIRE	0LV	WINDSHIELD WASHER LEVEL	10D	INTERIOR LTS-LUGGAGE CPT	21H	EXTERIOR LTS-HAZARD SIGNAL
SP43	SPARE WIRE	0M	WIPER 2 MIRROR MOTOR	10E	INTERIOR LTS-LUGGAGE CPT	21M	AUX. LTS - DIRECTIONAL LH
SP45	SPARE WIRE	0M3	DEFROST GRD	10R	CENTER DOOR T.T.L.T.	21P	CORN. LTS - DIRECT. SIGN. LH
SP48	SPARE WIRE	0M4	HORN & DR'S WINDOW LIFTER	12A	FR JCT PANEL 12V DISC SW	23	EXTERIOR LTS-DIRECT. RH
SP56	SPARE WIRE	0M5	SUN VISOR MOTOR	12B	FR JCT PANEL 12V DISC SW	23A	EXTERIOR LTS-DIRECT. RH
SP57	SPARE WIRE	0M6	UPPER FAN DEFROST	12BAT	12V HOT-WIRE ACC - JCT BLK	23A	EXTERIOR LTS - CORNER. LTS
SP60	SPARE WIRE	0M7	DR'S WIND.LIFT. & RH MIR. SW	12BE	12V BATTERY MONITOR	23BB	EXTERIOR LTS - DIRECT. RH
SP61	SPARE WIRE	0M7A	LH MIRROR SW.	12C	FR JCT PANEL 12V DISC SW	23C	EXTERIOR LTS-CORNERING RH

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
23H	EXTERIOR LTS-HAZARD SIGNAL	39B	INTERIOR LTS-DRIVER'S LTS	59A	ENGINE BRAKE SYSTEM	90	CONVERTER - CABLE SPARG
23M	AUX LTS - DIRECTIONAL RH	39C	INTERIOR LTS-DRIVER'S LTS	61	EXTERIOR LTS-24V FEED SW	90A	ENG. CTR-MAST KEY SW FEED
23P	CORN. LTS - DIRECT SIGN RH	39D	INTERIOR LTS - FRIVER' LTS	61A	EXTERIOR LTS-HEAD SIGNAL	90B	A/C & H. SYS.-COND FAN MOT
24	FR JCT PANEL 24V DISC. SW.	39K	DR'S LTS - KEYLESS SIGN.	63	EXTERIOR LTS-CLEAR. FEED	90B	ENG. CTR-MAST KEY SW FEED
24A	RR JCT PANEL 24V DISC. SW	41	A/C SYS.-COND FAN MOTOR	63B	EXTERIOR LTS-CLEARANCE	91	PARKING BRAKE SW SIGNAL
24A	FR JCT PANEL 24V DISC. SW	41A	A/C SYS.-COND FAN MOTOR	63C	EXT. LTS-MARKER SIGNAL	91A	DDEC III-FAST IDLE SIGNAL
24AW	AWNING WINDOWS	41B	A/C SYS.-COND FAN MOTOR	63F	EXT. LTS-MARKER BLINKER	91C	PARKING BRAKE - T.T.LT
24BE	BATTERY MONITOR	42A	A/C SYS.-COND FAN MOTOR	64	DRIVER'S FAN SPEED CTR	91J	FAST IDLE - JUMPER SW.
24C	FR JCT PANEL 24V DISC SW	43	A/C & HEAT SYS. - FAN SPEED	65	FOOT DAMPER MOTOR	92	BATT. EQUAL.-CHECK BALANCE
24D	FR JCT BOX 24V HOT WIRE	44	EXTERIOR LTS-FOG	65A	FOOT DAMPER MOTOR	93	BATT. EQUALIZ.-CHECK LO/HI
24F	RR JCT PANEL 24V DISC SW	44A	EXTERIOR LTS-FOG	65D	DRIVER'S REC. DAMPER	95A	ENG. BRAKE & RETARDER SYS.
24G	RR JCT PANEL 24V DISC SW	44B	EXTERIOR LTS-FOG	66	A/C PASSENGER - ON/OFF	95B	ENG. BRAKE & RETARDER SYS.
24I	FR JCT PANEL 24V IGNITION	44C	EXT. LTS-FOG,HVAC & HAZ. SW	67A	A/C & HEAT SYSTEM	97	TACHOMETER SIGN.-NOT USED
24I	RR JCT PANEL 24V IGNITION	44D	EXTERIOR LTS - FOG	68	DASH & DEFROST DAMPER MOT	98A	TRAIL PARK BRAKE PRESS SW
24IA	FR JCT PANEL 24V IGNITION	44E	EXTERNAL LTS - FOG	68A	DASH & DEFROST DAMPER MOT	98B	TRAIL BRAKE PRESS SW
24IB	FR JCT PANEL 24V IGNITION	45A	A/C & HEAT SYSTEM FULL AIR	72	SUN VISOR - FEED	101	WORLD TR.- LO SIGN SOL.LO
24IF	FR JCT PANEL 24V IGNITION	45B	A/C & HEAT SYS.-WATER PUMP	72A	SUN VISOR RH	102	WORLD TRANSM.-SOL. SUPPLY
24P	FR JCT PANEL 24V DISC SW	45C	A/C & HEAT SYS.-WATER VALV	72B	SUN VISOR RH	103	WORLD TRANSM.- B.SOL.LO
24R	24V RR JCT BLK TO STARTER	45D	A/C & HEAT SYS.-WATER VALV	72C	SUN VISOR LH	104	LEVEL-LOW SYS- DR'S SOL.
24T	RR JCT PANEL 24V DISC SW	45E	A/C & HEAT SYS.-WATER PUMP	72D	SUN VISOR LH	104	WORLD TR. -SOL. FORWARD
24VD	24V HOT WIRE FEED	45G	A/C & HEAT SYS.-DR'S HTR	76	FUEL TANK GAUGE	105W	WORLD TR.-SOL.-RET.OIL TT.LT
25A	TT.LT. MODULE - LED	45H	A/C & HEAT SYS.- EVAP.FAN	76C	LOW FUEL T.T.LT	107	WORLD TR.-LOCKUP SOL. HI
25A1	BOSCH ALTERNATOR - WE ONLY	45J	A/C & HEAT SYS.-WATER PUMP	76L	LOW FUEL T.T.LT	108	WORLD TR.-LOCKUP SOL.
25A2	BOSCH ALTERNATOR - WE ONLY	46	EXTERIOR LTS-MARKER	77A	A/C & HEAT SYS. - THERMOST.	110	WORLD TR.-LOCKUP SOL. LO
25B	EXT. LTS-DAYTIME RUN LTS	46A	EXTERIOR LTS-AUX LTS RESIS.	77B	A/C SYS. - LIQ. SOL. VALVE	112	WORLD TR.-SPARE OUTPUT (+)
25D	GENERATOR SKTN. ON - HVAC	46C	EXTERIOR LTS-MARKER	77C	A/C & HEAT SYS.-COMPRESSOR	112	WORLD TR.-SPARE OUTPUT (+)
25L	GENERATOR SIGNAL TO RLY R88	46D	EXTERIOR LTS-AUX LTS RESIS.	77H	A/C SYS.-LIQ. SOL. VALVE	113W	WORLD TR.-REVERSE WARNING
26	DR'S & ENT. WINDOW LIFTER	48A	ENTRANCE DOOR AIR LOCK	77H	A/C & HEAT SYS.-THEMOSTAT	114	WORLD TR.-SPARE OUTPUT (-)
26A	CIGAR LIGHT. & POW.OUTLET LH	48B	ENTRANCE DOOR AIR LOCK	81	EXTERIOR LTS-STOP SW	114	INTERIOR LT-DASH LT RHEOS.
26B	DRIVER'S WINDOW LIFTER	48C	ENTRANCE DOOR AIR LOCK	82	EXTERIOR LTS-STOP SIGNAL	114A	INTERIOR LT-DASH LT RHEOS.
26C	DRIVER'S WINDOW LIFTER	52	ALARM & SIGNAL-ELEC.HORN	82A	EXTERIOR LTS-STOP SIGNAL	114B	INT. LT-DASH LT RHEOST.FEED
26D	ENT. DOOR WINDOW LIFTER	52A	ALARM & SIGNAL-ELEC.HORN	82B	EXTERIOR LTS-STOP LTS	115	DDEC III-COOLANT LEVEL
26E	ENT. DOOR WINDOW LIFTER	53	ALARM & SIGNAL-ELEC.HORN	82L	EXT. LTS-STOP LTS & CYCLOP	115W	WORLD TR.-DO NOT SHIFT SIGN
26F	ENT. DOOR WINDOW LIFTER	53B	WIPER & WASHER SYSTEM	82R	EXTERIOR LTS-STOP LTS	116	WORLD TR.-LO SIGNAL SOL. HI
28H	T.T.LT MODULE - HI A/C PRES.	53C	WIPER & WASHER SYSTEM	83	ENG. CTR-MAST. KEY SW ACC.	116B	A/C & HEAT SYSTEM-DR'S HTR
28T	T.T.LT MODULE - LO A/C PRES.	53E	WIPER & WASHER SYSTEM	84	ENG. CTR-MAST KEY SW START	116C	A/C SYS.-TRIG. DEFROST
29	A/C & HEAT SYS.-DR'S HTR	53J	WIPER & WASHER SYSTEM	84A	ENG. CTR-MAST KEY SW START	119	WORLD TRANSM-ENGINE BRAKE
29H	HVAC DASH MODILE	53K	KEYLESS SYSTEM	84J	ENG. CTR-MAST KEY SW START	120	WORLD TRANSM-SOL. CI
29X	A/C & HEAT SYS.-DR'S HTR	55	EXTERIOR LTS-HI BEAM	85	24V IGNITION SIGNAL	121	WORLD TRANSM-SOL.GRD 2
31B	WIPER & WASHER SYSTEM	57	EXTERIOR LTS-HI BEAM	85A	24V IGN DASH INSTRUMENT.	123	WORLD TR.-NEUTRAL START
31C	WIPER & WASHER SYSTEM	57A	EXTERIOR LTS-HI BEAM	85C	24V IGNITION - FEED	123A	ALARM & SIGNAL-FIRE DETECT.
32	EXTERIOR LTS-BACK-UP	57B	A/C & HEAT SYS.-WATER PUMP	85W	WORLD TRANSM. - 24V IGN.	123B	ALARM & SIGNAL-FIRE DETECT.
32B	EXTERIOR LTS-BACK-UP	57C	A/C & HEAT SYS.-WATER PUMP	85X	ABS-12V IGN	124	WORLD TR.-THROTTLE (HI)
32F	BACK-UP CANCEL SW.	57E	A/C & HEAT SYS.-WATER VALV	85Y	ABS-12V IGN	124A	WORLD TRANSM-SENSOR PWR
32G	BACK-UP ALARM	57F	A/C & HEATSYS-PASS REC DAMPER	85Z	ABS-12V IGN	125	WORLD TR-RETARDER INDICAT.
32J	BACK-UP SW. - JUMPER	58	EXTERIOR LTS-SEAL BEAM	86	ENG. CTR-STARTER SOL SIGN	125W	WORLD TR-RETARDER INDICAT.
35B	DRIVER'S LTS - KEYLESS SIGN	58A	EXTERIOR LTS-SEAL BEAM	86A	ENG. CTR-STARTER SOL SIGN	126	WORLD TR.-LUBE PRESS SW.
36	ENGINE BRAKE SYSTEM	58B	EXTERIOR LTS-SEAL BEAM	87B	ENGINE CTR-24V IGNITION	126	24VIGN-LEV.LOW & WORLD TR.
36A	ENGINE BRAKE SYSTEM & RET.	58RH	EXTERIOR LTS-LO BEAM	88	ENGINE CTR-RR START SIGNAL	126F	LEVEL LOW SYSTEM
39	INTERIOR LTS-DRIVER'S LTS	58LH	EXTERIOR LTS-LO BEAM	89	ENGINE CTR-RR START SIGNAL	126H	SPEED SIGN 5NC - NOT USED

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
126W	WORLD TRANSM-NOT USED	143A	ABS SYSTEM-SENSOR	170M	LUGG DOOR LOCK-SIGN T.T.LT	280	KEYLESS SYSTEM-KEYBOARD
127	24HW DR'S LT PREHEAT & HVAC	143A	WORLD TRANS-BATTERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT	283	KEYLESS SYSTEM-ANTI-THEFT
128	WORLD TRANSM-SOL. C2	143W	WORLD TRANSM-BATTERY GRD	170P	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN
129	WORLD TRANSM-SOL. C5	143X	WORLD TRANSM-BATTERY GRD	170R	LUGG DOOR LOCK-ENTR. DOOR	284A	KEYLESS SYSTEM
130	WORLD TRANSM-SOL. GRD 3	144	ABS SYSTEM-SENSOR	170S	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR
130	EVAP. FAN - POWER CABLE	144A	ABS SYSTEM-SENSOR	170T	LUGG DOOR LOCK-SIGN T.T.LT	285B	KEYLESS SYSTEM
130A	EVAP. FAN - POWER CABLE	145	ABS SYSTEM-VALVE	170V	LUGG DOOR LOCK-SIGN T.T.LT	285C	KEYLESS SYSTEM
131	WORLD TRANSM-SOL.C4	146	ABS SYSTEM-VALVE	170W	LUGGAGE DOOR LOCK-FEED	286	LUGG DOOR LOCK-ENT. DOOR
132	WORLD TRANSM-ENGINE BRAKE	146A	WORLD TRANSM-12V IGNITION	170X	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR
132A	LEVEL LOW SYSTEM	146AA	WORLD TRANSM-DIAGN.CONN.	170Y	LUGGAGE DOOR LOCK-FEED	290	FAN CLUTCH RADIATOR-FEED
132B	LEVEL LOW SYSTEM	147	WORLD TRANSM-OIL TEMP	170Z	LUGGAGE DOOR LOCK	290A	FAN CLUTCH RADIATOR-FEED
132C	LEVEL LOW SYSTEM	147	ABS SYSTEM-VALVE	171	WORLD TRANSM-SHIFTER	291	FAN CLUTCH RADIATOR SPD 1
132D	LEVEL LOW SYSTEM	147A	ETHER COLD START	172	WORLD TRANSM-SHIFTER	292	FAN CLUTCH RADIATOR SPD 2
132E	LEVEL LOW SYSTEM	147A	DAYTIME LST-ALT.SIGNAL	173	WORLD TRANSM-SHIFTER	292A	FAN CLUTCH RADIATOR SPD 2
132F	LEVEL LOW SYSTEM	147C	ETHER COLD START	174	WORLD TRANSM-SHIFTER	294	KEYLESS SYSTEM-ANTI-THEFT
135	WORLD TRANSM-RET.TEMP.	148	ABS SYSTEM-VALVE	175A	WORLD TRANSM-SHIFTER	295	KEYLESS SYS-LED INDICATOR
135A	WORLD TR.-RES MODULE RET.	148	WORLD TR.-OUTPUT SPEED LO	176	WORLD TRANSM-SHIFTER	417	DDEC-LIMIT SPEED GOVERNOR
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	180	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	180	OUTSIDE TEMP. DISPLAY	439	DDEC-12V IGNITION
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	180A	OUTSIDE TEMP. DISPLAY	451	DDEC-A/C FAN CLUTCH
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180A	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180B	OUTSIDE TEMP. DISPLAY	509	DDEC-STOP ENGINE LIGHT
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180C	OUTSIDE TEMP. DISPLAY	510	DDEC-FAST IDLE SIGNAL
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	181	FROZEN POINT T.T.LT	524	DDEC-ENGINE BRAKEDISABLE
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	181A	THERMOMETER INSIDE SENSOR	525	DDEC-FAST IDLE SIGNAL
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	181B	THERMOMETER INSIDE SENSOR	528	DDEC-STOP ENG. OVERRIDE
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181C	THERMOMET. OUTSIDE SENSOR	531	DDEC-CRUISE CLUTCH CUT OUT
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181D	THERMOMET. OUTSIDE SENSOR	540	DDEC-CRUISE ENABLE T.T.LT
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	195	WORLD TRANSM-TRANS ID	541	DDEC-CRUISE SET SW
137D	RR VIEW MIRROR	157B	ABS SYSTEM	197	FUEL WATER FILTER	542	INPUT PARK BRAKE INTERLOCK
137E	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197A	FUEL WATER FILTER	543	DDEC-CRUISE STOP SW CUT IN
137F	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	200S	POER SW. HEAD LAMP WASHER	544	DDEC-CRUISE ON/OFF SW
137H	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	201	WORLD TRANSM-SPARE	545	DDEC-CRUISE RESUME SW
137J	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	201S	SIGNAL SW. HEAD LAMP WASHER	555	DDEC-FAN CLUTCH SPEED#1
137K	RR VIEW MIRROR	163	WORLD TR.-RETARDER ENABLE	202	WORLD TRANSM-SPARE	556	DDEC-VEHICULE SPEED (+)
137L	RR VIEW MIRROR	164	WORLD TR.-RET. ACTUAT. SIGN	202S	HEAD LAMP WASHER PUMP	557	DDEC-VEHICULE SPEED (-)
137M	RR VIEW MIRROR FEED	165	WORLD TR.-OIL LEVEL SIGNAL	203	WORLD TRANSM-SPARE	563	DDEC-FAN CLUTCH SPEED#2
137R	WORLD TRANSM-RETARDER	167	WORLD TR.-SPEED 5N0, 5NC	204	WORLD TRANSM-SPARE	564	DDEC-DIGTAL OUTPUT
137T	MIRROR HEAT SW-JUMPER	169	WORLD TRANSM-INPUT 12	214	WORLD TR.-BACK-UP SIGNAL	565	DDEC-ENGINE BRAKE ACTIVE
138	WORLD TR.-RETARDER TEMP	170	WORLD TRANSM-SHIFTER	231	WORLD TR.-NEUTRAL SIGN GRD	583	DDEC-ENGINE BRAKE 4 CYL.
138	ABS SYSTEM-SENSOR	170C	LUGGAGE DOOR LOCK-T.T.LT	240	DDEC III-ECM 12V FEEDING	900	DDEC-DATA LINK (+)
138A	ABS SYSTEM-SENSOR	170D	LUGGAGE DOOR LOCK-FEED	241	DDEC III-ECM 12V FEEDING	901	DDEC-DATA LINK (-)
139	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN	260	WINDOW AJAR-T.T.LT	908	DDEC-HYDRAU. PWM#1 OUTPUT
139	WORLD TR.-OUTPUT SPEED HI	170F	LUGGAGE DOOR LOCK-FEED	270	KEYLESS MODULE-FEED	916	DDEC-SENSOR SUPPLY (5VDC)
140	WORLD TR.-OUTPUT SPEED LO	170G	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK	952	DDEC-SENSOR RETURN #1
140	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD	953	DDEC-SENSOR RETURN #2
141	ABS SYSTEM-VALVE	170K	LUGGAGE DOOR-LOCK SIGN	274	KEYLESS SYSTEM-KEYBOARD	979	DDEC-ENGINE BRAKE 2 CYL.
141	WORLD TR.-ENGINE SPEED HI	170LA	LUGG DOOR LOCK-T.T.LT WE	276	KEYLESS SYSTEM-KEYBOARD	2123	FLASHER SIGNAL LTS
142	ABS SYSTEM-VALVE	170LB	LUGG DOOR LOCK-T.T.LT WE	277	KEYLESS SYS-DR'V LTS SIGN	So1	SLIDE-OUT #2 RLY & SOL GND
143	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT	278	KEYLESS SYSTEM-KEYBOARD	So2	SLIDE-OUT REMOTE#1 OUT

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
So3	SLIDE-OUT REMOTE#1 IN						
So4	SLIDE-OUT ANA INPUT VAC						
So5	SLIDE-OUT IN PARK BRAKE						
So 6	SLIDE-OUT IN LIMIT IN#1						
So 7	SLIDE-OUT IN LIMIT OUT #1						
So 8	SLIDE-OUT 5V SUPPLY						
So 9	SLIDE-OUT OUT REMOTE LED						
So 10	SLIDE-OUT OUT RSO1 CTR						
So 11	SLIDE-OUT OUT RSO2 CTR						
So 12	SLIDE-OUT OUT SOSO5 CTR						
So 13	SLIDE-OUT OUT SOSO1 CTR						
So 14	SLIDE-OUT OUT SOSO2 CTR						
So 15	SLIDE-OUT OUT TRANS INHIBIT						
So 16	SLIDE-OUT SENSOR GND						
So 18	SLIDE-OUT GND MOSO1						
So 19	SLIDE-OUT MOSO1 CTR						
So 20	SLIDE-OUT MOSO1 CTR						
So 21	SLIDE-OUT OUT PWM MOSO1						
So 22	SLIDE-OUT CBSO1 24V OUT						
So 24	SLIDE-OUT FSO1 24V OUT						
So 25	SLIDE-OUT FSO2 24V OUT						
So 26	SLIDE-OUT CBSO POWER						
So 27	SLIDE-OUT CBSO POWER						
So 28	SLIDE-OUT CBSO2 24V OUT						
So 29	SLIDE-OUT FSO5 24V OUT						
So 30	SLIDE-OUT RLY & SOL GND						
So 31	SLIDE-OUT GND MOSO2						
So 32	SLIDE-OUT REMOTE#2 OUT						
So 33	SLIDE-OUT REMOTE#2 IN						
So 36	SLIDE-OUT IN LIMIT IN #2						
So 37	SLIDE-OUT IN LIMIT OUT #2						
So 38	SLIDE-OUT 5V SUPPLY						
So 39	SLIDE-OUT OUT REMOTE LED						
So 40	SLIDE-OUT OUT RSO3 CTR						
So 41	SLIDE-OUT OUT RSO4 CTR						
So 42	SLIDE-OUT OUT SOSO3 CTR						
So 46	SLIDE-OUT MOSO2 CTR						
So 47	SLIDE-OUT MOSO2 CTR						
So 48	SLIDE-OUT OUT PWM MOSO2						
So 55	SLIDE-OUT SECURITY PIN CTR						
So 60	SLIDE-OUT DASH LED OUT						
So 61	SLIDE-OUT OUT SOSO6 CTR						