

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A1	RADIO SYSTEM	C15	AUDIO AMPLI	SP10	SPARE WIRE	SP75	SPARE WIRE
A2	RADIO SYSTEM	D1	PASSENGER SPEAKER	SP11	SPARE WIRE	SP76	SPARE WIRE
A3	AUDIO AMPLI	D2	PASSENGER SPEAKER	SP12	SPARE WIRE	SP77	SPARE WIRE
A8	VIDEO SYSTEM	D3	PASSENGER SPEAKER	SP13	SPARE WIRE	SP78	SPARE WIRE
A9	RADIO SYSTEM	D4	PASSENGER SPEAKER	SP14	SPARE WIRE	SP80	SPARE WIRE
A10	AUDIO AMPLI	D5	PASSENGER SPEAKER	SP15	SPARE WIRE	SP81	SPARE WIRE
A11	AUDIO AMPLI	D6	PASSENGER SPEAKER	SP16	SPARE WIRE	SP82	SPARE WIRE
A12	AUDIO AMPLI	D7	PASSENGER SPEAKER	SP17	SPARE WIRE	SP83	SPARE WIRE
A13	AUDIO AMPLI	D8	PASSENGER SPEAKER	SP18	SPARE WIRE	SP84	SPARE WIRE
A15	AUDIO AMPLI	DR1	DRIVER'S SPEAKER	SP19	SPARE WIRE	SP85	SPARE WIRE
A16	VIDEO SYSTEM	DR2	DRIVER'S SPEAKER	SP20	SPARE WIRE	TW1	TWISTED SPARE
B1	MICROPHONE	DR3	DRIVER'S SPEAKER	SP21	SPARE WIRE	TW2	TWISTED SPARE
B2	MICROPHONE	DR4	DRIVER'S SPEAKER	SP23	SPARE WIRE	W1	STEERING BOX CONVERTER
B3	MICROPHONE	G1	PASSENGER SPEAKER	SP24	SPARE WIRE	W2	STEERING BOX CONVERTER
B4	MICROPHONE	G2	PASSENGER SPEAKER	SP25	SPARE WIRE	Y1A	FLUORESCENT BALLAST
B5	MICROPHONE	G3	PASSENGER SPEAKER	SP26	SPARE WIRE	Y1B	FLUORESCENT BALLAST
B6	MICROPHONE	G4	PASSENGER SPEAKER	SP27	SPARE WIRE	Y2A	FLUORESCENT BALLAST
B7	MICROPHONE	G5	PASSENGER SPEAKER	SP28	SPARE WIRE	Y2B	FLUORESCENT BALLAST
B8	MICROPHONE	G6	PASSENGER SPEAKER	SP30	SPARE WIRE	Y3A	FLUORESCENT BALLAST
B10	MICROPHONE	G7	PASSENGER SPEAKER	SP33	SPARE WIRE	Y3B	FLUORESCENT BALLAST
B11	MICROPHONE	G8	PASSENGER SPEAKER	SP34	SPARE WIRE	Y4A	FLUORESCENT BALLAST
B12	MICROPHONE	IPJ1	CLUSTER - BULB TEST POS	SP35	SPARE WIRE	Y4B	FLUORESCENT BALLAST
B1A	FLUORESCENT BALLAST	IPJ2	CLUSTER - BULB TEST NEG.	SP36	SPARE WIRE	Y5A	FLUORESCENT BALLAST
B1B	FLUORESCENT BALLAST	IPJ5	CLUSTER - FUEL GAUGE	SP37	SPARE WIRE	Y5B	FLUORESCENT BALLAST
B2A	FLUORESCENT BALLAST	IPJ6	CLUSTER - BULB TEST POS.	SP38	SPARE WIRE	Y6A	FLUORESCENT BALLAST
B2B	FLUORESCENT BALLAST	IPJ7	CLUSTER - BULB TEST NEG.	SP40	SPARE WIRE	Y6B	FLUORESCENT BALLAST
B3A	FLUORESCENT BALLAST	IPJ8	CLUSTER - MASTER WARNING	SP41	SPARE WIRE	Y7A	FLUORESCENT BALLAST
B3B	FLUORESCENT BALLAST	L8	WATER TANK HEATER	SP42	SPARE WIRE	Y7B	FLUORESCENT BALLAST
B4A	FLUORESCENT BALLAST	L9	WATER TANK HEATER	SP43	SPARE WIRE	0	BATTERY - MAIN GROUND
B4B	FLUORESCENT BALLAST	LX5	CLUSTER - COMPUTER MODE	SP44	SPARE WIRE	0	EVAP. COMPT. GROUND
B5A	FLUORESCENT BALLAST	LX6	CLUSTER - COMPUTER DOWN	SP45	SPARE WIRE	0	RJB - INSIDE GRD
B5B	FLUORESCENT BALLAST	LX7	CLUSTER - COMPUTER SET	SP48	SPARE WIRE	0	WCL MODULE
B6A	FLUORESCENT BALLAST	LX16	CLUSTER - COMPUTER UP	SP50	SPARE WIRE	0A	LAVATORY ACCESSORIES
B6B	FLUORESCENT BALLAST	LX21	CLUSTER - COMPUTER COM.	SP51	SPARE WIRE	0A	EVAP. FAN GROUND
B7A	FLUORESCENT BALLAST	R1A	FLUORESCENT BALLAST	SP52	SPARE WIRE	0A	FR. ROOF ACC. GRD
B7B	FLUORESCENT BALLAST	R1B	FLUORESCENT BALLAST	SP53	SPARE WIRE	0B	BOOSTER BLOCK GROUND
B14	RADIO SYSTEM	RT	T.T.L.T. MODULE - TEST SW.	SP54	SPARE WIRE	0B	A/C - CONDENSER GRD
B15	RADIO SYSTEM	SPK1	PASSENGER SPEAKER	SP56	SPARE WIRE	0B	24V&12V CUT OUT REL.COIL
C2	RADIO SYSTEM	SPK2	PASSENGER SPEAKER	SP57	SPARE WIRE	0BE	OV BATTERY MONITOR
C3	CONTROL HEAD ANTENNA	SPK3	PASSENGER SPEAKER	SP60	SPARE WIRE	0C	R.J.B. - GRB
C5	VIDEO SYSTEM	SPK4	PASSENGER SPEAKER	SP61	SPARE WIRE	0C	MOTOR STARTER GROUND
C6	CONTROL HEAD DIMMER	SP1	SPARE WIRE	SP62	SPARE WIRE	0C	F.R. SERV. CPT- ACC.
C7	RADIO SYSTEM	SP2	SPARE WIRE	SP63	SPARE WIRE	0C1	ENTRANCE DOOR SEDAN
C8	AUDIO AMPLI	SP3	SPARE WIRE	SP64	SPARE WIRE	0C2	STEERING CONTROL GROUND
C9	VIDEO SYSTEM	SP4	SPARE WIRE	SP65	SPARE WIRE	0C3	SOUND SYSTEM RELAY
C10	VIDEO SYSTEM	SP5	SPARE WIRE	SP69	SPARE WIRE	0C4	F.J.B. GRD
C11	VIDEO SYSTEM	SP6	SPARE WIRE	SP70	SPARE WIRE	0CJ	CRUISE SW. JUMPER
C12	VIDEO SYSTEM	SP7	SPARE WIRE	SP71	SPARE WIRE	0D	FLUORESCENT GRD
C13	VIDEO SYSTEM	SP8	SPARE WIRE	SP72	SPARE WIRE	0D	COND FAN GRD
C14	VIDEO SYSTEM	SP9	SPARE WIRE	SP74	SPARE WIRE	0E	BATT. COMPT. LTS GROUND

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
0E	READING LIGHTS GROUND	0W	FJB - TRANSM. RLY GRD	11K	DESTINATION SIGN	12VI	12V IGNITION DISTRIBUTION
0F	FLUORESCENT GRD	0W	SHIFT SELECTOR GROUND	11J	DESTINATION SIGN	12VO	12 VOLTS BATTERY EQUALIZER
0F	PRO-DRIVER GROUND	0W	WCL MODULE	11P	DESTINATION SIGN	12VR	12 VOLTS REAR DISTRIBUTION
0G	READING LIGHTS GROUND	0WA	PRE-HEAT WATER HEATER	12	12V ELECTRONIC TERMINAL	12W	12V HOT WIRE DDEC FEEDING
0G	ABS GRD CX1	0WA	WCL DOOR AJAR	12A	FR JCT PANEL 12V DISC SW	12WA	ENTRANCE DOOR SYSTEM
0H	ENG. CPT. - ACC. GRD	0WC	WCL BATTERY CPT. ACCES.	12A	BATT. JCT PANEL 12V DISC SW	12WR	WCL DOOR TOP LT
0IN	INTERCOM SYSTEM	0WL	WCL SIGNAL DOOR AJAR ALARM	12B	FR JCT PANEL 12V DISC SW	14	LAVATORY PUMP
0J	PARCEL RACK A/C UNIT	0Y1	ABS SYSTEM-GRD	12BE	12V BATTERY MONITOR	15	WIPER & WASHER FEEDING
0K	PARCEL RACK A/C UNIT	0Y2	ABS SYSTEM-GRD	12C	FR JCT PANEL 12V DISC SW	16	SPEEDOMETER (+)
0L	ENG.CPT -CLEAR.LTS RR ROOF	0Y3	ABS SYSTEM-GRD	12C	RR JCT BOX 12V DISC SW	16T	SPEED SW SIGNAL IN (+)
0L	R.J.B. - GRD	0Y4	ABS SYSTEM-GRD	12D	BATT. JCT PANEL 12V HOT WIRE	17	EXTERIOR LTS-FLASHER UNIT
0L	FR - SIDE MARK. & FLASH GRD	0Y5	ABS SYSTEM-GRD	12D	FR JCT PANEL 12V HOT WIRE	17A	EXTERIOR LTS-FLASHER UNIT
0L1	ENG.CPT-SIDE MARK. & FL. GRD	0Y6	ABS SYSTEM-GRD	12D	RR JCT PANEL 12V HOT WIRE	17C	JUMPER LTS SW. - HAZARD
0L2	HEAD LTS GROUND	0Y7	ABS SYSTEM-GRD	12DD	FR JCT PANEL 12V HOT WIRE	20	SPEEDOMETER SIGNAL (-)
0L3	FR.SERV.DR. & ENT.DOOR GRD	00A	ELECTRONIC TERMINAL GROUND	12DT	T.T. LT MODULE	21	LEFT DIRECTIONNAL LTS
0L4	FOG LTS RESISTOR GRD	00A	DASH ELECTRONIC GROUND	12E	FR JCT PANEL 12V DISC SW	21A	LEFT DIRECTIONNAL LTS SIGN.
0L5	LH CONSOL - ACC. GRD	00F	FRONT ELECTRONIC GROUND	12F	RR JCT PANEL 12V DISC SW	21B	HAZARD SWITCH SIGNAL
0L6	MARKER&FLASH. GROUND	2B	A/C & HEAT SYSTEM	12F1	FR JCT PANEL 12V DISC SW	21BB	LEFT DIRECTIONNAL LTS FEED.
0L7	AISLE LIGHTS GROUND	2D	A/C & HEAT SYSTEM	12F2	FR JCT PANEL 12V DISC SW	21H	EXTERIOR LTS-HAZARD SIGNAL
0L8	DOCKING LTS	2DD	A/C & HEAT SYSTEM	12G	FR JCT PANEL 12V DISC SW	21M	AUX. LTS - DIRECTIONAL LH
0LV	WINDSHIELD WASHER LEVEL	2E	A/C & HEAT SYSTEM	12H	12V IGN. DASH ACCESS.	23	RIGHT DIRECTIONNAL LTS
0M	WIPER 2 MIRROR MOTOR	2EE	A/C & HEAT SYSTEM	12I	RR JCT BOX 12V IGNITION	23A	RIGHT DIRECTIONNAL LTS SIGN.
0M3	DEFROST GRD	2H	A/C & HEAT SYS-LO-PRESS SW.	12I	FR JCT PANEL 12V IGNITION	23BB	RIGHT DIRECTIONNAL LTS FEED.
0M4	HORN & DR'S WINDOW LIFTER	2L	A/C & HEAT SYS-HI-PRESS SW.	12IA	FR JCT PANEL 12V IGNITION	23H	EXTERIOR LTS-HAZARD SIGNAL
0M5	SUN VISOR MOTOR	4A	HOTESS CHIME MAIN SWITCH	12IA	RR JCT PANEL 12V IGNITION	23K	RIGHT DIRECT. LTS W/KNELLING
0M7	DR'S WIND.LIFT. & RH MIR. SW	4C	HOTESS CHIME P. RACK SW.	12IB	FR JCT PANEL 12V IGNITION	23M	AUX LTS - DIRECTIONAL RH
0M7A	LH MIRROR SW.	5	AISLE LTS FEEDING	12IB	STEERING BOX ECU FEEDING	24	24 VOLTS BATTERY DIST.
0P	ENG.CDT - PRE-HEATER	5N	EMERGENCY LTS	12IC	FR JCT PANEL 12V IGN EATON	24	24 V. DISC. FRONT DIST.
0R	SOUND SYSTEM RELAY GROUND	5N0	SPEED SIGNAL HIGHER 5MPH	12ID	FR JCT PANEL 12V IGN EATON	24A	BATT. JCT PANEL 24V DISC SW
0SA	BOSCH ALTERNATOR GROUND	5NC	SPEED SIGNAL LOWER 5MPH	12IN	12 VOLTS DISC.SW. INTERCOM	24A	24V BOOSTER BLOCK
0SA	PARCEL RACK LTS SWITCH	6	AISLE LTS	12J	FR JCT PANEL 12V DISC.SW.	24A	FR JCT PANEL 24V DISC. SW
0SB	PARCEL RACK LTS SWITCH	7B	ENTRANCE DOOR FEED.-24V HW	12K	FR JCT PANEL 12V DISC.SW.	24A	RR JCT PANEL 24V DISC. SW
0SC	PARCEL RACK LTS SWITCH	9	INTERIOR LTS-ENGINE CPT	12L	CORNRRNG LTS FEEDING	24B	FR JCT PANEL 24V DISC. SW
0SE	PARCEL RACK LTS SWITCH	9F	INTERIOR LTS - FR-SERV. CPT	12LX	CLUSTER 12V HOT WIRE	24BE	BATTERY MONITOR
0SF	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-LUGGAGE CPT	12P	12 VOLTS BATTERY JCT BLOCK	24C	FR JCT PANEL 24V DISC SW
0SG	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-FR SERV. CPT	12R	12 VOLTS MEMORY RADIO	24D	24 V. HOT WIRE FEEDING
0SH	PARCEL RACK LTS SWITCH	10A	INTERIOR LTS-LUGGAGE CPT	12P	12V POWER OUTLET	24D	FR JCT BOX 24V HOT WIRE
0SJ	PARCEL RACK LTS SWITCH	10A	AUX. COMPRESSOR CLUTCH	12SB	12V SOUND SYSTEM FEEDING	24DD	FR JCT BOX 24V HOT WIRE
0SS	SOUND SYSTEM GROUND	10B	INTERIOR LTS-LUGGAGE CPT	12SS	12V SOUND SYSTEM FEEDING	24DS	WIRELSS MICRO FEEDING
0SS	SOUND SYSTEM GROUND	10C	INTERIOR LTS-LUGGAGE CPT	12S	12 V RADIO FEEDING	24E	24 VOLTS POWER DISTRIBUTION
0S2	RADIO GROUND	10E	INTERIOR LTS-BATTERY CPT	12S1	12 V RADIO FEEDING	24E	RR JCT PANEL 24V DISC SW
0S3	VIDEO GROUND	10H	AUX. COMPRESSOR CLUTCH	12S2	12 V RADIO FEEDING	24F	RR JCT PANEL 24V DISC SW
0T	LAVATORY FAN & PUMP	10L	AUX. COMPRESSOR CLUTCH	12T	RR JCT BOX 12V DISC SW	24H	RR JCT PANEL 24V DISC SW
0T	SPEED SW. CONNECTOR	10X	AUX. COMPRESSOR CLUTCH	12TE	12 V BATT. TRANSM. EATON	24I	FR JCT PANEL 24V IGNITION
0T1	DASH ACC. GROUND	11	DESTINATION SIGN	12TF	12 V BATT. TRANSM. EATON	24IA	FR JCT PANEL 24V IGNITION
0T2	CLUSTER ACC. GROUND	11A	DESTINATION SIGN	12VB	FR JCT PANEL 12V DISC SW	24IA	FR JCT PANEL 24V IGNITION
0T2	WINDOW AWNING	11B	DESTINATION SIGN	12VD	12V HOT WIRE DISTRIBUTION	24IB	FR JCT PANEL 24V IGNITION
0T3	ALTERNATOR MODULE	11C	DESTINATION SIGN	12VE	FR JCT PANEL 12V DISC SW	24IF	FR JCT PANEL 24V IGNITION
0T4	12V OUTLET - CTR MODULE	11D	DESTINATION SIGN	12VF	12 VOLTS FRONT DISTRIBUTIUNON	24K	RR JCT PANEL 24V DISC SW
0VA	BATTERY EQUALIZER GROUND	11E	DESTINATION SIGN	12VG	RR JCT PANEL 12V DISC SW	24L	RR JCT PANEL 24V DISC SW

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
24M	RR JCT PANEL 24V DISC SW	39	INTERIOR LTS-DRIVER'S LTS	55	EXTERIOR LTS-HI BEAM	77C	A/C & HEAT SYS.-COMPRESSOR
24P	FR JCT PANEL 24V DISC SW	39D	INTERIOR LTS - DRIVER' LTS	57	EXTERIOR LTS-HI BEAM	77H	A/C SYS.-LIQ. SOL. VALVE
24PV	MICRO-WAVE INVERTER	41	A/C SYS.-COND FAN MOTOR	57A	EXTERIOR LTS-HI BEAM	81	EXTERIOR LTS-STOP SW
24R	24V STARTER RELAY	41A	A/C SYS.-COND FAN MOTOR	57B	A/C & HEAT SYS.-WATER PUMP	82	EXTERIOR LTS-STOP SIGNAL
24R	SCENIC VIEW SIGNAL ON	41B	A/C SYS.-COND FAN MOTOR	57C	PRE-HEAT WATER HEATER	82A	EXTERIOR LTS-STOP SIGNAL
24SB	24V SOUND SYSTEM FEEDING	42	A/C SYS.-COND FAN MOTOR	57C	A/C & HEAT SYS.-WATER PUMP	82B	EXTERIOR LTS-STOP LTS
24SS	24V SOUND SYSTEM FEEDING	42A	A/C SYS.-COND FAN MOTOR	57E	A/C & HEAT SYS.-WATER VALV	82L	EXT. LTS-STOP LTS & CYCLOP
24S1	AMPLIFIER FEEDING	43	PARCEL RACK A/C	57W	PRE-HEAT WATER HEATER	82R	EXTERIOR LTS-STOP LTS
24S2	AMPLIFIER FEEDING	43A	PARCEL RACK A/C	58	EXTERIOR LTS-LO BEAM	83	ENG. CTR-MAST. KEY SW ACC.
24S3	VIDEO FEEDING	43B	PARCEL RACK A/C	58A	EXTERIOR LTS-LO BEAM	83A	24V&12V CUT RELAY COIL
24S4	VIDEO FEEDING	43C	PARCEL RACK A/C	58B	EXTERIOR LTS-LO BEAM	83B	24V&12V CUT RELAY COIL
24T	RR JCT PANEL 24V DISC SW	43D	PARCEL RACK A/C	59A	ENGINE BRAKE SYSTEM	84	ENG. CTR-MAST KEY SW START
24VA	24 VOLTS BATTERY EQUALIZER	43E	PARCEL RACK A/C	61	EXTERIOR LTS-24V FEED SW	84A	ENG. CTR-MAST KEY SW START
24VD	24V HOT WIRE FEED	43F	PARCEL RACK A/C	61A	EXTERIOR LTS-HEAD SIGNAL	84J	ENG. CTR-MAST KEY SW START
24VF	24 VOLTS FRONT DISTRIBUTION	43G	PARCEL RACK A/C	62	LAVATORY INDICATOR	85	24V IGNITION SIGNAL
24VI	24 VOLTS IGNITION REAR DIST.	43M	PARCEL RACK A/C	63	EXTERIOR LTS-CLEAR. FEED	85A	24V IGN DASH INSTRUMENT.
24VR	24 VOLTS REAR DISTRIBUTION	43X	PARCEL RACK A/C	63B	EXTERIOR LTS-CLEARANCE	85C	24V IGNITION - FEED
24Y	24 VOLTS POWER GALLEY	44	EXTERIOR LTS-FOG	63C	EXT. LTS-MARKER SIGNAL	85F	RAD. FAN CONTROL W/RETARD
24WC	WCL PUMP FEEDING	44A	EXTERIOR LTS-FOG	63D	BLINKER RELAY	85W	OUT SPEED INTERLOCK-24V IGN
24WL	WCL PUMP FEEDING	44B	EXTERIOR LTS-FOG	63E	BLINKER RELAY	85X	ABS-24V IGN
24WR	WCL POWER ACCES.	44C	FOG,LTS & HVAC FEEDING	63F	EXT. LTS-MARKER BLINKER	85Y	ABS-WARNING LT
25	EITHER ALTERNAT. RUN SIGNAL	44D	EXTERIOR LTS - FOG	64	DRIVER'S FAN SPEED CTR	86	ENG. CTR-STARTER SOL.
25A	T.T.LT. ALTERNATOR #1	44E	EXTERNAL LTS - FOG	64A	A/C SPARE	86A	ENG. CTR-STARTER RELAY COIL
25A1	BOSCH ALTERNATOR SIGNAL D+	45A	A/C & HEAT SYSTEM FULL AIR	64B	A/C SPARE	86F	TELL TALE STARTER ON
25A2	BOSCH ALTERNATOR SIGNAL D+	45B	A/C & HEAT SYS.-WATER PUMP	65	FOOT DAMPER MOTOR	86T	TELL TALE STARTER ON
25B	EXT. LTS-DAYTIME RUN LTS	45C	A/C & HEAT SYS.-WATER VALV	65A	FOOT DAMPER MOTOR	87B	ENGINE CTR-24V IGNITION
25D	BOTH ALTERNATOR RUN SIGNAL	45D	A/C & HEAT SYS.-WATER VALV	65D	DRIVER'S REC. DAMPER	88	ENGINE CTR-RR START SIGNAL
25K	T.T.LT. ALTERNATOR #2	45G	A/C & HEAT SYS.-DR'S HTR	66	A/C PASSENGER - ON/OFF	89	ENGINE CTR-RR START SIGNAL
26	DR'S & ENT. WINDOW LIFTER	46	EXTERIOR LTS-MARKER	67A	A/C & HEAT SYSTEM	90B	ENG. CTR-MAST KEY SW FEED
26A	CIGAR LIGHT. & POW.OUTLET LH	46A	EXTERIOR LTS-AUX LTS RESIS.	68	DASH & DEFROST DAMPER MOT	91	PARKING BRAKE SW SIGNAL
26B	DRIVER'S WINDOW LIFTER	46C	EXTERIOR LTS-MARKER	68A	DASH & DEFROST DAMPER MOT	91A	DDEC -FAST IDLE SIGNAL
26C	DRIVER'S WINDOW LIFTER	46D	EXTERIOR LTS-AUX LTS RESIS.	69	DAMPER MIX LIMIT SWITCH	91B	D.R.L. CANCEL RELAY
27	LAVATORY ALARM	48	ENTRANCE DOOR OPEN SIGNAL	70	HAT RACK & NIGHT LTS FEEDING	91C	PARKING BRAKE - T.T.LT
28H	T.T.LT MODULE - HI A/C PRES.	48A	ENTRANCE DOOR OPEN SOL.	72	SUN VISOR - FEED	91J	FAST IDLE - JUMPER SW.
28T	T.T.LT MODULE - LO A/C PRES.	48B	ENTRANCE DOOR OPEN SIGNAL	72A	SUN VISOR RH	91W	WCL PARKING BRAKE SIGNAL
29	A/C & HEAT SYS.-DR'S HTR	48C	ENTRANCE DOOR SYSTEM	72B	SUN VISOR RH	92	BATT. EQUAL.-CHECK BALANCE
29H	HVAC DASH MODILE	48D	ENTRANCE DOOR SYSTEM	72C	SUN VISOR LH	93	BATT. EQUALIZ.-CHECK LO/HI
30A	GALLEY SWITCH SIGNAL	48W	ENTRANCE DOOR SEDAN	72D	SUN VISOR LH	95A	ENG. BRAKE & RETARDER SYS.
30J	GALLEY SWITCH LED	49	ENTRANCE DOOR CLOSE SIGNAL	74	R.H. READING LAMP FEEDING	95B	ENG. BRAKE & RETARDER SYS.
31B	WIPER & WASHER SYSTEM	49A	ENTRANCE DOOR SYSTEM	74A	R.H. HOTESS CHIME FEEDING	97	TACHOMETER SIGN.-NOT USED
32	EXTERIOR LTS-BACK-UP	49B	ENTRANCE DOOR SYSTEM	74B	WCL R.H. READING LAMP FEED.	100	INTERIOR LTS RELAY COIL
32B	EXTERIOR LTS-BACK-UP	50	AIR DRYER	74D	READING LAMP SWITCH	100	INDIRECT LTS FEEDING
35	ENTRANCE STEP LIGHTS	52	ALARM & SIGNAL-ELEC.HORN	74J	READING LAMP INDICATOR SW.	100A	INDIRECT LTS RELAY COIL
36	ENGINE BRAKE SYSTEM	52A	ALARM & SIGNAL-ELEC.HORN	75	L.H. READING LAMP FEEDING	100B	INDIRECT LTS FEEDING
36A	ENGINE BRAKE SYSTEM & RET.	52B	PNEUMATIC HORN	75A	L.H. HOTESS CHIME FEEDING	100C	INDIRECT LTS FEEDING
37	LAVATORY LTS FEEDING	53	ALARM & SIGNAL-ELEC.HORN	76	FUEL TANK GAUGE	101	24 VOLTS POWER STARTER
38	FLUORESCENT RELAY FEEDING	53B	WIPER & WASHER SYSTEM	76C	LOW FUEL T.T.LT	101	WORLD TR.- LO SIGN SOL.LO
38A	R.H FLUORESCENT	53C	WIPER & WASHER SYSTEM	76M	FUEL PRIME PUMP	102	24 VOLTS A/C DISTRIBUTION
38B	L.H. FLUORESCENT	53E	WIPER & WASHER SYSTEM	76P	FUEL PRIME PUMP FEEDING	102	WORLD TRANSM.-SOL. SUPPLY
38C	FLUORESCENT FEEDING	53J	WIPER & WASHER SYSTEM	77B	A/C SYS. - LIQ. SOL. VALVE	102A	BOSCH ALTERNATOR FEEDING

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
103	WORLD TRANSM.- B.SOL.LO	127W	PRE-HEAT WATER HEATER	139	WORLD TR.-OUTPUT SPEED HI	170C	LUGGAGE DOOR LOCK-T.T.LT
103	LOW BUOY SYSTEM	128	WORLD TRANSM-B SOL.	140	WORLD TR.-TURBINE SPEED LO	170D	LUGGAGE DOOR LOCK-FEED
104	WORLD TR. -G SOL.	128A	PRE-HEAT WATER HEATER	140	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN
105W	WORLD TR.-SOL.-RET.OIL TT.LT	128B	PRE-HEAT WATER HEATER	141	ABS SYSTEM-VALVE	170F	LUGGAGE DOOR LOCK-FEED
107	WORLD TR. - SOL. SUPPLY	128W	PRE-HEAT WATER HEATER	141	WORLD TR.-ENGINE SPEED HI	170G	LUGGAGE DOOR LOCK-FEED
110	WORLD TR.-F SOL. LO	129	WORLD TRANSM-E SOL.	142	ABS SYSTEM-VALVE	170K	LUGGAGE DOOR-LOCK SIGN
112	WORLD TR.-SPARE OUTPUT (+)	129	PRE-HEAT WATER HEATER	143	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT
113W	WORLD TR.-REVERSE WARNING	129B	PRE-HEAT WATER HEATER	143A	ABS SYSTEM-SENSOR	170N	LUGG DOOR LOCK-SIGN T.T.LT
114	INTERIOR LT-DASH LT RHEOS.	130	WORLD TRANSM-SOL. SUPPLY	143A	WORLD TRANS-BATTERY GRD	170R	LUGG DOOR LOCK-SIGN. T.T.LT
114A	INTERIOR LT-DASH LT RHEOS.	130	EVAP. FAN MAIN CABLE	143W	WORLD TRANSM-BATTERY GRD	170S	LUGG DOOR LOCK-SIGN T.T.LT
114B	INT. LT-DASH LT RHEOST.FEED	131	WORLD TRANSM-D SOL.	143X	WORLD TRANSM-BATTERY GRD	170T	LUGG DOOR LOCK-SIGN T.T.LT
115	DDEC -COOLANT LEVEL	132	WORLD TRANSM-ENGINE BRAKE	143Y	WORLD/EATON TRANSM.BATT.GRD	170V	LUGG DOOR LOCK-SIGN T.T.LT
115W	WORLD TR.-DO NOT SHIFT SIGN	133	GALLEY HEATING CONTAINER	144	ABS SYSTEM-SENSOR	170W	LUGGAGE DOOR LOCK-FEED
116	WORLD TR.-SOL. SUPPLY	133A	GALLEY HEATING CONTAINER	144A	ABS SYSTEM-SENSOR	170X	LUGG DOOR LOCK-SIGN T.T.LT
116B	A/C & HEAT SYSTEM-DR'S HTR	133B	GALLEY HEATING CONTAINER	145	ABS SYSTEM	170Y	LUGGAGE DOOR LOCK-FEED
116C	A/C SYS.-TRIG. DEFROST	133C	GALLEY HEATING CONTAINER	146	ABS SYSTEM	170Z	LUGGAGE DOOR LOCK
117A	OIL TEMP. EATON TRANSM.	134	GALLEY HEATING CONTAINER	146A	WORLD TRANSM-12V IGNITION	171	WORLD TRANSM-SHIFTER
119	WORLD TRANSM-ENGINE BRAKE	134A	GALLEY HEATING CONTAINER	146AA	WORLD TRANSM-DIAGN.CONN.	172	WORLD TRANSM-SHIFTER
120	WORLD TRANSM-A SOL.	135	GALLEY HEATING CONTAINER	147	WORLD TRANSM-OIL TEMP	173	WORLD TRANSM-SHIFTER
121	WORLD TRANSM-SOL.SUPPLY	135A	WORLD TR.-RES MODULE RET.	147	ABS SYSTEM-VALVE	174	WORLD TRANSM-SHIFTER
123	WORLD TR.-NEUTRAL START	135B	A/C & HEAT SYS.-AIR SENSOR	147A	ETHER COLD START	175A	WORLD TRANSM-SHIFTER
123A	ALARM & SIGNAL-FIRE DETECT.	135C	A/C & HEAT SYS.-AIR SENSOR	147C	ETHER COLD START	176	WORLD TRANSM-SHIFTER
123B	ALARM & SIGNAL-FIRE DETECT.	136	MICRO-WAVE OVEN SWITCH	148	ABS SYSTEM-VALVE	180	OUTSIDE TEMP. DISPLAY
124	WORLD TR.-SENSOR POWER	136A	GALLEY LAMP	148	WORLD TR.-OUTPUT SPEED LO	180A	OUTSIDE TEMP. DISPLAY
124A	WORLD TRANSM-SENSOR PWR	136A	WORLD TRANSM-12V BATTERY	149	WORLD TR.-TURBINE SPEED HI	180A	WORLD TRANSM-SHIFTER
125	LAVATORY FAN	136A1	WORLD TRANSM-12V BATTERY	149	ABS SYSTEM-SENSOR	180B	OUTSIDE TEMP. DISPLAY
125	WORLD TR-RETARDER INDICAT.	136A2	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	180C	OUTSIDE TEMP. DISPLAY
125W	WORLD TR-RETARDER INDICAT.	136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	181	FROZEN POINT T.T.LT
126	24 V IGN. SPEED SWITCH	136V	WORLD TRANSM-12V BATTERY	150	DDEC -ECM BATTERY GRD	181A	TEMP. CTR'L INSIDE SENSOR
126A	KNEELING SYSTEM	136W	WORLD TRANSM-12V BATTERY	150A	DDEC -ECM BATTERY GRD	181B	TEMP. CTR'L INSIDE SENSOR
126AA	KNEELING SYSTEM	136X	WORLD TRANSM-12V BATTERY	151	DDEC -ECM BATTERY GRD	181C	THERMOMET. OUTSIDE SENSOR
126B	HI-BUOY SIGNAL	137	WORLD TRANSM-RETARDER	151	ATC VALVE	181D	THERMOMET. OUTSIDE SENSOR
126C	KNEELING SYSTEM	137	RR VIEW MIRROR	152	ATC VALVE	195	WORLD TRANSM-TRANS ID
126D	KNEELING SYSTEM	137A	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	197	FUEL WATER FILTER
126F	KNEELING SYSTEM	137B	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	197A	FUEL WATER FILTER
126G	KNEELING SYSTEM	137C	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	200	EATON TRANSM. GRD
126H	SPEED SIGN 5NC - 24V	137D	RR VIEW MIRROR	157	ABS SYSTEM-FEED	201	WORLD TRANSM-SPARE
126K	KNEELING SYSTEM	137E	RR VIEW MIRROR	157A	ABS SYSTEM-FEED	202	WORLD TRANSM-SPARE
126L	KNEELING SYSTEM	137F	RR VIEW MIRROR	157B	ABS SYSTEM	203	WORLD TRANSM-SPARE
126P	KNEELING SYSTEM	137H	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	204	WORLD TRANSM-SPARE
126R	KNEELING SYSTEM	137J	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	214	WORLD TR.-BACK-UP SIGNAL
126S	KNEELING SYSTEM	137K	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	231	WORLD TR.-NEUTRAL SIGN GRD
126T	KNEELING SYSTEM	137L	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	231F	WORLD TR.-NEUTRAL SIGN GRD
126W	KNEELING SYSTEM	137M	RR VIEW MIRROR FEED	163	WORLD TR.-RETARDER ENABLE	231W	W.TR.-NEUTRAL SIGN GRD WCL
126W	WORLD TRANSM-NOT USED	137R	WORLD TRANSM-RETARDER	164	WORLD TR.-RETARDER ENABLE	240	DDEC -ECM 12V FEEDING
127	WORLD TRANSM. - H SOL.	137T	MIRROR HEAT SW-JUMPER	164	WORLD TR.-RET. ACTUAT. SIGN	241	DDEC -ECM 12V FEEDING
127	24HOT WIRE PREHEAT	138	WORLD TR.-RETARDER TEMP	165	WORLD TR.-OIL LEVEL SIGNAL	253	24V SIGNAL GALLEY INVERTER
127A	PRE-HEAT WATER HEATER	138	ABS SYSTEM-SENSOR	166	WORLD TRANSM. OUTPUT 7	254	GALLEY REFRIGERATOR
127B	PRE-HEAT WATER HEATER	138A	ABS SYSTEM-SENSOR	167	W. TR.-OUT SPEED INTERLOCK	254A	GALLEY REFRIGERATOR
127S	PRE-HEAT WATER HEATER	139	ABS SYSTEM-VALVE	169	WORLD TRANSM-PRE-SELECT #1	254F	GALLEY REFRIGERATOR
				170	WORLD TRANSM-SHIFTER		

# CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
255	GALLEY COFFEEMAKER	555	DDEC-FAN CLUTCH SPEED#1		
255A	GALLEY COFFEEMAKER	556	DDEC-VEHICULE SPEED (+)		
255B	GALLEY COFFEEMAKER	557	DDEC-VEHICULE SPEED (-)		
260	WINDOW AJAR-T.T.LT	563	DDEC-FAN CLUTCH SPEED#2		
290	FAN CLUTCH RADIATOR-FEED	564	DDEC-DIGTAL OUTPUT		
290A	FAN CLUTCH RADIATOR-FEED	565	DDEC-ENGINE BRAKE ACTIVE		
291	FAN CLUTCH RADIATOR SPD 1	583	DDEC-ENGINE BRAKE 4 CYL.		
292	FAN CLUTCH RADIATOR SPD 2	900	DDEC-DATA LINK (+)		
292J	FAN OVERRIDE LTS SWITCH	900A	EATON-DATA LINK(+)		
300	WCL POWER SYSTEM & ACCESS.	901	DDEC-DATA LINK (-)		
300A	WCL POWER SYSTEM SW.	901A	EATON-DATA LINK(-)		
301J	WCL POWER SW. JUMPER LED	908	DDEC-HYDRAU. PWM#1 OUTPUT		
301	WCL SIGNAL POWER SW.	916	DDEC-SENSOR SUPPLY (5VDC)		
302	WCL DOOR AJAR TTLT & ALARM	925	J1939(+)		
304	WCL DOOR TOP LT.	926	J1939(-)		
305	WCL PARKING BRAKE SOL. VALVE	927	J1939(SHIELD)		
305A	WCL DOOR OPEN SIGNAL	952	DDEC-SENSOR RETURN		
305B	WCL DOOR TOP LT.	953	DDEC-BATTERY GRD		
306	WCL CONTROL SYSTEM	979	DDEC-ENGINE BRAKE 2 CYL.		
307	WCL CONTROL SYSTEM	2123	FLASHER SIGNAL LTS		
308	WCL CONTROL SYSTEM				
309	WCL CONTROL SYSTEM				
310	EATON TRANSM. START SIGNAL				
311	EATON TR.LH.CONS.GEAR DISPLAY				
312	EATON TR. NEUTRAL SIGNAL				
313	EATON TR.LH.CONS.GEAR DISPLAY				
314	EATON TR.LH.CONS. GRD				
315	EATON TR.ENG.COMP.12V POWER				
316	EATON TR.ENG.COMP. GRD				
317	EATON TR.ENG.COMP.12V POWER				
318	EATON TR.ENG.COMP. GRD				
319	EATON TR.ENG.COMP.12V POWER				
320	EATON TR.ENG.COMP. GRD				
417	DDEC-LIMIT SPEED GOVERNOR				
419	DDEC -CHEK ENGINE LIGHT				
439	DDEC-12V IGNITION				
451	DDEC-A/C FAN CLUTCH				
505	DDEC-TACHOMETER DRIVE				
509	DDEC-STOP ENGINE LIGHT				
510	DDEC-FAST IDLE SIGNAL				
524	DDEC-ENGINE BRAKEDISABLE				
525	DDEC-FAST IDLE SIGNAL				
528	DDEC-STOP ENG. OVERRIDE				
531	DDEC-CRUISE CLUTCH CUT OUT				
540	DDEC-CRUISE ENABLE T.T.LT				
541	DDEC-CRUISE SET SW				
543	DDEC-CRUISE BRAKE PEDAL				
544	DDEC-CRUISE ON/OFF SW				
545	DDEC-CRUISE RESUME SW				