

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A1	RADIO SYSTEM	C15	AUDIO AMPLI	SP10	SPARE WIRE	SP75	SPARE WIRE
A2	RADIO SYSTEM	D1	PASSENGER SPEAKER	SP11	SPARE WIRE	SP76	SPARE WIRE
A3	AUDIO AMPLI	D2	PASSENGER SPEAKER	SP12	SPARE WIRE	SP77	SPARE WIRE
A8	VIDEO SYSTEM	D3	PASSENGER SPEAKER	SP13	SPARE WIRE	SP78	SPARE WIRE
A9	RADIO SYSTEM	D4	PASSENGER SPEAKER	SP14	SPARE WIRE	SP80	SPARE WIRE
A10	AUDIO AMPLI	D5	PASSENGER SPEAKER	SP15	SPARE WIRE	SP81	SPARE WIRE
A11	AUDIO AMPLI	D6	PASSENGER SPEAKER	SP16	SPARE WIRE	SP82	SPARE WIRE
A12	AUDIO AMPLI	D7	PASSENGER SPEAKER	SP17	SPARE WIRE	SP83	SPARE WIRE
A13	AUDIO AMPLI	D8	PASSENGER SPEAKER	SP18	SPARE WIRE	SP84	SPARE WIRE
A15	AUDIO AMPLI	DR1	DRIVER'S SPEAKER	SP19	SPARE WIRE	SP85	SPARE WIRE
A16	VIDEO SYSTEM	DR2	DRIVER'S SPEAKER	SP20	SPARE WIRE	TW1	TWISTED SPARE
B1	MICROPHONE	DR3	DRIVER'S SPEAKER	SP21	SPARE WIRE	TW2	TWISTED SPARE
B2	MICROPHONE	DR4	DRIVER'S SPEAKER	SP23	SPARE WIRE	W1	STEERING BOX CONVERTER
B3	MICROPHONE	G1	PASSENGER SPEAKER	SP24	SPARE WIRE	W2	STEERING BOX CONVERTER
B4	MICROPHONE	G2	PASSENGER SPEAKER	SP25	SPARE WIRE	Y1A	FLUORESCENT BALLAST
B5	MICROPHONE	G3	PASSENGER SPEAKER	SP26	SPARE WIRE	Y1B	FLUORESCENT BALLAST
B6	MICROPHONE	G4	PASSENGER SPEAKER	SP27	SPARE WIRE	Y2A	FLUORESCENT BALLAST
B7	MICROPHONE	G5	PASSENGER SPEAKER	SP28	SPARE WIRE	Y2B	FLUORESCENT BALLAST
B8	MICROPHONE	G6	PASSENGER SPEAKER	SP30	SPARE WIRE	Y3A	FLUORESCENT BALLAST
B10	MICROPHONE	G7	PASSENGER SPEAKER	SP33	SPARE WIRE	Y3B	FLUORESCENT BALLAST
B11	MICROPHONE	G8	PASSENGER SPEAKER	SP34	SPARE WIRE	Y4A	FLUORESCENT BALLAST
B12	MICROPHONE	IPJ1	CLUSTER - BULB TEST POS	SP35	SPARE WIRE	Y4B	FLUORESCENT BALLAST
B1A	FLUORESCENT BALLAST	IPJ2	CLUSTER - BULB TEST NEG.	SP36	SPARE WIRE	Y5A	FLUORESCENT BALLAST
B1B	FLUORESCENT BALLAST	IPJ5	CLUSTER - FUEL GAUGE	SP37	SPARE WIRE	Y5B	FLUORESCENT BALLAST
B2A	FLUORESCENT BALLAST	IPJ6	CLUSTER - BULB TEST POS.	SP38	SPARE WIRE	Y6A	FLUORESCENT BALLAST
B2B	FLUORESCENT BALLAST	IPJ7	CLUSTER - BULB TEST NEG.	SP40	SPARE WIRE	Y6B	FLUORESCENT BALLAST
B3A	FLUORESCENT BALLAST	IPJ8	CLUSTER - MASTER WARNING	SP41	SPARE WIRE	Y7A	FLUORESCENT BALLAST
B3B	FLUORESCENT BALLAST	L8	WATER TANK HEATER	SP42	SPARE WIRE	Y7B	FLUORESCENT BALLAST
B4A	FLUORESCENT BALLAST	L9	WATER TANK HEATER	SP43	SPARE WIRE	0	BATTERY - MAIN GROUND
B4B	FLUORESCENT BALLAST	LX5	CLUSTER - COMPUTER MODE	SP44	SPARE WIRE	0	EVAP. COMPT. GROUND
B5A	FLUORESCENT BALLAST	LX6	CLUSTER - COMPUTER DOWN	SP45	SPARE WIRE	0	RJB - INSIDE GRD
B5B	FLUORESCENT BALLAST	LX7	CLUSTER - COMPUTER SET	SP48	SPARE WIRE	0	WCL MODULE
B6A	FLUORESCENT BALLAST	LX16	CLUSTER - COMPUTER UP	SP50	SPARE WIRE	0A	LAVATORY ACCESSORIES
B6B	FLUORESCENT BALLAST	LX21	CLUSTER - COMPUTER COM.	SP51	SPARE WIRE	0A	EVAP. FAN GROUND
B7A	FLUORESCENT BALLAST	R1A	FLUORESCENT BALLAST	SP52	SPARE WIRE	0A	FR. ROOF ACC. GRD
B7B	FLUORESCENT BALLAST	R1B	FLUORESCENT BALLAST	SP53	SPARE WIRE	0B	BOOSTER BLOCK GROUND
B14	RADIO SYSTEM	RT	T.T.L.T. MODULE - TEST SW.	SP54	SPARE WIRE	0B	A/C - CONDENSER GRD
B15	RADIO SYSTEM	SPK1	PASSENGER SPEAKER	SP56	SPARE WIRE	0B	24V&12V CUT OUT REL.COIL
C2	RADIO SYSTEM	SPK2	PASSENGER SPEAKER	SP57	SPARE WIRE	0BE	OV BATTERY MONITOR
C3	CONTROL HEAD ANTENNA	SPK3	PASSENGER SPEAKER	SP60	SPARE WIRE	0C	R.J.B. - GRB
C5	VIDEO SYSTEM	SPK4	PASSENGER SPEAKER	SP61	SPARE WIRE	0C	MOTOR STARTER GROUND
C6	CONTROL HEAD DIMMER	SP1	SPARE WIRE	SP62	SPARE WIRE	0C	F.R. SERV. CPT- ACC.
C7	RADIO SYSTEM	SP2	SPARE WIRE	SP63	SPARE WIRE	0C1	ENTRANCE DOOR SEDAN
C8	AUDIO AMPLI	SP3	SPARE WIRE	SP64	SPARE WIRE	0C2	STEERING CONTROL GROUND
C9	VIDEO SYSTEM	SP4	SPARE WIRE	SP65	SPARE WIRE	0C3	SOUND SYSTEM RELAY
C10	VIDEO SYSTEM	SP5	SPARE WIRE	SP69	SPARE WIRE	0C4	F.J.B. GRD
C11	VIDEO SYSTEM	SP6	SPARE WIRE	SP70	SPARE WIRE	0CJ	CRUISE SW. JUMPER
C12	VIDEO SYSTEM	SP7	SPARE WIRE	SP71	SPARE WIRE	0D	FLUORESCENT GRD
C13	VIDEO SYSTEM	SP8	SPARE WIRE	SP72	SPARE WIRE	0D	COND FAN GRD
C14	VIDEO SYSTEM	SP9	SPARE WIRE	SP74	SPARE WIRE	0E	BATT. COMPT. LTS GROUND

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
0E	READING LIGHTS GROUND	0T4	12V OUTLET - CTR MODULE	11B	DESTINATION SIGN	12S2A	12V DVD KARAOKE FEEDING
0F	FLUORESCENT GRD	0T5	FS.HVAC DASH MODULE. GND	11C	DESTINATION SIGN	12T	RR JCT BOX 12V DISC SW
0F	PRO-DRIVER GROUND	0VA	BATTERY EQUALIZER GROUND	11D	DESTINATION SIGN	12TE	12 V BATT. TRANSM. EATON
0G	READING LIGHTS GROUND	0W	FJB - TRANSM. RLY GRD	11E	DESTINATION SIGN	12TF	12 V BATT. TRANSM. EATON
0G	ABS GRD CX1	0W	SHIFT SELECTOR GROUND	11K	DESTINATION SIGN	12VB	FR JCT PANEL 12V DISC SW
0H	ENG. CPT. - ACC. GRD	0W	WCL MODULE	11J	DESTINATION SIGN	12VD	12V HOT WIRE DISTRIBUTION
0IN	INTERCOM SYSTEM	0WA	PRE-HEAT WATER HEATER	11P	DESTINATION SIGN	12VE	FR JCT PANEL 12V DISC SW
0J	PARCEL RACK A/C UNIT	0WA	WCL DOOR AJAR	12	12V ELECTRONIC TERMINAL	12VF	12 VOLTS FRONT DISTRIBUTUON
0K	PARCEL RACK A/C UNIT	0WC	WCL BATTERY CPT. ACCES.	12A	FR JCT PANEL 12V DISC SW	12VG	RR JCT PANEL 12V DISC SW
0L	ENG.CPT -CLEAR.LTS RR ROOF	0WL	WCL SIGNAL DOOR AJAR ALARM	12A	BATT. JCT PANEL 12V DISC SW	12VI	12V IGNITION DISTRIBUTION
0L	R.J.B. - GRD	0Y1	ABS SYSTEM-GRD	12B	FR JCT PANEL 12V DISC SW	12VO	12 VOLTS BATTERY EQUALIZER
0L	FR - SIDE MARK. & FLASH GRD	0Y2	ABS SYSTEM-GRD	12BE	12V BATTERY MONITOR	12VR	12 VOLTS REAR DISTRIBUTION
0L1	ENG.CPT-SIDE MARK. & FL. GRD	0Y3	ABS SYSTEM-GRD	12C	FR JCT PANEL 12V DISC SW	12W	12V HOT WIRE DDEC FEEDING
0L2	HEAD LTS GROUND	0Y4	ABS SYSTEM-GRD	12C	RR JCT BOX 12V DISC SW	12WA	ENTRANCE DOOR SYSTEM
0L3	FR.SERV.DR. & ENT.DOOR GRD	0Y5	ABS SYSTEM-GRD	12D	BATT. JCT PANEL 12V HOT WIRE	12WR	WCL DOOR TOP LT
0L4	FOG LTS RESISTOR GRD	0Y6	ABS SYSTEM-GRD	12D	FR JCT PANEL 12V HOT WIRE	14	LAVATORY PUMP
0L5	LH CONSOL - ACC. GRD			12D	RR JCT PANEL 12V HOT WIRE	15	WIPER & WASHER FEEDING
0L6	MARKER&FLASH. GROUND	00A	ELECTRONIC TERMINAL GROUND	12DD	FR JCT PANEL 12V HOT WIRE	16	SPEEDOMETER (+)
0L7	AISLE LIGHTS GROUND	00F	FRONT ELECTRONIC GROUND	12DDR	FR JCT BOX 12V HOT DDR CONN	16T	SPEED SW SIGNAL IN (+)
0L8	DOCKING LTS	2B	A/C & HEAT SYSTEM	12DT	T.T. LT MODULE	17	EXTERIOR LTS-FLASHER UNIT
0LV	WINDSHIELD WASHER LEVEL	2D	A/C & HEAT SYSTEM	12E	FR JCT PANEL 12V DISC SW	17A	EXTERIOR LTS-FLASHER UNIT
0M	WIPER 2 MIRROR MOTOR	2DD	A/C & HEAT SYSTEM	12F	RR JCT PANEL 12V DISC SW	17C	JUMPER LTS SW. - HAZARD
0M3	DEFROST GRD	2E	A/C & HEAT SYSTEM	12F1	FR JCT PANEL 12V DISC SW	20	SPEEDOMETER SIGNAL (-)
0M4	HORN & DR'S WINDOW LIFTER	2EE	A/C & HEAT SYSTEM	12F2	FR JCT PANEL 12V DISC SW	21	LEFT DIRECTIONNAL LTS
0M5	SUN VISOR MOTOR	2H	A/C & HEAT SYS-LO-PRESS SW.	12FL	RR JCT PANEL 12V DISC SW	21A	LEFT DIRECTIONNAL LTS SIGN.
0M7	DR'S WIND.LIFT. & RH MIR. SW	2L	A/C & HEAT SYS-HI-PRESS SW.	12G	FR JCT PANEL 12V DISC SW	21B	HAZARD SWITCH SIGNAL
0M7A	LH MIRROR SW.	4A	HOTESS CHIME MAIN SWITCH	12H	12V IGN. DASH ACCESS.	21BB	LEFT DIRECTIONNAL LTS FEED.
0P	ENG.CDT - PRE-HEATER	4C	HOTESS CHIME P. RACK SW.	12I	RR JCT BOX 12V IGNITION	21H	EXTERIOR LTS-HAZARD SIGNAL
0R	SOUND SYSTEM RELAY GROUND	5	AISLE LTS FEEDING	12I	FR JCT PANEL 12V IGNITION	21M	AUX. LTS - DIRECTIONAL LH
0SA	BOSCH ALTERNATOR GROUND	5N	EMERGENCY LTS	12IA	FR JCT PANEL 12V IGNITION	23	RIGHT DIRECTIONNAL LTS
0SA	PARCEL RACK LTS SWITCH	5N0	SPEED SIGNAL HIGHER 5MPH	12IA	RR JCT PANEL 12V IGNITION	23A	RIGHT DIRECTIONNAL LTS SIGN.
0SB	PARCEL RACK LTS SWITCH	5NC	SPEED SIGNAL LOWER 5MPH	12IB	FR JCT PANEL 12V IGNITION	23BB	RIGHT DIRECTIONNAL LTS FEED.
0SC	PARCEL RACK LTS SWITCH	6	AISLE LTS	12IB	STEERING BOX ECU FEEDING	23H	EXTERIOR LTS-HAZARD SIGNAL
0SE	PARCEL RACK LTS SWITCH	7B	ENTRANCE DOOR FEED.-24V HW	12IC	FR JCT PANEL 12V IGN EATON	23K	RIGHT DIRECT. LTS W/KNELLING
0SF	PARCEL RACK LTS SWITCH	9	INTERIOR LTS-ENGINE CPT	12ID	FR JCT PANEL 12V IGN EATON	23M	AUX LTS - DIRECTIONAL RH
0SG	PARCEL RACK LTS SWITCH	9F	INTERIOR LTS - FR-SERV. CPT	12ID	12 VOLTS DISC.SW. INTERCOM	24	24 VOLTS BATTERY DIST.
0SH	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-LUGGAGE CPT	12IN	FR JCT PANEL 12V DISC.SW.	24	24 V. DISC. FRONT DIST.
0SJ	PARCEL RACK LTS SWITCH	10	INTERIOR LTS-FR SERV. CPT	12J	FR JCT PANEL 12V DISC.SW.	24A	BATT. JCT PANEL 24V DISC SW
0SS	SOUND SYSTEM GROUND	10A	INTERIOR LTS-LUGGAGE CPT	12K	FR JCT PANEL 12V DISC.SW.	24A	24V BOOSTER BLOCK
00SS	SOUND SYSTEM GROUND	10A	INTERIOR LTS-LUGGAGE CPT	12L	CORNRING LTS FEEDING	24A	FR JCT PANEL 24V DISC. SW
0S2	RADIO GROUND	10A	AUX. COMPRESSOR CLUTCH	12LX	CLUSTER 12V HOT WIRE	24A	RR JCT PANEL 24V DISC. SW
0S3	VIDEO GROUND	10B	INTERIOR LTS-LUGGAGE CPT	12P	12 VOLTS BATTERY JCT BLOCK	24B	FR JCT PANEL 24V DISC. SW
0T	LAVATORY FAN & PUMP	10C	INTERIOR LTS-LUGGAGE CPT	12R	12 VOLTS MEMORY RADIO	24BE	BATTERY MONITOR
0T	SPEED SW. CONNECTOR	10E	INTERIOR LTS-BATTERY CPT	12P	12V POWER OUTLET	24C	FR JCT PANEL 24V DISC SW
0T1	DASH ACC. GROUND	10H	AUX. COMPRESSOR CLUTCH	12SB	12V SOUND SYSTEM FEEDING	24D	24 V. HOT WIRE FEEDING
0T2	CLUSTER ACC. GROUND	10L	AUX. COMPRESSOR CLUTCH	12SS	12V SOUND SYSTEM FEEDING	24D	FR JCT BOX 24V HOT WIRE
0T2	WINDOW AWNING	10X	AUX. COMPRESSOR CLUTCH	12S	12 V RADIO FEEDING		
0T3	ALTERNATOR MODULE	11	DESTINATION SIGN	12S1	12 V RADIO FEEDING		
		11A	DESTINATION SIGN	12S1A	12V DVD KARAOKE FEEDING		
				12S2	12 V RADIO FEEDING		

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
24DD	FR JCT BOX 24V HOT WIRE	28H	T.T.LT MODULE - HI A/C PRES.	48	ENTRANCE DOOR OPEN SIGNAL	69	DAMPER MIX LIMIT SWITCH
24DS	WIRELESS MICRO FEEDING	28T	T.T.LT MODULE - LO A/C PRES.	48A	ENTRANCE DOOR OPEN SOL.	70	HAT RACK & NIGHT LTS FEEDING
24E	24 VOLTS POWER DISTRIBUTION	29	A/C & HEAT SYS.-DR'S HTR	48B	ENTRANCE DOOR OPEN SIGNAL	72	SUN VISOR - FEED
24E	RR JCT PANEL 24V DISC SW	29H	HVAC DASH MODILE	48C	ENTRANCE DOOR SYSTEM	72A	SUN VISOR RH
24F	RR JCT PANEL 24V DISC SW	30A	GALLEY SWITCH SIGNAL	48D	ENTRANCE DOOR SYSTEM	72B	SUN VISOR RH
24H	RR JCT PANEL 24V DISC SW	30J	GALLEY SWITCH LED	48W	ENTRANCE DOOR SEDAN	72C	SUN VISOR LH
24I	FR JCT PANEL 24V IGNITION	31B	WIPER & WASHER SYSTEM	49	ENTRANCE DOOR CLOSE SIGNAL	72D	SUN VISOR LH
24IA	RR JCT PANEL 24V IGNITION	32	EXTERIOR LTS-BACK-UP	49A	ENTRANCE DOOR SYSTEM	74	R.H. READING LAMP FEEDING
24IA	FR JCT PANEL 24V IGNITION	32B	EXTERIOR LTS-BACK-UP	49B	ENTRANCE DOOR SYSTEM	74A	R.H. HOTESS CHIME FEEDING
24IB	FR JCT PANEL 24V IGNITION	35	ENTRANCE STEP LIGHTS	50	AIR DRYER	74B	WCL R.H. READING LAMP FEED.
24IF	FR JCT PANEL 24V IGNITION	36	ENGINE BRAKE SYSTEM	52	ALARM & SIGNAL-ELEC.HORN	74D	READING LAMP SWITCH
24K	RR JCT PANEL 24V DISC SW	36A	ENGINE BRAKE SYSTEM & RET.	52A	ALARM & SIGNAL-ELEC.HORN	74J	READING LAMP INDICATOR SW.
24L	RR JCT PANEL 24V DISC SW	37	LAVATORY LTS FEEDING	52B	PNEUMATIC HORN	75	L.H. READING LAMP FEEDING
24M	RR JCT PANEL 24V DISC SW	38	FLUORESCENT RELAY FEEDING	53	ALARM & SIGNAL-ELEC.HORN	75A	L.H. HOTESS CHIME FEEDING
24P	FR JCT PANEL 24V DISC SW	38A	R.H. FLUORESCENT	53B	WIPER & WASHER SYSTEM	76	FUEL TANK GAUGE
24PV	MICRO-WAVE INVERTER	38B	L.H. FLUORESCENT	53C	WIPER & WASHER SYSTEM	76C	LOW FUEL T.T.LT
24R	24V STARTER RELAY	38C	FLUORESCENT FEEDING	53E	WIPER & WASHER SYSTEM	76M	FUEL PRIME PUMP
24R	SCENIC VIEW SIGNAL ON	39	INTERIOR LTS-DRIVER'S LTS	53J	WIPER & WASHER SYSTEM	76P	FUEL PRIME PUMP FEEDING
24SB	24V SOUND SYSTEM FEEDING	39D	INTERIOR LTS - DRIVER' LTS	55	EXTERIOR LTS-HI BEAM	77B	A/C SYS. - LIQ. SOL. VALVE
24SS	24V SOUND SYSTEM FEEDING	41	A/C SYS.-COND FAN MOTOR	57	EXTERIOR LTS-HI BEAM	77C	A/C & HEAT SYS.-COMPRESSOR
24S1	AMPLIFIER FEEDING	41A	A/C SYS.-COND FAN MOTOR	57A	EXTERIOR LTS-HI BEAM	77H	A/C SYS.-LIQ. SOL. VALVE
24S2	AMPLIFIER FEEDING	41B	A/C SYS.-COND FAN MOTOR	57B	A/C & HEAT SYS.-WATER PUMP	81	EXTERIOR LTS-STOP SW
24S3	VIDEO FEEDING	42	A/C SYS.-COND FAN MOTOR	57C	PRE-HEAT WATER HEATER	82	EXTERIOR LTS-STOP SIGNAL
24S4	VIDEO FEEDING	42A	A/C SYS.-COND FAN MOTOR	57C	A/C & HEAT SYS.-WATER PUMP	82A	EXTERIOR LTS-STOP SIGNAL
24T	RR JCT PANEL 24V DISC SW	42A	A/C SYS.-COND FAN MOTOR	57C	A/C & HEAT SYS.-WATER PUMP	82B	EXTERIOR LTS-STOP LTS
24VA	24 VOLTS BATTERY EQUALIZER	43	PARCEL RACK A/C	57E	A/C & HEAT SYS.-WATER VALV	82L	EXT. LTS-STOP LTS & CYCLOP
24VD	24V HOT WIRE FEED	43A	PARCEL RACK A/C	57W	PRE-HEAT WATER HEATER	82R	EXTERIOR LTS-STOP LTS
24VF	24 VOLTS FRONT DISTRIBUTION	43B	PARCEL RACK A/C	58	EXTERIOR LTS-LO BEAM	83	ENG. CTR-MAST. KEY SW ACC.
24VI	24 VOLTS IGNITION REAR DIST.	43C	PARCEL RACK A/C	58A	EXTERIOR LTS-LO BEAM	83A	24V&12V CUT RELAY COIL
24VR	24 VOLTS REAR DISTRIBUTION	43D	PARCEL RACK A/C	58B	EXTERIOR LTS-LO BEAM	83B	24V&12V CUT RELAY COIL
24Y	24 VOLTS POWER GALLEY	43E	PARCEL RACK A/C	59A	ENGINE BRAKE SYSTEM	84	ENG. CTR-MAST KEY SW START
24WC	WCL PUMP FEEDING	43F	PARCEL RACK A/C	61	EXTERIOR LTS-24V FEED SW	84A	ENG. CTR-MAST KEY SW START
24WL	WCL PUMP FEEDING	43G	PARCEL RACK A/C	61A	EXTERIOR LTS-HEAD SIGNAL	84J	ENG. CTR-MAST KEY SW START
24WR	WCL POWER ACCES.	43M	PARCEL RACK A/C	62	LAVATORY INDICATOR	85	24V IGNITION SIGNAL
25	EITHER ALTERNAT. RUN SIGNAL	43X	PARCEL RACK A/C	63	EXTERIOR LTS-CLEAR. FEED	85A	24V IGN DASH INSTRUMENT.
25A	TT.LT. ALTERNATOR #1	44	EXTERIOR LTS-FOG	63B	EXTERIOR LTS-CLEARANCE	85C	24V IGNITION - FEED
25A1	BOSCH ALTERNATOR SIGNAL D+	44A	EXTERIOR LTS-FOG	63C	EXT. LTS-MARKER SIGNAL	85F	RAD. FAN CONTROL W/RETARD
25A2	BOSCH ALTERNATOR SIGNAL D+	44B	EXTERIOR LTS-FOG	63D	BLINKER RELAY	85W	OUT SPEED INTERLOCK-24V IGN.
25B	EXT. LTS-DAYTIME RUN LTS	44C	EXTERIOR LTS-FOG	63E	BLINKER RELAY	85X	ABS-24V IGN
25D	BOTH ALTERNATOR RUN SIGNAL	44D	FOG,LTS & HVAC FEEDING	63F	EXT. LTS-MARKER BLINKER	85Y	ABS-WARNING LT
25K	T.T LT. ALTERNATOR #2	44E	EXTERNAL LTS - FOG	64	DRIVER'S FAN SPEED CTR	86	ENG. CTR-STARTER SOL.
26	DR'S & ENT. WINDOW LIFTER	45A	A/C & HEAT SYSTEM FULL AIR	64A	A/C SPARE	86A	ENG. CTR-STARTER RELAY COIL
26A	CIGAR LIGHT. & POW.OUTLET LH	45B	A/C & HEAT SYS.-WATER PUMP	64B	A/C SPARE	86F	TELL TALE STARTER ON
26B	DRIVER'S WINDOW LIFTER	45C	A/C & HEAT SYS.-WATER VALV	65	FOOT DAMPER MOTOR	86T	TELL TALE STARTER ON
26C	DRIVER'S WINDOW LIFTER	45D	A/C & HEAT SYS.-WATER VALV	65A	FOOT DAMPER MOTOR	87B	ENGINE CTR-24V IGNITION
27	LAVATORY ALARM	45G	A/C & HEAT SYS.-DR'S HTR	65D	DRIVER'S REC. DAMPER	88	ENGINE CTR-RR START SIGNAL
		46	EXTERIOR LTS-MARKER	66	A/C PASSENGER - ON/OFF		
		46A	EXTERIOR LTS-AUX LTS RESIS.	67A	A/C & HEAT SYSTEM		
		46C	EXTERIOR LTS-MARKER	68	DASH & DEFROST DAMPER MOT		
		46D	EXTERIOR LTS-AUX LTS RESIS.	68A	DASH & DEFROST DAMPER MOT		

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
89	ENGINE CTR-RR START SIGNAL	124	WORLD TR.-SENSOR POWER	136	MICRO-WAVE OVEN SWITCH	147C	ETHER COLD START
90B	ENG. CTR-MAST KEY SW FEED	124A	WORLD TRANSM-SENSOR PWR	136A	GALLEY LAMP	148	ABS SYSTEM-VALVE
91	PARKING BRAKE SW SIGNAL	125	LAVATORY FAN	136A	WORLD TRANSM-12V BATTERY	148	WORLD TR.-OUTPUT SPEED LO
91A	DDEC -FAST IDLE SIGNAL	125	WORLD TR-RETARDER INDICAT.	136A1	WORLD TRANSM-12V BATTERY	149	WORLD TR.-TURBINE SPEED H
91B	D.R.L. CANCEL RELAY	125W	WORLD TR-RETARDER INDICAT.	136A2	WORLD TRANSM-12V BATTERY	149	ABS SYSTEM-SENSOR
91C	PARKING BRAKE - T.T.LT	126	24 V IGN. SPEED SWITCH	136AA	WORLD TRANSM-SHIFTER PWR	149A	ABS SYSTEM
91J	FAST IDLE - JUMPER SW.	126	24 V IGN. SPEED SWITCH	136V	WORLD TRANSM-12V BATTERY	150	WORLD TR.-ENGINE SPEED LO
91W	WCL PARKING BRAKE SIGNAL	126A	KNEELING SYSTEM	136W	WORLD TRANSM-12V BATTERY	150	DDEC -ECM BATTERY GRD
92	BATT. EQUAL.-CHECK BALANCE	126AA	KNEELING SYSTEM	136X	WORLD TRANSM-12V BATTERY	150A	DDEC -ECM BATTERY GRD
93	BATT. EQUALIZ.-CHECK LO/HI	126B	HI-BUOY SIGNAL	137	WORLD TRANSM-RETARDER	151	DDEC -ECM BATTERY GRD
95A	ENG. BRAKE & RETARDER SYS.	126C	KNEELING SYSTEM	137	RR VIEW MIRROR	151	ATC VALVE
95B	ENG. BRAKE & RETARDER SYS.	126D	KNEELING SYSTEM	137A	RR VIEW MIRROR	152	ATC VALVE
97	TACHOMETER SIGN.-NOT USED	126F	KNEELING SYSTEM	137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT
100	INTERIOR LTS RELAY COIL	126G	KNEELING SYSTEM	137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)
100	INDIRECT LTS FEEDING	126H	SPEED SIGN 5NC - 24V	137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED
100A	INDIRECT LTS RELAY COIL	126K	KNEELING SYSTEM	137E	RR VIEW MIRROR	157	ABS SYSTEM-FEED
100B	INDIRECT LTS FEEDING	126L	KNEELING SYSTEM	137F	RR VIEW MIRROR	157A	ABS SYSTEM-FEED
100C	INDIRECT LTS FEEDING	126P	KNEELING SYSTEM	137H	RR VIEW MIRROR	157B	ABS SYSTEM
101	24 VOLTS POWER STARTER	126R	KNEELING SYSTEM	137J	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC
101	WORLD TR.- LO SIGN SOL.LO	126S	KNEELING SYSTEM	137K	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW
102	24 VOLTS A/C DISTRIBUTION	126T	KNEELING SYSTEM	137L	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD
102	WORLD TRANSM.-SOL. SUPPLY	126W	KNEELING SYSTEM	137M	RR VIEW MIRROR FEED	162	WORLD TRANSM-PRESS. SW C
102A	BOSCH ALTERNATOR FEEDING	126W	WORLD TRANSM-NOT USED	137R	WORLD TRANSM-RETARDER	163	WORLD TR.-RETARDER ENABLE
103	WORLD TRANSM.- B.SOL.LO	127	WORLD TRANSM. - H SOL.	137T	MIRROR HEAT SW-JUMPER	164	WORLD TR.-RET. ACTUAT. SIGN
103	LOW BUOY SYSTEM	127	24HOT WIRE PREHEAT	138	WORLD TR.-RETARDER TEMP	165	WORLD TR.-OIL LEVEL SIGNAL
104	WORLD TR. -G SOL.	127A	PRE-HEAT WATER HEATER	138	ABS SYSTEM-SENSOR	166	WORLD TRANSM. OUTPUT 7
105W	WORLD TR-SOL.-RET.OIL TT.LT	127B	PRE-HEAT WATER HEATER	138A	ABS SYSTEM-SENSOR	167	W. TR.-OUT SPEED INTERLOCK
107	WORLD TR. - SOL. SUPPLY	127S	PRE-HEAT WATER HEATER	139	ABS SYSTEM-VALVE	169	WORLD TRANSM-PRE-SELECT #1
110	WORLD TR.-F SOL. LO	127W	PRE-HEAT WATER HEATER	140	WORLD TR.-OUTPUT SPEED HI	170	WORLD TRANSM-SHIFTER
112	WORLD TR.-SPARE OUTPUT (+)	128	WORLD TRANSM-B SOL.	140	WORLD TR.-TURBINE SPEED LO	170C	LUGGAGE DOOR LOCK-T.T.LT
113W	WORLD TR.-REVERSE WARNING	128A	PRE-HEAT WATER HEATER	140	ABS SYSTEM-VALVE	170D	LUGGAGE DOOR LOCK-FEED
114	INTERIOR LT-DASH LT RHEOS.	128B	PRE-HEAT WATER HEATER	141	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN
114A	INTERIOR LT-DASH LT RHEOS.	128W	PRE-HEAT WATER HEATER	141	WORLD TR.-ENGINE SPEED HI	170F	LUGGAGE DOOR LOCK-FEED
114B	INT. LT-DASH LT RHEOST.FEED	129	WORLD TRANSM-E SOL.	142	ABS SYSTEM-VALVE	170G	LUGGAGE DOOR LOCK-FEED
115	DDEC -COOLANT LEVEL	129	PRE-HEAT WATER HEATER	143	ABS SYSTEM-SENSOR	170K	LUGGAGE DOOR-LOCK SIGN
115W	WORLD TR.-DO NOT SHIFT SIGN	129B	PRE-HEAT WATER HEATER	143A	ABS SYSTEM-SENSOR	170L	LUGG DOOR LOCK-SIGN T.T.LT
116	WORLD TR.-SOL. SUPPLY	130	WORLD TRANSM-SOL. SUPPLY	143A	WORLD TRANS-BATERY GRD	170N	LUGG DOOR LOCK-SIGN T.T.LT
116B	A/C & HEAT SYSTEM-DR'S HTR	130	EVAP. FAN MAIN CABLE	143W	WORLD TRANSM-BATTERY GRD	170R	LUGG DOOR LOCK-SIGN. T.T.LT.
116C	A/C SYS.-TRIG. DEFROST	131	WORLD TRANSM-D SOL.	143X	WORLD TRANSM-BATTERY GRD	170S	LUGG DOOR LOCK-SIGN T.T.LT
117A	OIL TEMP. EATON TRANSM.	132	WORLD TRANSM-ENGINE BRAKE	143Y	WORLD/EATON TRANSM.BATT.GRD	170T	LUGG DOOR LOCK-SIGN T.T.LT
119	WORLD TRANSM-ENGINE BRAKE	133	GALLEY HEATING CONTAINER	144	ABS SYSTEM-SENSOR	170V	LUGG DOOR LOCK-SIGN T.T.LT
120	WORLD TRANSM-A SOL.	133A	GALLEY HEATING CONTAINER	144A	ABS SYSTEM-SENSOR	170W	LUGGAGE DOOR LOCK-FEED
121	WORLD TRANSM-SOL.SUPPLY	133B	GALLEY HEATING CONTAINER	145	ABS SYSTEM	170X	LUGG DOOR LOCK-SIGN T.T.LT
123	WORLD TR.-NEUTRAL START	133C	GALLEY HEATING CONTAINER	146	ABS SYSTEM	170Y	LUGGAGE DOOR LOCK-FEED
123A	ALARM & SIGNAL-FIRE DETECT.	134	GALLEY HEATING CONTAINER	146A	WORLD TRANSM-12V IGNITION	170Z	LUGGAGE DOOR LOCK
123B	ALARM & SIGNAL-FIRE DETECT.	134A	GALLEY HEATING CONTAINER	146AA	WORLD TRANSM-DIAGN.CONN.	171	WORLD TRANSM-SHIFTER
		135	GALLEY HEATING CONTAINER	147	WORLD TRANSM-OIL TEMP	172	WORLD TRANSM-SHIFTER
		135A	WORLD TR.-RES MODULE RET.	147	ABS SYSTEM-VALVE	173	WORLD TRANSM-SHIFTER
		135B	A/C & HEAT SYS.-AIR SENSOR	147A	ETHER COLD START		
		135C	A/C & HEAT SYS.-AIR SENSOR				

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
174	WORLD TRANSM-SHIFTER		VALVE		OUTPUT		
175A	WORLD TRANSM-SHIFTER	305A	WCL DOOR OPEN SIGNAL	916	DDEC-SENSOR SUPPLY (5VDC)		
176	WORLD TRANSM-SHIFTER	305B	WCL DOOR TOP LT.	925	J1939(+)		
180	OUTSIDE TEMP. DISPLAY	306	WCL CONTROL SYSTEM	926	J1939(-)		
180A	OUTSIDE TEMP. DISPLAY	307	WCL CONTROL SYSTEM	927	J1939(SHIELD)		
180A	WORLD TRANSM-SHIFTER	308	WCL CONTROL SYSTEM	952	DDEC-SENSOR RETURN		
180B	OUTSIDE TEMP. DISPLAY	309	WCL CONTROL SYSTEM	953	DDEC-BATTERY GRD		
180C	OUTSIDE TEMP. DISPLAY	310	EATON TRANSM. START SIGNAL	979	DDEC-ENGINE BRAKE 2 CYL.		
181	FROZEN POINT T.T.LT	311	EATON TR.LH.CONSGEAR DISPLAY	2123	FLASHER SIGNAL LTS		
181A	TEMP. CTR'L INSIDE SENSOR	312	EATON TR. NEUTRAL SIGNAL				
181B	TEMP. CTR'L INSIDE SENSOR	313	EATON TR.LH.CONSGEAR DISPLAY				
181C	THERMOMET. OUTSIDE SENSOR	314	EATON TR.LH.CONSG. GRD				
181D	THERMOMET. OUTSIDE SENSOR	315	EATON TR.ENG.COMP.12V POWER				
195	WORLD TRANSM-TRANS ID	316	EATON TR.ENG.COMP. GRD				
197	FUEL WATER FILTER	317	EATON TR.ENG.COMP.12V POWER				
197A	FUEL WATER FILTER	318	EATON TR.ENG.COMP. GRD				
200	EATON TRANSM. GRD	319	EATON TR.ENG.COMP.12V POWER				
201	WORLD TRANSM-SPARE	320	EATON TR.ENG.COMP. GRD				
202	WORLD TRANSM-SPARE	417	DDEC-LIMIT SPEED GOVERNOR				
203	WORLD TRANSM-SPARE	419	DDEC -CHEK ENGINE LIGHT				
204	WORLD TRANSM-SPARE	439	DDEC-12V IGNITION				
214	WORLD TR.-BACK-UP SIGNAL	451	DDEC-A/C FAN CLUTCH				
231	WORLD TR.-NEUTRAL SIGN GRD	505	DDEC-TACHOMETER DRIVE				
231F	WORLD TR.-NEUTRAL SIGN GRD	509	DDEC-STOP ENGINE LIGHT				
231W	W.TR.-NEUTRAL SIGN GRD WCL	510	DDEC-FAST IDLE SIGNAL				
240	DDEC -ECM 12V FEEDING	524	DDEC-ENGINE BRAKEDISABLE				
241	DDEC -ECM 12V FEEDING	525	DDEC-FAST IDLE SIGNAL				
253	24V SIGNAL GALLEY INVERTER	528	DDEC-STOP ENG. OVERRIDE				
254	GALLEY REFRIGERATOR	531	DDEC-CRUISE CLUTCH CUT OUT				
254A	GALLEY REFRIGERATOR	540	DDEC-CRUISE ENABLE T.T.LT				
254F	GALLEY REFRIGERATOR	541	DDEC-CRUISE SET SW				
255	GALLEY COFFEEMAKER	542	INPUT PARK BRAKE INTERLOCK				
255A	GALLEY COFFEEMAKER	543	DDEC-CRUISE BRAKE PEDAL				
255B	GALLEY COFFEEMAKER	544	DDEC-CRUISE ON/OFF SW				
260	WINDOW AJAR-T.T.LT	545	DDEC-CRUISE RESUME SW				
290	FAN CLUTCH RADIATOR-FEED	555	DDEC-FAN CLUTCH SPEED#1				
290A	FAN CLUTCH RADIATOR-FEED	556	DDEC-VEHICULE SPEED (+)				
291	FAN CLUTCH RADIATOR SPD 1	557	DDEC-VEHICULE SPEED (-)				
292	FAN CLUTCH RADIATOR SPD 2	563	DDEC-FAN CLUTCH SPEED#2				
292J	FAN OVERRIDE LTS SWITCH	564	DDEC-DIGTAL OUTPUT				
300	WCL POWER SYSTEM & ACCESS.	565	DDEC-ENGINE BRAKE ACTIVE				
300A	WCL POWER SYSTEM SW.	583	DDEC-ENGINE BRAKE 4 CYL.				
301J	WCL POWER SW. JUMPER LED	900	DDEC-DATA LINK (+)				
301	WCL SIGNAL POWER SW.	900A	EATON-DATA LINK(+)				
302	WCL DOOR AJAR TTLT & ALARM	901	DDEC-DATA LINK (-)				
304	WCL DOOR TOP LT.	901A	EATON-DATA LINK(-)				
305	WCL PARKING BRAKE SOL.	908	DDEC-HYDRAU. PWM#1				