

RELAYS NUMBER CODE

No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION	No.	PAGE	COIL V	#PREV.	LOCATION	FUNCTION
R 1	1.1	24V	561991	FR JCT BOX	IGNITION (24) FR	R 63	15.3	24V	560772	A/C JCT BOX	EVAPORATOR FAN – TIMER RLY
R 2						R 64	27.1	24V	561005	GALLEY PANEL	INVERTER CUT OFF
R 3						R 65	28.4	24V	OPTION	HAT RACK	SCENIC VIEW CAMERA
R 4	4.1	24V	561005	RR JCT BOX	STARTING MOTOR	R 66	28.3	24V	561707	S.S. PANEL	VIDEO TRIGGER
R 5	5.1	24V	561707	FR JCT BOX	CRUISE CTR BRAKE CUT-OFF	R 67	28.1	12V	562092	S.S. PANEL	RARIO TRIGGER
R 6	4.1	24V	561707	UNDER DASH R.H.	ANTI-THIEF STARTING	R 68	28.1	24V	561991	S.S. PANEL	S.S. ACC. SWITCH
R 7	5.1	24V	561707	FR JCT BOX	DDEC FAST IDLE SIGNAL	R 69	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 8						R 70	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 9	9.3	24V	561707	RR JCT BOX	BACK-UP LTS	R 71	12.1	24V	561707	FR JCT BOX	LUGG DOOR UNLOCK TT LT
R 10	6.3	24V	561707	FR JCT BOX	EATON TRANSM.	R 72	29.1	24V	561707	POWER JCT BOX	WCL-SYTEME ON
R 11						R 73	29.1	24V	561707	POWER JCT BOX	WCL-DOOR OPEN SW. SIGNAL
R 12	7.2	12V	562092	FR JCT BOX	ELECTRICAL HORNS	R 74	12.1	12V	562092	RR JCT BOX	LUGG DOOR LOCK
R 13	9.3	24V	561707	FR JCT BOX	FOG LTS-12V	R 75	12.1	12V	562092	RR JCT BOX	LUGG DOOR UNLOCK
R 14	9.1	24V	561707	FR JCT BOX	BLINKER	R 76	9.3	24V	561707	RR JCT BOX	STOP LTS-ENGINE BRK & RETARDER SYST.
R 15	15.4	24V	561707	FR JCT BOX	UPPER FAN DEFROST	R 77	9.2	12V	562092	UNDER DASH	AUDIBLE FLASHER RLY
R 16	9.1	24V	561707	FR JCT BOX	FRONT CLEARANCE LIGHT	R 78	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#1
R 17	9.1	24V	561707	RR JCT BOX	TAIL LICENCE. RR LTS	R 79	8.1	24V	561707	RR JCT BOX	DDEC FAN CONTROL SPEED#2
R 18	9.1	24V	561707	FR JCT BOX	DAYTIME RUN LTS-CUT-OUT	R 79	27.1	24V	561707	GALLEY PANEL	REFREGIRATOR
R 19	9.1	24V	561707	FR JCT BOX	HI-BEAM	R 80	9.3	24V	561707	RR JCT BOX	CYCLOP LTS WITH BRAKE
R 20	9.1	24V	561707	FR JCT BOX	LO-BEAM	R 81	26.1	24V	561707	LAVATORY SW.	LAVATORY TIMER PUMP
R 21	9.2	24V	561707	FR JCT BOX	LH DIRECTIONNAL LTS	R 82	21.1	24V	561707	FR JCT BOX	RETARDER SYSTEM
R 22						R 83	14.4SP	24V	561707	RR JCT BOX	WATER PUMP RLY – PROHEAT OPTIONAL
R 23	9.2	24V	561707	FR JCT BOX	RH DIRECTIONNAL LTS	R 84	15.2	24V	561707	RR JCT BOX	HVAC ON-OFF SIGNAL (FULL AIR)
R 24	9.2sp1	24v	561707	FR JCT BOX	RH CORNERING LTS	R 85	15.2	24V	561707	FR JCT BOX	HVAC DR'S REC. DAMPER CYL. L.H.
R 25	9.2sp1	24v	561707	FR JCT BOX	LH CORNERING LTS	R 86	15.2	24V	561707	RR JCT BOX	HVAC MODE COOL/HEAT
R 26	9.3	24V	561707	RR JCT BOX	STOP LTS	R 86	18.1	24V	561707	FR SERV. COMPT.	KNEELING SYSTEM
R 27	11.3	24v	561707	FR JCT BOX	AISLE LTS	R 87	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #1
R 28	11.2	24V	561707	FR JCT BOX	DASH LTS RHEOSTAT	R 87	18.1	24V	561707	FR SERV. COMPT.	KNEELING SYSTEM
R 29	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 88	4.1	24V	561707	FR JCT BOX	LATCHING 24V CUT OUT SW.
R 30	15.3	24V	561005	A/C JCT BOX	EVAPORATOR FAN	R 88	18.1	24V	561707	FR SERV. COMPT.	KNEELING SYSTEM
R 31	15.3	24V	561707	FR JCT BOX	WATER VALVE & BYPASS	R 89	15.3	24V	561707	FR JCT BOX	WATER PUMP RELAY
R 32	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT REAR	R 90	18.1	24V	561707	FR JCT BOX	KNEELING CANCELLATION
R 33						R 91					
R 34	15.1	24V	561707	RR JCT BOX	A/C RAD. FAN CLUTCH (PARCEL RACK)	R 94	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-LH
R 35	15.3	24V	561707	FR JCT BOX	WATER PUMP	R 95	9.3	24V	561707	RR JCT BOX	AUX READ LAMP-RH
R 36	15.1	24V	561707	RR JCT BOX	A/C COMPR. CLUTCH (PARCEL RACK)	R 96	29.1	24V	561707	POWER JCT BOX	WCL – DOOR AJAR SIGNAL
R 37	11.4	24V	561707	RR JCT BOX	READING LAMP	R 97	29.1	24V	561707	POWER JCT BOX	WCL – DOOR AJAR PARKING BRAKE
R 38	11.4	24V	561707	RR JCT BOX	READING LAMP	R 98	29.1	24V	561707	POWER JCT BOX	WCL – ALTERNATOR SIGNAL
R 39	11.5	24V	561707	RR JCT BOX	24 V FLUORESCENT	R 99	8.1	24V	561707	RR JCT BOX	RADIATOR FAN CLUTCH
R 40	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 103	15.1	24V	561707	RR JCT BOX	PARCEL RACK VENTILATION
R 41	15.3	24V	561005	A/C JCT BOX	CONDENSER FAN	R 104	15.1	24V	561707	RR JCT BOX	PARCEL RACK VENTILATION
R 42	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 105	15.1	24V	561707	RR JCT BOX	PARCEL RACK VENTILATION
R 43						R 107	21.1	24V	561707	FR JCT BOX	ENGINE BRAKE PRESELECT #2
R 44	1.1	24V	561991	POWER JCT BOX	12 V. CUT-OUT FRONT	R 108					
R 45	11.4	24V	561707	RR JCT BOX	INDIRECT LTS	R 109	5.1	24V	561707	RR JCT BOX	THROTTLE INHIBIT WITH WCL
R 46						R 110					
R 47	27.1	24V	561707	GALLEY PANEL	COFFEE CONTAINERS	R 111	4.1SP2	24V	561707	POWER JCT BOX	HEATER RUN. WITH CHARGER 110V ACTIVED
R 48	27.1	24V	561707	GALLEY PANEL	COFFEE MAKER	R 112	4.1SP2	24V	561707	POWER JCT BOX	HEATER RUN. WITH CHARGER 110V ACTIVED
R 49	22.1	12V	562092	FR JCT BOX	12V ABS – ENGINE BRAKE	R F1	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#1 OPT. RETARDER
R 50						R F2	8.1	24V	561707	RR JCT BOX	FAN CLUTCH SP#2 OPT. RETARDER
R 51	11.2	24V	561707	FR JCT BOX	DRIVER'S LTS KEYLERSS ALARM	R F3	8.1	24V	560772	RR JCT BOX	TIME DELAY FAN CLUTCH
R 52	22.1	12V	562092	FR JCT BOX	12V ABS – RETARDER	R LA	24.1	24V	561707	RH UNDER DASH	ENTRANCE DOOR SYSTEM
R 53	1.1	24V	561991	RR JCT BOX	IGNITION 24V RR	R LO	24.1	24V	561707	RH UNDER DASH	ENTRANCE DOOR SYSTEM
R 54	2.1	24V	561707	RR JCT BOX	IGNITION 12V RR	R LT	24.1	24V	561707	RH UNDER DASH	ENTRANCE DOOR SYSTEM
R 55						R LV	24.1	24V	561707	RH UNDER DASH	ENTRANCE DOOR SYSTEM
R 56						V IM1	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 1 SPEED INTERLOCK
R 57						V IM2	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 2 ENG. BRK DISABLE
R 58						V IM3	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 3
R 59	9.3sp1	24V	561707	RR JCT BOX	DOCKING LTS	V IM4	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-OUTPUT 4 RETARD. ON SIGNAL
R 60	8.1SP1	24V	561707	FR JCT BOX	PARKING BRAKE APPLY WITH WCL	V IMN	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-NEUTRAL SIGNAL
R 61	15.3	24V	561707	A/C JCT BOX	EVAPORATOR FAN – SPEED RLY	V IMR	6.1	12V	562092	FR JCT BOX	VIM WORLD TR.-B/U SIGNAL
R 62	5.1	24V	561707	FR JCT BOX	DDEC PARK. BRAKE SIGNAL						

RELAYS NUMBER CODE

No. PAGE COIL V #PREV. LOCATION FUNCTION

No. PAGE COIL V #PREV. LOCATION FUNCTION