

NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM
Ø	GRD BATTERY A TO GRD STUD	7	INTERIOR LTS-STEPWELL LTS	15	WIPER & WASHER SYSTEM	31A	A/C & HEAT SYSTEM-PRESSURE SW
Ø	GRD BATTERY A1 TO GRD STUD	8A	INTERIOR LTS-AISLE & EMERG. LTS	15A	ALARM & SIGNAL-DIF. OIL TEMP	31B	A/C & HEAT SYSTEM-PRESSURE SW
Ø	GRD STARTER MOTOR TO GRD STUD	8B	INTERIOR LTS-AISLE & EMERG. LTS	16	SPEEDOMETER SIGNAL (·)	31B	WIPER & WASHER SYSTEM
Ø	FJP - GRD	9	INTERIOR LTS-ENGINE CPT	16T	SPEED SW SIGNAL IN (·)	30	GALLEY SYSTEM
Ø	RJB - GRD	9	INTERIOR LTS-RR JCT BOX	17	EXTERIOR LTS-FLASHER UNIT	30A	GALLEY SYSTEM
Ø	BJP - GRD	9	INTERIOR LTS-FR SERVICE CPT	17A	EXTERIOR LTS-FLASHER UNIT	32B	EXTERIOR LTS-BACK-UP
ØA	RJB - GRD	9	INTERIOR LTS-FR SERVICE CPT	18	ETHER COLD START SYST.	32	EXTERIOR LTS-BACK-UP
ØA	FR SERV JCT BOX - GRD	9A	INTERIOR LTS-FR JCT PANEL	20	SPEEDOMETER SIGNAL (-)	32D	BACK-UP MONITOR
ØB	FJP - GRD	9E	CHIME-PASSENGER & HOSTESS	20T	SPEED SW SIGNAL IN (-)	32D	BACK-UP ALARM
ØB	RJB - GRD	1Ø	A/C & HEAT SYSTEM-LO PRES.	21	EXTERIOR LTS-DIRECTIONNAL LH	32M	BACK-UP MONITOR
ØB	BOOSTER BLK TO GRD STUD	1Ø	INTERIOR LTS-LUGGAGE CPT	21A	EXTERIOR LTS-DIRECTIONNAL LH	34	A/C & HEAT SYSTEM-CONDENSER
ØBE	ØØ BATTERY MONITOR	1ØA	INTERIOR LTS-LUGGAGE CPT	21B	EXTERIOR LTS-DIRECTIONNAL LH	34A	A/C & HEAT SYSTEM-CONDENSER
ØC	RJB - GRD	1ØA	A/C AUXILIARY-CLUTCH	21H	EXTERIOR LTS-HAZARD SIGNAL	34B	A/C & HEAT SYSTEM-CONDENSER
ØS	AMPLI - GRD	1ØB	INTERIOR LTS-LUGGAGE CPT	23	EXTERIOR LTS-DIRECTIONNAL RH	34C	A/C & HEAT SYSTEM-CONDENSER
ØCR	24V DISC. SW RLY GRD SIGNAL	1ØC	INTERIOR LTS-LUGGAGE CPT	23A	EXTERIOR LTS-DIRECTIONNAL RH	34D	A/C & HEAT SYSTEM-CONDENSER
ØDS	24V DISC. SW RLY GRD SIGNAL	1ØD	INTERIOR LTS-LUGGAGE CPT	23B	EXTERIOR LTS-DIRECTIONNAL RH	34E	A/C & HEAT SYSTEM-CONDENSER
ØD	RJB - GRD	11	FR. DESTINATION SIGN	23E	KNEELING-RH EXT. FLASHING LTS	34F	A/C & HEAT SYSTEM-CONDENSER
ØE	RJB - GRD	11A	FR. DESTINATION SIGN	23F	KNEELING-RH EXT. FLASHING LTS	34G	A/C & HEAT SYSTEM-CONDENSER
ØF	RJB - GRD	11B	FR. DESTINATION SIGN	23H	EXTERIOR LTS-HAZARD SIGNAL	34H	A/C & HEAT SYSTEM-CONDENSER
ØH	FJP - GRD	11C	FR. DESTINATION SIGN	24	BATTERY TO 24V CUT OUT RLY	34J	A/C & HEAT SYSTEM-CONDENSER
ØM	BACK-UP MONITOR	11D	FR. DESTINATION SIGN	24A	BOOSTER TO 24V DISC SW	35	INTERIOR LTS-STEPWELL LTS
ØMR	24V DISC. SW RLY GRD SIGNAL	11E	FR. DESTINATION SIGN	24A	RR JCT BOX 24V DISC SW	36	ENGINE BRAKE SYSTEM & RETARDER
ØMS	24V DISC. SW RLY GRD SIGNAL	11K	FR. DESTINATION SIGN	24A	FR JCT PANEL 24V DISC SW	36A	ENGINE BRAKE SYSTEM
ØP	RJB - GRD	11P	FR. DESTINATION SIGN	24B	FR JCT PANEL 24V DISC SW	36C	ENGINE BRAKE SYSTEM-ABS CANCEL
ØR	SOUND SYSTEM GRD	12	12V BATTERY TO JCT BLOCK	24BE	BATTERY MONITOR	37	LAVATORY-OCCUPIED LTS
ØSA	FJB - BATTERY GRD-SOUND SYS.	12	12V VIDEO SYSTEM	24C	FR JCT PANEL 24V DISC SW	38	FUEL WATER FILTER
ØSE	FJB - BATTERY GRD-SOUND SYS.	12A	FR JCT PANEL 12V DISC SW	24D	FR & RR JCT PANEL 24V HOT WIRE	38	INTERIOR LTS-24V FLUORESCENT
ØSF	FJB - BATTERY GRD-SOUND SYS.	12A	RR JCT BOX 12V DISC SW	24DA	A/C & HEAT. SYS.-WATER PUMP	38A	INTERIOR LTS-24V FLUORESCENT
ØS2	RADIO - BATTERY GRD	12B	FR JCT PANEL 12V DISC SW	24E	24V CUT OUT RLY TO 24V DIST.	38B	INTERIOR LTS-24V FLUORESCENT
ØS3	VIDEO - BATTERY GRD	12BE	12V BATTERY MONITOR	24F	FR JCT PANEL 24V DISC SW	38C	INTERIOR LTS-24V FLUORESCENT
ØSS	SOUND SYSTEM - BATTERY GRD	12C	RR JCT BOX 12V DISC SW	24I	FR JCT PANEL 24V IGNITION	38E	INTERIOR LTS-24V FLUORESCENT
ØØSS	SOUND SYSTEM - BATTERY GRD	12D	FR & RR JCT PANEL 12V HOT WIRE	24I	RR JCT BOX 24V IGNITION	38F	INTERIOR LTS-24V FLUORESCENT
ØT	FJP - GRD	12E	FR JCT PANEL 12V DISC SW	24IA	FR JCT PANEL 24V IGNITION	39	INTERIOR LTS-DRIVER'S LTS
ØT	FR SERVICE CPT-GRD	12F	RR JCT BOX 12V DISC SW	24IB	FR JCT PANEL 24V IGNITION	39A	INTERIOR LTS-DRIVER'S LTS
ØV	FJP - GRD	12G	FR JCT PANEL 12V DISC SW	24K	FR JCT PANEL 24V DISC SW	39B	INTERIOR LTS-DRIVER'S LTS
ØVA	GRD STUD TO BAT.EQUALIZER	12I	FR JCT PANEL 12V IGNITION	24P	FR JCT PANEL 24V DISC SW	44	EXTERIOR LTS-FOG
ØW	FJP - GRD	12IF	FR JCT PANEL 12V IGNITION	24R	BATT. CPT TO START RLY	44A	EXTERIOR LTS-FOG
ØW	WORLD TRANSM. VIM CHASSIS GRD	12IM	BACK-UP MONITOR	24S	RR JCT BOX 24V DISC SW	44B	EXTERIOR LTS-FOG
ØWA	PRE_HEAT WATER HEATER WEBASTO	12P	FR & RR JCT PANEL 12V DISC SW	24S1	24V BATTERY-SOUND SYSTEM	44C	EXTERIOR LTS-FOG & HAZARD SW
ØWB	PRE_HEAT WATER HEATER WEBASTO	12P	12V VIDEO SYSTEM	24S2	24V BATTERY-SOUND SYSTEM	45	A/C & HEAT SYSTEM-DRIVER'S CTRL
ØX	RJB - GRD	12S	12V BATTERY-SOUND SYSTEM RADIO	24S3	24V BATTERY-SOUND SYSTEM VIDEO	45	A/C & HEAT SYSTEM-WATER VALVE
ØY	ABS SYSTEM-GRD	12SA	12V BATTERY-SOUND SYSTEM	24S4	24V BATTERY-SOUND SYSTEM VIDEO	45A	A/C & HEAT SYSTEM-WATER VALVE
ØY1	ABS SYSTEM-GRD	12SB	12V BATTERY-SOUND SYSTEM	24SB	24V BATTERY-SOUND SYSTEM	45B	A/C & HEAT SYSTEM-WATER VALVE
2	A/C & HEAT SYSTEM-CONDENSER	12SC	12V BATTERY-SOUND SYSTEM	24SS	24V BATTERY-SOUND SYSTEM	45E	A/C & HEAT SYSTEM-BYPASS VALVE
2A	A/C & HEAT SYSTEM-CONDENSER	12SE	12V BATTERY-SOUND SYSTEM	24T	RR JCT BOX 24V DISC SW	46	EXTERIOR LTS-MARKER
2C	A/C & HEAT SYSTEM-CONDENSER	12SF	12V BATTERY-SOUND SYSTEM	24VA	24V BATTERY POST TO EQUALIZER	46A	EXTERIOR LTS-MARKER
2D	A/C & HEAT SYSTEM-CONDENSER	12SS	12V BATTERY-SOUND SYSTEM	24VI	RR JCT BOX 24V IGNITION	46B	EXTERIOR LTS-MARKER
2E	A/C & HEAT SYSTEM-CONDENSER	12S1	12V BATTERY-SOUND SYSTEM RADIO	24VIF	FR JCT PANEL 24V IGNITION	46C	EXTERIOR LTS-MARKER
3	A/C & HEAT SYSTEM-EVAPORATOR	12S2	12V BATTERY-SOUND SYSTEM RADIO	24VD	FR & RR JCT BOX 24V HOT WIRE	47	A/C & HEAT SYSTEM-DRIVER'S HTR
3A	A/C & HEAT SYSTEM-EVAPORATOR	12T	RR JCT BOX 12V DISC SW	24VF	FR JCT PANEL 24V DISC SW	47	A/C & HEAT SYSTEM-FULL AIR
3B	A/C & HEAT SYSTEM-EVAPORATOR	12VD	FR & RR JCT BOX 12V HOT WIRE	24VR	RR JCT PANEL 24V DISC SW	48	INTERIOR LTS-STEPWELL LTS
4	CHIME-PASSENGER & HOSTESS	12VO	12V BATTERY POST TO EQUALIZER	24X	24V SPEED SW & KNEELING	51	INTERIOR LTS-READING LTS
4A	CHIME-PASSENGER & HOSTESS	12VF	12V FR JCT PANEL	25	12VAC GEN RLY ON SIGNAL	52	ALARM & SIGNAL-ELEC. HORN
4B	CHIME-PASSENGER & HOSTESS	12VI	RR JCT BOX 12V IGNITION	25A	NOT GENERATOR-WARNING LT	52A	ALARM & SIGNAL-ELEC. HORN
4C	CHIME-PASSENGER & HOSTESS	12VR	RR JCT BOX 12V DISC SW	25B	EXTERIOR LTS-DAYTIME RUN LTS	53	ALARM & SIGNAL-ELEC. HORN
4D	CHIME-PASSENGER & HOSTESS	12W	12V HOT WIRE DDEC III FEED	25L	12VAC GEN RLY ON SIGNAL	5ØB	WIPER & WASHER SYSTEM
4E	CHIME-PASSENGER & HOSTESS	13A	ALARM & SIGNAL-LO AIR PRIM.	27	LAVATORY-EMERGENCY BUZZER	53C	WIPER & WASHER SYSTEM
5	INTERIOR LTS-EMERGENCY EXIT LTS	13B	ALARM & SIGNAL-LO AIR SEC.	28	A/C & HEAT SYSTEM-WARNING LT	53E	WIPER & WASHER SYSTEM
5A	INTERIOR LTS-EMERGENCY EXIT LTS	14	LAVATORY-FLUSHING SW	29	A/C & HEAT SYSTEM-DRIVER'S HTR	53F	WIPER & WASHER SYSTEM
5C	INTERIOR LTS-EMERGENCY EXIT LTS	15	EXTERIOR LTS-MULTI FUNC LEVEL	29A	A/C & HEAT SYSTEM-DRIVER'S HTR	53J	WIPER & WASHER SYSTEM
6	INTERIOR LTS-AISLE LTS	15	ALARM & SIGNAL-DIF. OIL TEMP	29B	A/C & HEAT SYSTEM-DRIVER'S HTR	54	SPARE-F.J.B. TO FR ROOF

NO.	SYSTEM	NO.	SYSTEM
55	EXTERIOR LTS-HI BEAM	77C	A/C AUXILIARY-LIQ. SOL.
56	TRANSM. OIL TEMP GAUGE	77H	A/C & HEAT SYSTEM-FAN CLUTCH
57	EXTERIOR LTS-HI BEAM	80	WORLD TRANSM-NEUTRAL SIGNAL GRD
57	A/C & HEAT SYSTEM-WATER PUMP	81	EXTERIOR LTS-STOP SW
57A	EXTERIOR LTS-HI BEAM	82	EXTERIOR LTS-STOP SIGNAL
57A	A/C & HEAT SYSTEM-WATER PUMP	82A	EXTERIOR LTS-STOP SIGNAL
57B	A/C & HEAT SYSTEM-WATER PUMP	82B	EXTERIOR LTS-STOP LTS
57C	PRE-HEAT WATER HEATER	82K	EXTERIOR LTS-STOP RETARDER
57D	PRE-HEAT WATER HEATER	82L	EXTERIOR LTS-STOP LTS
57E	PRE-HEAT WTR HTR PUMP	82R	EXTERIOR LTS-STOP LTS
57F	PRE-HEAT WATER HEATER	83	ENGINE CTR-MAST KEY SW ACCES
57W	PRE-HEAT WATER HEATER	84	ENGINE CTR-MAST KEY SW START
58	EXTERIOR LTS-LO BEAM	84A	ENGINE CTR-MAST KEY SW START
58A	EXTERIOR LTS-LO BEAM	85	ENGINE CTR-MAST KEY SW IGN
58B	EXTERIOR LTS-LO BEAM	85A	24V IGN DASH INSTRUMENTATION
58E	EXTERIOR LTS-LO BEAM	85B	24V IGN DASH INSTRUMENTATION
59A	ENGINE BRAKE SYSTEM	85C	ENGINE CTR-24V IGNITION
60	EXTERIOR LTS-RR & FR ROOF GRD	85C	PARKING BRAKE SWITCH
61	EXTERIOR LTS-24V FEED SW	86A	ENGINE CTR-STARTER SOL SIGN
61A	EXTERIOR LTS-HEAD SIGNAL	85Y	ABS-WARNING LT
62	LAVATORY-OCCUPIED LTS	87B	ENGINE CTR-24V IGNITION
62B	LAVATORY-OCCUPIED LTS	85X	ABS-24V IGN
63	EXTERIOR LTS-CLEARANCE	86	ENGINE CTR-STARTER SOL SIGN
63A	EXTERIOR LTS-CLEARANCE	85F	LO AIR SONALERT
63B	EXTERIOR LTS-CLEARANCE	85W	ABS-24V IGN
63C	EXTERIOR LTS-MARKER SIGNAL	88	ENGINE CTR-RR START SIGNAL
63D	EXTERIOR LTS-MARKER & TAIL	89	ENGINE CTR-RR START SIGNAL
63E	EXTERIOR LTS-CLEARANCE	90	A/C & HEAT SYSTEM-WATER PUMP
63F	EXTERIOR LTS-MARKER BLINKER	90	GALLEY SYSTEM
63H	EXTERIOR LTS-TAIL	90	DIGITAL CLOCK
63K	EXTERIOR LTS-TAIL	90A	GALLEY SYSTEM
64	DIFFERENTIAL OIL TEMP GAUGE	90B	FR JCT PANEL 24V DISC SW
65A	PRE-HEAT WATER HEATER	90B	ENGINE CTR-MAST KEY SW FEED
66B	RR JCT BOX 12V HOT WIRE	90B	GALLEY SYSTEM
67	A/C & HEAT SYSTEM	90C	ALARM & SIGNAL-FIRE DETECTOR
67A	A/C & HEAT SYSTEM	90E	GALLEY SYSTEM
67B	A/C & HEAT SYSTEM	90F	GALLEY SYSTEM
67C	A/C & HEAT SYSTEM	91	PARKING BRAKE SW SIGNAL
69	RR JCT BOX 24V HOT WIRE	91A	PARKING BRAKE SW SIGNAL
70	INTERIOR LTS-HAT RACK LTS	91B	EXTERIOR LTS-RUN LTS CANCEL
70A	INTERIOR LTS-HAT RACK LTS	91B	DDEC III-FAST IDLE SIGNAL
70C	INTERIOR LTS-HAT RACK LTS	91C	PRE-HEAT WATER HEATER
71	A/C AUXILIARY-DASH SW	92	BATTERY MONITOR-CHECK BALANCE
71B	R J B GRD-BACK UP ALARM	92A	BATTERY MONITOR-CHECK BALANCE
71H	A/C AUXILIARY-DASH SW	93	BATTERY MONITOR-CHECK LO/HI
72A	A/C AUXILIARY-DASH SW	93A	BATTERY MONITOR-CHECK LO/HI
72H	A/C AUXILIARY-DASH SW	94	HIGH BUOY SYSTEM
73	LAVATORY-NIGHT LTS	94A	HIGH BUOY SYSTEM
74	INTERIOR LTS-READING LTS	95	ENGINE BRAKE & RETARDER SYSTEM
74A	INTERIOR LTS-READING LTS	95A	ENGINE BRAKE & RETARDER SYSTEM
74B	INTERIOR LTS-READING LTS	95B	ENGINE BRAKE & RETARDER SYSTEM
75	INTERIOR LTS-READING LTS	97	TACHOMETER (-)
76	FUEL TANK GAUGE	99	A/C AUXILIARY-DASH SW
76C	LOW FUEL LT	100	INTERIOR LTS-GENERAL LTS
76L	LOW FUEL LT	100A	INTERIOR LTS-GENERAL LTS
76M	FUEL PRIME PUMP	100B	INTERIOR LTS-GENERAL LTS
76P	FUEL PRIME PUMP	100C	INTERIOR LTS-GENERAL LTS
77H	A/C & HEAT SYSTEM-CLUTCH	101	WORLD TRANSM-LO SIGNAL SOL. LO
77B	A/C AUXILIARY-LIQ. SOL.	102	A/C JCT BOX-24V DISC. SW
		102	24V STARTER TO GENERATOR
		102	WORLD TRANSM-SOL. GRD 1

NO.	SYSTEM	NO.	SYSTEM
102	WORLD TRANSM-SOL. C3	126A	KNEELING SYSTEM
104	WORLD TRANSM-SOL. FORWARD	126B	KNEELING SYSTEM
105	WORLD TRANSM-RETARDER & SUMP	126C	KNEELING SYSTEM
105W	WORLD TRANSM-RETARDER & SUMP	126G	KNEELING SYSTEM
106	WORLD TRANSM-OIL LEVEL HI	126H	KNEELING SYSTEM
107	CHARG SYST-VOLTAGE REGUL. "F"	127	WORLD TRANSM-RETARDER FEED SOL.
107	WORLD TRANSM-LOCKUP SOL. HI	127	PRE-HEAT WATER HEATER
108	WORLD TRANSM-REMOTE PWR WAKE UP	127A	PRE-HEAT WATER HEATER
108	24V DISC SW TO 24V SYSTEM	127B	PRE-HEAT WATER HEATER
108A	CHARG SYST-VOLTAGE REGUL. "B"	127W	PRE-HEAT WATER HEATER
109	WORLD TRANSM-RET. SOL. LO	127X	PRE-HEAT WATER HEATER
110	ALARM & SIGNAL-WATER TEMP	128	WORLD TRANSM-SOL. C2
110	WORLD TRANSM-LOCKUP SOL. LO	128A	PRE-HEAT WATER HEATER
111	BATTERY GRD	128B	PRE-HEAT WATER HEATER
111	WORLD TRANSM-SOL. C6	128C	PRE-HEAT WATER HEATER
112	WORLD TRANSM-SPARE OUTPUT (·)	128D	PRE-HEAT WATER HEATER
113	ALARM & SIGNAL-OIL PRESS	128E	PRE-HEAT WATER HEATER
113	WORLD TRANSM-REVERSE WARNING	128F	PRE-HEAT WATER HEATER
114	WORLD TRANSM-SPARE OUTPUT (-)	128W	PRE-HEAT WATER HEATER
114	INTERIOR LTS-DASH LT REGUL.	128X	PRE-HEAT WATER HEATER
114A	INTERIOR LTS-DASH LT	129	WORLD TRANSM-SOL. C5
114B	INTERIOR LTS-DASH LT REGUL.	129	PRE-HEAT WATER HEATER
114C	INTERIOR LTS-DASH LT	129A	PRE-HEAT WATER HEATER
115	ALARM & SIGNAL-TAG PRESS	129B	PRE-HEAT WATER HEATER
115	DDEC III-COOLANT LEVEL	130	WORLD TRANSM-SOL. GRD 3
115	WORLD TRANSM-DO NOT SHIFT SIGNAL	130A	A/C & HEAT SYSTEM-EVAPORATOR
115A	ALARM & SIGNAL-TAG PRESS	130	A/C & HEAT SYSTEM-EVAPORATOR
115B	ALARM & SIGNAL-TAG PRESS	131	24V DISC SW TO FR JCT PANEL
115C	DDEC III-COOLANT LEVEL	131	WORLD TRANSM-SOL. C4
115W	WORLD TRANSM-DO NOT SHIFT SIGNAL	132	WORLD TRANSM-ENG BRK OUTPUT (-)
116	WORLD TRANSM-LO SIGNAL SOL. HI	132W	WORLD TRANSM-ENG BRK OUTPUT (-)
116	A/C & HEAT SYSTEM-DRIVER'S HTR	133	WORLD TRANSM-RET. ACTUATOR HI
116A	A/C & HEAT SYSTEM-DRIVER'S HTR	133	GALLEY SYSTEM-CONTAINER RH
116B	A/C & HEAT SYSTEM-DRIVER'S HTR	133A	GALLEY SYSTEM-CONTAINER RH
117	WORLD TRANSM-SPARE INPUT (-)	134	WORLD TRANSM-RET. APPLY SOL. HI
117	ALARM & SIGNAL-TRANSM OIL TEMP	134	GALLEY SYSTEM-CONTAINER RH
117A	ALARM & SIGNAL-TRANSM OIL TEMP	134A	GALLEY SYSTEM-CONTAINER RH
118	WORLD TRANSM-SPARE INPUT (·)	135	WORLD TRANSM-ANALOG GRD
119	CHIME-HOSTESS & PASSENGER	135	A/C AUXILIARY-FAN
119	WORLD TRANSM-ENG BRK INPUT (·)	135A	A/C AUXILIARY-FAN
119A	CHIME-HOSTESS & PASSENGER	135B	A/C AUXILIARY-COIL SENSING
119B	CHIME-HOSTESS & PASSENGER	135C	WORLD TRANSM-RETARDER TEMP
120	12V HOT WIRE	135D	WORLD TRANSM-RETARDER RES MOD
120	WORLD TRANSM-SOL. C1	136	GALLEY SYSTEM-LAMP
120D	12V HOT WIRE	136	WORLD TRANSM-ECU POWER
120Y	VIDEO SYSTEM	136V	WORLD TRANSM-12V BATTERY
120Z	VIDEO SYSTEM	136W	WORLD TRANSM-12V BATTERY
121	WORLD TRANSM-SOL. GRD 2	136X	WORLD TRANSM-12V BATTERY
121	CIGAR LIGHTER	137	WORLD TRANSM-RETARDER
122	A/C & HEAT SYSTEM-DRIVER'S HTR	137	RR VIEW MIRROR
122	A/C & HEAT SYSTEM-FRESH AIR	137A	RR VIEW MIRROR
122	WORLD TRANSM-SOL. GRD 4	138	WORLD TRANSM-RETARDER TEMP
123	WORLD TRANSM-NEUTRAL START	138	ABS SYSTEM
123	ALARM & SIGNAL-FIRE DETECTOR	138	A/C AUXILIARY-FAN
123A	ALARM & SIGNAL-FIRE DETECTOR	138A	ABS SYSTEM
124	WORLD TRANSM-THROTTLE (HI)	138A	A/C AUXILIARY-FAN
125	LAVATORY-FAN	139	ABS SYSTEM
125	WORLD TRANSM-RETARDER INDICATOR	139	A/C AUXILIARY-FAN
125W	WORLD TRANSM-RETARDER INDICATOR	139	WORLD TRANSM-OUTPUT SPEED HI
126	WORLD TRANSM-LUBE PRESS SW.	139A	A/C AUXILIARY-FAN
126	KNEELING SYSTEM		

NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM	NO.	SYSTEM
140	A/C AUXILIARY-SHUTTER	165	WORLD TRANSM-OIL LEVEL SIGNAL	563	DDEC III-FAN CLUTCH SPEED* 2	SP12	SPARE
140	WORLD TRANSM-OUTPUT SPEED LO	168	WORLD TRANSM-SER. INTERFACE (·)	583	DDEC III-ENGINE BRAKE 4 CYL.	SP13	SPARE
140	ABS SYSTEM	170C	LUGGAGE DOOR LOCK	750	PRODRIVER-ILLUMINATION LIGHT	SP14	SPARE
141	ABS SYSTEM	170D	LUGGAGE DOOR LOCK	900	DDEC III-DATA LINK (·)	SP15	SPARE
141	WORLD TRANSM-ENGINE SPEED HI	170E	LUGGAGE DOOR LOCK	901	DDEC III-DATA LINK (-)	SP16	SPARE
142	WORLD TRANSM-SERIAL COM. A	170F	LUGGAGE DOOR LOCK	908	DDEC III-HYDRAULIC TRANSM. MOD.	SP20	SPARE
142	ABS SYSTEM	170G	LUGGAGE DOOR LOCK	916	DDEC III-SENSOR SUPPLY (5VDC)	SP21	SPARE
143	ABS SYSTEM	170H	LUGGAGE DOOR LOCK	952	DDEC III-SENSOR RETURN	SP22	SPARE
143A	ABS SYSTEM	170J	LUGGAGE DOOR LOCK	953	DDEC III-BATTERY GRD	SP23	SPARE
143	WORLD TRANSM-ECU BATTERY GRD	170L	LUGGAGE DOOR LOCK	953C	DDEC III-BATTERY GRD	SP30	SPARE
143W	WORLD TRANSM-BATTERY GRD	170M	LUGGAGE DOOR LOCK	979	DDEC III-ENGINE BRAKE 2 CYL.	SP31	SPARE
143X	WORLD TRANSM-BATTERY GRD	170N	LUGGAGE DOOR LOCK	A	A/C & HEAT SYSTEM-HI PRES.	SP32	SPARE
144	WORLD TRANSM-ECU CHASSIS GRD	170P	LUGGAGE DOOR LOCK	A1	A/C & HEAT SYSTEM-LO PRES.	SP33	SPARE
144	ABS SYSTEM	170R	LUGGAGE DOOR LOCK	A4	A/C & HEAT SYSTEM-CONTROL SW	SP34	SPARE
144A	ABS SYSTEM	170S	LUGGAGE DOOR LOCK	A5	A/C & HEAT SYSTEM-CONTROL SW	SP35	SPARE
145	ABS SYSTEM	170V	LUGGAGE DOOR LOCK	A6	A/C & HEAT SYSTEM-CONTROL SW	SP57	SPARE
146	ABS SYSTEM	170W	LUGGAGE DOOR LOCK	D1	SOUND SYSTEM-RH SPEAKER	SP60	SPARE
146	WORLD TRANSM-IGNITION SENSE	170X	LUGGAGE DOOR LOCK	D2	SOUND SYSTEM-RH SPEAKER	SP61	SPARE
146W	WORLD TRANSM-12V IGNITION	170Y	LUGGAGE DOOR LOCK	D3	SOUND SYSTEM-RH SPEAKER	SP62	SPARE
146X	WORLD TRANSM-12V IGNITION	170Z	LUGGAGE DOOR LOCK	D4	SOUND SYSTEM-RH SPEAKER	SP63	SPARE
147	WORLD TRANSM-OIL TEMP	182	PYROMETER	D5	SOUND SYSTEM-RH SPEAKER	SP69	SPARE
147	ABS SYSTEM	182A	PYROMETER	D6	SOUND SYSTEM-RH SPEAKER	SP70	SPARE
147	ETHER COLD START	197A	FUEL WATER FILTER	D7	SOUND SYSTEM-RH SPEAKER	V5	A/C & HEAT SYSTEM-DRIVER'S HTR
147A	ETHER COLD START	197B	FUEL WATER FILTER	D8	SOUND SYSTEM-RH SPEAKER	V7	A/C & HEAT SYSTEM-DRIVER'S HTR
148	ABS SYSTEM	201	WORLD TRANSM-SPARE	G1	SOUND SYSTEM-LH SPEAKER		
148	WORLD TRANSM-OUTPUT SPEED LO	202	WORLD TRANSM-SPARE	G2	SOUND SYSTEM-LH SPEAKER		
149	WORLD TRANSM-TURBINE SPEED HI	203	WORLD TRANSM-SPARE	G3	SOUND SYSTEM-LH SPEAKER		
149	ABS SYSTEM	204	WORLD TRANSM-SPARE	G4	SOUND SYSTEM-LH SPEAKER		
149A	ABS SYSTEM	205	WORLD TRANSM-SPARE	G5	SOUND SYSTEM-LH SPEAKER		
150	ABS SYSTEM-SPARE	206	WORLD TRANSM-SPARE	G6	SOUND SYSTEM-LH SPEAKER		
150	WORLD TRANSM-ENGINE SPEED LO	214	WORLD TRANSM-BACK UP SIGNAL	G7	SOUND SYSTEM-LH SPEAKER		
150	DDEC III-ECM BATTERY GRD	214A	BACK UP SIGNAL	G8	SOUND SYSTEM-LH SPEAKER		
150A	DDEC III-ECM BATTERY GRD	231	NEUTRAL SIGNAL GRD	J4	A/C & HEAT SYSTEM-DRIVER'S HTR		
151	DDEC III-ECM BATTERY GRD	240	DDEC III-ECM 12V FEEDING	L1	VIDEO SYSTEM- 110V		
151	WORLD TRANSM-SERIAL COM. B	241	DDEC III-ECM 12V FEEDING	L1	INTERIOR LTS-110V FLUORESCENT		
151	ABS SYSTEM-SPARE	251	PRODRIVER-12V HOT WIRE	L1A	INTERIOR LTS-110V FLUORESCENT		
152	ABS SYSTEM-SPARE	290	FAN CLUTCH RADIATOR	L1C	INTERIOR LTS-110V FLUORESCENT		
153	ABS SYSTEM	291	FAN CLUTCH RADIATOR SPD 1	L2A	INTERIOR LTS-110V FLUORESCENT		
153	WORLD TRANSM-SPARE INPUT (-)	292	FAN CLUTCH RADIATOR SPD 2	L2C	INTERIOR LTS-110V FLUORESCENT		
154	WORLD TRANSM-ABS RETARDER INPUT	417	DDEC III-LIMIT SPEED GOVERNOR	L8	ENG.BLK & WATER TANK-HAETER		
155	WORLD TRANSM-SPARE INPUT (-)	419	DDEC III-CHECK ENGINE LIGHT	L9	ENG.BLK & WATER TANK-HAETER		
155	ABS SYSTEM	439	DDEC III-12V IGNITION	N1	VIDEO SYSTEM- 110V		
156	WORLD TRANSM-THROTTLE POS.	440	DDEC III-12V IGNITION	N2	INTERIOR LTS-110V FLUORESCENT		
156	ABS SYSTEM	440A	DDEC III-12V IGNITION	O3	A/C & HEAT SYSTEM-DRIVER'S HTR		
156A	ABS SYSTEM	451	DDEC III-A/C FAN CLUTCH	R1	A/C & HEAT SYSTEM-DRIVER'S HTR		
156C	ABS SYSTEM	505	DDEC III-TACHOMETER DRIVE	R6	A/C & HEAT SYSTEM-DRIVER'S HTR		
156W	ABS SYSTEM	509	DDEC III-STOP ENGINE LIGHT	SH1	SHIELD WIRE GRD		
157	WORLD TRANSM-SPEEDOMETER SIGNAL	510	DDEC III-FAST IDLE SIGNAL	SH2	SHIELD WIRE GRD		
157	ABS SYSTEM	524	DDEC III-ENGINE BRAKE DISABLE	SH3	SHIELD WIRE GRD		
157A	ABS SYSTEM	525	DDEC III-FAST IDLE SIGNAL	SP1	SPARE		
157B	ABS SYSTEM	528	DDEC III-STOP ENG. OVERRIDE	SP2	SPARE		
157C	ABS SYST.-CANCEL SEC. BRK	531	DDEC III-CRUISE CLUTCH RELEASE	SP3	SPARE		
158	WORLD TRANSM-DIMMER	541	DDEC III-CRUISE SET SW	SP4	SPARE		
160	WORLD TRANSM-SER. INTERFACE (-)	543	DDEC III-CRUISE STOP SW CUT IN	SP5	SPARE		
161	WORLD TRANSM-SIGNAL GRD	544	DDEC III-CRUISE ON/OFF SW	SP10	SPARE		
161B	WORLD TRANSM-SIGNAL GRD	545	DDEC III-CRUISE RESUME SW	SP11	SPARE		
162	WORLD TRANSM-PRESS. SW C3	555	DDEC III-FAN CLUTCH SPEED* 1				
163	WORLD TRANSM-RETARDER ENABLE	556	DDEC III-VEHICLE SPEED (·)				
164	WORLD TRANSM-RET. ACTUATOR SIGN	557	DDEC III-VEHICLE SPEED (-)				