

NO.	PAGE	AMPERE	•PREVOST	LOCATION	FUNCTION	NO.	PAGE	AMPERE	•PREVOST	LOCATION	FUNCTION
CB1	1	200A	560838	ENGINE CPT	A/C FULL AIR	CB106	17	10A	561792	FR SERV JCT BOX	ABS E.C.U.
CB1	1	200A	560838	BATTERY CPT	A/C FULL AIR (ME BAT.CENT.)	CB107	17	10A	561792	FR SERV JCT BOX	ABS E.C.U.
CB2	1	30A	870630	ENGINE CPT	12V HOT WIRE RR JCT BOX	CB117	14	8A	561791	FR JCT BOX	RR VIEW MIRROR
CB2	1	25A	561795	BATTERY CPT	12V HOT WIRE R.J.B.(ME BAT.CENT.)	CB118	16	20A	561794	FR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB3	1	70A	561767	ENGINE CPT	12V FEED RR JCT BOX	CB119	16	3A	561797	FR JCT BOX	LUGGAGE UNLOCK TT LT & SW
CB3	1	70A	561767	BATTERY CPT	12V FEED RR JCT BOX(ME BAT.CENT.)	CB120	16	20A	561794	FR JCT BOX	LUGGAGE DOOR LOCK MOTOR
CB4	1	90A	560298	ENGINE CPT	12V FEED FR JCT BOX	CB121	14	10A	561792	FR JCT BOX	CIGAR LIGHTER
CB4	1	90A	560298	BATTERY CPT	12V FEED F.J.B.(ME BAT.CENT.)	CB122	11	6A	561790	FR JCT BOX	ENTRANCE DOOR AIR LOCK
CB5	1	30A	870630	ENGINE CPT	24V HOT WIRE RR JCT BOX	CB125	7	20A	561794	FR JCT BOX	DIRECTIONAL LTS LH
CB5	1	25A	561795	BATTERY CPT	24V HOT WIRE R.J.B.(ME BAT.CENT.)	CB126	7	20A	561794	FR JCT BOX	DIRECTIONAL LTS RH
CB5	13	40A	560703	A/C JCT BOX	CONDENSER FAN MOTOR	CB127	15	25A	561795	FR JCT BOX	ELECTRIC DRIVER'S SEAT
CB6	1	90A	560298	ENGINE CPT	24V FEED RR JCT BOX	CB129	18	15A	561793	RR JCT BOX	WATER HEATER
CB6	1	90A	560298	BATTERY CPT	24V FEED R.J.B.(ME BAT.CENT.)	CB130	5	6A	561790	RR JCT BOX	FAN CLUTCH RADIATOR
CB7	1	90A	560298	ENGINE CPT	24V FEED FR JCT BOX	CB132	18	15A	561793	RR JCT BOX	WATER HEATER WEBASTO
CB7	1	90A	560298	BATTERY CPT	24V FEED F.J.B.(ME BAT.CENT.)	CB138	20	3A	561797	FR JCT BOX	SUN VISOR
CB8	13	40A	560703	A/C JCT BOX	CONDENSER FAN MOTOR						
CB9	13	120A	562397	A/C JCT BOX	EVAPORATOR FAN MOTOR						
CB10	2	8A	561791	FR JCT BOX	MASTER SWITCH						
CB12	1	70A	561767	BATTERY CPT	12V FEED ECU & ECM(ME BAT.CENT.)						
CB16	2	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW						
CB18	2	6A	561791	RR JCT BOX	ENGINE-FR CTR SW						
CB19	3	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER						
CB20	3	15A	561793	RR JCT BOX	DDEC III E.C.M. POWER						
CB21	3	6A	561790	RR JCT BOX	DDEC III 12V IGNITION						
CB26	8	10A	561792	FR JCT BOX	BACK-UP LTS						
CB27	5	8A	561791	FR JCT BOX	24V IGN DASH ACCESSORIES						
CB29	5	20A	561794	FR JCT BOX	ELECTRICAL HORNS						
CB30	5	15A	561793	FR JCT BOX	FIRE ALARM & WATER HTR TIMER						
CB31	5	8A	561791	FR JCT BOX	AIR DRYER						
CB35	6	6A	561790	FR JCT BOX	FOG & HAZARD SW						
CB36	6	15A	561793	FR JCT BOX	FOG LTS						
CB37	6	8A	561791	FR JCT BOX	HEAD & MULTI-FUNC. SW						
CB38	6	10A	561792	FR JCT BOX	MARKER LTS						
CB39	16	6A	561790	FR JCT BOX	TACH0 & SPEEDO						
CB40	6	8A	561791	FR JCT BOX	FR & RR CLEARANCE & ID. LTS						
CB42	6	10A	561792	FR JCT BOX	RR MARKER, TAIL, LICENCE LTS						
CB43	6	20A	561794	FR JCT BOX	HEADLAMP (HI)						
CB44	6	15A	561793	FR JCT BOX	HEADLAMP (LO)						
CB45	7	10A	561792	FR JCT BOX	MULTI-FUNC. SW (WIPER CTR)						
CB47	7	15A	561793	FR JCT BOX	CORNERING LTS						
CB48	8	6A	561790	FR JCT BOX	STOP SW						
CB49	8	15A	561793	RR JCT BOX	LH STOP LTS						
CB51	8	20A	561794	FR JCT BOX	RH STOP & CYCLOP LTS						
CB52	9	15A	561793	FR JCT BOX	LUGGAGE LTS						
CB55	10	8A	561791	FR JCT BOX	DASH LTS RHEOSTAT						
CB59	10	8A	561791	FR JCT BOX	DRIVER'S LTS SW.						
CB70	12-13	8A	561791	FR JCT BOX	BLOWER CUT-IN RELAY						
CB72	12	10A	561792	RR JCT BOX	A/C COMPRESSOR CLUTCH						
CB73	12	15A	561793	FR JCT BOX	WATER PUMP (A/C STANDARD)						
CB73	13	15A	561793	FR JCT BOX	WATER PUMP (A/C FULL AIR)						
CB79	12-13	10A	561792	FR JCT BOX	DRIVER'S HTR FAN						
CB83	4	20A	561794	RR JCT BOX	WORLD TRANSMISSION VIM POWER						
CB91	15	8A	561791	FR JCT BOX	DRIVER'S SEAT HEATER						
CB92	16	6A	561790	FR JCT BOX	SPEED SW & LEVEL-LOW						
CB104	17	6A	561790	FR JCT BOX	ABS E.C.U.						
CB105	17	20A	561794	FR JCT BOX	ABS E.C.U.						