



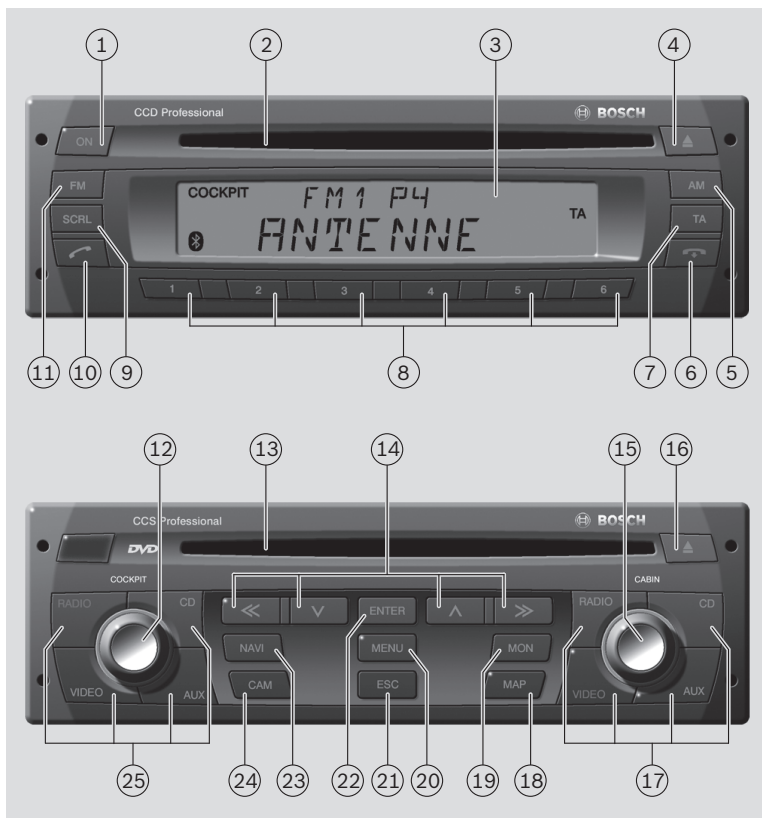
# Professional Line 3 CCD/CCS/CPA







**BOSCH**

- de** Kurzanleitung
- en** Operating instructions
- fr** Mode d'emploi
- es** Instrucciones de manejo
- it** Istruzioni d'uso
- pt** Instruções de serviço
- nl** Gebruiksaanwijzing
- dk** Betjeningsvejledning
- sw** Bruksanvisning
- sf** Käyttöohje
- pl** Instrukcja obsługi
- tr** Kullanım kılavuzu

<b>CCD:</b>	7 620 200 016
	7 620 200 026
<b>CCS:</b>	7 620 200 010
	7 620 200 030
	7 620 200 040
	7 620 200 050
<b>CPA:</b>	7 620 200 022
	7 620 200 023



- ① **ON** button  
Switch the system on/off
- ② CD compartment of the CCD
- ③ Display
- ④ CD eject button  (drive of the CCD)
- ⑤ **AM** button  
Select the MW, LW, SW (Europe) or AM (NAFTA, LAM, ASIA) wavebands
- ⑥  button  
End a call made via a Bluetooth® mobile phone  
For devices without Bluetooth®:  
>> button  
Start seek tuning
- ⑦ **TA** button  
Short press: Activate/deactivate traffic announcement priority; cancel a playing traffic announcement  
Long press: Start the Travelstore function
- ⑧ Station buttons **1 - 6**  
Short press: Select a stored station  
Long press: Store a station
- ⑨ **SCRL** button  
Display the contents of the display as scrolling text
- ⑩  button  
Short press: Answer a call via a Bluetooth® mobile phone; call a selected contact  
Long press: Open the phone book  
For devices without Bluetooth®:  
<< button  
Start seek tuning
- ⑪ **FM** button  
Select the FM and WB (only NAFTA) wavebands, switch between the FMTS, FM1, FM2 and WB (only NAFTA) memory banks
- ⑫ Left control knob for the cockpit  
Turn: Adjust the volume and the menu selection  
Press: Open and confirm menu items
- ⑬ DVD/CD compartment of the CCS
- ⑭ Remote buttons
- ⑮ Right control knob for the cabin  
Turn: Adjust the volume and the menu selection  
Press: Open and confirm menu items
- ⑯ DVD/CD eject button  (drive of the CCS)
- ⑰ Source buttons (cabin)  
**RADIO:** Select the radio audio source for the cabin  
**CD:** Select the CD audio source for the cabin (drive of the CCD)  
**AUX:** Select the USB and AUX audio sources for the cabin  
**VIDEO:** Select the video source for the cabin (drive of the CCS and external video sources)

- 18 **MAP** button  
Display the navigation map display in the cabin (only when a Coach Navigation unit is connected in conjunction with a suitable driver's monitor)
- 19 **MON** button  
Activate, deactivate and/or synchronise the monitors in the cabin
- 20 **MENU** button  
Open the main menu to configure the device's main functions
- 21 **ESC** button  
Close menus
- 22 **ENTER** button  
Confirmation function in navigation, video, DVD and TV mode
- 23 **NAVI** button  
Activate the control of a connected navigation system using:  
▶ remote buttons 3  
▶ **ENTER** button 11  
in the same way as the remote control of the navigation system
- 24 **CAM** button  
Select a camera image on the driver's monitor
- 25 Source buttons (cockpit)  
**RADIO:** Select the radio audio source for the cockpit  
**CD:** Select the CD audio source for the cockpit (drive of the CCD)  
**AUX:** Select the USB and AUX audio sources for the cockpit  
**VIDEO:** Select the video source for the cockpit (drive of the CCS and external video sources)

## Contents

---

### 42 Notes and accessories

- 42 Intended use
- 42 Disposal of end-of-life appliances
- 43 Connecting additional devices (option)

---

### 44 Switching on/off

---

### 44 Selecting functions and adjusting settings

- 44 Direct selection
- 45 In the menu
- 45 Focus of control

---

### 46 Selecting an audio/video source

- 46 Selecting audio/video sources on the CCS
- 48 Selecting an audio/video source in the menu of the current audio/video source

---

### 49 Adjusting the volume and sound

- 49 Adjusting the volume of the currently playing source
- 49 Adjusting the default volume levels for various sources in the main menu
- 50 Adjusting the sound of the currently playing source
- 50 Storing a sound profile
- 51 Volume and sound for microphone announcements
- 51 Volume and sound for external announcements and alarms (driver warning system)
- 52 Adjusting the volume level for various audio/video sources

---

### 53 Inserting/removing a CD/DVD

---

### 53 Radio mode

- 53 Available wavebands and memory banks
- 54 Functions on the CCS
- 55 Functions on the CCD
- 56 Functions in the menu
- 57 Functions in the main menu

---

### 58 CD and USB mode

- 58 Functions on the CCS
- 59 Functions in the CD/MP3/WMA menu

---

### 60 Video and DVD mode

- 60 Functions on the CCS
- 61 Functions in the video/DVD menu
- 62 DVD settings in the main menu

---

### 63 TV mode

- 63 Functions on the CCS
- 63 Functions in the TV menu

---

### 63 Display settings

- 63 Function on the CCD
- 64 Settings in the main menu

---

### 64 Monitor settings

- 64 Functions on the CCS
- 65 Settings in the main menu

---

<b>65</b>	<b>Camera functions on the CCS</b>
<hr/>	
<b>65</b>	<b>Navigation functions on the CCS</b>
<hr/>	
<b>66</b>	<b>Bluetooth telephone functions</b>
67	Functions on the CCD
67	Bluetooth® settings in the main menu
68	Functions in the phone book
<hr/>	
<b>68</b>	<b>MAS settings</b>
68	MAS settings in the main menu
<hr/>	
<b>69</b>	<b>Further system settings</b>
<hr/>	
<b>70</b>	<b>Remote control</b>
<hr/>	
<b>71</b>	<b>Technical data</b>
71	CCS
71	CCD
72	Coach Power Amplifier
	CPA 811 / CPA 2011

## Notes and accessories

Before using the device, please read these instructions carefully and familiarise yourself with the device. Keep these instructions in your vehicle for later reference.

### Intended use

The CCS and CCD must each be installed in a 1-DIN compartment in the dashboard of a coach.

Electrical power must be supplied to the CCS and CCD only via the CPA.

The operating voltage of the CPA is 24 V.

The CPA must be installed in a location other than the dashboard and in a position determined by particular layout of the vehicle.



### Road safety

Road safety has absolute priority.

- ▶ Only operate the device if the driving and traffic situation allow you to do so.
- ▶ Familiarise yourself with the device before setting off on your journey.

You must always be able to hear police, fire service and ambulance sirens in good time from inside your vehicle.

- ▶ You must therefore listen to the sound system at an appropriate volume level during your journey.

### Disposal of end-of-life appliances



Please do not dispose of your end-of-life appliance in the household refuse.

To dispose of the end-of-life appliance, please use the available waste return and recycling systems.

## Connecting additional devices (option)

The CCS (Coach Control System) is the central control unit of the Coach Professional Line 3 – it enables you to adjust and control the coach's audio and video sources separately for the driver (cockpit) and for the passengers (cabin). The CCD adds a display, an additional CD drive, and further controls to the system. The CCS can only be used in conjunction with the CPA 811 or CPA 2011 amplifier (Coach Power Amplifier).



### Note:

The CCS does not have its own display; all the CCS's information displays are displayed to the driver on the CCD's display or optionally on the display of a connected Coach Navigation unit or on the vehicle's multifunction display.

You can connect the following additional devices to the CCS (not included in the scope of delivery):

### ▶ Video players, DVD players, and TV tuners

Besides the system's internal DVD drive, it is possible to connect two additional video sources (video/DVD player or TV tuner) for playing videos or DVDs or for television reception. If you want to connect two additional video sources, you will need a Videobox.

### ▶ Coach Navigation

for navigating and for displaying the navigation map and system displays.

### ▶ Driver's monitor

for displaying images from cameras, navigation information, and a video signal as well as for displaying the system settings when used in conjunction with the Coach Navigation unit (only suitable for integration in the dashboard).



## Switching on/off

Function	Action	Note
Switch on/off	▶ Press the <b>ON</b> button ①	When the vehicle ignition is off, the system switches off automatically after 1 hour to conserve the vehicle battery.
	▶ Switch the vehicle ignition on/off	The system will only switch on together with the vehicle ignition if it was previously switched off together with the vehicle ignition.
	▶ Switch microphone 1 (MIC1) on/off	Only when the vehicle ignition is switched on. The system will only switch off together with microphone 1 (not included in the scope of delivery) if it was previously switched on together with microphone 1.



### Note:

Whilst the vehicle ignition is on, the system will switch on automatically for an incoming call if a telephone is present that is connected directly or via Bluetooth®.

## Selecting functions and adjusting settings

### Direct selection

Important and frequently used functions can be selected directly by pressing a button on the CCS/CCD. In order to select certain functions, it is necessary to keep the corresponding button pressed down longer (approximately 3 seconds).



### Note

In order to use the functions of certain buttons for the cabin, you must first switch the focus of control over to the cabin. You will find further information about the focus of control in the "Focus of control" section in this chapter.

## In the menu

Access to all the system's functions and settings is provided in menus.

### Opening menus

Function	Action	Note
Open the main menu	▶ Press the <b>MENU</b> button (20)	–
Open the menu of an audio/video source for the cockpit	▶ Press the control knob (12)	Only for an audio/video source that is currently active.
Open the menu of an audio/video source for the cabin	▶ Press the control knob (15)	

### Navigating in the menu

Function	Action	Note
Select a menu item on the current menu level	▶ Turn the control knob (12) or (15)	–
Confirm a menu item or open a submenu	▶ Press the control knob (12) or (15)	Menu items that contain a submenu are indicated with "*" (e.g. "*AUD").
Return to the parent menu.	▶ Press the <b>ESC</b> button (21)	–
Leave a menu	▶ Long press the <b>ESC</b> button (21)	–

### Focus of control

On the CCS, you can select and control the audio and video sources for the cockpit and cabin separately. You can use the remote buttons (14) and the **ENTER** button (22) to select functions for the currently active audio/video source in the cockpit as well as in the cabin. By default, the focus of control is set to controlling the audio/video source in the cockpit. If you press a remote button (14) or the

**ENTER** button (22), you will be controlling the audio/video source that is currently active in the cockpit.

To control an active audio/video source in the cabin, you must first switch the focus of control over to the cabin. To do so, press the control knob (15) or a source selection button for the cabin (17). The focus of control will then switch over to the cabin and you can use the remote

buttons (14) and the **ENTER** button (22) to control the audio/video source that is active in the cabin. The focus of control will switch back automatically to the cockpit approximately 10 seconds after the last button press.



### Notes

- ▶ The current focus of control is indicated in the display ("COCKPIT" or "CABIN").
- ▶ The focus of control will also switch over to the cabin when you select a different audio/video source for the cabin.

- ▶ You can manually return the focus of control to the cockpit by pressing the control knob (12).
- ▶ When you select the navigation system as the source in the cockpit, the focus of control will switch to the navigation unit (see the chapter entitled "Navigation functions on the CCS").

## Selecting an audio/video source

### Selecting audio/video sources on the CCS

#### Selecting an audio/video source for the cockpit

Function	Action	Note
Select the radio	▶ Press the <b>RADIO</b> button (25)	–
Select the CD in the CCD drive	▶ Press the <b>CD</b> button (25)	–
Select AUX/USB	▶ Press the <b>AUX</b> button (25) (if necessary, several times)	AUX can only be selected if the AUX input has been activated (see the chapter entitled "Further system settings"). You can only select USB if a data storage medium is connected.
Select the DVD/CD in the CCS drive or video source 1 or 2	▶ Press the <b>VIDEO</b> button (25) (if necessary, several times)	You can only select video source 1 or 2 if an external device (e.g. a DVD, TV, or DVC) is connected.

**Selecting an audio/video source for the cabin**

Function	Action	Note
Select the radio	▶ Press the <b>RADIO</b> button (17)	–
Select the CD in the CCD drive	▶ Press the <b>CD</b> button (17)	–
Select AUX/USB	▶ Press the <b>AUX</b> button (17) (if necessary, several times)	AUX can only be selected if the AUX input has been activated (see the chapter entitled "Further system settings"). You can only select USB if a data storage medium is connected.
Select the DVD/CD in the CCS drive or video source 1 or 2	▶ Press the <b>VIDEO</b> button (17) (if necessary, several times)	You can only select video source 1 or 2 if an external device (e.g. a DVD, TV, or DVC) is connected.

## Selecting an audio/video source in the menu of the current audio/video source



### Note:

Source selection in the menu of the current audio/video source is only possible using the extended menu (see the section entitled “Settings in the main menu” that is located in the “Display settings” chapter).

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
:			
*AUD	:		
	*SOURCE	RADIO	Select the radio
		CD	Select the CD in the CCD drive
		USB	Select USB (only if available)
		AUX	Select AUX
		CCS	Select the DVD/CD in the CCS drive
		VIDEO1	Select video source 1 (only if available)
		VIDEO2	Select video source 2 (only if available)

## Adjusting the volume and sound

### Adjusting the volume of the currently playing source

Function	Action	Note
Adjust the volume for the cockpit	▶ Turn the control knob (12)	At a volume level of "0", "MUTE" will be displayed.
Adjust the volume for the cabin	▶ Turn the control knob (15)	At a volume level of "0", "MUTE" will be displayed.

### Adjusting the default volume levels for various sources in the main menu

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
:			
*SETVOL	*COCKPIT	MIN V	Min. and max. system volume after power on
		MAX V	
		TAV	Volume for traffic announcements
		NAVI V	Volume for navigation announcements
		PHONE V	Volume for telephone audio
		ALARM V	Alarm volume (driver warning system)
	*CABIN	MIN V	Min. and max. system volume after power on
		MAX V	
		MIC1 V	Volume for microphone announcements
		MIC2 V	
		MIC2 MIX	
		MIC3 V	
MIC3 MIX			

Once you have selected a menu item on the 3<sup>rd</sup> menu level:

- ▶ Press the control knob (12) to confirm the menu item.

- ▶ Set the desired volume using the control knob (12).

- ▶ Press the **ESC** button (21) to return to the previous menu level.

The current volume level is displayed.

## Adjusting the sound of the currently playing source

You will find the following functions in the menu of the current audio/video source:

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
:			
*AUD	BASS	BASS -7 ... +7	Adjust the bass level
	TREBLE	TREBLE -7 ... +7	Adjust the treble level
	BALANCE	BALANCE -7 ... +7	Adjust the right/left volume distribution
	FADER	FADER -7 ... +7	Adjust the front/rear volume distribution
	CENTER		Reset the sound settings to "0"
	RESTORE		Reset the sound settings to the stored sound profile
	:		

## Storing a sound profile

In the main menu you can store the current settings for the bass and treble levels and for the volume distribution as a sound profile. You can reset the sound settings at any time to this sound profile (see the section entitled "Adjusting the sound of the currently playing source" in this chapter; "RESTORE" menu item in the "\*AUD" menu).



### Note:

In order to prevent unintentional changes being made in the "\*MORE" menu, "CODE" is displayed as soon as you have confirmed the "\*MORE" menu item. When "CODE" is displayed, press both of the control knobs (12) and (15) simultaneously to open the "\*MORE" menu.

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	Function
:		
*MORE	:	
	SAVE	Store a sound profile

## Volume and sound for microphone announcements

### Functions on the CCS

Function	Action	Note
Adjust the volume	▶ Turn the control knob (15)	Only whilst the microphone is switched on.
Set the distribution of the volume between the announcement and the background audio playback (MIX)	▶ Whilst keeping the control knob (15) pressed down, turn it	Only whilst microphone 2 or 3 (MIC2 / MIC3) is switched on.
Open the menu	▶ Briefly press the <b>MENU</b> button (20)	For sound adjustments in the menu, see the next section.

### Functions in the microphone menu

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	Function
BASS	BASS -7 ... +7	Adjust the bass level
TREBLE	TREBLE -7 ... +7	Adjust the treble level

## Volume and sound for external announcements and alarms (driver warning system)

You can adjust the volume and sound for external announcements (e.g. navigation

announcements and phone calls played over the cockpit loudspeakers) as well as for alarms.

### Functions on the CCS

Function	Action	Note
Adjust the volume	▶ Turn the control knob (12)	Only during an active announcement.
Set the distribution of the volume between the announcement and the background audio playback (MIX)	▶ Whilst keeping the control knob (12) pressed down, turn it	Only for navigation announcements and phone calls. Only during an active announcement.
Open the menu	▶ Briefly press the <b>MENU</b> button (20)	Only during an active alarm. For sound adjustments in the menu, see the next section.



## Functions in the menu

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	Function
BASS	BASS -7 ... +7	Adjust the bass level
TREBLE	TREBLE -7 ... +7	Adjust the treble level
BALANCE	BALANCE -7 ... +7	Adjust the right/left volume distribution

## Adjusting the volume level for various audio/video sources

The default volume level of different audio/video sources may vary because, for instance, external sources are input with a low level. To equalise the default volume levels of the various audio/video sources, you can adjust the level of each source separately in the main menu.



### Note:

In order to prevent unintentional changes being made in the “\*MORE” menu, “CODE” is displayed as soon as you have confirmed the “\*MORE” menu item. When “CODE” is displayed, press both of the control knobs (12) and (15) simultaneously to open the “\*MORE” menu.

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
:			
*MORE	:		
	*GAIN	RADIO	Adjust the radio level
		CD	Adjust the CD level (CCD drive)
		USB	Adjust the USB level
		AUX	Adjust the AUX level
		DVD	Adjust the DVD level (CCS drive)
		VIDEO1	Adjust the level of video source 1
		VIDEO2	Adjust the level of video source 2

Once you have selected a menu item on the 3<sup>rd</sup> menu level:

- ▶ Press the control knob (12) to confirm the menu item.

The current level value is displayed.

- ▶ Adjust the desired level using the control knob (12).
- ▶ Press the **ESC** button (21) to return to the previous menu level.

## Inserting/removing a CD/DVD



### Danger of irreparable damage to the CD/DVD drives!

Mini CDs and contoured CDs (shape CDs) are not suitable for playback. We accept no liability for any damage to the CD/DVD drives that may be caused by unsuitable CDs.



### Notes

- ▶ The CCD is equipped with a CD drive that can play audio CDs and MP3/WMA CDs but not DVDs. The CCS is equipped with a DVD drive that can play DVDs, audio CDs, and MP3/WMA CDs.
- ▶ CDs/DVDs will be drawn in by the drive even when the device is



switched off as long as the vehicle ignition is switched on.

If there is no CD/DVD inserted in the drive,

- ▶ gently push the CD/DVD with its printed side uppermost into the CD slot (2) or CD/DVD slot (13) until you feel some resistance.

The drive draws in the CD/DVD automatically.

To remove the CD/DVD from the device,

- ▶ press the  button (4) (for a CD in the drive of the CCD) or the  button (16) (for a CD/DVD in the drive of the CCS).

## Radio mode

### Available wavebands and memory banks

Region	FMTS	FM1	FM2	AM	MW	LW	SW	WB*
Europe	●	●	●	–	●	●	●	–
NAFTA	●	●	●	●	–	–	–	●
LAM*	●	●	●	●	–	–	–	–
Asia	●	●	●	●	–	–	–	–

\* LAM = South America, WB = Weatherband

## Functions on the CCS



### Note:

To control radio mode in the cabin, you must first switch the focus of control over to the cabin.

Function	Action	Note
Start a search downwards	▶ Briefly press the << button <sup>(14)</sup>	–
Start a search upwards	▶ Briefly press the >> button <sup>(14)</sup>	–
Switch to the next memory bank	▶ Briefly press the ▼ button <sup>(14)</sup>	–
Switch to the next memory location	▶ Briefly press the ▲ button <sup>(14)</sup>	Only in the current memory bank.
Adjust the frequency (downwards)	▶ Hold down the << button <sup>(14)</sup>	–
Adjust the frequency (upwards)	▶ Hold down the >> button <sup>(14)</sup>	–
Travelstore (store stations automatically)	▶ Long press the ▼ button <sup>(14)</sup>	The discovered stations are stored in the FM/TS memory bank.
Store the current station	▶ Long press the ▲ button <sup>(14)</sup>	If necessary, first select the desired storage location by pressing the ▲ button <sup>(14)</sup> .

## Functions on the CCD



### Note:

You can use the following functions without radio mode being selected for the cockpit or cabin. Please note that passenger may be listening to

the current radio programme on a connected multichannel audio system (MAS).

Function	Action	Note
Start a search downwards	▶ Briefly press the << button (10)	Only applicable to a device without Bluetooth® functionality.
Start a search upwards	▶ Briefly press the >> button (6)	
Access a stored station	▶ Briefly press the 1 - 6 button (8)	Only in the current memory bank.
Store the current station	▶ Long press the 1 - 6 button (8)	
Select the FM or WB frequency range or switch between the FMTS, FM1, FM2 and WB memory banks	▶ Briefly press the FM button (11)	WB frequency range only for the NAFTA region.
Select the MW, LW, or SW frequency range	▶ Press the AM button (5) (if necessary, several times)	Only for the Europe region.
Select the AM frequency range	▶ Press the AM button (5) (if necessary, several times)	Not for the Europe region.
Switch traffic announcement priority on/off	▶ Briefly press the TA button (7)	–
Cancel a playing traffic announcement	▶ Briefly press the TA button (7)	–
Travelstore (store stations automatically)	▶ Long press the TA button (7)	The discovered stations are stored in the FMTS memory bank.

## Functions in the menu

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
*SEARCH	<SEARCH		Start a search downwards
	SEARCH>		Start a search upwards
*TUNE	MHz 87.50		Select a frequency <b>Note:</b> The radio immediately tunes into and plays the selected frequency.
	:		
	MHz 108.00		
*STORE	MHz 88.80		Store a station <b>Note:</b> The currently stored frequency or station name is displayed for each of the six memory locations.
	:		
	MHz 95.70		
*BAND	FMTS	MHz 88.80	2 <sup>nd</sup> Menu level: select the memory bank <b>Note:</b> The selected memory bank stays activated after you leave the menu. 3 <sup>rd</sup> Menu level: select the memory location Only the frequency bands of the respective region are available.
		:	
		MHz 95.70	
	:		
	SW	...	
TRAVEL-S			Start the Travelstore function
TA ON/OFF			Switch traffic announcement priority on/off
AF ON/OFF			Activate/deactivate automatic switching to alternative frequencies
REG ON/OFF			Switch the regional function on/off
AUTO/MANUAL			Switch between automatic seek tuning and manual station tuning

## Functions in the main menu



### Note:

You will find further radio functions in the “\*MORE” menu item of the main menu. In order to prevent unintentional changes being made in the “\*MORE” menu, “CODE” is displayed

as soon as you have confirmed the “\*MORE” menu item. When “CODE” is displayed, press both of the control knobs (12) and (15) simultaneously to open the “\*MORE” menu.

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
:			
*MORE	*RADIO	TA ON/OFF	Switch traffic announcement priority on/off
		AF ON/OFF	Activate/deactivate automatic switching to alternative frequencies
		REG ON/OFF	Switch the regional function on/off
		HICUT 0/1/2	Switch off (“0”) sound correction when radio reception is poor, or adjust (“1”, “2”) the amount of sound correction
		EUROPE/...	Select the reception region (EUROPE, NAFTA, LAM, ASIA)
		SENS DX/LO	Set the sensitivity of station seek tuning (DX: high; LO: low)
		TMC ON/OFF	Activate/deactivate the forwarding of TMC traffic reports to a connected navigation system

## CD and USB mode

### Functions on the CCS



#### Note

To control CD mode and USB mode in the cabin, you must first switch the focus of control over to the cabin.

Function	Action	Note
Switch to the previous track	▶ Briefly press the << button (14)	–
Switch to the next track	▶ Briefly press the >> button (14)	–
Pause playback	▶ Briefly press the ▼ button (14)	Not in USB mode or whilst playing an MP3 CD in the CCD.
Resume playback	▶ Briefly press the ▲ button (14)	
Switch to the previous folder	▶ Briefly press the ▼ button (14)	Only in USB mode or whilst playing an MP3 CD in the CCD.
Switch to the next folder	▶ Briefly press the ▲ button (14)	
Fast-reverse seek mode	▶ Hold down the << button (14)	–
Fast-forward seek mode	▶ Hold down the >> button (14)	–

### Functions in the CD/MP3/WMA menu

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
*SELECT	+DIR01	TRACK01	Select folders/tracks <b>Notes:</b> <ul style="list-style-type: none"> <li>▶ The folder and track names are displayed if available.</li> <li>▶ In the case of audio CDs, the available tracks are already displayed on the 2<sup>nd</sup> menu level.</li> </ul>
		:	
		TRACKnn	
	+DIR02	...	
	:		
	+DIRnn	...	
PAUSE			Pause playback
PLAY			Resume playback
STOP			Stop playback <b>Note:</b> Only whilst playing a CD in the CCS.
RND ON/OFF			Switch random playback on/off
RPT ON/OFF			Switch track repeat on/off
*AUD			Open the sound settings menu (see the chapter entitled "Adjusting the volume and sound")



## Video and DVD mode

### Functions on the CCS



#### Note

To control VIDEO mode and DVD mode in the cabin, you must first switch the focus of control over to the cabin.

Function	Action	Note
Switch to the previous DVD chapter	▶ Briefly press the << button (14)	Only in DVD mode.
Switch to the next DVD chapter	▶ Briefly press the >> button (14)	Only in DVD mode.
Pause playback	▶ Briefly press the ▼ button (14)	-
Resume playback	▶ Briefly press the ▲ button (14)	-
Confirm an item in the menu of the DVD	▶ Briefly press the <b>ENTER</b> button (22)	Only in DVD mode.
Fast-reverse seek mode	▶ Hold down the << button (14)	-
Fast-forward seek mode	▶ Hold down the >> button (14)	-

## Functions in the video/DVD menu

1 <sup>st</sup> Menu level	Function
CHAPTER-	Switch to the previous DVD chapter <b>Note:</b> Only whilst playing a DVD in the CCS.
CHAPTER+	Switch to the next DVD chapter <b>Note:</b> Only whilst playing a DVD in the CCS.
PAUSE	Pause playback
PLAY	Resume playback
STOP	Stop playback
ENTER	Confirm an item in the menu of the DVD <b>Note:</b> Only in DVD mode.
RND ON/OFF	Switch random playback on/off
RPT ON/OFF	Switch track repeat on/off
*AUD	Open the sound settings menu (see the chapter entitled "Adjusting the volume and sound")

### DVD settings in the main menu

- ▶ Select and confirm the “DVD-SET” menu item that is located on the first menu level of the main menu.
- ▶ On the 2<sup>nd</sup> and subsequent menu levels, select the desired function:

2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	4 <sup>th</sup> Menu level	Function
*LANGUAGE	*DVD-MEN	GERMAN	Select the language for the DVD menu (DVD-MEN), DVD subtitles (DVD-SUB), and DVD audio (DVD-AUD)  <b>Note:</b> A DVD may not support all of the languages that are available in the menu.
		:	
		DUTCH	
	*DVD-SUB	...	
	*DVD-AUD	...	
NORM-PS/ NORM-LB/ WIDE			Select the screen format
ANG ON/OFF			Activate/deactivate the indicator for various camera angles
*PARENTA	KID-SAVE		Select the level of parental controls
	:		
	ADULT		
PAL/NTSC			Select the TV standard
PBC ON/OFF			Switch playback control on/off
RESET			Reset the DVD settings

## TV mode

### Functions on the CCS



#### Note

To control the TV mode in the cabin, you must first switch the focus of control over to the cabin.

Function	Action	Note
Start a channel search downwards	▶ Briefly press the << button (14)	–
Start a channel search upwards	▶ Briefly press the >> button (14)	–
Switch to the previous channel	▶ Briefly press the ▼ button (14)	–
Switch to the next channel	▶ Briefly press the ▲ button (14)	–

### Functions in the TV menu

1 <sup>st</sup> Menu level	Function
<SEARCH	Start a channel search downwards
SEARCH>	Start a channel search upwards
PROG–	Switch to the previous channel
PROG+	Switch to the next channel
*AUD	Open the sound settings menu (see the chapter entitled “Adjusting the volume and sound”)

## Display settings

### Function on the CCD

Function	Action	Note
Display the content of the display (e.g. track name) once as scrolling text	▶ Briefly press the <b>SCRL</b> button (9)	–

## Settings in the main menu



### Note:

In order to prevent unintentional changes being made in the “\*MORE” menu, “CODE” is displayed as soon as you have confirmed the “\*MORE”

menu item. When “CODE” is displayed, press both of the control knobs (12) and (15) simultaneously to open the “\*MORE” menu.

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
:			
*MORE	:		
	*HMI	EXTENDED/ SHORT	Select the extended or short menu (in the extended menu, source selection is possible within the “*AUD” menu).
		NAME ON/OFF	Activate/deactivate the displaying of track names in CD/USB mode.
		SCRL ON/OFF	Activate/deactivate the displaying of display content as scrolling text

## Monitor settings

You can manually activate/deactivate the monitors in the cabin or synchronise them with a video source being fed into the cabin. If the monitors are synchronised with a video source,

they will be activated/deactivated together with the video source.

## Functions on the CCS

Function	Action	Note
Activate/deactivate monitors	▶ Briefly press the <b>MON</b> button (19)	–
Synchronise monitors	▶ Long press the <b>MON</b> button (19)	–

## Settings in the main menu

1 <sup>st</sup> Menu level	Function
:	
MON ON/OFF/ SYNC	Activate/deactivate/synchronise monitors in the cabin

## Camera functions on the CCS



### Note:

The following function is only available if a camera is connected to an appropriately configured driver's monitor.

Function	Action	Note
Display the camera image on the driver's monitor	▶ Briefly press the <b>CAM</b> button (24)	If more than one camera is connected, you can switch through the images from the various cameras by repeatedly pressing the <b>CAM</b> button (24). When the last camera image is displayed, you can return to the display of the current audio/video source by pressing the <b>CAM</b> button (24).

## Navigation functions on the CCS



### Notes:

- ▶ The following functions are only available when a navigation system is connected.
- ▶ As long as the navigation system is set as the source, the focus of control will be set to the navigation system and the display will indicate "NAVI".

You can control the navigation system using the remote buttons (14) and the **ENTER** button (22). If, during this time, you switch the focus of control over to the cockpit or cabin, the focus of control will return automatically to the navigation system approximately 10 seconds after your last button press.

Function	Action	Note
Select the navigation system as the source in the cockpit	▶ Briefly press the <b>NAVI</b> button (23)	The navigation system's map view will be displayed on the driver's monitor. The current audio source will continue to be played.
Deselect the navigation system as the source in the cockpit	▶ Briefly press the <b>NAVI</b> button (23) again	The focus of control will switch back by default to the cockpit.
Function corresponding to the function of the arrow buttons and OK button on the navigation system's remote control	▶ Briefly press the << button (14)	Only when the navigation system is selected as the source.
	▶ Briefly press the >> button (14)	
	▶ Briefly press the ▼ button (14)	
	▶ Briefly press the ▲ button (14)	
	▶ Briefly press the <b>ENTER</b> button (22)	
Display the navigation system's map view on the monitors in the cabin	▶ Briefly press the <b>MAP</b> button (18)	-





## Bluetooth telephone functions



### Note:

Please bear in mind that the Bluetooth® connection can suffer interference if, for instance, there are any metal objects located between the radio and the mobile phone or if you are carrying the mobile phone in your back pocket.

## Functions on the CCD

Function	Action	Note
Answer a call	▶ Briefly press the  button (10)	–
Reject or end a call	▶ Briefly press the  button (6)	–
Adjust the volume when the ring signal sounds and during a call	▶ Turn the control knob (12)	–
Open the phone book	▶ Long press the  button (10)	It is not possible to open the phone book whilst entries are being transferred from the mobile phone to the system (e.g. after pairing the mobile phone). The Bluetooth® symbol flashes during a transfer.
Close the phone book	▶ Briefly press the  button (6)	–
Transfer an active call to the mobile phone	▶ Long press the AM button	–
Transfer an active call back to the system	▶ Long press the FM button	–

## Bluetooth® settings in the main menu

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	Function
*BTOOTH	BT ON/OFF	Switch the Bluetooth® function on/off
	BT-PAIR	Make the system visible for mobile phones so you can initiate (on the mobile phone) a connection to the system
	BT-JOIN	Display the name of the currently connected mobile phone




## Functions in the phone book



### Note:

To open the phone book, see the section entitled "Functions on the CCD" in this chapter.

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	Function
*PH-BOOK	Entry 01	Make a call
	:	
	Entry nn	
*M-CALLS	...	Select a contact or phone number from the phone book that you downloaded from the mobile phone ("*PH-BOOK") or from the list of missed calls ("*M-CALLS"), received calls ("*R-CALLS"), or dialed numbers ("*DIAL-NO").
*R-CALLS	...	
*DIAL-NO	...	
		<b>Notes:</b> <ul style="list-style-type: none"> <li>▶ The name or number is displayed for each entry.</li> <li>▶ Only those entries that were stored on the mobile phone's SIM card before the phone book was transferred will be available.</li> <li>▶ Once an entry has been selected, you can initiate the call by pressing the  button (10).</li> </ul>

## MAS settings

### MAS settings in the main menu

1 <sup>st</sup> Menu level	Function
:	
MAS ON/OFF	Switch the multichannel audio system on/off
	<b>Note:</b> Only available if a multichannel audio system is connected. Otherwise, "NO MAS" is displayed.

## Further system settings

- ▶ Press the **MENU** button (20) to open the main menu.
- ▶ Turn the control knob (12) to select the “MORE” menu item on the first menu level.
- ▶ Press the control knob (12) to open the “MORE” menu.



### Note:

In order to prevent unintentional changes being made in the “MORE” menu, “CODE” is displayed as soon as you have confirmed the “MORE” menu item. Press both of the control knobs ((12) and (15)) simultaneously to open the “MORE” menu.

You will find the following functions in the “MORE” menu:

1 <sup>st</sup> Menu level	2 <sup>nd</sup> Menu level	3 <sup>rd</sup> Menu level	Function
:			
*SYSTEM	PRIV OFF/1/2		Deactivate private mode (the playback of certain sources only over the headrest loudspeakers) or select the level for private mode (1: phone call; 2: phone call as well as traffic announcement and navigation announcement) <b>Note:</b> The volume that you set in private mode for phone calls and announcements will continue to apply after private mode has been deactivated.
	RED/GREEN		Select the colour of the button illumination
	*VIDEO1	OFF DVC1 DVP1 TV1	Set the type of device connected to the VIDEO1 and/or VIDEO2 connection.
	*VIDEO2	...	
	AUX ON/OFF		Switch the AUX input on/off

## Remote control



Button	Function
<b>LIGHT</b>	Switch the button illumination on/off
<b>MONITOR</b>	Activate/deactivate monitors in the cabin
<b>▶   </b>	Start/pause playback
<b>■</b>	Stop playback
<b>⏮ / ⏭</b>	Skip a track/chapter
<b>⏮ / ⏭</b>	Fast search
<b>MENU</b>	Open the menu of a DVD Long press: Changer menu (e.g. for changing disc)
<b>ESC</b>	Backwards in the menu of a DVD
<b>OK</b>	Confirm an item in the menu of the DVD
<b>∇ / ▲ / ◀ / ▶</b>	Corresponds to the remote buttons <sup>(14)</sup> DVD mode: Select an item in the menu of the DVD
<b>VOLUME ±</b>	Adjust the volume
<b>RADIO</b>	Select an audio/video source
<b>VIDEO</b>	
<b>CD</b>	
<b>USB</b>	
<b>AUX</b>	
<b>MAP</b>	



### Note:

You can use the remote control to control the playback of audio/video sources in the cabin.

## Technical data

### CCS

**Operating voltage:** + 12 V via CPA

### DVD drive

**Regional code:** See sticker on the device

**Supported formats:** DVD±R (not DL), DVD±RW (not DL), DVD-MP3/DVD-WMA, VCD, SVCD, JPEG, Audio CD (CDDA), CD-R, CD-RW, MP3-CD/WMA-CD

**Shock Memory** DVD: 2 - 3 sec.  
VCD/SVCD: 5 sec.  
CDDA: 22 sec.  
MP3/WMA: 12 sec.

**Outputs:** Analogue video, analogue audio

**Supported video standards:** PAL, NTSC

### Frequency response

CD/DVD audio: 20 Hz - 20,000 Hz

### Inputs

3 x MIC: 1 mV, low impedance, dynamic

**Control inputs/outputs:** CLX (Coach LCD Extension), NAV, MAS

**Weight:** approx. 1.0 kg

**Standards:** e1, FCC, CE, WEEE, ROHS

### CCD

**Operating voltage:** + 12 V via CPA

### CD drive

Supported MP3/CD formats:

Audio CD (CDDA),  
CD-R, CD-RW,  
MP3-CD/WMA-CD

### Frequency ranges

#### EUROPE

FM (UKW): 87.5 - 108 MHz  
MW: 531 - 1602 kHz  
LW: 153 - 279 kHz  
SW: 3900 - 4000 kHz  
5850 - 6300 kHz  
7095 - 7500 kHz  
9325 - 9950 kHz

#### NAFTA

FM: 87.7 - 107.9 MHz  
AM: 530 - 1710 kHz  
WB 162.4 - 162.55 MHz

#### LAM

FM: 87.7 - 107.9 MHz  
AM: 530 - 1710 kHz

#### ASIA

FM: 87.5 - 108 MHz  
AM: 531 - 1701 kHz

### Frequency response

Tuner: 30 Hz - 15,000 Hz  
MP3/CD: 20 Hz - 20,000 Hz

**Weight:** approx. 1.3 kg

**Standards:** e1, FCC, CE, WEEE, ROHS

**Coach Power Amplifier****CPA 811 / CPA 2011****Operating voltage:** + 24 V**Weight:**

CPA 811: Approx. 1.8 kg

CPA 2011: Approx. 1.9 kg

**Current consumption:**Standby: < 500  $\mu$ A incl. CCD  
and CCSMax. CPA 811: Approx. 10 A incl.  
CCD and CCSMax. CPA 2011: Approx. 15 A incl.  
CCD and CCS\*

\* I max. without peripheral devices

**Rated power output**

Cockpit: 2 x 20 W / = 4 ohms

Cabin (CPA 811): 2 x 20 W / = 4 ohms

Cabin (CPA 2011): 4 x 40 W / = 4 ohms

**Frequency response:**

40 Hz - 25,000 Hz

**Inputs, EXTERNAL (only cockpit)**CPA 811: WARNER 2 V,  
NAVIGATION 2 V

CPA 2011: 2 V

All EXTERNALswitching inputs :  
Active low**Voltage outputs:**

24 V / 0.4 A max.

MIC: 24 V / 1.3 A max.

VIDEO 1, 2: 24 V / 0.4 A max.

**Further inputs/outputs:**

Line out, regulated

Subject to changes.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0 Channel is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

**Robert Bosch Car Multimedia GmbH**

Robert-Bosch-Straße 200

31139 Hildesheim

Germany

**[www.bosch-professional-systems.com](http://www.bosch-professional-systems.com)**

