

Quick Start Guide

DC600



Revision	Description	Author	Approved	Date
0	First release of the document	Eugenio Manenti	Matis Zanaboni	30/08/2016
1	General review	Eugenio Manenti	Ennio Bignamini	23/05/2018

This guide is made in order to collect in one short document the main features of the DC600. For the complete features please check the complete manual.

Key legend

↑ = scroll up key

↓ = scroll down key

✓ = confirm key

✗ = cancel key



= home key



= function key

F1-F3 = function keys

Startup

During the startup, the display of the DC600 shows, in sequence:

- Aesys logo
- Firmware version (e.g. KCBUSADC1/E8B09A)
- Loaded configuration (e.g. [1903151110])
- Last destination

Set the destination

Press the ↑ and ↓ keys to scroll through the destination list or enter the destination code through the keypad.

Press the ✓ key to confirm the selected destination and show the destination on the displays.

Clear the signs (turn off displays' LEDs)

Press the ✗ key on the main screen and confirm with the ✓ key.


LED display test

Press any  key to access to the maintenance menu.

Select “Display test” by pressing the  and  keys.


 
Press the  key to confirm.

If the signs work properly they will show their firmware version, the identifier of the loaded fonts, their logical address and their resolution.

Press the  key to stop the display test.

Changing LED displays' brightness



Press any  key to access to the maintenance menu.

Select “Display bright” by pressing the  and  keys.

Press the  key to confirm.

Enter a value between 1 and 9 through the keypad (1 minimum brightness, 9 maximum brightness, 0 automatic brightness).

Press the  key to confirm.


Press the  key or  key to go back to main screen.

How to update the destinations through a .TRX file

Copy the .TRX file in the root of the USB pen drive.

Insert the USB pen drive into the USB slot of the DC600.

If there are multiple .TRX files, scroll through them by pressing the  and  keys.

Press the  key to confirm and upload the selected .TRX file.


Remove the USB pen drive from the USB slot of the DC600.

How to type a temporary message

Press the function  key.

Scroll the menu by using the \uparrow and \downarrow keys until the voice “Edit messages”.

Press the  key to confirm.

Press the  key to select the voice “Create new message” to create a new message, or scroll through the already created messages with the \uparrow and \downarrow keys to edit them.

Type the temporary destination and, once finished, press the  key.

Press the  key or the  key to go back to main screen.

Press the **F3** button and use the \uparrow and \downarrow keys to scroll through the temporary messages.

Press the  key to send the selected temporary message to the displays.