

MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
A/C Clutch SO9	PSID #4	3, 4, 5, 6	A52.J1:20	18,2	Ent Door Close SW32	PSID #64	3, 4	A36.JB:10	29,1
A/C Pres HiSd SE23	PSID #28	3, 4	A52.J1:13	18,2	Ent Full Open SE15	PSID #66	3, 4	A48.J1:11	29,1
A/C Pres LoSd SE24	PSID #29	3, 4	A52.J1:14	18,2	Ent open out SW34	PSID #71	3, 4	A36.JB:15	29,1
Backlit to CtrlHead	SID #32	3, 4	A36.JA:11	28,1	Ent Open Sol SO5	PSID #67	3, 4, 5, 6	A47.J1:7	29,1
Backup Light & Alm	PSID #167	3, 4, 5, 6	A50.J1:3	26,3	Ent Unlk Sens SE16	PSID #69	3, 4	A47.J1:11	29,1
Brk Lts Sens SE19	PSID #119	3, 4	A36.JB:13	12,1	Evap Motor Rly R12	PSID #77	3, 4, 5, 6	A54.J1:7	18,2
Ceiling Door Lt L17	PSID #108	3, 4, 5, 6	A44.J1:5	29,1	Evap Spd Ctrl MO9	PSID #78	4, 6	A53.J1:21	18,2
Center Flash LH L70	PSID #124	3, 4, 6	A50.J1:5	26,2	Fire Sensor	PSID #79	3, 4	A36.JB:5	9,1
Center Flash RH L68	PSID #125	3, 4, 6	A50.J1:7	26,2	Flash RH SW1	PSID #133	3, 4	A48.J1:12	26,1
Center Mkr L67-L70	PSID #27	3, 4, 6	A50.J1:8	26,2	Flasher LH Sw1	PSID #130	3, 4	A45.J1:9	26,1
Cond Rly spd1 R10	PSID #41	3, 4, 5, 6	A54.J1:5	18,2	Flsh Audibl Rly R16	PSID #37	3, 4, 5, 6	A45.J1:8	26,1
Cond Rly spd2 R9	PSID #42	3, 4, 6	A53.J1:8	18,2	Fog's Lights LH L95	PSID #134	3, 4, 6	A45.J1:4	26,3
Cornering Dash Sw30	PSID #200	3, 4	A55.J1:8	26,3	Fog's lights RH L96	PSID #136	3, 4, 6	A48.J1:8	26,3
Cyclope Lt L81	PSID #116	3, 4, 6	A51.J1:7	26,2	Foot trap Mo4	PSID #14	3, 4, 6	A45.J1:2	18,1
Direct Lts Relay R6	PSID #102	3, 4, 5, 6	A49.J1:11	24,1	FR Clearance lights	PSID #137	3, 4, 6	A44.J1:8	26,1
Direct Lts Sw25	PSID #103	3, 4	A41.J1:4	24,1	Fr Flsh-Mkr LH L62	PSID #128	3, 4, 6	A45.J1:3	26,1
Docking Dash Sw31	PSID #3	3, 4	A55.J1:7	26,3	Fr Side Flsh RH L64	PSID #10	3, 4, 6	A48.J1:20	26,1
Driver Def Fan L198	PSID #180	3, 4, 5, 6	A47.J1:1	18,1	Fr Start SW83	PSID #58	3, 4	A36.JB:22	3,2
Driver heat Sol SO8	PSID #16	3, 4, 5, 6	A46.J1:6	18,1	Front Flash RH L61	PSID #126	3, 4, 6	A48.J1:6	26,1
Driver Light L16	PSID #104	3, 4, 5, 6	A44.J1:3	19,1	FrontMkr Lts LH L62	PSID #148	3, 4, 6	A45.J1:21	26,1
Driver Light SW24	PSID #105	3, 4	A55.J1:5	19,1	FrontMkr Lts RH L61	PSID #149	3, 4, 6	A48.J1:7	26,1
Driver Rfg Sol SO7	PSID #13	3, 4, 5, 6	A46.J1:5	18,1	FrStart Enable SW58	PSID #56	3, 4	A53.J1:9	3,2
Driver Sensor SE21	PSID #12	3, 4, 5	A55.J1:1	18,1	Hazard Switch Sw4	PSID #138	3, 4	A36.JB:4	26,1
Drv air Trap MO3	PSID #5	3, 4, 6	A44.J1:2	18,1	Hd Light Call SW1	PSID #140	3, 4	A43.J1:3	26,1
Drv Rec Cylind L203	PSID #30	3, 4, 5, 6	A47.J1:4	18,1	HdLamp Wsh Pmp Mo54	SID #48	3, 4, 6	A46.J1:21	34,1
Elec Horn L185 L186	PSID #83	3, 4, 5, 6	A43.J1:13	9,1	Head Lights Pos1SW2	PSID #143	3, 4	A43.J1:4	26,1
Elec.Horn SW61 SW62	PSID #82	3, 4	A45.J1:10	9,1	Head Lt Sw Pos2 Sw2	PSID #11	3, 4	A45.J1:12	26,1
Emergency Lt R15	SID #47	3, 4, 5, 6	A49.J1:13	20,1	Hi Low Beam Sw1	PSID #6	3, 4	A43.J1:8	26,1
Emergency Relay R21	PSID #44	3, 4, 5, 6	A36.JA:24	3,2	High Beam LH L60	PSID #141	3, 4, 5, 6	A45.J1:6	26,1
Emgy & AisleLts R15	PSID #101	3, 4, 6	A46.J1:4	20,1	High Beam RH L59	PSID #145	3, 4, 5, 6	A48.J1:3	26,1
Eng Brk Active Sig	PSID #45	3, 4	A42.J1:18		Indir Lts Rly R13	PSID #110	3, 4, 5, 6	A49.J1:12	23,1
Eng Cmpt Bulb L173	PSID #106	3, 4, 5, 6	A52.J1:5	25,1	Indirect Lts Sw25	PSID #111	3, 4	A41.J1:3	23,1
Eng Cmpt Sw	PSID #107	3, 4	A52.J1:11	25,1	Knee Down Sol SO16	PSID #89	3, 4, 6	A41.J1:14	32,1
Eng Ether SW23	PSID #50	3, 4	A42.J1:5	13,1	Knee Down Sw10	PSID #93	3, 4	A41.J1:7	32,1
Eng Fan Spd1 Req	PSID #51	3, 4	A52.J1:9	13,1	Knee Proxi Pwr SE27	PSID #92	3, 4, 6	A41.J1:12	32,1
Eng Fan Spd2 Req	PSID #52	3, 4	A52.J1:10	13,1	Knee Up Sol SO15	PSID #95	3, 4, 6	A41.J1:15	32,1
Eng. Ether Sol SO1	PSID #49	3, 4, 6	A52.J1:6	13,1	Knee Up SW10	PSID #94	3, 4	A41.J1:6	32,1
Engine Fan Spd1 MO2	PSID #53	3, 4, 5, 6	A52.J1:1	13,1	Kneeling Alm L188	PSID #85	3, 4, 5, 6	A42.J1:14	32,1
Engine Fan Spd2 MO2	PSID #54	3, 4, 5, 6	A52.J1:2	13,1	KneePress Sens SE26	PSID #90	3, 4	A41.J1:18	32,1
EngRun Sig Hvac A15	SID #31	3, 4, 5, 6	A36.JA:13	3,2	KneeProxi Sens SE27	PSID #91	3, 4	A41.J1:19	32,1
Ent Close Out SW34	PSID #70	3, 4	A36.JB:17	29,1	Lav Emgy SW55	PSID #97	3, 4	A49.J1:6	11,1
Ent close Sens SE17	PSID #63	3, 4	A47.J1:10	29,1	Lav Fluo L142	PSID #99	3, 4, 5, 6	A50.J1:20	11,1
Ent Close Sol SO6	PSID #65	3, 4, 5, 6	A47.J1:6	29,1	Lav Flush Pmp Mo13	PSID #9	4, 6	A52.J1:7	11,1

MULTIPLEX ERROR MESSAGES LIST

FMI 3 = Shorted High ; FMI 4 = Shorted Low ; FMI 5 = Open Circuit ; FMI 6 = Current above Normal

Cluster message	SID/PSID	FMI	Module.Pin#	Page	Cluster message	SID/PSID	FMI	Module.Pin#	Page
Lav Flush Sw56	PSID #8	3, 4, 5, 6	A49.J1:2	11,1	Trans Inh Sig A1	SID #25	3, 4, 5, 6	A50.J1:2	15,1
Lavatory Fan MO14	PSID #98	4, 6	A52.J1:4	11,1	Trans Neutral Sens	PSID #168	3, 4	A50.J1:11	3,2
LH Corner Lts L97	PSID #120	3, 4, 6	A45.J1:5	26,3	Under Floor lights	PSID #112	4, 6	A46.J1:20	25,1
LH Docking LightL93	PSID #122	3, 4, 6	A51.J1:4	26,3	Unloader LH L200	PSID #31	3, 4, 5, 6	A52.J1:8	18,2
Low Beam LH L60	PSID #142	3, 4, 6	A45.J1:7	26,1	Unloader RH L199	PSID #32	3, 4, 5, 6	A52.J1:21	18,2
Low Beam RH L59	PSID #146	3, 4, 6	A48.J1:4	26,1	Up Def Heater1 Mo5	SID #34	3, 4, 5, 6	A46.J1:1	18,1
Low Wip Spd1 Mo22	PSID #184	3, 4, 5, 6	A47.J1:3	34,1	Up Def Heater2 Mo5	SID #35	3, 4, 5, 6	A46.J1:8	18,1
Lower Stop Lamps	PSID #153	3, 4, 6	A50.J1:6	12,1	Upper Brk Lamp	PSID #43	3, 4, 6	A51.J1:6	26,2
Lower Washer pmp	PSID #181	4, 6	A46.J1:3	34,1	Upper Def Fan MO5	PSID #33	4, 6	A46.J1:7	18,1
Lugg Lock Sol SO19	PSID #155	3, 4, 6	A42.J1:13	33,1	WakeUp Rly R17-R19	SID #30	4, 5, 6	A36.JA:15	3,3
Lugg Lock SW18	PSID #156	3, 4	A46.J1:10	33,1	WCL Pump Rly L207	PSID #176	3, 4, 6	A53.J1:5	36,1
Lugg unlk Sol SO18	PSID #158	3, 4, 6	A42.J1:16	33,1	WCLDorSig to USonic	SID #24	3, 4, 5, 6	A53.J1:7	36,1
Lugg Unlk SW18	PSID #159	3, 4	A46.J1:11	33,1	WCLSlid DoorLt L206	SID #33	3, 4, 6	A50.J1:1	36,1
OutDoor Sens SE20	PSID #161	3, 4, 5	A54.J1:14	18,1	ZFTrans Inh Sig A22	SID #26	3, 4, 5, 6	A53.J1:2	15,2
P Rack Fan LH MO10	PSID #19	4, 6	A54.J1:1	18,3					
P Rack Fan RH MO11	PSID #20	4, 6	A54.J1:2	18,3					
P Rack Fan Sw SW27	PSID #21	3, 4	A41.J1:20	18,2					
P Rack Rfg sol SO10	PSID #22	3, 4, 6	A53.J1:20	18,3					
Park brak Sens Se18	PSID #162	3, 4	A36.JB:9	12,1					
Park brake Sol SO17	PSID #163	4, 6	A42.J1:30	32,1					
Pass Heat Sol SO13	PSID #24	3, 4, 6	A54.J1:8	18,2					
Pass On_Off Sig R26	SID #29	3, 4, 5, 6	A54.J1:21	18,2					
Pass Rfg Sol SO11	PSID #23	3, 4, 5, 6	A54.J1:3	18,2					
Pass. Wtr pump MO12	PSID #17	3, 4, 6	A54.J1:4	18,2					
Read Lts Rly R14	PSID #113	3, 4, 5, 6	A49.J1:15	22,1					
Read Lts SW26	PSID #114	3, 4	A41.J1:10	22,1					
Rear CutOut Sw82	PSID #18	3, 4	A36.JB:21	3,2					
Rear High Buoy Sol	PSID #197	4, 6	A41.J1:30	32,1					
RearFish LH L71 L75	PSID #131	3, 4, 6	A51.J1:21	26,2					
RearFish RH L73 L76	PSID #132	3, 4, 6	A51.J1:3	26,2					
Retarder signal	PSID #164	3, 4	A50.J1:12	12,1					
RH Corner Light L98	PSID #121	3, 4, 6	A48.J1:5	26,3					
RH Docking LightL94	PSID #123	3, 4, 6	A51.J1:5	26,3					
Rr Clearance lights	PSID #151	3, 4, 6	A50.J1:4	26,2					
Rr Start SW59	PSID #59	3, 4	A53.J1:11	3,2					
RrStart Enable SW58	PSID #57	3, 4	A53.J1:10	3,2					
Ser Brake Trans A1	SID #49	3, 4, 6	A51.J1:1	15,1					
Starter Relay SO2	PSID #60	4, 6	A53.J1:6	3,2					
Starter Relay SO2	PSID #60	3, 6	A53.J1:1	3,2					
StepLts L18 L19 L20	PSID #117	3, 4, 5, 6	A47.J1:5	29,1					
Stop Eng Signal In	PSID #62		3 A42.J1:9						
SunVisor RlyR41-R45	SID #54	3, 4, 5, 6	A55.J1:13	41,1					
Tail Lights	PSID #152	3, 4, 6	A51.J1:8	26,2					