

# CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
L 8	ENG. BLK HEATER	SP 94	SPARE-RJB TO RR ROOF	0 L2	FS - FR SERVICE CPT LTS GRD	2 HL	A/C & HEAT SYSTEM-LO & HI PRESS SW
L 9	ENG. BLK HEATER	SP 95	SPARE-RJB TO RR ROOF	0 L3	FS - FJB GRD	2 L	A/C & HEAT SYSTEM-LO PRESS SW
SP 2	SPARE-FJB TO FR SERV CPT	SP 96	SPARE-RJB TO LUGG CPT #2	0 L4	FS - FJB GRD	5 NC	SPEED SIGNAL LOWER 5MPH
SP 3	SPARE-FJB TO CENTER DASH	SP 97	SPARE-RJB TO LUGG CPT #3	0 L5	FS - CIGAR LIGHTER	5 NO	SPEED SIGNAL HIGHER 5MPH
SP 4	SPARE-FJB TO CENTER DASH	SP 98	SPARE-RJB TO LUGG CPT #3	0 L	RS - ENGINE CPT ACCES. GRD	9	INTERIOR LTS-ENGINE CPT
SP 5	SPARE-RJB TO LUGG CPT #2	SP 104	SPARE-RJB TO ENGINE CPT	0 L	ENTRANCE DOOR GRD	9 A	INTERIOR LTS-ENGINE CPT
SP 6	SPARE-RJB TO LUGG CPT #1	SP 105	SPARE-FJB TO ENGINE	0 LH	RS - RR END LAMPS LH GRD	9 B	INTERIOR LTS-ENGINE CPT
SP 7	SPARE-RJB TO LUGG CPT #1	SP 106	SPARE-RJB TO BATT. CPT.	0 M	FS - ELECTRICAL MOTOR GRD	9 E	INTERIOR LTS-FR SERVICE CPT
SP 8	SPARE-RJB TO LUGG CPT #1	SP 107	SPARE-RJB TO BATT. CPT.	0 M3	FS - ELECTRICAL MOTOR GRD	9 F	INTERIOR LTS-ENGINE CPT
SP 9	SPARE-RJB TO LUGG CPT #2	SP 108	SPARE-RJB TO BATT. CPT.	0 M4	FS - ELECTRICAL MOTOR GRD	10	INTERIOR LTS-LUGGAGE CPT
SP 10	SPARE-RJB TO LUGG CPT #1	SP 109	SPARE-RJB TO ENGINE CPT.	0 M5	FS - ELECTRICAL MOTOR GRD	10 A	INTERIOR LTS-LUGGAGE CPT
SP 11	SPARE-FJB TO RJB	SP 110	SPARE-RJB TO ENGINE CPT.	0 M6	FS - FJB GRD	10 B	INTERIOR LTS-LUGGAGE CPT
SP 12	SPARE-RJB TO ENGINE	SP 111	SPARE-RJB TO ENGINE CPT.	0 M7	FS - ELECTRICAL MOTOR GRD	10 C	INTERIOR LTS-LUGGAGE CPT
SP 13	SPARE-RJB TO ENGINE	SP 112	SPARE-RJB TO ENGINE CPT.	0 M8	FS - AUX. A/C UNIT	10 D	INTERIOR LTS-LUGGAGE CPT
SP 14	SPARE-FJB TO RJB	SP 114	SPARE-FJB TO U/DASH WIPER	0 M9	FS - WATER PUMP DRIVER	10 E	INTERIOR LTS-EVAP. CPT
SP 15	SPARE-RJB TO ENGINE	SP 115	SPARE-FJB TO U/DASH WIPER	0 M	RS - ENGINE CPT ACCES. GRD	10 F	INTERIOR LTS-LUGGAGE CPT
SP 16	SPARE-RJB TO ENGINE	SP 116	SPARE-RJB TO U/DASH FLOOR	0 MR	24V DISC. SW. RLY GRD SIGNAL	10 H	INTERIOR LTS-LUGGAGE CPT
SP 17	SPARE-RJB TO ENGINE	SP 117	SPARE-FJB TO U/DASH FLOOR	0 MS	24V DISC. SW. RLY GRD SIGNAL	10 R	INTERIOR LTS-LUGGAGE DOOR AJAR
SP 18	SPARE-FJB TO RJB	W C	A/C & HEAT SYST-EVAP CTR SIGN	0 N	RS - ENGINE CPT ACCES. GRD	12	12V BAT ELECTRONIC JCT BLOCK
SP 24	SPARE-RJB TO LAVATORY ROOF	0	BC - BAT. CPT CHASSIS GRD	0 P	RS - ENGINE CPT ACCES. GRD	12	BAT CPT 12V BATTERY
SP 25	SPARE-RJB TO LAVATORY ROOF	0	CONDENSER CPT GRD	0 R	RS - RJB GRD	12 A	FR JCT BOX 12V DISC SW
SP 26	SPARE-RJB TO LAVATORY ROOF	0	RS - RR JCT BOX RLY GRD	0 R	RS - ENGINE CPT ACCES. GRD	12 A	RR JCT BOX 12V DISC SW
SP 27	SPARE-RJB TO LH HAT RACK	0 A	BC - SHIELD GRD	0 RH	RS - RR END LAMPS RH GRD	12 B	12V BAT ELECTRICAL JCT BLOCK
SP 28	SPARE-RJB TO LH HAT RACK	0 A	RS - RR JCT BOX RLY GRD	0 S	12 VOLT RUN- GND RLY	12 B	RR JCT BOX 12V DISC SW
SP 31	SPARE-RJB TO RH HAT RACK	0 A	FRS - FR ROOF ACCES. GRD	0 SA	ENGINE CPT STUD-ALTERN. BOSCH	12 B	FR JCT BOX 12V DISC SW
SP 32	SPARE-RJB TO RH HAT RACK	0 A	RS - LUG. CPT ACCES. GRD	0 T	FS - DASH ACCES. GRD	12 BE	BAT. EQUALIZER MONITOR
SP 33	SPARE-FJB TO RJB	0 AA	RS - VOLTAGE REGULATOR GRD	0 T1	FS - DASH ACCES. GRD	12 C	FR JCT BOX 12V DISC SW
SP 38	SPARE-FJB TO RJB	0 B	EC - ENGINE GRD	0 T2	FS - DASH ACCES. GRD	12 C	RR JCT BOX 12V DISC SW
SP 43	SPARE-FJB TO RJB	0 B	FRS - FR ROOF HEAT WIND GRD	0 T3	FS - DASH ACCES. GRD	12 D	BAT CPT 12V BATTERY
SP 45	SPARE-FJB TO RJB	0 B	RS - LUG. CPT ACCES. GRD	0 T4	FS - DASH ACCES. GRD	12 DT	TTLT MODULE
SP 46	SPARE-RJB TO LH FR ROOF	0 BE	RJB - BAT. EQUAL. BAT GRD	0 V	RR JCT BOX CPT GRD STUD	12 E	FR JCT BOX 12V DISC SW
SP 48	SPARE-RJB TO DASH CENTER PANEL	0 C	EC - STARTER MOTOR GRD	0 VA	BATTERY TO EQUALISER 0V	12 E	RR JCT BOX 12V DISC SW
SP 56	SPARE-ENGINE TO RH SW PANEL	0 C	FS - SERV. CPT ACCES. GRD	0 W	FS - WT GND & SHIELD	12 F	BAT CPT 12V FJB & IC
SP 57	SPARE-DASH CENTER PANEL TO ENG.	0 C	BC - FAN CONDENSER GRD	0 W	RS - RR JCT BOX (WCL) GRD	12 F	FR JCT BOX 12V DISC SW
SP 58	SPARE-DASH CENTER PANEL TO ENG.	0 CR	24V DISC. SW. RLY GRD SIGNAL	0 WC	RS - RR JCT BOX GRD (WCL)	12 F	RR JCT BOX 12V DISC SW
SP 59	SPARE-FJB TO ENGINE	0 CS	24V DISC. SW. RLY GRD SIGNAL	0 X	RS - RR JCT BOX GRD	12 G	FR JCT BOX 12V DISC SW
SP 61	SPARE-FJB TO DASH RH PANEL	0 C1	FS - SERV. CPT ACCES. GRD	0 Y	ABS FR JCT BOX CPT GRD STUD	12 J	FR JCT BOX 12V DISC SW
SP 68	SPARE-FJB TO ENGINE	0 C2	FS - SERV. CPT ACCES. GRD	0 Y	RR JCT BOX GRD	12 K	HVAC MODULE
SP 69	SPARE-FJB TO FR AXLE	0 C3	FS - SERV. CPT ACCES. GRD	0 Y1	ABS FR JCT BOX CPT GRD STUD	12 I	12V IGNITION DISTRIBUTION
SP 70	SPARE-FJB TO FR AXLE	0 C4	FS - FJB. CPT ACCES. GRD	0 Z	RR JCT BOX CPT GRD STUD	12 I	RR JCT BOX 12V IGNITION
SP 71	SPARE-FJB TO RH SW PANEL	0 D	BC - FAN CONDENSER GRD	00	FJB & RJB BATT. GRD	12 IA	12V IGNITION DISTRIBUTION
SP 72	SPARE-FJB TO FR SERV CPT	0 D	RS - HAT RACK ACCES. LH GRD	00 A	FBG - T.T.LT. MODULES BATT. GRD	12 IA	FR JCT BOX 12V IGNITION
SP 74	SPARE-FJB TO LH CONSOLE	0 DF	RS - RR SIDE FLASH & MARK GRD	00 Y	FS - ABS MODULLE BATT. GRD	12 IB	FR JCT BOX 12V IGNITION
SP 77	SPARE-FJB TO EVAPORATOR CPT	0 DR	RS - RJB DOCKING LT RESISTORS	00 SS	SOUND SYSTEM BATT. GRD	12 LX	CLUSTER FEED
SP 78	SPARE-FJB TO CONDENSER CPT	0 J	FS - LH CONSOLE SW GRD	1	TACHO SYSTEM - RPM SIGNAL +	12 IF	FR JCT BOX 12V IGNITION
SP 79	SPARE-FJB TO CONDENSER CPT	0 J	RS - RR ROOF ACCES. GRD	2 A	A/C & HEAT SYSTEM-COOL 1 SIGN	12 P	LH CONSOLE POWER OUTLET
SP 87	SPARE-RJB TO LH HAT RACK	0 K	RS - RR ROOF ACCES. GRD	2 B	A/C & HEAT SYSTEM-COOL SIGN	12 R	BAT CPT 12V DISC RLY TO RJB
SP 88	SPARE-RJB TO RH HAT RACK	0 K	RS - RJB A/C JCT PANEL GRD	2 E	A/C & HEAT EVAP. CONTROL	12 VA	BATTERY TO EQUALIZER 12V
SP 92	SPARE-RJB TO CONDENSER CPT	0 L	FS - FR SERVICE CPT LTS GRD	2 F	A/C & HEAT EVAP. CONTROL	12 VD	12V HOT WIRE DISTRIBUTION
SP 93	SPARE-RJB TO EVAPORATOR CPT	0 L1	FS - FR SERVICE CPT LTS GRD	2 H	A/C & HEAT SYSTEM-HI PRESS SW	12 VF	BAT CPT 12V FJB & IC

# CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
12 VI	12V IGNITION DISTRIBUTION	24 E	FR JCT BOX 24V DISC SW	29 A	A/C & HEAT SYSTEM-DRIVER'S HTR	52 C	ALARM & SIGNAL-AIR HORN
12 VR	BAT CPT 12V DISC RLY TO RJB	24 E	RR JCT BOX 24V DISC SW	29 H	HVAC DASH MODULE	53	ALARM & SIGNAL-ELEC. HORN
12 W	12V BATTERY DDEC III	24 F	FR JCT BOX 24V DISC SW	29 B	A/C & HEAT SYSTEM-DRIVER'S HTR	53 A	WIPER & WASHER SYSTEM
12 X	FR JCT BOX 12V DISC SW	24 F	RR JCT BOX 24V DISC SW	31 A	A/C & HEAT SYSTEM-UNLOADER	53 B	WIPER & WASHER SYSTEM
12 X2	FR JCT BOX 12V DISC SW	24 G	FR JCT BOX 24V DISC SW	31 B	A/C & HEAT SYSTEM-UNLOADER	53 C	WIPER & WASHER SYSTEM
12 Y	FR JCT BOX 12V DISC SW	24 G	RR JCT BOX 24V DISC SW	31 B	WIPER & WASHER SYSTEM	53 E	WIPER & WASHER SYSTEM
13 A	ALARM & SIGNAL-LO AIR PRIM.	24 H	FR JCT BOX 24V DISC SW	31 C	WIPER & WASHER SYSTEM	53 J	WIPER & WASHER SYSTEM
13 B	ALARM & SIGNAL-LO AIR SEC.	24 H	RR JCT BOX 24V DISC SW	31 D	WIPER & WASHER SYSTEM	53 K	KEYLESS
15	EXTERIOR LTS-MULTI FUNC LEVEL	24 I	FR JCT BOX 24V IGNITION	31 E	WIPER & WASHER SYSTEM	55	EXTERIOR LTS-HI BEAM
15 A	WIPER & WASHER UPPER WINDSHIELD	24 I	RR JCT BOX 24V IGNITION	31 J	WIPER & WASHER SYSTEM	57	EXTERIOR LTS-HI BEAM
16	SPEED - SIGNAL +	24 IA	FR JCT BOX 24V IGNITION	31 X	WIPER & WASHER SYSTEM	57 A	A/C & HEAT SYSTEM-WATER PUMP
16 A	SPEED - SIGNAL +	24 IA	RR JCT BOX 24V IGNITION	32	EXTERIOR LTS-BACK-UP	57 A	EXTERIOR LTS-HI BEAM
16 T	SPEED - SIGNAL +	24 IB	FR JCT BOX 24V IGNITION	32 B	EXTERIOR LTS-BACK-UP	57 B	A/C & HEAT SYSTEM-WATER PUMP
17	EXTERIOR LTS-FLASHER UNIT	24 IB	RR JCT BOX 24V IGNITION	32 C	BACK-UP PWR & SIGNAL	57 C	PRE-HEAT WATER HEATER
17 A	EXTERIOR LTS-FLASHER UNIT	24 IF	FJB 24V IGNITION	32 D	BACK-UP ALARM	57 CA	A/C & HEAT SYSTEM-HEAT SIGN
19	DIFFERENTIAL OIL TEMP	24 IC	FR JCT BOX 24V IGNITION	35	ENTRANCE DOOR	57 CC	A/C & HEAT SYSTEM-HEAT SIGN
20	SPEED - SIGNAL -	24 P	FR JCT BOX 24V DISC SW	35 B	ENTRANCE DOOR	58	EXTERIOR LTS-LO BEAM
20 T	SPEED - SIGNAL -	24 S	24V DISC SW RLY SIGNAL	36	JACOB BRAKE SYSREM	58 A	EXTERIOR LTS-LO BEAM
20 W	SPEED - SIGNAL -	24 T	RR JCT BOX 24V DISC SW	36 A	JACOB BRAKE SYSREM	58 B	EXTERIOR LTS-LO BEAM
21	EXTERIOR LTS-DIRECTIONNAL LH	24 V2	RR JCT BOX 24V DISC SW	39	INTERIOR LTS-12V RH PANEL SW.	58 C	DAYTIME RUNNING LIGHT
21 A	EXTERIOR LTS-DIRECTIONNAL LH	24 V3	RR JCT BOX 24V DISC SW	39 A	INTERIOR LTS-DRIVER'S LTS	58 D	DAYTIME RUNNING LIGHT
21 B	EXTERIOR LTS-HAZARD	24 V4	RR JCT BOX 24V DISC SW	39 B	DRIVER'S LTS KEYLESS	58 E	EXTERIOR LTS-LO BEAM
21 C	EXTERIOR LTS-CORNERING LH	24 V5	RR JCT BOX 24V DISC SW	39 K	DRIVER'S LTS KEYLESS	59 A	JACOB BRAKE SYSTEM
21 H	EXTERIOR LTS-DIRECTIONNAL LH	24 VD	24V HOT WIRE DISTRIBUTION	41	A/C & HEAT SYSTEM-COND FAN MOT	61	EXTERIOR LTS-24V FEED SW
21 K	EXTERIOR LTS-CORNERING	24 VF	BAT CPT 24V SW TO FJB & IC	41 A	A/C & HEAT SYSTEM-COND FAN MOT	61 A	EXTERIOR LTS-HEAD SIGNAL
21 N	EXTERIOR LTS-CORNERING LH	24 VA	BATTERY TO EQUALIZER 24V	41 B	A/C & HEAT SYSTEM-COND FAN MOT	63	EXTERIOR LTS-CLEARANCE
21 P	EXTERIOR LTS-CORNERING LH	24 VI	RR JCT BOX 24V IGNITION	42	A/C & HEAT SYSTEM-COND FAN MOT	63 A	EXTERIOR LTS-CLEARANCE
23	EXTERIOR LTS-DIRECTIONNAL RH	24 VI	BAT CPT 24V DISC SW TO RJB	43	A/C & HEAT SYSTEM-COND FAN MOT	63 B	EXTERIOR LTS-CLEARANCE
23	EXTERIOR LTS-DIRECTIONNAL RH	25	12VAC GEN RLY ON SIGNAL	42 A	A/C & HEAT SYSTEM-COND FAN MOT	63 C	EXTERIOR LTS-MARKER SIGNAL
23 A	EXTERIOR LTS-DIRECTIONNAL RH	25	12VAC GEN RLY ON SIGNAL	44	EXTERIOR LTS-FOG	63 D	EXTERIOR LTS-MARKER & TAIL
23 B	EXTERIOR LTS-DIRECTIONNAL RH	25 A	ETHER SWITCH	44 A	EXTERIOR LTS-FOG	63 E	EXTERIOR LTS-CLEARANCE
23 C	EXTERIOR LTS-CORNERING RH	25 A	NOT ALTERNATOR #1-WARNING LT	44 B	EXTERIOR LTS-FOG	63 F	EXTERIOR LTS-MARKER BLINKER
23 N	EXTERIOR LTS-CORNERING RH	25 A1	24 VOLTS EXCITING SIGNAL - ALT. #1	44 C	EXTERIOR LTS-FOG & HAZARD	63 H	EXTERIOR LTS-TAIL
23 P	EXTERIOR LTS-CORNERING RH	25 A2	24 VOLTS EXCITING SIGNAL - ALT. #2	45 A	WATER PUMP SIGNAL	64	DRIVER'S FAN
24	BAT CPT 24V BATTERY	25 A3	24 V. SIGNAL ALT#1 OR ALT. #2 RUN	45 B	A/C & HEAT SYSTEM-HEAT SIGN	64 B	DRIVER'S FAN
24	FR JCT BOX 24V DISC SW	25 F	12V IGNITION DISTRIBUTION	45 D	A/C & HEAT SYSTEM-WATER VALVE	64 C	DRIVER'S FAN
24 A	BOOSTER BLOCK 24V DISC SW	25 B	EXTERIOR LTS-DAYTIME RUN LTS	45 E	A/C & HEAT SYSTEM-HEAT 1 SIGN	65	FOOT DAMPER MOTOR
24 A	FR JCT BOX 24V DISC SW	25 B	12 V. IGN. ALTERNATOR BOSCH	45 G	A/C & HEAT SYSTEM-DRIVER'S HTR	65 A	FOOT DAMPER MOTOR
24 A	RR JCT BOX 24V DISC SW	25 C	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN	45 H	A/C & HEAT SYSTEM-DRIVER'S HTR	65 D	DRIVER'S REC. DAMPER
24 B	24V STARTER RLY FEEDING	25 D	12 V. SIGNAL ALT.#1 AND ALT.#2 RUN	45 W	A/C & HEAT SYSTEM-COND. DOOR AJAR	65 P	PASSENGER REC. DAMPER
24 B	FR JCT BOX 24V DISC SW	25 H	24 V. IGN. ALTERNATOR BOSCH	46	EXTERIOR LTS-MARKER	66	O_PASS_ON/OFF
24 B	RR JCT BOX 24V DISC SW	25 K	NOT ALTERNATOR #2-WARNING LT	46 A	EXTERIOR LTS-MARKER	67	A/C & HEAT SYSTEM
24 BE	RJB CPT-BAT EQ MONITOR HOT WIRE	26	CIGAR LIGHTER	46 B	EXTERIOR LTS-MARKER	67 A	A/C & HEAT SYSTEM
24 C	FR JCT BOX 24V DISC SW	26	DRIVER'S WINDOW LIFTER	46 B	EXTERIOR LTS-MARKER	67 B	A/C & HEAT SYSTEM
24 C	RR JCT BOX 24V DISC SW	26 B	DRIVER'S WINDOW LIFTER	46 C	EXTERIOR LTS-MARKER	67 C	HEAT WINDS.
24 D	BAT CPT 24V HOT WIRE	26 C	DRIVER'S WINDOW LIFTER	47	A/C & HEAT SYSTEM-DRIVER'S HTR	67 K	A/C & HEAT SYSTEM-COND FAN CTR
24 D	FR JCT BOX 24V HOT WIRE	27	PARKING BRAKE SONALERT	50	AIR DRYER	67 L	A/C & HEAT SYSTEM-COND FAN CTR
24 D	RR JCT BOX 24V HOT WIRE	27 A	PARKING BRAKE SONALERT	52	ALARM & SIGNAL-ELEC. HORN	67 V	A/C & HEAT SYSTEM-WATER VALVE
24 DA	A/C JCT BOX 24V HOT WIRE	28 A	A/C & HEAT SYSTEM-HI PRESSURE	52 A	ALARM & SIGNAL-ELEC. HORN	68	DASH & DEFROST DAMPER MOTOR
24 E	BAT CPT 24V DISC SW	29	A/C & HEAT SYSTEM-DRIVER'S HTR	52 B	ALARM & SIGNAL-AIR HORN	68 A	DASH & DEFROST DAMPER MOTOR

# CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
70	INTERIOR LTS-HAT RACK & RR RUN.	93	BATTERY EQUALIZER-CHECK LO/HI	1 2 3 B	ALARM & SIGNAL-FIRE DETECTOR	1 3 7 C	RR VIEW MIRROR (SPARTAN)
72	SUN VISOR-FEEDING	95 A	ENGINE BRAKE & RETARDER SYSTEM	1 2 4	WORLD TRANSM-THROTTLE (HI)	1 3 7 D	RR VIEW MIRROR (SPARTAN)
72 A	SUN VISOR-RH	97	TACHOMETER (-)	1 2 5	WORLD TRANSM-RET. INDICATOR	1 3 7 E	RR VIEW MIRROR (SPARTAN)
72 B	SUN VISOR-RH	1 0 1	24V STARTER SOL FEEDING	1 2 5 W	WORLD TRANSM-RET. INDICATOR	1 3 7 G	RR VIEW MIRROR (SPARTAN)
72 C	SUN VISOR-LH	1 0 1	WORLD TRANSM-LO SIGN SOL. LO	1 2 6	LEVEL LOW SYSTEM	1 3 8	ABS SYSTEM
72 D	SUN VISOR-LH	1 0 2	24V STARTER TO GENERATOR DELCO	1 2 6	WORLD TRANSM-LUBE PRESS SW.	1 3 8	WORLD TRANSM-RETARDER TEMP
76	FUEL TANK GAUGE	1 0 2	WORLD TRANSM-SOL. GRD 1	1 2 7	WORLD TRANSM-LUBE PRESS SW.	1 3 8 A	ABS SYSTEM
76 B	LOW FUEL LT & ETHER COLD START	1 0 2	WORLD TRANSM-SOL. C3	1 2 7	PRE-HEAT WATER HEATER	1 3 9	ABS SYSTEM
76 C	LOW FUEL LT	1 0 2 A	24V STARTER TO GENERATOR BOSCH	1 2 7 A	PRE-HEAT WATER HEATER	1 3 9	WORLD TRANSM-OUTPUT SPEED HI
76 P	FUEL PRIME PUMP	1 0 4	WORLD TRANSM-SOL. FORWARD	1 2 7 B	PRE-HEAT WATER HEATER	1 4 0	ABS SYSTEM
76 M	FUEL PRIME PUMP	1 0 4	LEVEL LOW SYSTEM	1 2 7	WORLD TRANSM-RETARDER FEED SOL.	1 4 0	WORLD TRANSM-OUTPUT SPEED LO
77 A	A/C & HEAT SYSTEM-COMPRESSOR	1 0 5	WORLD TRANSM-RETARDER & SUMP	1 2 7 S	PRE-HEAT WATER HEATER	1 4 1	ABS SYSTEM
77 B	A/C & HEAT SYSTEM-COMPRESSOR	1 0 5 W	WORLD TRANSM-RETARDER & SUMP	1 2 7 W	PRE-HEAT WATER HEATER	1 4 1	WORLD TRANSM-ENGINE SPEED HI
77 C	A/C & HEAT SYSTEM-COMPRESSOR	1 0 6	WORLD TRANSM-OIL LEVEL HI	1 2 8	PRE-HEAT WATER HEATER	1 4 2	ABS SYSTEM
77 H	A/C & HEAT SYSTEM-COMPRESSOR	1 0 7	CHARG SYST-VOLTAGE REGUL. "F"	1 2 8 A	PRE-HEAT WATER HEATER	1 4 2	WORLD TRANSM-SERIAL COM. A
77 K	GRD SIGNAL-COMPRESSOR CUT-OUT	1 0 7	WORLD TRANSM-LOCKUP SOL. HI	1 2 8 B	PRE-HEAT WATER HEATER	1 4 3	ABS SYSTEM
81	EXTERIOR LTS-STOP SW	1 0 8	WORLD TRANSM-REM. PWR WAKE UP	1 2 8 W	PRE-HEAT WATER HEATER	1 4 3	WORLD TRANSM-ECU BATTERY GRD
82	EXTERIOR LTS-STOP SIGNAL	1 0 9	WORLD TRANSM-RET. SOL. LO	1 2 8	WORLD TRANSM-SOL. C2	1 4 3 A	ABS SYSTEM
82 A	EXTERIOR LTS-STOP SIGNAL	1 1 0	ALARM & SIGNAL-WATER TEMP	1 2 9	PRE-HEAT WATER HEATER	1 4 3 W	WORLD TRANSM-BATTERY GRD
82 B	EXTERIOR LTS-STOP LTS	1 1 0	WORLD TRANSM-LOCKUP SOL. LO	1 2 9	WORLD TRANSM-SOL. C5	1 4 3 X	WORLD TRANSM-BATTERY GRD
82 K	EXTERIOR LTS-STOP PARK BRK	1 1 1	WORLD TRANSM-SOL. C6	1 3 0	WORLD TRANSM-SOL. GRD 3	1 4 4	ABS SYSTEM
82 L	EXTERIOR LTS-LH STOP	1 1 2	WORLD TRANSM-SPARE OUTPUT (+)	1 3 1	WORLD TRANSM-SOL. C4	1 4 4	WORLD TRANSM-ECU CHASSIS GRD
82 R	EXTERIOR LTS-LH STOP	1 1 3	ALARM & SIGNAL-OIL PRESS	1 3 2	WORLD TRANSM-ENG BRK OUTPUT (-)	1 4 4 A	ABS SYSTEM
83	ENGINE CTR-KEY SW ACCES SIGN	1 1 3	WORLD TRANSM-REVERSE WARNING	1 3 2 A	LEVEL LOW SYSTEM	1 4 5	ABS SYSTEM
84	ENGINE CTR-KEY SW ACCES SIGN	1 1 4	INTERIOR LTS-DASH LT REGUL.	1 3 2 B	LEVEL LOW SYSTEM	1 4 6	ABS SYSTEM
85	ENGINE CTR-KEY SWIGNITION SIGN	1 1 4	WORLD TRANSM-SPARE OUTPUT (-)	1 3 2 C	LEVEL LOW SYSTEM	1 4 6	WORLD TRANSM-IGNITION SENSE
85	24V IGNITION SIGNAL	1 1 4 A	INTERIOR LTS-DASH LT	1 3 2 D	LEVEL LOW SYSTEM	1 4 6 W	WORLD TRANSM-12V IGNITION
85 A	24V IGN DASH INSTRUMENTATION	1 1 4 B	INTERIOR LTS-DASH LT REGUL.	1 3 2 E	LEVEL LOW SYSTEM	1 4 6 X	WORLD TRANSM-12V IGNITION
85 B	ENGINE CTR-24V IGNITION	1 1 4 D	INTERIOR LTS-DASH LT REGUL.	1 3 2 F	LEVEL LOW SYSTEM	1 4 7	ABS SYSTEM
85 C	PARKING BRAKE SWITCH	1 1 4 E	INTERIOR LTS-DASH LT REGUL.	1 3 2 G	LEVEL LOW SYSTEM	1 4 7	ETHER COLD START
85 F	ENGINE CTR-ENGINE CTR SW IGN	1 1 5	ALARM & SIGNAL-TAG PRESS	1 3 2 H	LEVEL LOW SYSTEM	1 4 7	WORLD TRANSM-OIL TEMP
85 F	LO AIR SONALERT	1 1 5	DDEC III-COOLANT LEVEL	1 3 2 J	LEVEL LOW SYSTEM	1 4 7 C	ETHER COLD START
85 W	24V IGN ABS	1 1 5	WORLD TRANSM-DO NOT SHIFT SIGN	1 3 2 K	LEVEL LOW SYSTEM	1 4 8	ABS SYSTEM
85 X	24V IGN ABS	1 1 5 C	DDEC III-COOLANT LEVEL	1 3 2 W	WORLD TRANSM-ENG BRK OUTPUT (-)	1 4 8	WORLD TRANSM-OUTPUT SPEED LO
85 Y	ABS-WARNING LT	1 1 5 W	WORLD TRANSM-DO NOT SHIFT SIGN	1 3 3	WORLD TRANSM-RET. ACTUATOR HI	1 4 9	ABS SYSTEM
86	ENGINE CTR-STARTER SOL SIGN	1 1 6	WORLD TRANSM-LO SIGNAL SOL. HI	1 3 4	WORLD TRANSM-RET. APPLY SOL. HI	1 4 9	WORLD TRANSM-TURBINE SPEED HI
86 A	ENGINE CTR-STARTER SOL SIGN	1 1 6 B	A/C & HEAT SYSTEM-DRIVER'S HTR	1 3 5	A/C & HEAT SYSTEM-AIR SENSOR	1 4 9 A	ABS SYSTEM
88	ENGINE CTR-RR START SIGNAL	1 1 7	WORLD TRANSM-SPARE INPUT (-)	1 3 5	WORLD TRANSM-ANALOG GRD	1 5 0	DDEC III-ECM BATTERY GRD
89	ENGINE CTR-RR START SIGNAL	1 1 7 A	ALARM & SIGNAL-TRANSM OIL TEMP	1 3 5 A	A/C & HEAT SYSTEM-AIR SENSOR	1 5 0	WORLD TRANSM-ENGINE SPEED LO
90 B	A/C & HEAT SYSTEM-COND FAN MOT	1 1 7 A	ALARM & SIGNAL-TRANSM OIL TEMP	1 3 5 D	A/C & HEAT SYSTEM-AIR SENSOR	1 5 0 A	DDEC III-ECM BATTERY GRD
90 B	ENGINE CTR-MAST KEY SW FEED	1 1 8	WORLD TRANSM-SPARE INPUT (+)	1 3 5 C	A/C & HEAT SYSTEM-AIR SENSOR	1 5 1	ABS SYSTEM
90 C	A/C & HEAT SYSTEM-COND FAN MOT	1 1 9	WORLD TRANSM-ENG BRK INPUT (+)	1 3 5 D	WORLD TRANSM-RETARDER RES MOD	1 5 1	DDEC III-ECM BATTERY GRD
90 F	CHARG SYST-VOLTAGE REGUL. "B"	1 2 0	WORLD TRANSM-SOL. C1	1 3 5 C	WORLD TRANSM-RETARDER TEMP	1 5 1	WORLD TRANSM-SERIAL COM. B
90 H	A/C & HEAT SYSTEM-EVAP FAN MOT	1 2 1	WORLD TRANSM-SOL. GRD 2	1 3 6	WORLD TRANSM-ECU POWER	1 5 1 A	ABS SYSTEM
90 J	A/C & HEAT SYSTEM-COND FAN MOT	1 2 2	A/C & HEAT SYSTEM-DRIVER'S HTR	1 3 6 V	WORLD TRANSM-12V BATTERY	1 5 2	ABS SYSTEM
91	PARKING BRAKE SW SIGNAL	1 2 2	A/C & HEAT SYSTEM-FRESH AIR	1 3 6 W	WORLD TRANSM-12V BATTERY	1 5 2 A	ABS SYSTEM
91 A	DDEC-FAST IDLE SIGNAL	1 2 2	WORLD TRANSM-SOL. GRD 4	1 3 6 X	WORLD TRANSM-12V BATTERY	1 5 3	ABS SYSTEM
91 S	SONALERT PARKING BRAKE	1 2 2 A	A/C & HEAT SYSTEM-FRESH AIR	1 3 7	WORLD TRANSM-RETARDER	1 5 3	WORLD TRANSM-SPARE INPUT (-)
91 W	PARK, BRAKE SW SIGN (WCL)	1 2 3	WORLD TRANSM-NEUTRAL START	1 3 7 A	MIRROR (SPARTAN & RAMCO)	1 5 4	ABS SYSTEM
92	BATTERY EQUALIZER-CHECK BALANCE	1 2 3 A	ALARM & SIGNAL-FIRE DETECTOR	1 3 7 B	RR VIEW MIRROR (SPARTAN)	1 5 4	WORLD TRANSM-ABS RET. INPUT

# CIRCUIT NUMBER CODE

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
155	ABS SYSTEM	175 A	BACK-UP MONITOR	275	KEYLESS ENTRY SYSTEM	901	DDEC III-DATA LINK (-)
155	WORLD TRANSM-SPARE INPUT (-)	175 B	BACK-UP MONITOR	276	KEYLESS ENTRY SYSTEM	908	DDEC III-HYDRAULIC PWM#1 OUTPUT
156	ABS SYSTEM	175 C	BACK-UP MONITOR	277	KEYLESS ENTRY SYSTEM	916	DDEC III-SENSOR SUPPLY (5VDC)
156	WORLD TRANSM-THROTTLE POS.	180	DRIVER'S SEAT HEATER	278	KEYLESS ENTRY SYSTEM	952	DDEC III-SENSOR RETURN
156 A	ABS SYSTEM	180 A	DRIVER'S SEAT HEATER	279	KEYLESS ENTRY SYSTEM	953	DDEC III-BATTERY GRD
157	ABS SYSTEM	180 B	CO-PILOT SEAT HEATER	280	KEYLESS ENTRY SYSTEM	979	DDEC III-ENGINE BRAKE 2 CYL.
157	WORLD TRANSM-SPEEDO SIGNAL	180 C	CO-PILOT SEAT HEATER	283	KEYLESS ENTRY SYSTEM		
157 A	ABS SYSTEM	181 A	THERMOMETER INSIDE SENSOR	283 A	KEYLESS ENTRY SYSTEM		
157 B	ABS SYSTEM	181 B	THERMOMETER INSIDE SENSOR	284 A	KEYLESS ENTRY SYSTEM		
158	WORLD TRANSM-DIMMER	181 C	THERMOMETER OUTSIDE SENSOR	284 B	KEYLESS ENTRY SYSTEM		
160	ALARM & SIGNAL-TAG PRESS SW	181 D	THERMOMETER OUTSIDE SENSOR	285	KEYLESS ENTRY SYSTEM		
160	WORLD TRANSM-SER. INTERFACE (-)	197	FUEL WATER FILTER	285 B	KEYLESS ENTRY SYSTEM		
161	WORLD TRANSM-SIGNAL GRD	197 A	FUEL WATER FILTER	285 C	KEYLESS ENTRY SYSTEM		
161 B	WORLD TRANSM-SIGNAL GRD	197 B	FUEL WATER FILTER	286	KEYLESS ENTRY SYSTEM		
162	WORLD TRANSM-PRESS. SW C3	198	FILTER FUEL HEATER	286 A	KEYLESS ENTRY SYSTEM		
163	WORLD TRANSM-RETARDER ENABLE	199	AIR FILTER RESTRICTION SENDER	290	FAN CLUTCH RADIATOR		
164	WORLD TRANSM-RET. ACTUATOR SIGN	201	WORLD TRANSM-SPARE	290	FAN CLUTCH RADIATOR		
165	A/C & HEAT SYSTEM-TRANSMITER	202	WORLD TRANSM-SPARE	291	FAN CLUTCH RADIATOR SPD 1		
165	WORLD TRANSM-OIL LEVEL SIGNAL	203	WORLD TRANSM-SPARE	291	KEYLESS ENTRY SYSTEM		
165 A	A/C & HEAT SYSTEM-TRANSMITER	204	WORLD TRANSM-SPARE	292	FAN CLUTCH RADIATOR SPD 2		
165 B	A/C & HEAT SYSTEM-TRANSMITER	205	WORLD TRANSM-SPARE	293	KEYLESS ENTRY SYSTEM		
165 C	A/C & HEAT SYSTEM-TRANSMITER	206	WORLD TRANSM-SPARE	294	ANTI-THEFT SYSTEM KEYLESS		
165 D	A/C & HEAT SYSTEM-TRANSMITER	214	WORLD TRANSM-BACK UP SIGNAL	295	LED FEED ALARM -KEYLESS		
166 B	A/C & HEAT SYSTEM-EVAP. MOD.	216 B	24V SIGNAL AUX. LIQ. SOL. VALVE	417	DDEC III-LIMIT SPEED GOVERNOR		
167	A/C & HEAT SYSTEM-TEMP. CTR	216 C	12 V. TRIGGER AUX. A/C UNIT	419	DDEC III-CHECK ENGINE LIGHT		
167 A	A/C & HEAT SYSTEM-TEMP. CTR	229	24 V. POWER AUX. A/C UNIT	439	DDEC III-12V IGNITION		
168	A/C & HEAT SYSTEM-HUMIDISTAT	229 A	PWM SIGNAL - AUX. FAN UNIT	440	DDEC III-12V IGNITION		
168	WORLD TRANSM-SER. INTERFACE (+)	231	NEUTRAL SIGNAL GRD	440 A	DDEC III-12V IGNITION		
168 A	A/C & HEAT SYSTEM-HUMIDISTAT	231 A	NEUTRAL COIL RELAY FEED SIGNAL	451	DDEC III-A/C FAN CLUTCH		
170 C	LUGGAGE DOOR LOCK	231 W	NEUTRAL SIGNAL GRD (WCL)	505	DDEC III-TACHOMETER DRIVE		
170 D	LUGGAGE DOOR LOCK	240	DDEC III-ECM 12V FEEDING	509	DDEC III-STOP ENGINE LIGHT		
170 E	LUGGAGE DOOR LOCK	241	DDEC III-ECM 12V FEEDING	510	DDEC III-FAST IDLE SIGNAL		
170 F	LUGGAGE DOOR LOCK	251	DDEC III - PRODRIVER 12V H.W.	524	DDEC III-ENGINE BRAKE DISABLE		
170 G	LUGGAGE DOOR LOCK	251 A	DDEC III -DATA LOGGER 12V H.W.	525	DDEC III-FAST IDLE SIGNAL		
170 H	LUGGAGE DOOR LOCK	257	WINDSHIELD HEATED	528	DDEC III-STOP ENG. OVERRIDE		
170 K	LUGGAGE DOOR LOCK	257 A	WINDSHIELD HEATED	531	DDEC III-CRUISE CLUTCH RELEASE		
170 L	LUGGAGE DOOR LOCK	257 B	WINDSHIELD HEATED	540	DDEC III-CRUISE ENABLE LTS.		
170 M	LUGGAGE DOOR LOCK	257 C	WINDSHIELD HEATED	541	DDEC III-CRUISE SET SW		
170 N	LUGGAGE DOOR LOCK	257 D	WINDSHIELD HEATED SPARE	542	INPUT PARK BRAKE INTERLOCK		
170 P	LUGGAGE DOOR LOCK	257 E	WINDSHIELD HEATED SPARE	543	DDEC III-CRUISE STOP SW CUT IN		
170 R	LUGGAGE DOOR LOCK	258	WINDSHIELD HEATED	544	DDEC III-CRUISE ON/OFF SW		
170 S	LUGGAGE DOOR LOCK	258 A	WINDSHIELD HEATED	545	DDEC III-CRUISE RESUME SW		
170 V	LUGGAGE DOOR LOCK	259	WINDSHIELD HEATED	555	DDEC III-FAN CLUTCH SPEED# 1		
170 W	LUGGAGE DOOR LOCK	259 A	WINDSHIELD HEATED	556	DDEC III-VEHICLE SPEED (+)		
170 X	LUGGAGE DOOR LOCK	264	S PEEED SIGNAL- AUX. FAN UNIT	557	DDEC III-VEHICLE SPEED (-)		
170 Y	LUGGAGE DOOR LOCK	264 A	SPEED SIGNAL- AUX. FAN UNIT	563	DDEC III-FAN CLUTCH SPEED# 2		
170 Z	LUGGAGE DOOR LOCK	264 B	SPEED SIGNAL- AUX. FAN UNIT	564	DDEC III-DIGITAL OUTPUT		
173	BACK-UP MONITOR	270	KEYLESS ENTRY SYSTEM	565	DDEC III-ENGINE BRAKE ACTIVE		
174	BACK-UP MONITOR	272	KEYLESS ENTRY SYSTEM	583	DDEC III-ENGINE BRAKE 4 CYL.		
175	BACK-UP MONITOR	274	KEYLESS ENTRY SYSTEM	900	DDEC III-DATA LINK (+)		