

RESISTORS LIST

| No | Location | Part # | Function | Page |
|-------|----------------|--------|-------------------------|------|
| Res1 | FJB | 563205 | ABS | 16.1 |
| Res2 | FJB | 563205 | PullDownresistor | 28.1 |
| Res3 | RJB | 563593 | CAN_Network | 6.1 |
| Res4 | FJB | 563593 | CAN_Network | 6.1 |
| Res5 | Dash | 563593 | DBus_Network | 6.1 |
| Res6 | FJB | 563593 | DBus_Network | 6.1 |
| Res7 | RJB | 563593 | J1939_Resistor | 7.1 |
| Res8 | Rear_Axle_Cmpt | 563593 | TerminaisonResistor | 32.1 |
| Res9 | DashBoard | 100R | CurrentLimitRes | 10.1 |
| Res10 | RJBcloseECU | 562470 | SignalDropRes | 15.1 |
| Res11 | Rear_Axle_Cmpt | 563593 | TerminaisonResistor | 32.1 |
| Res12 | Engine_Cmpt | 563593 | J1939_Resistor | 14.1 |
| Res13 | RJB | 563154 | ExcitationresistorAlt.1 | 3.2 |
| Res14 | RJB | 563154 | ExcitationresistorAlt.2 | 3.2 |
| Res16 | RJB | 563006 | UpperRearLampRH | 26.2 |
| Res17 | RJB | 563006 | UpperRearLampLH | 26.2 |