

FUSES LIST

| No | Location | Part # | Function | Rating | Page |
|-----|--------------------------|--------|-------------------------------|--------|------|
| F1 | FuseBoxFJB | 563279 | CecmPower | 3amp | 4.1 |
| F2 | FuseBoxFJB | 563279 | FrontStartMainSwitch | 3amp | 4.1 |
| F3 | FuseBoxFJB | 563279 | EnginePre-HeatH.W.+DrvLiq.Vlv | 3amp | 4.1 |
| F4 | FuseBoxFJB | 563280 | *opt* | 5Amp | 4.1 |
| F5 | FuseBoxFJB | 563165 | 24vtoWUp | 30amp | 4.1 |
| F6 | FuseBoxFJB | 563005 | Customer24VD | 7.5amp | 4.1 |
| F7 | FuseBoxFJB | 563279 | SpareFuse | 3amp | 4.1 |
| F8 | FuseBoxFJB | 563279 | AirHorn | 3amp | 4.1 |
| F9 | FuseBoxFJB | 563284 | SpareFuse | 15amp | 4.1 |
| F10 | FuseBoxFJB | 563279 | SpareFuse | 3amp | 4.1 |
| F11 | FuseBoxFJB | 563279 | SunVisor | 3amp | 4.1 |
| F12 | FuseBoxFJB | 563282 | PwrMuxModule | 20amp | 4.1 |
| F13 | FuseBoxFJB | 563282 | PwrMuxModule | 20amp | 4.1 |
| F14 | FuseBoxFJB | 563284 | Customer24VI | 15amp | 4.1 |
| F15 | FuseBoxFJB | 563004 | EngineBrakeRelay | 2Amp | 4.1 |
| F16 | FuseBoxFJB | 563153 | DefrosterUnit | 25Amp | 4.1 |
| F17 | FuseBoxFJB | 563280 | SpareFuse | 5Amp | 4.1 |
| F18 | FuseBoxFJB | 563284 | SpareFuse | 15amp | 4.1 |
| F19 | FuseBoxFJB | 563279 | Prodriver | 3amp | 4.1 |
| F20 | FuseBoxFJB | 563279 | WitnessRedLed | 7.5amp | 4.1 |
| F21 | FuseBoxFJB | 563282 | PwrMuxA44 | 20amp | 4.1 |
| F22 | FuseBoxFJB | 563279 | SteeringCtrl | 3amp | 4.1 |
| F23 | FuseBoxFJB | 563284 | ABS | 30amp | 4.1 |
| F24 | FuseBoxFJB | 563005 | Mirror | 7.5amp | 4.1 |
| F25 | FuseBoxFJB | 563280 | BackupCamera | 5Amp | 4.1 |
| F26 | FuseBoxFJB | 563279 | SmartTireOption | 3amp | 4.1 |
| F27 | FuseBoxFJB | 563284 | Customer_12VI | 15amp | 4.1 |
| F28 | FuseBoxFJB | 563282 | DriverWindow | 20amp | 4.1 |
| F29 | FuseBoxFJB | 563279 | ClusterandDDDR | 3amp | 4.1 |
| F30 | FuseBoxFJB | 563284 | PwrOutletandCigarLighter | 15amp | 4.1 |
| F31 | FuseBoxFJB | 563279 | SpareFuse | 3amp | 4.1 |
| F32 | FuseBoxFJB | 563282 | SpareFuse | 20amp | 4.1 |
| F33 | FuseBoxFJB | 563165 | 12VDtoWakeUp | 30amp | 4.1 |
| F34 | FuseBoxFJB | 563165 | 12VDtoWakeUp | 30amp | 4.1 |
| F35 | FuseBoxFJB | 563283 | 12vPwrOutlet | 10amp | 4.1 |
| F36 | FuseBoxFJB | 563279 | PwrHvacandTTItModule | 3amp | 4.1 |
| F37 | FuseBoxFJB | 563283 | SpareFuse | 10amp | 4.1 |
| F38 | FuseBoxFJB | 563283 | SpareFuse | 10amp | 4.1 |
| F39 | FuseBoxFJB | 563283 | SpareFuse | 10amp | 4.1 |
| F40 | FuseBoxFJB | 563283 | SpareFuse | 10amp | 4.1 |
| F41 | FuseBoxFJB | 563283 | SpareFuse | 10amp | 4.1 |
| F42 | Parcel_Rack_LH_1st_Cmpt_ | 562407 | Memory | 10Amp | 35.0 |
| F43 | RJB | 560893 | Evap Start Pre Heater Option | 3Amp | 18.2 |

FUSES LIST

| No | Location | Part # | Function | Rating | Page |
|-----|--------------------------|--------|------------------------|--------|------|
| F44 | FJB | 560599 | FuseDestinationSign | 5Amp | 3.3 |
| F46 | Parcel_Rack_LH_1st_Cmpt_ | 562396 | Ampli_Pwr | 30Amp | 35.0 |
| F50 | FuseBoxRJB | 563284 | EnginePre-Heat | 15amp | 5.1 |
| F51 | FuseBoxRJB | 563153 | EnginePre-Heat | 25Amp | 5.1 |
| F52 | FuseBoxRJB | 563284 | SpareFuse | 15amp | 5.1 |
| F53 | FuseBoxRJB | 563284 | PwrMuxA54 | 15amp | 5.1 |
| F54 | FuseBoxRJB | 563284 | Customer | 15amp | 5.1 |
| F55 | FuseBoxRJB | 563283 | EmergencyLts | 10amp | 5.1 |
| F56 | FuseBoxRJB | 563283 | IndirectLightingLH | 20amp | 5.1 |
| F57 | FuseBoxRJB | 563283 | IndirectLightingRH | 10amp | 5.1 |
| F58 | FuseBoxRJB | 563283 | DirectLightingLH | 20amp | 5.1 |
| F59 | FuseBoxRJB | 563283 | DirectLightingRH | 10amp | 5.1 |
| F60 | FuseBoxRJB | 563283 | ReadingLampRH | 10amp | 5.1 |
| F61 | FuseBoxRJB | 563283 | ReadingLampLH | 10amp | 5.1 |
| F62 | FuseBoxRJB | 563283 | LavatoryNightLight | 10amp | 5.1 |
| F63 | FuseBoxRJB | 563283 | EnginePre-Heat | 10amp | 5.1 |
| F64 | FuseBoxRJB | 563283 | GalleyOption | 10amp | 5.1 |
| F65 | FuseBoxRJB | 563165 | PwrMuxModuleRJB | 30amp | 5.1 |
| F66 | FuseBoxRJB | 563279 | RadiatorFanClutch | 3amp | 5.1 |
| F67 | FuseBoxRJB | 563153 | SpareFuse | 25Amp | 5.1 |
| F68 | FuseBoxRJB | 563153 | SpareFuse | 25Amp | 5.1 |
| F69 | FuseBoxRJB | 563005 | HatRackLightingLHandRH | 3amp | 5.1 |
| F70 | FuseBoxRJB | 563005 | Customer24VI | 7.5amp | 5.1 |
| F71 | FuseBoxRJB | 563284 | SpareFuse | 15amp | 5.1 |
| F72 | FuseBoxRJB | 563153 | PwrMuxA50 | 25Amp | 5.1 |
| F73 | FuseBoxRJB | 563282 | Trailer_Option | 20amp | 5.1 |
| F74 | FuseBoxRJB | 563283 | EcuEngineIgnition | 10amp | 5.1 |
| F75 | FuseBoxRJB | 563283 | EcuTransmissionIgn | 10amp | 5.1 |
| F76 | FuseBoxRJB | 563283 | Customer | 10amp | 5.1 |
| F77 | FuseBoxRJB | 563283 | EcuTransmissionWakeUp | 10amp | 5.1 |
| F78 | FuseBoxRJB | 563284 | EcuEngineWakeUp | 15amp | 5.1 |
| F79 | FuseBoxRJB | 563284 | EcuEngineWakeUp | 15amp | 5.1 |
| F80 | FuseBoxRJB | 563284 | PwrMuxA51 | 15amp | 5.1 |
| F81 | FuseBoxRJB | 563004 | PwrOfRearSwitchBox | 2Amp | 5.1 |
| F83 | FuseBoxFJB | 563005 | SoundSystem | 10amp | 4.1 |
| F84 | FuseBoxFJB | 563284 | Customer | 15amp | 4.1 |
| F85 | FuseBoxRJB | 563283 | ZFTransmIgn | 10amp | 5.1 |
| F86 | FuseBoxRJB | 563283 | SpareFuse | 10amp | 5.1 |
| F89 | FuseBoxRJB | 563284 | SpareFuse | 20amp | 5.1 |
| F90 | FuseBoxRJB | 563284 | TagSystemControl | 15amp | 5.1 |
| F91 | FuseBoxRJB | 563284 | SpareFuse | 15amp | 5.1 |
| F96 | FuseBoxRJB | 563284 | *opt* | 20amp | 5.1 |
| F96 | Parcel Rack LH 1st Cmpt | 562605 | Tv Monitors | 20Amp | 35.0 |

