

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
IPJ1	CLUSTER - BULB TEST POS	SP62	SPARE WIRE	0T2	WINDOW AWNING	12E	RR JCT BOX 12V DISC SW
IPJ2	CLUSTER - BULB TEST NEG.	SP63	SPARE WIRE	0T3	ALTERNATOR MODULE	12F	FR JCT PANEL 12V DISC SW
IPJ3	CLUSTER - SV SIGNAL	SP69	SPARE WIRE	0T4	12V OUTLET - CTR MODULE	12G	FR JCT PANEL 12V DISC SW
IPJ4	CLUSTER - RETURN TO ZERO	SP70	SPARE WIRE	0W	FJB - TRANSM. RLY GRD	12H	12V DASH ACCESS.
IPJ5	CLUSTER - FUEL LEVEL GAUGE	SP71	SPARE WIRE	0W	TRANSM ACC. - FR.SERV. CPT	12I	RR JCT BOX 12V IGNITION
IPJ6	CLUSTER - BULB TEST POS.	SP72	SPARE WIRE	0WA	PRE-HEAT WATER HEATER	12I	FR JCT PANEL 12V IGNITION
IPJ7	CLUSTER - BULB TEST NEG.	SP74	SPARE WIRE	0Y1	ASB SYSTEM-GRD	12IA	FR JCT PANEL 12V IGNITION
IPJ8	CLUSTER - MASTER WARNING	SP83	SPARE WIRE	0Y2	ASB SYSTEM-GRD	12IA	RR JCT PANEL 12V IGNITION
LX5	CLUSTER - COMPUTER MODE	SP84	SPARE WIRE	0Y3	ASB SYSTEM-GRD	12IF	FR JCT PANEL 12V IGNITION
LX6	CLUSTER - COMPUTER DOWN	SP114	SPARE WIRE	0Y4	ASB SYSTEM-GRD	12J	FR JCT PANEL 12V DISC.SW.
LX7	CLUSTER - COMPUTER SET	SP115	SPARE WIRE	0Y5	ASB SYSTEM-GRD	12K	FR JCT PANEL 12V DISC.SW.
LX16	CLUSTER - COMPUTER UP	SP116	SPARE WIRE	0Y6	ASB SYSTEM-GRD	12LX	12V HOTWIRE CLUST. & MOD A/D
LX21	CLUSTER - COMPUTER COM.	SP117	SPARE WIRE	0Y7	ASB SYSTEM-GRD	12LX	CLUSTER 12V HOT WIRE
RT	T.T.L.T. MODULE - TEST SW.	TW1	SPR. W. TWISTER 50T/M WITH TW2	00	ASB SYSTEM-GRD	12P	12V POWER OUTLET
SP1	SPARE WIRE	TW2	SPR. W. TWISTER 50T/M WITH TW1	00A	BATTERY GRD-DASH ACC.	12T	RR JCT BOX 12V DISC SW
SP2	SPARE WIRE	0	A/C EVAP. CPT GRD	2A	A/C & HEAT SYSTEM	12VD	12V HOT WIRE
SP3	SPARE WIRE	0	JUMPER - CLUTCH SIGN.	2B	A/C & HEAT SYSTM	12VI	RR JCT PANEL 12V IGNITION
SP4	SPARE WIRE	0	RJB - INSIDE GRD	2D	A/C & HEAT SYSTEM	12W	12V HOT WIRE DDEC III FEED
SP5	SPARE WIRE	0A	FR. ROOF ACC. GRD	2E	A/C & HEAT SYSTEM	15	EXT. LTS-MULTI FUNC LEVEL
SP6	SPARE WIRE	0B	A/C - CONDENSER GRD	2H	A/C & HEAT SYS-LO-PRESS SW.	15	WIPER & WASHER SYSTEM
SP7	SPARE WIRE	0B	ENG. CPT ACC. GRD	2L	A/C & HEAT SYS-HI-PRESS SW.	16	SPEEDOMETER (+)
SP8	SPARE WIRE	0BE	OV BATTERY MONITOR	3A	A/C & HEAT SYSTEM-EVAPORATOR	16T	SPEED SW SIGNAL IN (+)
SP9	SPARE WIRE	0C	R.J.B. - GRB	5N0	SPEED SIGNAL HIGHER 5MPH	17	EXTERIOR LTS-FLASHER UNIT
SP10	SPARE WIRE	0C	F.R. SERV. CPT-ACCESSOIRES	5NC	SPEED SIGNAL LOWER 5MPH	17A	EXTERIOR LTS-FLASHER UNIT
SP11	SPARE WIRE	0C1	ENTRANCE DOOR KEYLESS	6	EXTERIOR LTS-DOCKING	17C	JUMPER LTS SW. - HAZARD
SP12	SPARE WIRE	0C4	F.J.B. GRD	6A	EXTERIOR LTS-CORNERING	20	SPEEDOMETER SIGNAL (-)
SP13	SPARE WIRE	0CJ	CRUISE SW. JUMPER	6B1	EXTERIOR LTS-CORNERING RH	20T	SPEED SW SIGNAL IN (-)
SP14	SPARE WIRE	0D	A/C JCT BOX - COND FAN GRD	6C1	EXTERIOR LTS-CORNERING RH	21	EXTERIOR LTS-DIRECT. LH
SP15	SPARE WIRE	0F	SILENT 1000	6D	EXTERIOR LTS-DOCKING	21A	EXTERIOR LTS-LH
SP16	SPARE WIRE	0G	ABS GRD CX1	9	INTERIOR LTS-ENGINE CPT	21A	EXTERIOR LTS-CORNERING-LH
SP17	SPARE WIRE	0H	ENG. CPT. - ACC. GRD	9	INTERIOR LTS-RR JCT BOX	21B	EXTERIOR LTS-DIRECT. LH
SP18	SPARE WIRE	0L	ENG.CPT -CLEAR.LTS RR ROOF	9F	INTERIOR LTS - FR-SERV. CPT	21BB	EXTERIOR LTS-DIRECT. LH
SP19	SPARE WIRE	0L	R.J.B. - GRD	10	A/C & HEAT SYSTEM -LO PRES.	21H	EXTERIOR LTS-HAZARD SIGNAL
SP21	SPARE WIRE	0L	FR - SIDE MARK. & FLASH GRD	10	INTERIOR LTS-LUGGAGE CPT	21M	AUX. LTS - DIRECTIONAL LH
SP23	SPARE WIRE	0L1	ENG.CPT-SIDE MARK. & FL. GRD	10	INTERIOR LTS-FR SERV. CPT	21P	CORN. LTS - DIRECT. SIGN. LH
SP24	SPARE WIRE	0L2	HEAD LTS	10A	INTERIOR LTS-LUGGAGE CPT	23	EXTERIOR LTS-DIRECT. RH
SP25	SPARE WIRE	0L3	FR.SERV.DR. & ENT.DOOR GRD ACC.	10B	INTERIOR LTS-LUGGAGE CPT	23A	EXTERIOR LTS-DIRECT. RH
SP30	SPARE WIRE	0L4	FOG LTS RESISTOR GRD	10C	INTERIOR LTS-LUGGAGE CPT	23A	EXTERIOR LTS - CORNER. LTS
SP33	SPARE WIRE	0L5	LH CONSOL - ACC. GRD	10D	INTERIOR LTS-LUGGAGE CPT	23BB	EXTERIOR LTS - DIRECT. RH
SP38	SPARE WIRE	0LV	WINDSHIELD WASHER LEVEL	10E	INTERIOR LTS-LUGGAGE CPT	23C	EXTERIOR LTS-CORNERING RH
SP40	SPARE WIRE	0M	WIPER 2 MIRROR MOTOR	10R	CENTER DOOR T.T.L.T.	23H	EXTERIOR LTS-HAZARD SIGNAL
SP41	SPARE WIRE	0M3	DEFROST GRD	12A	FR JCT PANEL 12V DISC SW	23M	AUX LTS - DIRECTIONAL RH
SP42	SPARE WIRE	0M4	HORN & DR'S WINDOW LIFTER	12B	FR JCT PANEL 12V DISC SW	23P	CORN. LTS - DIRECT SIGN RH
SP43	SPARE WIRE	0M5	SUN VISOR MOTOR	12BAT	12V HOT-WIRE ACC - JCT BLK	24	FR JCT PANEL 24V DISC. SW.
SP45	SPARE WIRE	0M7	DR'S WIND.LIFT. & RH MIR. SW	12BE	12V BATTERY MONITOR	24A	RR JCT PANEL 24V DISC. SW
SP48	SPARE WIRE	0M7A	LH MIRROR SW.	12C	FR JCT PANEL 12V DISC SW	24A	FR JCT PANEL 24V DISC. SW
SP56	SPARE WIRE	0P	ENG.CDT - PRE-HEATER	12C	RR JCT BOX 12V DISC SW	24B	FR JCT PANEL 24V DISC. SW
SP57	SPARE WIRE	0T	SPEED SW. CONNECTOR	12D	FR JCT PANEL 12V HOT WIRE	24BE	BATTERY MONITOR
SP60	SPARE WIRE	0T1	DASH ACC.	12DD	FR JCT PANEL 12V HOT WIRE	24C	FR JCT PANEL 24V DISC SW
SP61	SPARE WIRE	0T2	CLUSTER ACC.	12DT	T.T. LT MODULE	24D	FR JCT BOX 24V HOT WIRE

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
24F	RR JCT PANEL 24V DISC SW	45B	A/C & HEAT SYS.-WATER PUMP	72D	SUN VISOR LH	110	WORLD TR.-LOCKUP SOL. LO
24I	FR JCT PANEL 24V IGNITION	45C	A/C & HEAT SYS.-WATER VALV	76	FUEL TANK GAUGE	112	WORLD TR.-SPARE OUTPUT (+)
24I	RR JCT PANEL 24V IGNITION	45D	A/C & HEAT SYS.-WATER VALV	76C	LOW FUEL T.T.LT	112	WORLD TR.-SPARE OUTPUT (+)
24IA	FR JCT PANEL 24V IGNITION	45E	A/C & HEAT SYS.-WATER PUMP	76L	LOW FUEL T.T.LT	113W	WORLD TR.-REVERSE WARNING
24IB	FR JCT PANEL 24V IGNITION	45G	A/C & HEAT SYS.-DR'S HTR	77A	A/C & HEAT SYS. - THERMOST.	114	WORLD TR.-SPARE OUTPUT (-)
24IF	FR JCT PANEL 24V IGNITION	45J	A/C & HEAT SYS.-WATER PUMP	77B	A/C SYS. - LIQ. SOL. VALVE	114	INTERIOR LT-DASH LT RHEOS.
24P	FR JCT PANEL 24V DISC SW	46	EXTERIOR LTS-MARKER	77C	A/C & HEAT SYS.-COMPRESSOR	114A	INTERIOR LT-DASH LT RHEOS.
24R	24V RR JCT BLK TO STARTER	46A	EXTERIOR LTS-AUX LTS RESIS.	77H	A/C SYS.-LIQ. SOL. VALVE	114B	INT. LT-DASH LT RHEOST.FEED
24T	RR JCT PANEL 24V DISC SW	46C	EXTERIOR LTS-MARKER	77H	A/C & HEAT SYS.-THERMOSTAT	115	DDEC III-COOLANT LEVEL
24VD	24V HOT WIRE FEED	46D	EXTERIOR LTS-AUX LTS RESIS.	81	EXTERIOR LTS-STOP SW	115W	WORLD TR.-DO NOT SHIFT SIGN
25A	TT.LT. MODULE - LED	50	AIR DRYER	82	EXTERIOR LTS-STOP SIGNAL	116	WORLD TR.-LO SIGNAL SOL. HI
25B	EXT. LTS-DAYTIME RUN LTS	52	ALARM & SIGNAL-ELEC.HORN	82A	EXTERIOR LTS-STOP SIGNAL	116B	A/C & HEAT SYSTEM-DR'S HTR
25D	GENERATOR SKTN. ON - HVAC	52A	ALARM & SIGNAL-ELEC.HORN	82B	EXTERIOR LTS-STOP LTS	116C	A/C SYS.-TRIG. DEFROST
26	DR'S & ENT. WINDOW LIFTER	53	ALARM & SIGNAL-ELEC.HORN	82L	EXT. LTS-STOP LTS & CYCLOP	117A	ALARME & SIGN.-TR. OIL TEMP
26A	CIGAR LIGHT. & POW.OUTLET LH	53B	WIPER & WASHER SYSTEM	82R	EXTERIOR LTS-STOP LTS	119	WORLD TRANSM-ENGINE BRAKE
26B	DRIVER'S WINDOW LIFTER	53C	WIPER & WASHER SYSTEM	83	ENG. CTR-MAST. KEY SW ACC.	120	WORLD TRANSM-SOL. C1
26C	DRIVER'S WINDOW LIFTER	53E	WIPER & WASHER SYSTEM	84	ENG. CTR-MAST KEY SW START	121	WORLD TRANSM-SOL.GRD 2
26D	ENT. DOOR WINDOW LIFTER	53J	WIPER & WASHER SYSTEM	84A	ENG. CTR-MAST KEY SW START	123	WORLD TR.-NEUTRAL START
26E	ENT. DOOR WINDOW LIFTER	55	EXTERIOR LTS-HI BEAM	84J	ENG. CTR-MAST KEY SW START	123A	ALARM & SIGNAL-FIRE DETECT.
28H	T.T.LT MODULE - HI A/C PRES.	57	EXTERIOR LTS-HI BEAM	85	24V IGNITION SIGNAL	123B	ALARM & SIGNAL-FIRE DETECT.
28T	T.T.LT MODULE - LO A/C PRES.	57A	EXTERIOR LTS-HI BEAM	85A	24V IGN DASH INSTRUMENT.	124	WORLD TR.-THROTTLE (HI)
29	A/C & HEAT SYS.-DR'S HTR	57B	A/C & HEAT SYS.-WATER PUMP	85C	24V IGNITION - FEED	124A	WORLD TRANSM-SENSOR PWR
29H	HVAC DASH MODILE	57C	PRE-HEAT WATER HEATER	85W	WORLD TRANSM. - 24V IGN.	125	WORLD TR-RETARDER INDICAT.
31B	WIPER & WASHER SYSTEM	57C	A/C & HEAT SYS.-WATER PUMP	85X	ABS-24V IGN	125W	WORLD TR-RETARDER INDICAT.
31C	WIPER & WASHER SYSTEM	57E	A/C & HEAT SYS.-WATER VALV	85Y	ABS-WARNING LT	126	WORLD TR.-LUBE PRESS SW.
32	EXTERIOR LTS-BACK-UP	57W	PRE-HEAT WATER HEATER	86	ENG. CTR-STARTER SOL SIGN	126	24VIGN-LEV.LOW & WORLD TR.
32B	EXTERIOR LTS-BACK-UP	58	EXTERIOR LTS-LO BEAM	86A	ENG. CTR-STARTER SOL SIGN	126F	LEVEL LOW SYSTEM
32F	BACK-UP CANCEL SW.	58A	EXTERIOR LTS-LO BEAM	87B	ENGINE CTR-24V IGNITION	126H	SPEED SIGN 5NC - NOT USED
32G	BACK-UP ALARM	58B	EXTERIOR LTS-LO BEAM	88	ENGINE CTR-RR START SIGNAL	126W	WORLD TRANSM-NOT USED
32J	BACK-UP SW. - JUMPER	59A	ENGINE BRAKE SYSTEM	89	ENGINE CTR-RR START SIGNAL	127	24HW DR'S LT PREHEAT & HVAC
35B	DRIVER'S LTS - KEYLESS SIGN	61	EXTERIOR LTS-24V FEED SW	90	CONVERTER - CABLE SPARG	127A	PRE-HEAT WATER HEATER
36	ENGINE BRAKE SYSTEM	61A	EXTERIOR LTS-HEAD SIGNAL	90A	ENG. CTR-MAST KEY SW FEED	127W	PRE-HEAT WATER HEATER
36A	ENGINE BRAKE SYSTEM & RET.	63	EXTERIOR LTS-CLEAR. FEED	90B	A/C & H. SYS.-COND FAN MOT	128	WORLD TRANSM-SOL. C2
39	INTERIOR LTS-DRIVER'S LTS	63B	EXTERIOR LTS-CLEARANCE	90B	ENG. CTR-MAST KEY SW FEED	128A	PRE-HEAT WATER HEATER
39B	INTERIOR LTS-DRIVER'S LTS	63C	EXT. LTS-MARKER SIGNAL	91	PARKING BRAKE SW SIGNAL	128B	PRE-HEAT WATER HEATER
39C	INTERIOR LTS-DRIVER'S LTS	63F	EXT. LTS-MARKER BLINKER	91A	DDEC III-FAST IDLE SIGNAL	128W	PRE-HEAT WATER HEATER
39D	INTERIOR LTS - FRIVER' LTS	64	DRIVER'S FAN SPEED CTR	91C	PARKING BRAKE - T.T.LT	129	WORLD TRANSM-SOL. C5
39K	DR'S LTS - KEYLESS SIGN.	64A	DRIVER'S FAN SPEED CTR	91J	FAST IDLE - JUMPER SW.	129	PRE-HEAT WATER HEATER
41	A/C SYS.-COND FAN MOTOR	64B	DRIVER'S FAN SPEED CTR	92	BATT. EQUAL.-CHECK BALANCE	129B	PRE-HEAT WATER HEATER
41A	A/C SYS.-COND FAN MOTOR	65	FOOT DAMPER MOTOR	93	BATT. EQUALIZ.-CHECK LO/HI	130	WORLD TRANSM-SOL. GRD 3
41B	A/C SYS.-COND FAN MOTOR	65A	FOOT DAMPER MOTOR	95A	ENG. BRAKE & RETARDER SYS.	131	WORLD TRANSM-SOL.C4
42A	A/C SYS.-COND FAN MOTOR	65D	DRIVER'S REC. DAMPER	95B	ENG. BRAKE & RETARDER SYS.	132	WORLD TRANSM-ENGINE BRAKE
43	A/C & HEAT SYS. - FAN SPEED	66	A/C PASSENGER - ON/OFF	97	TACHOMETER SIGN.-NOT USED	132A	LEVEL LOW SYSTEM
44	EXTERIOR LTS-FOG	67A	A/C & HEAT SYSTEM	101	WORLD TR.- LO SIGN SOL.LO	132B	LEVEL LOW SYSTEM
44A	EXTERIOR LTS-FOG	68	DASH & DEFROST DAMPER MOT	102	WORLD TRANSM.-SOL. SUPPLY	132C	LEVEL LOW SYSTEM
44B	EXTERIOR LTS-FOG	68A	DASH & DEFROST DAMPER MOT	103	WORLD TRANSM.- B.SOL.LO	132D	LEVEL LOW SYSTEM
44C	EXT. LTS-FOG,HVAC & HAZ. SW	72	SUN VISOR - FEED	104	LEVEL-LOW SYS- DR'S SOL.	132E	LEVEL LOW SYSTEM
44D	EXTERIOR LTS - FOG	72A	SUN VISOR RH	104	WORLD TR. -SOL. FORWARD	132F	LEVEL LOW SYSTEM
44E	EXTERNAL LTS - FOG	72B	SUN VISOR RH	105W	WORLD TR-SOL.-RET.OIL TT.LT	135	WORLD TRANSM-RET.TEMP.
45A	A/C & HEAT SYSTEM FULL AIR	72C	SUN VISOR LH	107	WORLD TR.-LOCKUP SOL. HI	135A	WORLD TR.-RES MODULE RET.

CIRCUIT NUMBER CODE

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
135B	A/C & HEAT SYS.-AIR SENSOR	149	WORLD TR.-TURBINE SPEED HI	174	WORLD TRANSM-SHIFTER	505	DDEC-TACHOMETER DRIVE
135C	A/C & HEAT SYS.-AIR SENSOR	149	ABS SYSTEM-SENSOR	175A	WORLD TRANSM-SHIFTER	509	DDEC-STOP ENGINE LIGHT
136A	WORLD TRANSM-12V BATTERY	149A	ABS SYSTEM	176	WORLD TRANSM-SHIFTER	510	DDEC-FAST IDLE SIGNAL
136AA	WORLD TRANSM-SHIFTER PWR	150	WORLD TR.-ENGINE SPEED LO	180	WORLD TRANSM-SHIFTER	524	DDEC-ENGINE BRAKEDISABLE
136V	WORLD TRANSM-12V BATTERY	150	DDEC III-ECM BATTERY GRD	180	OUTSIDE TEMP. DISPLAY	525	DDEC-FAST IDLE SIGNAL
136W	WORLD TRANSM-12V BATTERY	150A	DDEC III-ECM BATTERY GRD	180A	OUTSIDE TEMP. DISPLAY	528	DDEC-STOP ENG. OVERRIDE
137	WORLD TRANSM-RETARDER	151	DDEC III-ECM BATTERY GRD	180A	WORLD TRANSM-SHIFTER	531	DDEC-CRUISE CLUTCH CUT OUT
137	RR VIEW MIRROR	151	ABS SYSTEM-SPARE	180B	OUTSIDE TEMP. DISPLAY	540	DDEC-CRUISE ENABLE T.T.LT
137A	RR VIEW MIRROR	152	ABS SYSTEM-SPARE	180C	OUTSIDE TEMP. DISPLAY	541	DDEC-CRUISE SET SW
137B	RR VIEW MIRROR	153	ELECTRICAL DRIVER'S SEAT	181	FROZEN POINT T.T.LT	543	DDEC-CRUISE STOP SW CUT IN
137C	RR VIEW MIRROR	154	WORLD TRANSM-ABS INPUT (-)	181A	THERMOMETER INSIDE SENSOR	544	DDEC-CRUISE ON/OFF SW
137D	RR VIEW MIRROR	156A	ABS SYSTEM-FEED	181B	THERMOMETER INSIDE SENSOR	545	DDEC-CRUISE RESUME SW
137D	RR VIEW MIRROR	157	ABS SYSTEM-FEED	181C	THERMOMET. OUTSIDE SENSOR	555	DDEC-FAN CLUTCH SPEED#1
137E	RR VIEW MIRROR	157A	ABS SYSTEM-FEED	181D	THERMOMET. OUTSIDE SENSOR	556	DDEC-VEHICULE SPEED (+)
137F	RR VIEW MIRROR	157B	ABS SYSTEM	195	WORLD TRANSM-TRANS ID	557	DDEC-VEHICULE SPEED (-)
137H	RR VIEW MIRROR	159	WORLD TRANSM-DIAGNOSTIC	197	FUEL WATER FILTER	563	DDEC-FAN CLUTCH SPEED#2
137J	RR VIEW MIRROR	160	ALARM & SIGN.-TAG PRESS SW	197A	FUEL WATER FILTER	564	DDEC-DIGITAL OUTPUT
137K	RR VIEW MIRROR	161B	WORLD TRANSM-SIGNALGRD	201	WORLD TRANSM-SPARE	565	DDEC-ENGINE BRAKE ACTIVE
137L	RR VIEW MIRROR	162	WORLD TRANSM-PRESS. SW C3	202	WORLD TRANSM-SPARE	583	DDEC-ENGINE BRAKE 4 CYL.
137M	RR VIEW MIRROR FEED	163	WORLD TR.-RETARDER ENABLE	203	WORLD TRANSM-SPARE	900	DDEC-DATA LINK (+)
137R	WORLD TRANSM-RETARDER	164	WORLD TR.-RET. ACTUAT. SIGN	204	WORLD TRANSM-SPARE	901	DDEC-DATA LINK (-)
137T	MIRROR HEAT SW-JUMPER	165	WORLD TR.-OIL LEVEL SIGNAL	214	WORLD TR.-BACK-UP SIGNAL	908	DDEC-HYDRAU. PWM#1 OUTPUT
138	WORLD TR.-RETARDER TEMP	166B	A/C & HEAT SYS.-EVAP. MOD.	231	WORLD TR.-NEUTRAL SIGN GRD	916	DDEC-SENSOR SUPPLY (5VDC)
138	ABS SYSTEM-SENSOR	167	WORLD TR.-SPEED 5N0, 5NC	240	DDEC III-ECM 12V FEEDING	952	DDEC-SENSOR RETURN
138A	ABS SYSTEM-SENSOR	169	WORLD TRANSM-INPUT 12	241	DDEC III-ECM 12V FEEDING	953	DDEC-BATTERY GRD
139	ABS SYSTEM-VALVE	170	WORLD TRANSM-SHIFTER	260	WINDOW AJAR-T.T.LT	979	DDEC-ENGINE BRAKE 2 CYL.
139	WORLD TR.-OUTPUT SPEED HI	170C	LUGGAGE DOOR LOCK-T.T.LT	270	KEYLESS MODULE-FEED	2123	FLASHER SIGNAL LTS
140	WORLD TR.-OUTPUT SPEED LO	170D	LUGGAGE DOOR LOCK-FEED	270A	ENTRANCE DOOR AIR LOCK		
140	ABS SYSTEM-VALVE	170E	LUG. DOOR LOCK-UNLOCK SIGN	272	KEYLESS SYSTEM-KEYBOARD		
141	ABS SYSTEM-VALVE	170F	LUGGAGE DOOR LOCK-FEED	274	KEYLESS SYSTEM-KEYBOARD		
141	WORLD TR.-ENGINE SPEED HI	170G	LUGGAGE DOOR LOCK-FEED	276	KEYLESS SYSTEM-KEYBOARD		
142	ABS SYSTEM-VALVE	170H	LUGGAGE DOOR-LOCK SIGN	277	KEYLESS SYS-DR'V LTS SIGN		
143	ABS SYSTEM-SENSOR	170K	LUGGAGE DOOR-LOCK SIGN	278	KEYLESS SYSTEM-KEYBOARD		
143A	ABS SYSTEM-SENSOR	170LA	LUGG DOOR LOCK-T.T.LT WE	280	KEYLESS SYSTEM-KEYBOARD		
143A	WORLD TRANS-BATTERY GRD	170LB	LUGG DOOR LOCK-T.T.LT WE	283	KEYLESS SYSTEM-ANTI-THEFT		
143W	WORLD TRANSM-BATTERY GRD	170L	LUGG DOOR LOCK-SIGN T.T.LT	283A	KEYLESS SYS-ENT. DOOR SIGN		
143X	WORLD TRANSM-BATTERY GRD	170M	LUGG DOOR LOCK-SIGN T.T.LT	285	KEY. SYS-UNLOCK ENT. DOOR		
144	ABS SYSTEM-SENSOR	170N	LUGG DOOR LOCK-SIGN T.T.LT	286	LUGG DOOR LOCK-ENT. DOOR		
144A	ABS SYSTEM-SENSOR	170P	LUGG DOOR LOCK-SIGN T.T.LT	286A	KEYLESS SYS-CENTER DOOR		
145	ABS SYSTEM-VALVE	170R	LUGG DOOR LOCK-ENTR. DOOR	290	FAN CLUTCH RADIATOR-FEED		
146	ABS SYSTEM-VALVE	170S	LUGG DOOR LOCK-SIGN T.T.LT	290A	FAN CLUTCH RADIATOR-FEED		
146A	WORLD TRANSM-12V IGNITION	170T	LUGG DOOR LOCK-SIGN T.T.LT	291	FAN CLUTCH RADIATOR SPD 1		
146AA	WORLD TRANSM-DIAGN.CONN.	170V	LUGG DOOR LOCK-SIGN T.T.LT	292	FAN CLUTCH RADIATOR SPD 2		
147	WORLD TRANSM-OIL TEMP	170W	LUGGAGE DOOR LOCK-FEED	292A	FAN CLUTCH RADIATOR SPD 2		
147	ABS SYSTEM-VALVE	170X	LUGG DOOR LOCK-SIGN T.T.LT	294	KEYLESS SYSTEM-ANTI-THEFT		
147A	ETHER COLD START	170Y	LUGGAGE DOOR LOCK-FEED	295	KEYLESS SYS-LED INDICATOR		
147A	DAYTIME LST-ALT.SIGNAL	170Z	LUGGAGE DOOR LOCK	417	DDEC-LIMIT SPEED GOVERNOR		
147C	ETHER COLD START	171	WORLD TRANSM-SHIFTER	419	DDEC -CHEK ENGINE LIGHT		
148	ABS SYSTEM-VALVE	172	WORLD TRANSM-SHIFTER	439	DDEC-12V IGNITION		
148	WORLD TR.-OUTPUT SPEED LO	173	WORLD TRANSM-SHIFTER	451	DDEC-A/C FAN CLUTCH		