

PREVOST

COACH MANUFACTURER

OWNER'S MANUAL

LE MIRAGE XLII



PA1527

(3rd edition)

TABLE OF CONTENTS

FOREWORD	1	DRIVER'S POWER WINDOW	19
SAFETY PRECAUTIONS	3	FIXED WINDOWS.....	19
SAFE OPERATING PRACTICES	3	AWNING WINDOWS.....	19
DEFENSIVE DRIVING PRACTICES	3	SLIDING WINDOWS	20
OTHER PRECAUTIONS	4	CONTROLS AND INSTRUMENTS ...	21
VEHICLE EXTERIOR	5	KEYS	21
ENGINE COMPARTMENT COMPONENTS	8	REMOTE ENTRY TRANSMITTER	22
ENGINE COMPARTMENT R.H. SIDE DOOR .	9	IGNITION SWITCH	23
R.H. SIDE REAR SERVICE COMPARTMENT (XL2-45 MTH ONLY)	9	LATERAL CONTROL PANEL	24
BAGGAGE COMPARTMENTS	10	TRANSMISSION CONTROL PAD	24
FUEL FILLER DOOR	10	CRUISE CONTROL SWITCHES.....	24
A/C CONDENSER DOOR	11	MIRROR CONTROLS	25
ENGINE COMPARTMENT REAR DOORS ...	11	LEVEL LOW SYSTEM	26
110-120 VOLT CONNECTOR.....	12	PARKING BRAKES CONTROL VALVE.....	27
RECLINING BUMPER COMPARTMENT	12	TAG AXLE CONTROL VALVE.....	27
FRONT SERVICE COMPARTMENT	12	12-VOLT DC POWER OUTLET	27
EVAPORATOR COMPARTMENT	13	ACCESSORY POCKET	27
RADIATOR DOOR	13	BLANK.....	27
ENTRANCE DOOR	13	POWER WINDOW SWITCH.....	27
KEYLESS ENTRY SYSTEM	14	ASHTRAY	27
REAR VIEW MIRRORS	15	CIGARETTE LIGHTER	27
BACK-UP CAMERA	15	DASHBOARD CONTROL SWITCHES	28
TRAILER HITCH	16	L.H. DASHBOARD PANEL	28
VEHICLE INTERIOR	17	R.H. DASHBOARD PANEL.....	31
DRIVER'S SEAT - DELIVERY	17	HVAC CONTROL UNIT.....	32
DRIVER'S AND CO-PILOT'S SEATS - ISRI (OPTIONAL)	17	AIR VENTS	33
PNEUMATIC ISRI SEATS.....	17	INSTRUMENT CLUSTER	34
ELECTRIC ISRI SEATS.....	17	CLUSTER.....	34
SAFETY BELTS	18	MESSAGE CENTER DISPLAY (MCD)	34
STEERING WHEEL ADJUSTMENT	19	DASHBOARD GAUGES	34
SUNSHADES (BLINDS)	19	VEHICLE CLEARANCE INFORMATION	36
INSIDE MIRROR	19	TELLTALE PANEL	36
ADJUSTABLE HVAC REGISTERS	19	STEERING COLUMN CONTROLS	39
WINDOWS	19	MULTI-FUNCTION LEVER	39
		TRANSMISSION OUTPUT RETARDER.....	40
		HORN.....	41
		FOOT-OPERATED CONTROLS	41
		SERVICE BRAKES	41
		ACCELERATOR PEDAL.....	41

TABLE OF CONTENTS

STEERING WHEEL ADJUSTMENT UNLOCK AIR VALVE	42	KEYLESS ENTRY SYSTEM	57
AUTOMATIC TRANSMISSION	42	KEYLESS OPERATING INSTRUCTIONS	57
OPERATION	42	PROGRAMMING A PERSONAL CODE	57
RANGE SELECTION - PUSH BUTTON SHIFTER	42	REMOTE ENTRY TRANSMITTER.....	57
FUNCTIONS OF THE "MODE" BUTTON	43	PROGRAMMING TRANSMITTERS.....	58
OTHER FEATURES	45	SLIDE-OUT OPERATION	58
DETROIT DIESEL ELECTRONIC CONTROL (DDEC) SYSTEM	45	SAFETY PRECAUTIONS.....	58
DDEC V ELECTRONIC CONTROL MODULE (ECM)	46	FRONT SLIDE-OUT OPERATION	59
MESSAGE CENTER DISPLAY (MCD)	46	REAR SLIDE-OUT OPERATION	60
DRIVING MODE MENU	47	SLIDE-OUT LOGIC CONTROLLER.....	60
GAUGE MODE MENU	47	SLIDE-OUT MANUAL OVERRIDE PROCEDURE	61
FUEL ECONOMY MENU	47	SLIDE-OUT TROUBLESHOOTING – THIRD GENERATION.....	68
TIME / DIST MENU	47	CODE DESCRIPTION.....	69
FAULT ? MENU (Fault messages).....	48	STARTING AND STOPPING PROCEDURES.....	71
NON-DRIVING MODE MENU	48	STARTING THE ENGINE	71
SET UP MODE MENU	48	STARTING FROM THE DRIVER'S SEAT.....	71
SYSTEM DIAGNOSTIC MENU	50	STARTING FROM THE ENGINE COMPARTMENT	71
FAULT DIAGNOSTIC MENU	51	COLD WEATHER STARTING	72
PART NUMBER	52	ENGINE BLOCK HEATER	72
STATUS TEST	52	ENGINE WARM-UP	72
DATA LOG MODE MENU	53	WORLD TRANSMISSION (WT) WARM-UP	73
PASSWORDS	53	JUMP STARTING.....	73
PRODRIVER™	54	SAFETY FEATURES AND EQUIPMENT	75
ALLISON WORLD TRANSMISSION ELECTRONIC CONTROL UNIT (ECU)	54	EMERGENCY EXITS	75
TRANSMISSION RETARDER.....	54	ELECTRIC AWNING WINDOWS	75
JACOBS ENGINE BRAKE.....	55	SLIDING WINDOWS	75
ANTILOCK BRAKING SYSTEM (ABS).....	55	FIXED WINDOWS.....	75
DRIVER CONTROLLED DIFFERENTIAL LOCK (DCDL).....	55	ROOF ESCAPE HATCH	75
OPERATION TIPS	56	EMERGENCY AIR-FILL VALVES	76
LOCKING THE DCDL	56	EMERGENCY AND PARKING BRAKES	76
UNLOCKING THE DCDL	56	SAFETY EQUIPMENT	77
RETRACTABLE TAG AXLE	56	FIRE EXTINGUISHERS	77
VARIABLE ASSISTANCE STEERING GEAR (OPTIONAL).....	56	FIRST AID KIT	77

WARNING REFLECTORS	77	AIR TANK PURGE	89
JACK AND TOOLS.....	77	FIRE EXTINGUISHERS	89
SPARE PARTS KIT.....	77	FUEL FILTER / WATER SEPARATOR.....	89
CHANGING WHEELS	77	BELT TENSION ADJUSTMENT.....	90
JACKING POINTS.....	78	BACK-UP CAMERA	90
HYDRAULIC JACK.....	78	AIR FILTER RESTRICTION INDICATOR	90
TOWING.....	78	A/C AND HEATING SYSTEM AIR FILTERS.....	91
DAYTIME RUNNING LIGHTS	79	DRIVER'S AREA AIR FILTERS	91
FOG LIGHTS	79	CABIN SYSTEM AIR FILTER	91
CORNERING AND DOCKING LIGHTS	79	HOSE INSPECTION	92
COMPARTMENT LIGHTING.....	79	LUBRICATION	92
MUD FLAPS AND SPLASH GUARDS	79	PRE-STARTING INSPECTION.....	92
BACK-UP CAMERA.....	79	WITH ENGINE STOPPED	92
BACK-UP ALARM.....	80	WITH ENGINE RUNNING.....	93
BACK-UP ALARM CANCEL SWITCH.....	80	FIRST SERVICE ON NEW VEHICLE	94
ALARM SYSTEM	80	ENGINE OIL.....	94
CARE AND MAINTENANCE.....	83	AUTOMATIC TRANSMISSION OIL FILTER	94
CLEANING.....	83	COOLANT SYSTEM STRAINER	94
SEAT UPHOLSTERY.....	83	GENERAL RECOMMENDATIONS.....	94
PLASTIC AND VINYL.....	84	WALK-AROUND INSPECTION	
WINDOWS	84	(BEFORE EVERY TRIP)	96
STAINLESS STEEL	84	LUBRICATION AND SERVICING	
FORMICA.....	84	SCHEDULE	97
CARPET.....	84	SERVICE EVERY 6,250 MILES (10 000 KM)	
RUBBER COMPONENTS.....	84	OR TWICE A YEAR, WHICHEVER COMES	
FLOOR CLEANING.....	84	FIRST	97
EXTERIOR SURFACES.....	84	SERVICE EVERY 12,500 MILES (20 000 KM)	
WINDSHIELD.....	85	OR TWICE A YEAR, WHICHEVER COMES	
FLUID LEVEL VERIFICATION.....	85	FIRST	98
ENGINE OIL LEVEL.....	85	SERVICE EVERY 12,500 MILES (20 000 KM)	
AUTOMATIC TRANSMISSION OIL LEVEL	86	OR ONCE A YEAR, WHICHEVER COMES	
POWER STEERING FLUID LEVEL	87	FIRST	98
RADIATOR FAN GEARBOX OIL LEVEL	87	SERVICE EVERY 25,000 MILES (40 000 KM)	
DRIVE AXLE WHEEL BEARING OIL LEVEL....	88	OR ACCORDING TO THE FLEET	
FRONT AND TAG AXLE WHEEL HUBS	88	MAINTENANCE INTERVAL, WHICHEVER	
COOLANT FLUID LEVEL.....	88	COMES FIRST	98
WINDSHIELD WASHER TANK.....	88	SERVICE EVERY 25,000 MILES (40 000 KM)	
OTHER VERIFICATIONS.....	89	OR ONCE A YEAR, WHICHEVER COMES	
		FIRST	98
		SERVICE EVERY 50,000 MILES (80 000 KM)	
		OR ONCE A YEAR, WHICHEVER COMES	
		FIRST	98
		SERVICE EVERY 50,000 MILES (80 000 KM)	
		OR ONCE EVERY TWO YEARS, WHICHEVER	
		COMES FIRST	99

TABLE OF CONTENTS

SERVICE EVERY 100,000 MILES (160 000 KM) OR ONCE A YEAR, WHICHEVER COMES FIRST	99
SERVICE EVERY 100,000 MILES (160 000 KM) OR ONCE EVERY TWO YEARS, WHICHEVER COMES FIRST	99
SERVICE EVERY 100,000 MILES (160 000 KM) OR ONCE EVERY FOUR YEARS, WHICHEVER COMES FIRST	99
SERVICE EVERY 250,000 MILES (400 000 KM) OR ONCE EVERY FOUR YEARS, WHICHEVER COMES FIRST	99
MISCELLANEOUS SERVICE	99
LUBRICANT SPECIFICATIONS	100
PART NUMBER SPECIFICATIONS	101
TECHNICAL INFORMATION	103
DIMENSIONS AND WEIGHTS	104
CAPACITIES	104
FUEL TYPE	104
WHEELS AND TIRES	104
RECOMMENDED TIRE INFLATION PRESSURE AT MAXIMUM COLD LOAD	104
BELTS.....	105
ENGINE.....	105
TRANSMISSION.....	105
GEAR RATIOS	105
BRAKES	105
BRAKE CHAMBER EFFECTIVE AREA	105
AIR SYSTEM	106
ANTILOCK BRAKING SYSTEM (ABS).....	106
TROUBLESHOOTING AND TESTING	106
STEERING.....	106
ELECTRICAL SYSTEM.....	106
SUSPENSION.....	106
INDEPENDENT FRONT SUSPENSION	106
DRIVE AXLE	106
TAG AXLE	106
ALIGNMENT SPECIFICATIONS	106
FRONT AXLE (INDEPENDENT FRONT SUSPENSION).....	107
DRIVE AXLE	107
TAG AXLE	107
HEATING AND AIR CONDITIONING	107
SMALL CAPACITY A/C	107
COMPRESSOR (for small capacity A/C).....	107
LARGE CAPACITY A/C	107
COMPRESSOR (for large capacity A/C).....	107
OIL SPECIFICATIONS	108
ENGINE.....	108
AUTOMATIC TRANSMISSION	108
DIFFERENTIAL	108
FAN GEARBOX.....	108
POWER STEERING RESERVOIR.....	108
DDEC V DIAGNOSTIC CODES	108
WORLD TRANSMISSION (WT) DIAGNOSTIC CODES	118
DIAGNOSTIC CODE MEMORY LIST	119
MAIN CODE	119
SUB CODE.....	119
ACTIVE INDICATOR.....	119
IGNITION CYCLE COUNTER.....	119
EVENT COUNTER.....	119
CLEARING THE ACTIVE INDICATOR AND CODE RECORDS FROM THE CODE LIST IN MEMORY	119
CODE READING AND CODE CLEARING PROCEDURES	119
READING CODES	120
CLEARING CODES	120
EXITING THE DIAGNOSTIC DISPLAY MODE.....	120
CLEARING RECORDS FROM THE CODE LIST IN MEMORY	121
DIAGNOSTIC CODE RESPONSE	121
DIAGNOSTIC CODE LIST AND DESCRIPTION	121
OIL LEVEL SENSOR (OLS) CODES	130
CLEARING CODES	130
LIGHT BULB DATA	131
PLATES AND CERTIFICATION	132
SAFETY CERTIFICATION	132
DOT CERTIFICATION PLATE	132
EPA ENGINE LABEL	133

**VEHICLE IDENTIFICATION
NUMBER (VIN)133
COACH FINAL RECORD133**

APPENDIX..... 135

**SERVICE LITERATURE.....135
NOTICE.....136**

INDEX 137

FOREWORD

This PREVOST XL2 *Owner's Manual* has been prepared to thoroughly acquaint you, the owner, with vehicle's equipment and features in order to fully appreciate and safely enjoy your vehicle. Of course, you are anxious to drive your new private motorcoach and test its features, but first please read this publication carefully to help ensure enjoyable and trouble free operation. This book should be kept inside the vehicle at all times for convenient reference. It is also suggested that it remain with the vehicle at the time of resale. Please notify PREVOST CAR INC. when the vehicle's ownership is transferred so that our records can be kept up to date. Do this by filling out the appropriate form at the end of this manual.

The specifications, descriptions and figures given are based on the latest information available at printing time. And because at PREVOST we are constantly striving to improve our products, we reserve the right to make changes at any time without notice and/or obligation on our part.

Please note that this publication applies to factory-prepared, conversion-ready luxury motorcoaches, manufactured by PREVOST CAR INC. It describes and explains the equipment and options available for installation in our factory. Therefore, there may be equipment described herein that is not installed on your vehicle. This publication also does not cover equipment installed by your interior designer or system manufacturer.

This manual, or portions thereof, cannot be reproduced in any form whatsoever, in whole or in part, without the written consent of PREVOST CAR INC.

The following words are used to emphasize particularly important information:

WARNING

Identifies instructions which, if not followed, could result in serious personal injury or loss of life.

CAUTION

Denotes instructions which, if not followed, could cause serious damage to vehicle components.

NOTE

Indicates supplementary information needed to fully understand and complete an instruction.

For your own safety and to ensure prolonged service life of your private motorcoach, heed our **WARNINGS, CAUTIONS** and *NOTES*. Ignoring them could result in extensive damage and/or serious personal injury.