

TWS3	WCL TWS MODULE	GB 3 E
TWS4	WCL TWS MODULE	GB 3 E
U901	VOLTAGE CONVERTER DC/AC	IE 1 B
U902	VOLTAGE CONVERTER DC/AC	IE 1 C
U903	INVERTER, 24 DC TO 110 AC 2300 W	IJ 0 B
W	W ALTERNATOR SIGNAL	AA 4 A
WCL	Wheel Chair Lift	AD 4 C
X	FUSE TERMINAL	AB 1 B
X2	TERMINAL, POWER CABLE	AB 0 B
X16	FIRE, EXTINGUISHER	ID 1 D
X17	FIRE, EXTINGUISHER (FOGMAKER)	II 0 C
X671A	LEFT/RIGHT SIGNAL POSITION	JA 3 C
X671Aa	COMMON MOTOR MIRROR SIGNAL	JA 2 C
X671B	COMMON SIGNAL POSITION CONTROL	JA 3 C
X671Ba	LEFT-RIGHT MIRROR SIGNAL	JA 2 C
X671C	HEATER MIRROR SIGNAL	JA 2 C
X671Ca	HEATER MIRROR SIGNAL	JA 2 C
X671D	UP/DOWN SIGNAL POSITION	JA 3 C
X671Da	UPDOWN MIRROR SIGNAL	JA 2 C
X671E	GROUND SIGNAL	JA 2 E
X671Ea	GROUND MIRROR	JA 2 E
X801.A	MEDIA BRACKET ISTART	AD 3 B
X905_1	BODY FUSE BOX	AD 4 B
X905_2	BODY FUSE BOX	AD 4 B
X905_3	BODY FUSE BOX	AD 4 B
X905_4	BODY FUSE BOX	AD 4 B
X910	JUNCTION BOX BATTERY BOX I-START	AC 1 C
X910A	JUNCTION BOX ELECTRIC CENTER	AC 2 D
X1147A:1	CONNECT TO ROOF RIGHT HARNESS	HA 3 B
X1147A:2	CONNECT TO ROOF RIGHT HARNESS	PA 2 A
X1147B:1	CONNECT TO ROOF RIGHT HARNESS	HA 3 B
X1147B:2	CONNECT TO ROOF RIGHT HARNESS	PA 2 A
X1147C:1	CONNECT TO ROOF RIGHT HARNESS	DA 4 D
X1147C:2	CONNECT TO ROOF RIGHT HARNESS	DA 4 D
X_	FUSE TERMINAL I-START	AB 0 C
XA	TERMINAL, POWER CABLE	AC 1 C
XC102B	POWER BOX TERMINAL	AB 0 C
Y	DEVICE TERMINAL	AB 3 A
Y2	TERMINAL, POWER CABLE	IJ 1 C
Y72	AIR HORN	IA 4 B

**VOLVO**

Volvo Bus Corporation

Document Title

**WIRING DIAGRAM**

Document Type

**PRODUCT SCHEMATIC**

Document No

**22600119**

Issue Index

**04**

Volume No

**02**

Page No

**17(18)**