

PLOTTAGE SCALE = 3.18:1

CIRCUIT BREAKER CODE (CB)

Page F : 1

NO.	PAGE	AMPERE	*PREVOST	LOCATION	FUNCTION
CB1	2	40A	560703	BAT CPT	12V IGNITION
CB2	1	30A	870690	BAT CPT	12V HOT WIRE
CB3	1	40A	560703	BAT CPT	12V FEED RR JCT BOX
CB4	1	40A	560703	BAT CPT	12V FEED FR JCT BOX
CB5	1	30A	870690	BAT CPT	24V HOT WIRE
CB6	1	90A	560298	BAT CPT	24V FEED RJ B & STARTER RLY
CB7	1	90A	560298	BAT CPT	24V FEED FJB & INVERTER CPT
CB8	1	150A	560299	BAT CPT	A/C JCT BOX & EVAP. FAN
CB9	1	150A	560299	BAT CPT	CONDENSER FAN MOTOR
CB10	4	8A	561791	FR JCT BOX	MASTER SWITCH
CB14	17	15A	561793	RR JCT BOX	PRE-HEAT WATER HEATER (WEBASTO)
CB15	17	15A	561793	RR JCT BOX	PRE-HEAT WATER HEATER
CB16	4	8A	561791	RR JCT BOX	ENGINE-RR CTR & START SW
CB18	4	8A	561791	RR JCT BOX	ENGINE-FR CTR SW & LEVEL LOW SYSTEM
CB19	5	15A	561793	BAT CPT	E.C.M. DDEC III
CB20	5	15A	561793	BAT CPT	E.C.M. DDEC III
CB21	5	6A	561790	BAT CPT	12V IGNITION DDEC III
CB24	6	20A	561794	BAT CPT	V.I.M. WORLD TRANSMISSION
CB26	11	10A	561792	RR JCT BOX	BACK-UP LTS
CB27	7	8A	561791	FR JCT BOX	24V IGN DASH ACCESSORIES
CB28	7	6A	561790	FR JCT BOX	12V IGN. VOLTMETER & SPEEDO-TACHO
CB29	7	20A	561794	FR JCT BOX	ELECTRICAL HORNS
CB30	7	6A	561790	FR JCT BOX	FIRE ALARM
CB31	8	8A	561791	RR JCT BOX	AIR DRYER
CB32	8	6A	561790	FR JCT BOX	ETHER COLD START & CRUISE DECEL
CB33	8	6A	561790	FR JCT BOX	PARKING BRAKE SW
CB34	11	10A	561792	RR JCT BOX	BACK-UP ALARM
CB35	11	6A	561790	FR JCT BOX	FOG & HAZARD SW
CB36	11	15A	561793	FR JCT BOX	FOG LTS
CB37	9	6A	561790	FR JCT BOX	HEAD & MULTI-FUNC. SW
CB38	9	10A	561792	FR JCT BOX	FR MARKER LTS
CB39	9	20A	561794	FR JCT BOX	CLEARANCE & IDENT. LTS
CB40	9	8A	561791	FR JCT BOX	FR CLEARANCE & IDENT. LTS
CB41	9	8A	561791	RR JCT BOX	RR CLEARANCE & IDENT. LTS
CB42	9	8A	561791	RR JCT BOX	RR MARKER, TAIL, LICENCE LTS
CB43	9	20A	561794	FR JCT BOX	HEADLAMP (HI)
CB44	9	15A	561793	FR JCT BOX	HEADLAMP (LO)
CB45	10	10A	561792	FR JCT BOX	MULTI-FUNC. SW (WIPER CTR)
CB46	10	20A	561794	FR JCT BOX	FLASHER & HAZARD UNIT
CB47	10	10A	561792	FR JCT BOX	CORNERING LTS
CB48	11	6A	561790	FR JCT BOX	STOP SW
CB49	11	15A	561793	RR JCT BOX	STOP & CYCLOP LTS
CB51	12	10A	561792	FR JCT BOX	UP WINDSH. WIPER & WASHER
CB52	13	15A	561793	RR JCT BOX	LUGGAGE LTS & DOOR AJAR LTS
CB53	13	6A	561790	RR JCT BOX	ENGINE COMPT. LTS
CB54	13	6A	561790	RR JCT BOX	FR SERVICE COMPT. LTS
CB57	14	8A	561791	FR JCT BOX	DASH LTS RHEOSTAT
CB59	14	8A	561791	FR JCT BOX	DRIVER'S LTS
CB70	18	6A	561790	FR JCT BOX	A/C & HEAT SW
CB71	18	10A	561792	A/C JCT BOX	A/C LOGIC PANEL
CB72	18	6A	561790	A/C JCT BOX	A/C COMPRESSOR CLUTCH
CB73	18	15A	561793	A/C JCT BOX	WATER PUMP
CB77	19	40A	560703	A/C JCT BOX	CONDENSER FAN MOTOR RH
CB78	19	40A	560703	A/C JCT BOX	CONDENSER FAN MOTOR LH
CB79	19	10A	561792	FR JCT BOX	DRIVER'S HTR FAN
CB80	20	8A	561791	FR JCT BOX	MIRROR-ADJUST & HEATED SW
CB81	23	15A	561793	FR JCT BOX	DRIVER'S WINDOW-LIFT & LIGHTER

CIRCUIT BREAKER CODE (CB)

Page F : 1

NO.	PAGE	AMPERE	*PREVOST	LOCATION	FUNCTION
CB83	17	6A	561790	FR JCT BOX	WATER HEATER TIMER
CB84	23	3A	561792	FR JCT BOX	SUN VISOR
CB85	14	6A	561790	FR JCT BOX	ENTRANCE DOOR-STEP LTS
CB87	24	3A	561797	RR JCT BOX	BACK-UP MONITOR DOOR SOLENOID
CB91	16	6A	561790	FR JCT BOX	DRV SEAT HEATER & DIGITAL THERMOMETER
CB95	24	6A	561790	RR JCT BOX	BACK-UP MONITOR CAMERA HEATER
CB105	26	6A	561790	FR JCT BOX	E.C.U. ABS
CB106	26	10A	561792	FR JCT BOX	E.C.U. ABS
CB107	26	10A	561792	FR JCT BOX	E.C.U. ABS
CB108	24	6A	561790	RR JCT BOX	BACK-UP MONITOR CAMERA
CB113	11	10A	561792	RR JCT BOX	DOCKING LTS
CB114	16	6A	561790	FR JCT BOX	CO-PILOT SEAT HEATER
CB115	15	8A	561791	FR JCT BOX	KEYLESS ENTRY SYSTEM-MODULE
CB118	15	20A	561794	RR JCT BOX	KEYLESS ENTRY SYSTEM-LUGGAGE DOOR LOCK
CB119	15	3A	561797	RR JCT BOX	KEYLESS ENTRY SYS-LUG DOOR UNLOCK WARNING
CB120	15	20A	561794	RR JCT BOX	KEYLESS ENTRY SYSTEM-LUGGAGE DOOR LOCK
CB121	16	20A	561794	FR JCT BOX	HEATING WINDSHEILD LH
CB122	16	20A	561794	FR JCT BOX	HEATING WINDSHEILD RH
CB123	16	25A	561795	FR JCT BOX	DRIVER'S SEAT ELECTRICAL ADJUSTMENT
CB124	8	6A	561790	RR JCT BOX	RADIATOR FAN CLUTCH