

# FUSES

No	Location	Part #	Function	Rating	Page	No	Location	Part #	Function	Rating	Page
F1	FuseBoxFJB	563279	CecmPower	3amp	4.1	F41	FuseBoxFJB	563283	12vPowerOutlet	10amp	4.1
F2	FuseBoxFJB	563279	FrontStartSwitch	3amp	4.1	F50	FuseBoxRJB	563284	DelcoVoltageRegulator	15amp	5.1
F3	FuseBoxFJB	563279	DrvLiq.Vlv	3amp	4.1	F51	FuseBoxRJB	563284	Customer	25Amp	5.1
F4	FuseBoxFJB	563279	Spare	3amp	4.1	F52	FuseBoxRJB	563284	LuggagesLocksRelays	15amp	5.1
F5	FuseBoxFJB	563165	FrontWakeUpRelay	30amp	4.1	F53	FuseBoxRJB	563284	PassLiqValve	15amp	5.1
F6	FuseBoxFJB	563005	Customer24VD	7.5amp	4.1	F54	FuseBoxRJB	563284	WindowAjarAwning	15amp	5.1
F7	FuseBoxFJB	563279	Spare	3amp	4.1	F55	FuseBoxRJB	563283	Spare	10amp	5.1
F8	FuseBoxFJB	563279	HeadlightsSwitch	3amp	4.1	F56	FuseBoxRJB	563283	Spare	10amp	5.1
F9	FuseBoxFJB	563284	AuxFanCtrl	15amp	4.1	F57	FuseBoxRJB	563283	Spare	10amp	5.1
F10	FuseBoxFJB	563279	PneumaticSol	3amp	4.1	F58	FuseBoxRJB	563283	Spare	10amp	5.1
F11	FuseBoxFJB	563279	SunVisor	3amp	4.1	F59	FuseBoxRJB	563283	Spare	10amp	5.1
F12	FuseBoxFJB	563282	PwrMuxModule	20amp	4.1	F62	FuseBoxRJB	563283	Spare	10amp	5.1
F13	FuseBoxFJB	563282	PwrMuxModule	20amp	4.1	F63	FuseBoxRJB	563283	PrimePump	10amp	5.1
F14	FuseBoxFJB	563284	Customer24VI	15amp	4.1	F64	FuseBoxRJB	563283	Spare	10amp	5.1
F15	FuseBoxFJB	563004	EngineBrake	2Amp	4.1	F65	FuseBoxRJB	563165	PwrMuxModuleRJB	30amp	5.1
F16	FuseBoxFJB	563153	DefrosterUnit	25Amp	4.1	F66	FuseBoxRJB	563279	RadiatorFanClutch	3amp	5.1
F17	FuseBoxFJB	563280	LevelLow	5Amp	4.1	F67	FuseBoxRJB	563153	PwrMuxA54	25Amp	5.1
F18	FuseBoxFJB	563284	UpperWiper	15amp	4.1	F68	FuseBoxRJB	563153	PwmMuxA54	25Amp	5.1
F19	FuseBoxFJB	563279	Spare	3amp	4.1	F69	FuseBoxRJB	563005	ServiceBrakeRelay	7.5amp	5.1
F20	FuseBoxFJB	563279	WitnessRedLed	3amp	4.1	F70	FuseBoxRJB	563005	Customer24VI	7.5amp	5.1
F21	FuseBoxFJB	563282	PwrMuxA44	20amp	4.1	F71	FuseBoxRJB	563284	RJBCompLight	15amp	5.1
F22	FuseBoxFJB	563279	SteeringCtrl	3amp	4.1	F72	FuseBoxRJB	563153	PwrMuxA50	25Amp	5.1
F23	FuseBoxFJB	563284	ABS	15amp	4.1	F73	FuseBoxRJB	563282	Spare	20amp	5.1
F24	FuseBoxFJB	563005	Mirror	7.5amp	4.1	F74	FuseBoxRJB	563283	EcuEngineIgnition	10amp	5.1
F25	FuseBoxFJB	563280	Spare	5Amp	4.1	F75	FuseBoxRJB	563283	EcuTransmissionIgn	10amp	5.1
F26	FuseBoxFJB	563279	Spare	3amp	4.1	F76	FuseBoxRJB	563283	Customer	10amp	5.1
F27	FuseBoxFJB	563284	Customer	15amp	4.1	F77	FuseBoxRJB	563283	EcuTransmissionWakeUp	10amp	5.1
F28	FuseBoxFJB	563282	DriverSeat	20amp	4.1	F78	FuseBoxRJB	563284	EcuEngineWakeUp	15amp	5.1
F29	FuseBoxFJB	563279	ClusterandDDDR	3amp	4.1	F79	FuseBoxRJB	563284	EcuEngineWakeUp	15amp	5.1
F30	FuseBoxFJB	563284	Driverwindow	15amp	4.1	F80	FuseBoxRJB	563284	PwrMuxA51	15amp	5.1
F31	FuseBoxFJB	563279	KeylessModule	3amp	4.1	F81	FuseBoxRJB	563004	Alternators	2Amp	5.1
F32	FuseBoxFJB	563282	Spare	20amp	4.1	F82	FuseBoxFJB	563284	LowerWipers	20amp	4.1
F33	FuseBoxFJB	563165	FrontWakeUpRelay	30amp	4.1	F83	FuseBoxFJB	563005	Spare	7.5amp	4.1
F34	FuseBoxFJB	563165	FrontWakeUpRelay	30amp	4.1	F84	FuseBoxFJB	563284	Customer	15amp	4.1
F35	FuseBoxFJB	563283	12vPwrOutlet	10amp	4.1	F85	FuseBoxRJB	563283	Spare	10amp	5.1
F36	FuseBoxFJB	563279	PwrHvacandTTLtModule	3amp	4.1	F86	FuseBoxRJB	563283	Spare	10amp	5.1
F37	FuseBoxFJB	563283	Spare	10amp	4.1	F87	FuseBoxRJB	563283	Trailerconnector	10amp	5.1
F38	FuseBoxFJB	563283	PwrMuxA41	10amp	4.1	F88	FuseBoxRJB	563283	BackupCamera	10amp	5.1
F39	FuseBoxFJB	563283	Spare	10amp	4.1	F89	FuseBoxRJB	563282	Spare	20amp	5.1
F40	FuseBoxFJB	563283	Spare	10amp	4.1						