

# FUSES LIST

No	Location	Part #	Function	Rating	Page
F1	FuseBoxFJB	563279	CecmPower	3amp	4.1
F2	FuseBoxFJB	563279	FrontStartSwitch	3amp	4.1
F3	FuseBoxFJB	563279	DrvLiq.Vlv	3amp	4.1
F4	FuseBoxFJB	563280	*opt*	5Amp	4.1
F5	FuseBoxFJB	563165	FrontWakeUpRelay	30amp	4.1
F6	FuseBoxFJB	563005	Customer24VD	7.5amp	4.1
F7	FuseBoxFJB	563279	Spare	3amp	4.1
F8	FuseBoxFJB	563279	HeadlightsSwitch	3amp	4.1
F9	FuseBoxFJB	563284	AuxFanCtrl	15amp	4.1
F10	FuseBoxFJB	563279	PneumaticSol	3amp	4.1
F11	FuseBoxFJB	563279	SunVisor	3amp	4.1
F12	FuseBoxFJB	563282	PwrMuxModule	20amp	4.1
F13	FuseBoxFJB	563282	PwrMuxModule	20amp	4.1
F14	FuseBoxFJB	563284	Customer24VI	15amp	4.1
F15	FuseBoxFJB	563004	EngineBrake	2Amp	4.1
F16	FuseBoxFJB	563153	DefrosterUnit	25Amp	4.1
F17	FuseBoxFJB	563280	LevelLow	5Amp	4.1
F18	FuseBoxFJB	563284	UpperWiper	15amp	4.1
F19	FuseBoxFJB	563279	Spare	3amp	4.1
F20	FuseBoxFJB	563279	WitnessRedLed	3amp	4.1
F21	FuseBoxFJB	563282	PwrMuxA44	20amp	4.1
F22	FuseBoxFJB	563279	SteeringCtrl	3amp	4.1
F23	FuseBoxFJB	563284	ABS	30amp	4.1
F24	FuseBoxFJB	563005	Mirror	7.5amp	4.1
F25	FuseBoxFJB	563280	Spare	5Amp	4.1
F26	FuseBoxFJB	563279	Spare	3amp	4.1
F27	FuseBoxFJB	563284	Customer	15amp	4.1
F28	FuseBoxFJB	563282	DriverSeat	20amp	4.1
F29	FuseBoxFJB	563279	ClusterandDDDR	3amp	4.1
F30	FuseBoxFJB	563284	Driverwindow	15amp	4.1
F31	FuseBoxFJB	563279	KeylessModule	3amp	4.1
F32	FuseBoxFJB	563282	Spare	20amp	4.1
F33	FuseBoxFJB	563165	FrontWakeUpRelay	30amp	4.1
F34	FuseBoxFJB	563165	FrontWakeUpRelay	30amp	4.1
F35	FuseBoxFJB	563283	12vPwrOutlet	10amp	4.1
F36	FuseBoxFJB	563279	PwrHvacandTlTtModule	3amp	4.1
F37	FuseBoxFJB	563283	Spare	10amp	4.1
F38	FuseBoxFJB	563283	PwrMuxA41	10amp	4.1
F39	FuseBoxFJB	563283	Spare	10amp	4.1
F40	FuseBoxFJB	563283	Spare	10amp	4.1
F41	FuseBoxFJB	563283	12vPowerOutlet	10amp	4.1
F50	FuseBoxRJB	563284	DelcoVoltageRegulator	15amp	5.1
F51	FuseBoxRJB	563284	Customer	25Amp	5.1

# FUSES LIST

No	Location	Part #	Function	Rating	Page
F52	FuseBoxRJB	563284	LuggagesLocksRelays	15amp	5.1
F53	FuseBoxRJB	563284	PassLiqValve	15amp	5.1
F54	FuseBoxRJB	563153	WindowAjarAwning	25amp	5.1
F55	FuseBoxRJB	563283	Spare	10amp	5.1
F56	FuseBoxRJB	563282	Spare	20amp	5.1
F57	FuseBoxRJB	563283	Spare	10amp	5.1
F58	FuseBoxRJB	563282	Spare	20amp	5.1
F59	FuseBoxRJB	563283	Spare	10amp	5.1
F62	FuseBoxRJB	563283	Spare	10amp	5.1
F63	FuseBoxRJB	563283	PrimePump	10amp	5.1
F64	FuseBoxRJB	563283	Spare	10amp	5.1
F65	FuseBoxRJB	563165	PwrMuxModuleRJB	30amp	5.1
F66	FuseBoxRJB	563279	RadiatorFanClutch	3amp	5.1
F67	FuseBoxRJB	563153	PwrMuxA54	25Amp	5.1
F68	FuseBoxRJB	563153	PwmMuxA54	25Amp	5.1
F69	FuseBoxRJB	563005	ServiceBrakeRelay	7.5amp	5.1
F70	FuseBoxRJB	563005	Customer24VI	7.5amp	5.1
F71	FuseBoxRJB	563284	RJBComptLight	15amp	5.1
F72	FuseBoxRJB	563153	PwrMuxA50	25Amp	5.1
F73	FuseBoxRJB	563282	Spare	20amp	5.1
F74	FuseBoxRJB	563283	EcuEngineIgnition	10amp	5.1
F75	FuseBoxRJB	563283	EcuTransmissionIgn	10amp	5.1
F76	FuseBoxRJB	563283	Customer	10amp	5.1
F77	FuseBoxRJB	563283	EcuTransmissionWakeUp	10amp	5.1
F78	FuseBoxRJB	563284	EcuEngineWakeUp	15amp	5.1
F79	FuseBoxRJB	563284	EcuEngineWakeUp	15amp	5.1
F80	FuseBoxRJB	563284	PwrMuxA51	15amp	5.1
F81	FuseBoxRJB	563004	Alternators	2Amp	5.1
F83	FuseBoxFJB	563005	Spare	10amp	4.1
F84	FuseBoxFJB	563284	Customer	15amp	4.1
F85	FuseBoxRJB	563283	Spare	10amp	5.1
F86	FuseBoxRJB	563283	Spare	10amp	5.1
F87	FuseBoxRJB	563282	Trailerconnector	20amp	5.1
F88	FuseBoxRJB	563282	BackupCamera	20amp	5.1
F89	FuseBoxRJB	563282	Spare	20amp	5.1
F90	FuseBoxRJB	563153	*opt*	25amp	5.1
F91	FuseBoxRJB	563284	*opt*	15amp	5.1
F96	FuseBoxRJB	563282	SPARE	20amp	5.1
F98	FuseBoxRJB	563284	SPARE	15amp	5.1
F99	FuseBoxRJB	563284	*opt*	15amp	5.1
F20_2_64	FuseBoxFJB	563284	*opt*	15amp	4.1
F20_3_64	FuseBoxFJB	563282	*opt*	20amp	4.1
Fuse ATO 1A 191724 156 1 156		562597		125A	14.2