

PREVOST
COACH MANUFACTURER

MAINTENANCE MANUAL

X3 COACHES



PA1562
(2nd edition)

PA1562 2nd edition

Date: February 2008

Starting from vehicle: 8-9451

Featuring: Volvo D13 engine & DDC S60-2007 engine with Aftertreatment System

SECTION 00: GENERAL INFORMATION

CONTENTS

1. FOREWORD.....	2
2. SCHEMATICS	2
3. PRECAUTIONS TO BE OBSERVED BEFORE WELDING	2
4. SAFETY NOTICE	4
4.1 DATA PLATES AND CERTIFICATIONS	4
4.1.1 <i>Engine</i>	4
4.1.2 <i>Transmission</i>	5
4.1.3 <i>Drive Axle</i>	5
4.1.4 <i>Front Axle</i>	5
4.1.5 <i>Power Steering Pump</i>	6
4.1.6 <i>Coach Final Record</i>	6
4.1.7 <i>Safety Certification</i>	6
4.1.8 <i>DOT Certification Label</i>	6
4.1.9 <i>EPA Engine Label</i>	6
4.1.10 <i>Fuel Tank Label</i>	6
4.1.11 <i>Vehicle Identification Number (VIN)</i>	7
5. FASTENER STRENGTH IDENTIFICATION.....	9
5.1 SELF-LOCKING FASTENERS	10
5.2 RECOMMENDATIONS FOR REUSE.....	10
5.3 SIX LOBED SOCKET HEAD	10

ILLUSTRATIONS

FIGURE 1: DETROIT DIESEL SERIES 60	5
FIGURE 2: VOLVO D13 ENGINE DATA PLATE	5
FIGURE 3: ALLISON TRANSMISSION	5
FIGURE 4: ZF-ASTRONIC TRANSMISSION	5
FIGURE 5: TYPICAL SERIAL & MODEL NUMBERS.....	5
FIGURE 6: ISS TYPICAL SERIAL & MODEL NUMBERS	5
FIGURE 7: I-BEAM AXLE TYPICAL SERIAL & MODEL NUMBERS	5
FIGURE 8: POWER STEERING PUMP NAMEPLATE	6
FIGURE 9: POWER STEERING PUMP	6
FIGURE 10: DOT CERTIFICATION PLATE	6
FIGURE 11: VEHICLE I.D.	7
FIGURE 12: VEHICLE IDENTIFICATION NUMBER.....	8
FIGURE 13: THREAD NOTATION	9
FIGURE 14: BOLT STRENGTH MARKINGS	9
FIGURE 15: SELF-LOCKING FASTENERS	10
FIGURE 16: METRIC - US STANDARD CONVERSION TABLE.....	11
FIGURE 17: CONVERSION CHART	12

Section 00: GENERAL INFORMATION

1. FOREWORD

This manual includes procedures for diagnosis, service, maintenance and repair for components of the X3 series coaches listed on the front cover page. This manual should be kept in a handy place for ready reference by the technician. If properly used, it will meet the needs of the technician and owner.

Information provided in Section 1 through 24 pertains to standard equipment items, systems and components as well as the most commonly used optional equipment and special equipment offered on the coach models covered by this manual. At the beginning of each section: a Table of Contents and a list of illustrations give the page number on which each subject begins and where each figure is located. Coach operating information is provided in a separate Operator's Manual. Audio/Video system operator instructions are also included in a separate manual.

More specific information on engine and transmission operating, maintenance, and overhaul information is contained in the applicable engine or transmission service manual published by the engine or transmission manufacturer. Engine and transmission parts information is contained in the applicable engine or transmission parts catalog published by the engine or transmission manufacturer. All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication approval. The right is reserved to make product changes at any time without notice.

NOTE

Typical illustrations may be used; therefore minor illustration difference may exist when compared to actual parts or other publications.

Prevost occasionally sends Maintenance Information, Warranty Bulletins, Safety Recalls or other literature to update users with the latest service procedures. They are issued, when required, to supplement or supersede information in this manual. Update sheet should be filled out and bulletins should be filed at the end of their respective section for future reference.

2. SCHEMATICS

Vehicle AIR SCHEMATICS are provided at the end of Section 12, "Brake". SUSPENSION AIR SCHEMATICS are provided at the end of Section 16, "Suspension". Moreover, ELECTRICAL SCHEMATICS are provided in the technical publications box. Refer to those schematics for detailed circuit information or during diagnosis.

3. PRECAUTIONS TO BE OBSERVED BEFORE WELDING



CAUTION

Precautions are to be observed before welding to minimize the risk of major and costly damage caused to the vehicle electronic components.

NOTE

For X3-45 Multiplex vehicles, also execute procedure no: PR060034 "MULTIPLEX MODULES DISCONNECTION PROCEDURE PRIOR TO WELDING" included at the end of this section.



CAUTION

For vehicles equipped with a WCL system, disconnect electronic controller connector.



CAUTION

Cover electronic control components and wiring to protect from hot sparks, etc.



CAUTION

Position welding machine ground clamp as close as possible to the work. Ensure that the welding machine ground return clamp is well secured and makes a good electrical contact with a large metallic area of the chassis located as close as possible to the welding point.



CAUTION

Do not use TIG welding process on the vehicle. This high frequency current process can seriously damage the electronic components.

STEEL – STEEL WELDING**CAUTION**

Before welding, perform multiplex modules disconnection procedure.

NOTE

Welding surfaces must be free of scale, slag, rust, paint, grease, humidity or other foreign material that would render welding impossible.

**DANGER**

Only a qualified and experienced person must do welding.

- FCAW (Flux Cored Arc Welding) process ;
- Electrode wire conforms to A5.20 AWS (American Welding Society) specifications ;
- E4801T-9-CH, type electrode wire with 0,045" diameter (1,14 mm) ;

Material Thickness	Voltage	Current	Wire Feed Rate	Shielding Gas
1/8" to 1/2"	26 ± 2 volts	260 Amps	450 ipm. approx.	75% argon – 25% CO ₂ or 100% CO ₂

If necessary and with great care to prevent perforating the material, it is possible to use a conventional electric arc welding machine according to the following specifications:

- SMAW (Shielded Metal-Arc Welding) process ;
- Welding rod conforms to A5.1 of AWS (American Welding Society) specifications; E 7018 type welding rod with 1/8" diameter (3,2 mm).
- Current: 100 amperes to 150 amperes; optimum at 120 amps.

It is important to grind weld bead starts and stops and also to grind arc strikes from surfaces.

STEEL - STAINLESS STEEL OR STAINLESS STEEL - STAINLESS STEEL WELDING**CAUTION**

Before welding, perform multiplex modules disconnection procedure.

NOTE

Welding surfaces must be free of scale, slag, rust, paint, grease, humidity or other foreign material that would render welding impossible.

**DANGER**

Only a qualified and experienced person must do welding.

- GMAW (Gas Metal-Arc Welding) process;
- Welding wire conforms to AWS (American Welding Standards) A5.9 specifications;
- 308LSi type welding wire with 0.035" diameter (0,9 mm);

STEEL - STAINLESS STEEL WELDING

Steel Thickness	SS Thickness	Voltage	Current	Wire Feed Rate	Shielding Gas
Less than 1/8"	Any type	20±1.5 volts	130±15 Amps	290 ipm approx.	90% He, 7.5% Ar, 2.5% CO ₂
1/8" and more	Any type	22±1.5 volts	160±15 Amps	330 ipm approx.	90% He, 7.5% Ar, 2.5% CO ₂

Section 00: GENERAL INFORMATION

STAINLESS STEEL - STAINLESS STEEL WELDING

SS Thickness	Voltage	Current	Wire Feed Rate	Shielding Gas
Any type	20 ± 1.5 volts	130 ± 15 Amps	290 ipm approx.	90% He – 7.5% Ar, 2.5% CO ₂

If necessary and with great care to prevent perforating the material, it is possible to use a conventional electric arc welding machine according to the following specifications:

- SMAW (Shield Metal-Arc Welding) process;
- Welding rod conforms to AWS (American Welding Standards) A5.4 specifications; 308L-17 type welding rod with 3/32" diameter (2,4 mm);
- Current: - 50 amperes to 90 amperes, optimum at 60 amperes.

It is important to grind weld bead starts and stops and also to grind arc strikes from surfaces.

4. SAFETY NOTICE




This maintenance manual has been prepared in order to assist skilled mechanics in the efficient repair and maintenance of PRÉVOST vehicles.

This manual covers only the procedures as of manufacturing date.

Safety features may be impaired if other than genuine PRÉVOST parts are installed.

Torque wrench tightening specifications must be strictly observed. Locking devices must be installed or replaced by new ones, where specified. If the efficiency of a locking device is impaired, It must be replaced.

This manual emphasizes particular information outlined by the wording and symbols:

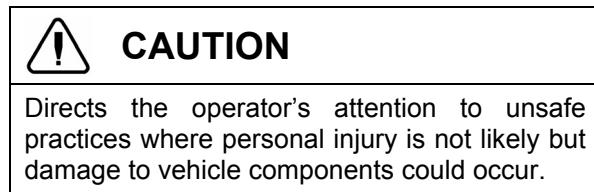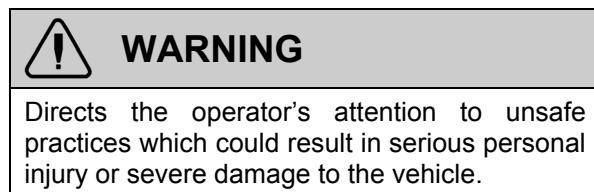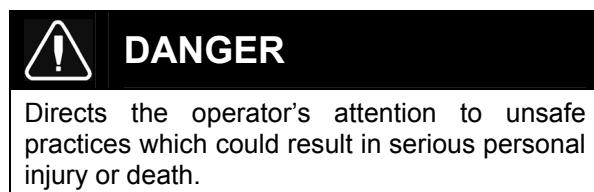

NOTE

Indicates supplementary information essential to the proper operation of the vehicle. Although, the mere reading of such information does not eliminate the hazard, understanding of the information will promote its correct use.

4.1 DATA PLATES AND CERTIFICATIONS

Delay and confusion can be avoided by placing the complete vehicle identification number of the coach and the serial numbers of the engine on parts orders and correspondence. Also, the transmission, axles, power steering pump chassis and other major components are identified by serial numbers.

4.1.1 Engine

• DDC Series 60 Engine

The engine serial and model numbers are stamped on the cylinder block (as viewed from the flywheel end) on the left side just below the fire deck and above the cast-in Detroit Diesel logo (Fig. 1).

In addition, option plates made of laminated paper are located on the rocker cover (starter side). The engine serial and model number and a list of the optional engine equipment are written on the option plates. Refer to this information when ordering replacement parts (Fig. 1).

• Volvo D13 Engine

Volvo D13 engine serial and model numbers are stamped on the cylinder head (Fig. 2).

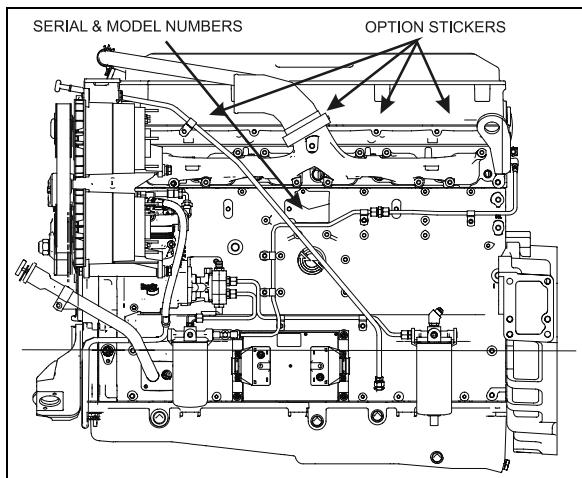


FIGURE 1 : DETROIT DIESEL SERIES 60 00043

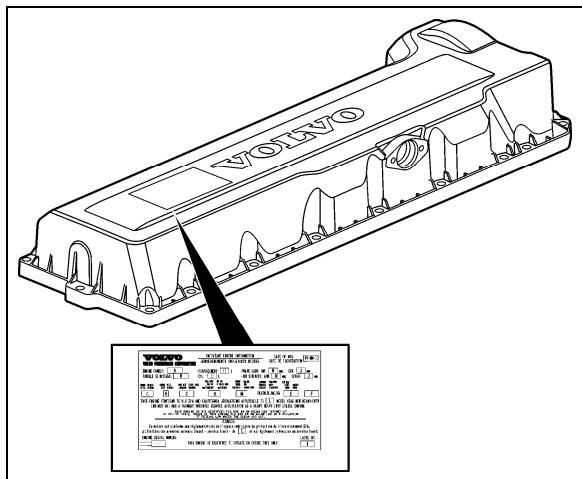


FIGURE 2: VOLVO D13 ENGINE DATA PLATE 00052

4.1.2 Transmission

The transmission identification plate is located on the oil level dipstick side of the transmission (WT) or on transmission, on the vehicle R.H. side (ZF) (Fig. 3 & 4). The identification plate shows the transmission serial number, part number (assembly number), and model number. Use all three numbers when ordering parts.

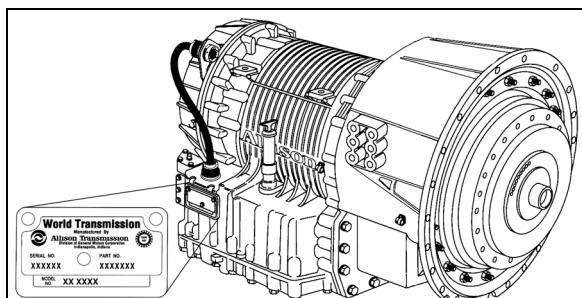


FIGURE 3: ALLISON TRANSMISSION 07076

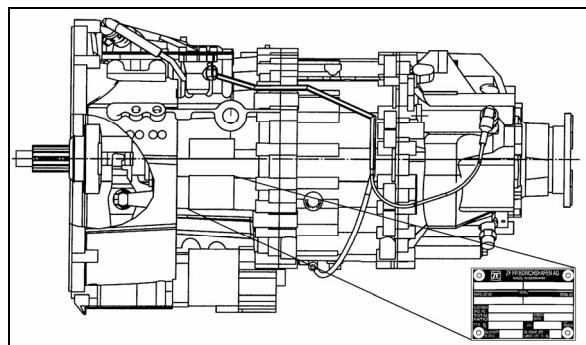


FIGURE 4: ZF-ASTRONIC TRANSMISSION 00040

4.1.3 Drive Axle

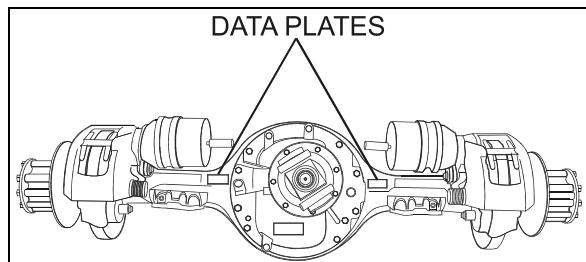


FIGURE 5: TYPICAL SERIAL & MODEL NUMBERS 00007

4.1.4 Front Axle

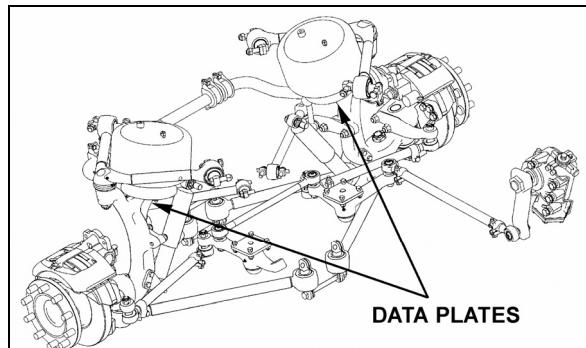


FIGURE 6: ISS TYPICAL SERIAL & MODEL NUMBERS 16136

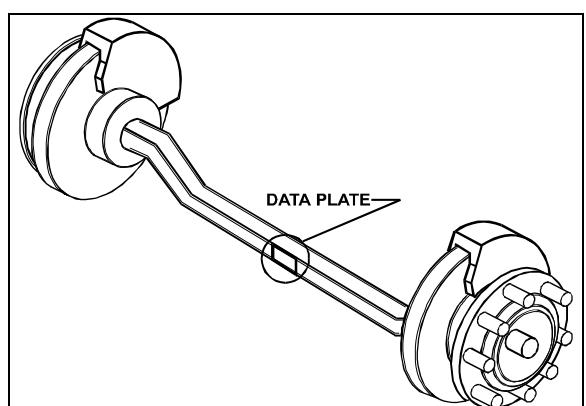


FIGURE 7: I-BEAM AXLE TYPICAL SERIAL & MODEL NUMBERS 00008

Section 00: GENERAL INFORMATION

4.1.5 Power Steering Pump

• DDC SERIES 60 ENGINE

Power steering pump serial number is located on a tag on the pump (Fig. 8). The pump is mounted on the engine beside the crankshaft pulley.

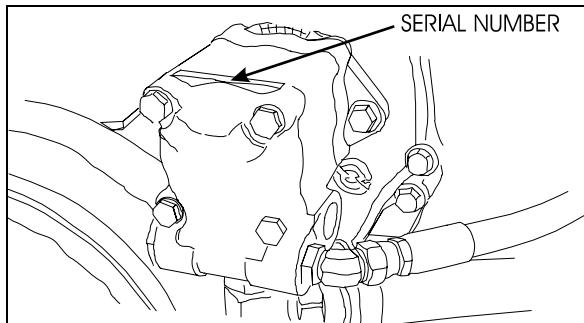


FIGURE 8 : POWER STEERING PUMP NAMEPLATE 00035

• Volvo D13 Engine

Power steering pump is mounted on the engine and located underneath the air compressor (Fig. 9).

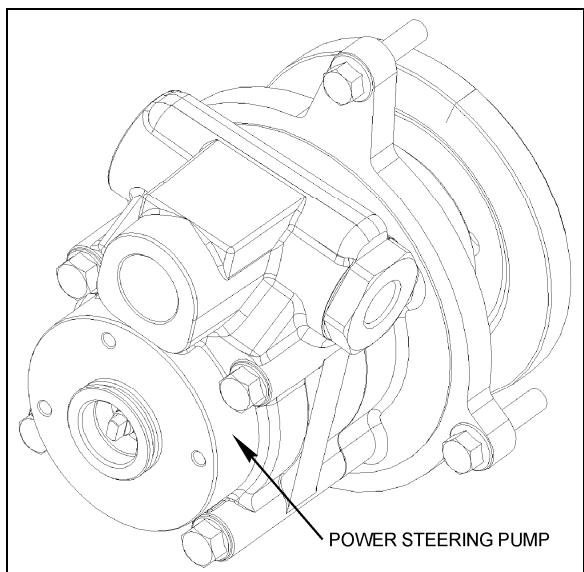


FIGURE 9: POWER STEERING PUMP

4.1.6 Coach Final Record

The Coach Final Record is a record of all data pertaining to the assembly of the coach. This record is included in the technical publication package supplied with the coach. Retain this record in the company records office for reference and safe-keeping.

4.1.7 Safety Certification

Coach components meet specifications and standards as follows:

- Material and parts conform to ASTM and/or SAE standards in effect at the time of manufacture.
- All factory-installed interior materials meet FMVSS 302 for fire resistance.
- Certified according to Provincial, State and Federal Safety standards (Canadian and US) BMCSS, FMVSS, and CMVSS.

Other applicable certification labels are affixed to the component.

4.1.8 DOT Certification Label

This certifies that coaches manufactured by Prevost Car Inc., comply with all Federal Motor Vehicle Safety Standards at the time of manufacture. Information such as date of manufacture, model year, gross vehicle weight rating, tire types and inflation pressure is also etched on this plate. The DOT Certification plate is affixed to the side of the L.H. control panel.

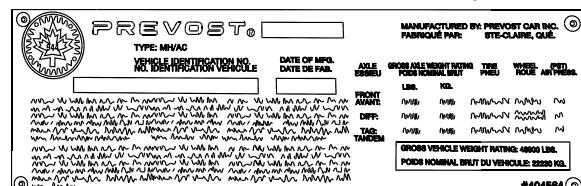


FIGURE 10: DOT CERTIFICATION PLATE 00016

4.1.9 EPA Engine Label

The exhaust emission certification label affixed inside the engine compartment above the lavatory maintenance service valves certifies that the engine conforms to federal and any state exhaust emission regulations. It gives the operating conditions under which certification was made.

4.1.10 Fuel Tank Label

The fuel tank label is molded on the side of the fuel tank. To read this label, unscrew the fuel tank access panel nuts located at the left in the condenser compartment.

4.1.11 Vehicle Identification Number (VIN)

The seventeen digit vehicle identification number (VIN) is located on a plate (Fig. 11 & 12) located on the windshield frame pillar (driver's side). The VIN is visible from the outside of the coach. Make sure the correct vehicle identification number is given when ordering replacement parts. Using the VIN when ordering parts will facilitate processing.

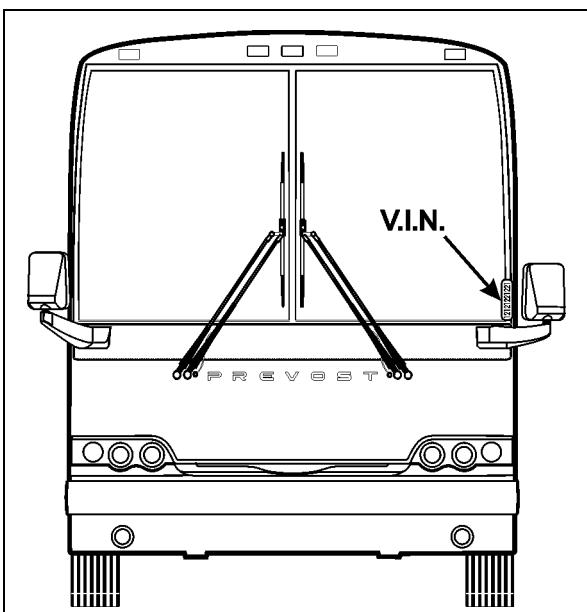


FIGURE 11 : VEHICLE I.D.

00048

NOTE

Record the VIN in the coach documentation and keep with company records. The VIN will normally be used for vehicle registration and for obtaining vehicle insurance coverage.

Section 00: GENERAL INFORMATION

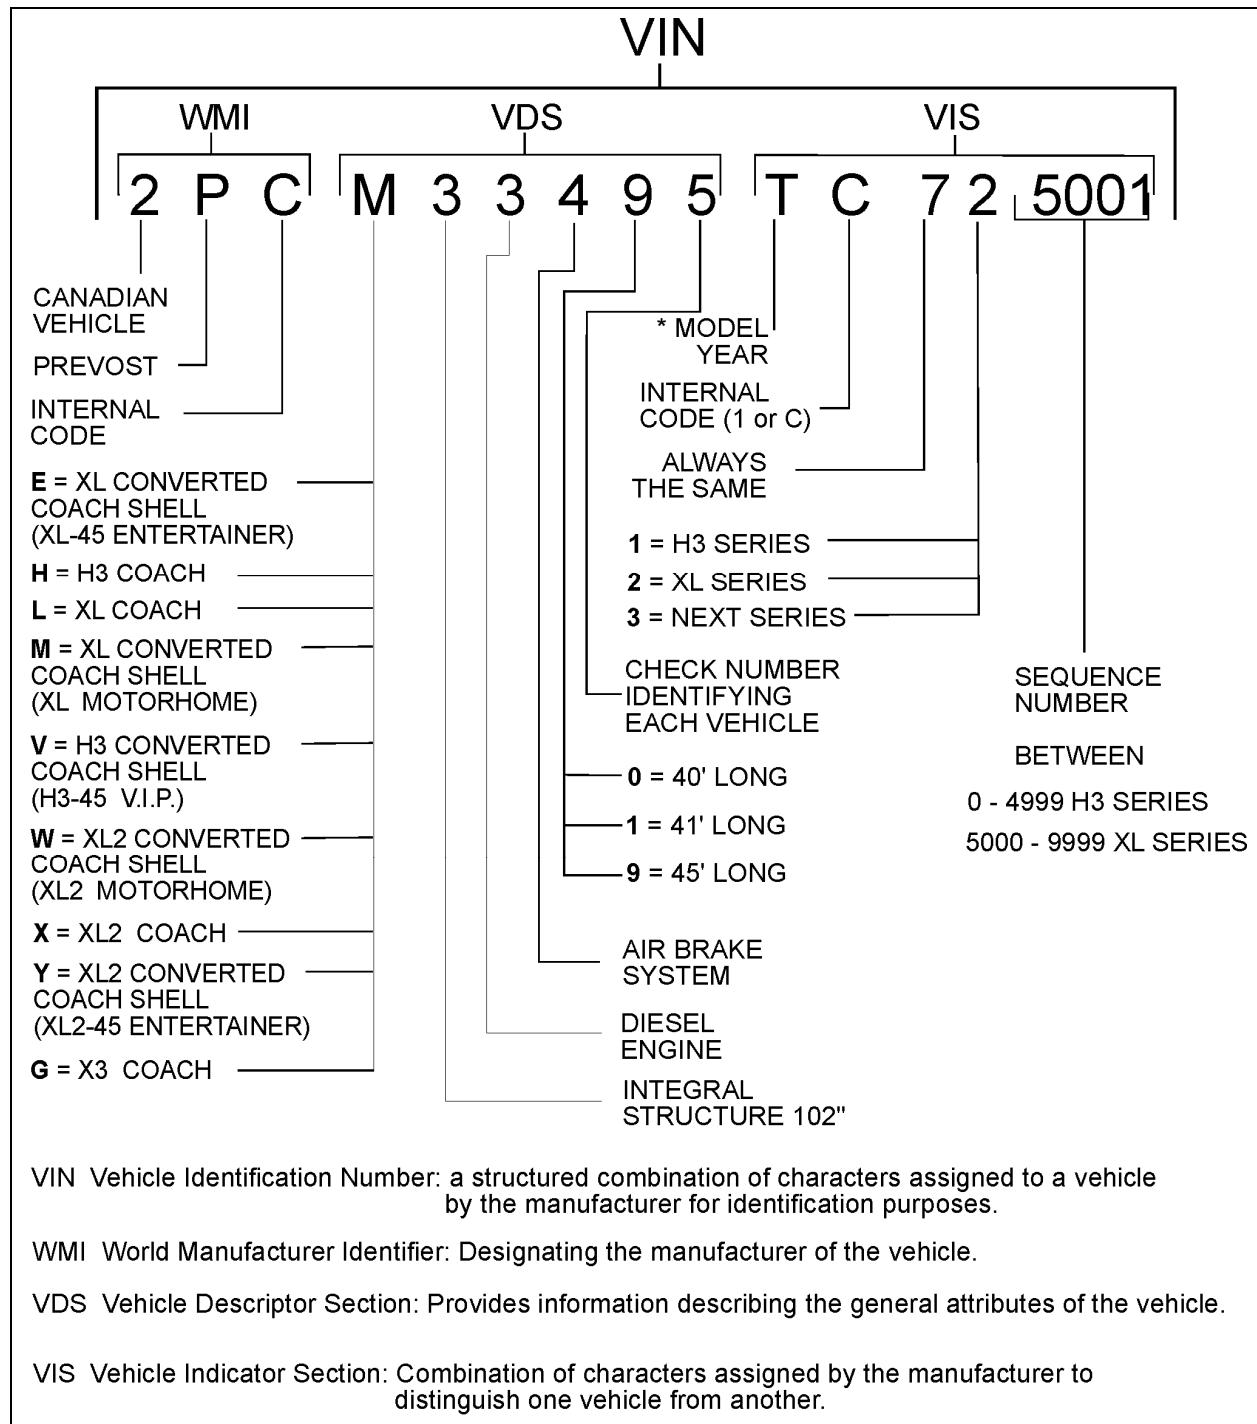


FIGURE 12 : VEHICLE IDENTIFICATION NUMBER

00050

YEAR	CODE	YEAR	CODE
2000	Y	2006	6
2001	1	2007	7
2002	2	2008	8
2003	3	2009	9
2004	4	2010	A
2005	5	2011	B

5. FASTENER STRENGTH IDENTIFICATION

Most commonly used metric fastener strength property classes are 9.8 and 10.9 with the class identification embossed on the head of each bolt. Customary (inch) strength classes range from grade 2 to 8 with radial line identification embossed on each bolt head actual grade (i.e., a grade 7 bolt will have 5 embossed radial lines on the bolt head). Some metric nuts will be marked with single digit strength identification numbers on the nut face. Fig. 14 shows the different strength markings. When replacing

metric fasteners, be careful to use fasteners of the same or greater strength than the original fasteners (the same number marking or higher). It is also important to select replacement fasteners of the correct size. Correct replacement fasteners are available through the parts division. Some metric fasteners available in after-market parts sources were designed to metric standards of countries other than the United States and may be of a lower strength, may not have the numbered head marking system, and may be of a different thread pitch.

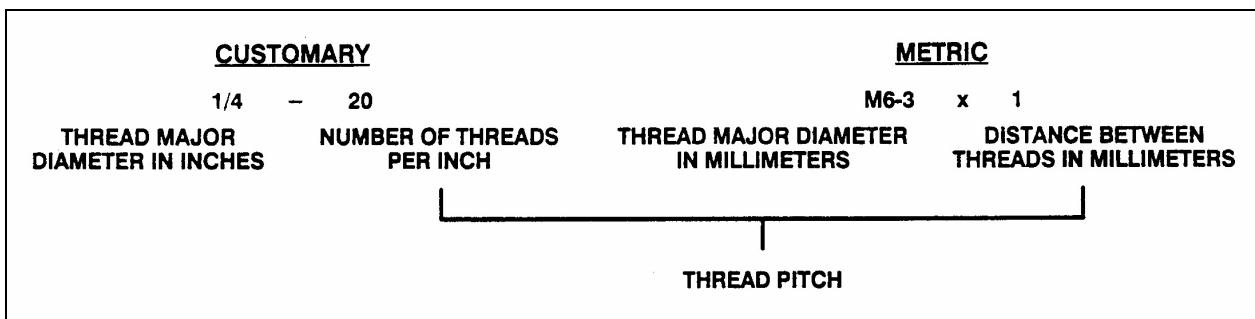


FIGURE 13 : THREAD NOTATION

00002

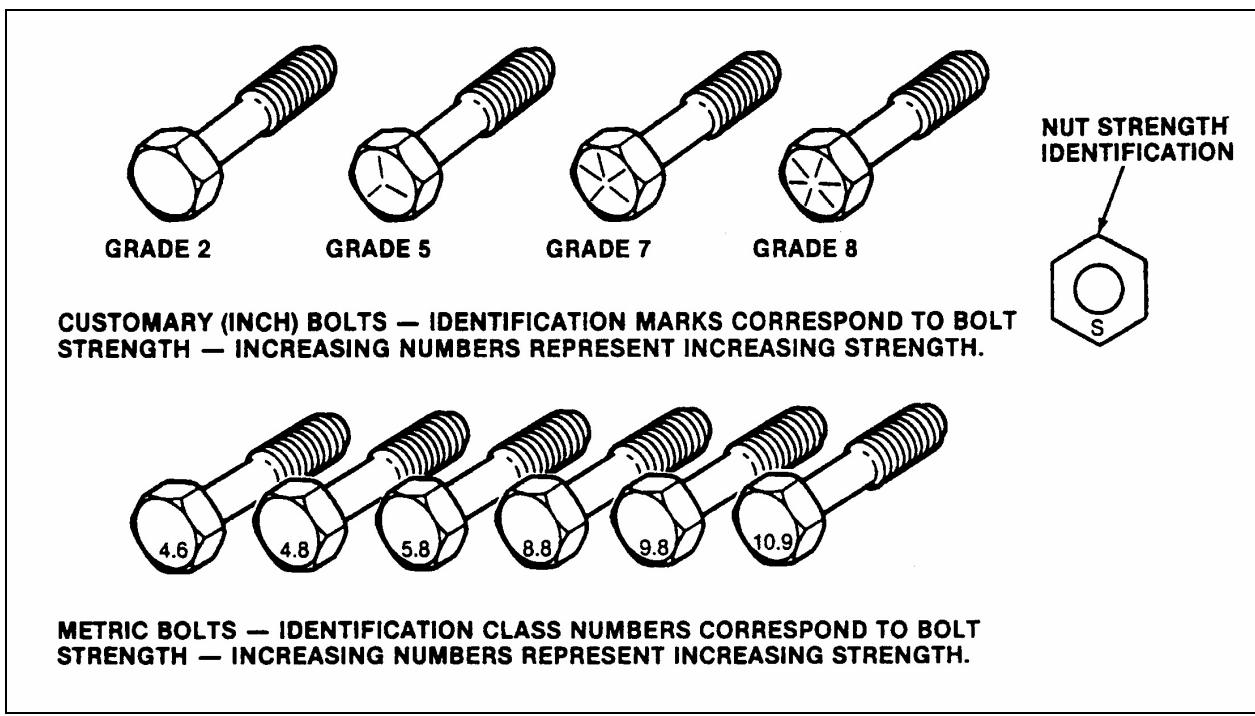


FIGURE 14: BOLT STRENGTH MARKINGS

00003

The metric fasteners used on the coach are designed to new standards and may not yet be manufactured by some non-domestic fastener suppliers. In general, except for special applications, the common sizes and pitches are:

- M 8 X 1.25;
 - M 10 X 1.5;
 - M 12 X 1.75;
 - M 14 X 2;

Section 00: GENERAL INFORMATION

5.1 SELF-LOCKING FASTENERS

A self-locking fastener is designed with an interference fit between the nut and bolt threads. This is most often accomplished by distortion of the top thread of an all-metal nut or bolt or by using a nylon patch on the threads. A nylon insert or the use of adhesives may also be used as a method of interference between nut and bolt threads (Fig. 15).

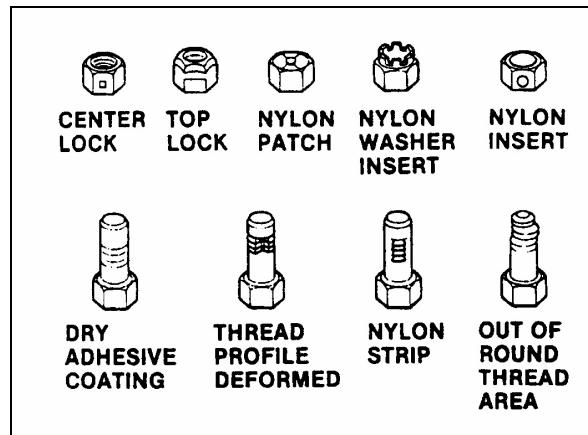


FIGURE 15 : SELF-LOCKING FASTENERS

00004

5.2 RECOMMENDATIONS FOR REUSE

Clean, unrusty self-locking fasteners may be reused as follows:

- Clean dirt and other foreign matter from the fastener;
- Inspect the fastener to ensure there is no crack, elongation, or other sign of fatigue or overtightening. If there is any doubt, replace with a new self-locking fastener of equal or greater strength;
- Assemble parts and hand start fastener;
- Observe that, before the fastener seats, it develops torque per the chart in table two. If there is any doubt, replace with a new self-locking fastener of equal or greater strength;
- Tighten the fastener to the torque specified in the applicable section of this manual;

Fasteners which are rusty or damaged should be replaced with new ones of equal or greater strength.

SELF-LOCKING FASTENER TORQUE CHART

METRIC		6 & 6.3	8	10	12	14	16	20
NUTS AND ALL-METAL BOLTS	Nm	0.4	0.8	1.4	2.2	3.0	4.2	7.0
	Lbf-in	4.0	7.0	12	18	25	35	57
ADHESIVE OR NYLON COATED BOLTS	Nm	0.4	0.6	1.2	1.6	2.4	3.4	5.6
	Lbf-in	4.0	5.0	10	14	20	28	46
US STANDARD		1/4	5/16	3/8	7/16	1/2	9/16	5/8
NUTS AND ALL-METAL BOLTS	Nm	0.4	0.6	1.4	1.8	2.4	3.2	4.2
	Lbf-in	4.0	5.0	12	15	20	27	51
ADHESIVE OR NYLON COATED BOLTS	Nm	0.4	0.6	1.0	1.4	1.8	2.6	3.4
	Lbf-in	4.0	5.0	9.0	12	15	22	43

5.3 SIX LOBED SOCKET HEAD

Six lobed socket head (Torx) fasteners are used in some applications on vehicles covered in this manual. The tools designed for these fasteners are available commercially. However, in some cases, if the correct tool is not available, a hex socket head wrench may be used.

Multiply	by	to get equivalent number of:	Multiply	by	to get equivalent number of:
Inch	25.4	millimeters (mm)	Foot/sec ²	0.305	meter/sec ² (m/s ²)
Foot	0.305	meters (m)	Inch/sec ²	0.026	meter/sec ²
Yard	0.914	meters			
Mile	1.609	kilometers (km)			
Inch ²	645.2	millimeters ² (mm ²)	Pound-inch	0.113	newton-meters (N·m)
Foot ²	6.45	centimeters ² (cm ²)	Pound-foot	1.35	newton-meters
Yard ²	0.093	meters ² (m ²)			
	0.836	meters ²			
Inch ³	16	mm ³	POWER	0.746	kilowatts (kW)
	387.0	cm ³			
	16,387	liters (l)			
	0.016	liters			
Quart	0.946	liters			
Gallon	3.785	liters			
Yard ³	0.765	meters ³ (m ³)			
VOLUME			PRESSURE OR STRESS		
Inch ³		inches of water	kilopascals (kPa)		
		Pounds/sq. in.	6.895		
			0.249		
MASS		ENERGY OR WORK			
Pound	0.453	BTU	1 055.0	loules (J)	
Ton	907.18	Foot-pound	1,356	loules	
Ton	0.907	kilowatt-hour	3 600 000.0	loules (J = one W's)	
			or 3.6 x 10 ⁶		
FORCE		LIGHT			
Kilogram	9.807	newtons (N)	1.076	lumens/meter ² (lm/m ²)	
Ounce	0.278	newtons			
Pound	4.448	newtons			
TEMPERATURE		VELOCITY			
Degree Fahrenheit	($\frac{t}{10} - 32$) \div 1.8	Degree Celsius (C)	Miles/hour	1.609	kilometers/hr (km/h)
°F	-40	32	20	40	60
	0	40	40	60	80
	20	80	120	160	200
	40	98.6	120	160	212
	60		140	180	
	80		160	200	
	100		180	220	
	120		200	240	
	140		220	260	
	160		240	280	
	180		260	300	
	200		280	320	
	212		300	340	
	240		320	360	
	260		340	380	
	280		360	400	
	300		380	420	
	320		400	440	
	340		420	460	
	360		440	480	
	380		460	500	
	400		480	520	
	420		500	540	
	440		520	560	
	460		540	580	
	480		560	600	
	500		580	620	
	520		600	640	
	540		620	660	
	560		640	680	
	580		660	700	
	600		680	720	
	620		700	740	
	640		720	760	
	660		740	780	
	680		760	800	
	700		780	820	
	720		800	840	
	740		820	860	
	760		840	880	
	780		860	900	
	800		880	920	
	820		900	940	
	840		920	960	
	860		940	980	
	880		960	1000	
	900		980	1020	
	920		1000	1040	
	940		1020	1060	
	960		1040	1080	
	980		1060	1100	
	1000		1080	1120	
	1020		1100	1140	
	1040		1120	1160	
	1060		1140	1180	
	1080		1160	1200	
	1100		1180	1220	
	1120		1200	1240	
	1140		1220	1260	
	1160		1240	1280	
	1180		1260	1300	
	1200		1280	1320	
	1220		1300	1340	
	1240		1320	1360	
	1260		1340	1380	
	1280		1360	1400	
	1300		1380	1420	
	1320		1400	1440	
	1340		1420	1460	
	1360		1440	1480	
	1380		1460	1500	
	1400		1480	1520	
	1420		1500	1540	
	1440		1520	1560	
	1460		1540	1580	
	1480		1560	1600	
	1500		1580	1620	
	1520		1600	1640	
	1540		1620	1660	
	1560		1640	1680	
	1580		1660	1700	
	1600		1680	1720	
	1620		1700	1740	
	1640		1720	1760	
	1660		1740	1780	
	1680		1760	1800	
	1700		1780	1820	
	1720		1800	1840	
	1740		1820	1860	
	1760		1840	1880	
	1780		1860	1900	
	1800		1880	1920	
	1820		1900	1940	
	1840		1920	1960	
	1860		1940	1980	
	1880		1960	2000	
	1900		1980	2020	
	1920		2000	2040	
	1940		2020	2060	
	1960		2040	2080	
	1980		2060	2100	
	2000		2080	2120	
	2020		2100	2140	
	2040		2120	2160	
	2060		2140	2180	
	2080		2160	2200	
	2100		2180	2220	
	2120		2200	2240	
	2140		2220	2260	
	2160		2240	2280	
	2180		2260	2300	
	2200		2280	2320	
	2220		2300	2340	
	2240		2320	2360	
	2260		2340	2380	
	2280		2360	2400	
	2300		2380	2420	
	2320		2400	2440	
	2340		2420	2460	
	2360		2440	2480	
	2380		2460	2500	
	2400		2480	2520	
	2420		2500	2540	
	2440		2520	2560	
	2460		2540	2580	
	2480		2560	2600	
	2500		2580	2620	
	2520		2600	2640	
	2540		2620	2660	
	2560		2640	2680	
	2580		2660	2700	
	2600		2680	2720	
	2620		2700	2740	
	2640		2720	2760	
	2660		2740	2780	
	2680		2760	2800	
	2700		2780	2820	
	2720		2800	2840	
	2740		2820	2860	
	2760		2840	2880	
	2780		2860	2900	
	2800		2880	2920	
	2820		2900	2940	
	2840		2920	2960	
	2860		2940	2980	
	2880		2960	3000	
	2900		2980	3020	
	2920		3000	3040	
	2940		3020	3060	
	2960		3040	3080	
	2980		3060	3100	
	3000		3080	3120	
	3020		3100	3140	
	3040		3120	3160	
	3060		3140	3180	
	3080		3160	3200	
	3100		3180	3220	
	3120		3200	3240	
	3140		3220	3260	
	3160		3240	3280	
	3180		3260	3300	
	3200		3280	3320	
	3220		3300	3340	
	3240		3320	3360	
	3260		3340	3380	
	3280		3360	3400	
	3300		3380	3420	
	3320		3400	3440	
	3340		3420	3460	
	3360		3440	3480	
	3380		3460	3500	
	3400		3480	3520	
	3420		3500	3540	
	3440		3520	3560	
	3460		3540	3580	
	3480		3560	3600	
	3500		3580	3620	
	3520		3600	3640	
	3540		3620	3660	
	3560		3640	3680	
	3580		3660	3700	
	3600		3680	3720	
	3620		3700	3740	
	3640		3720	3760	
	3660		3740	3780	
	3680		3760	3800	
	3700		3780	3820	
	3720		3800	3840	
	3740		3820	3860	
	3760		3840	3880	
	3780		3860	3900	
	3800		3880	3920	
	3820		3900	3940	
	3840		3920	3960	
	3860		3940	3980	
	3880		3960	4000	
	3900		3980	4020	
	3920		4000	4040	
	3940		4020	4060	
	3960		4040	4080	
	3980		4060	4100	
	4000		4080	4120	
	4020		4100	4140	
	4040		4120	4160	
	4060		4140	4180	
	4080		4160	4200	
	4100		4180	4220	
	4120		4200	4240	
	4140		4220	4260	
	4160		4240	4280	
	4180		4260	4300	
	4200		4280	4320	
	4220		4300	4340	
	4240		4320	4360	
	4260		4340	4380	
	4280		4360	4400	
	4300		4380	4420	
	4320	</			

DECIMAL AND METRIC EQUIVALENTS

FRACTIONS	DECIMAL IN.	METRIC MM	FRACTIONS	DECIMAL IN.	METRIC MM
1/64	.015625	.39688	33/64	.515625	13.09687
1/32	.03125	.79375	17/32	.53125	13.49375
3/64	.046875	1.19062	35/64	.546875	13.89062
1/16	.0625	1.58750	9/16	.5625	14.28750
5/64	.078125	1.98437	37/64	.578125	14.68437
3/32	.09375	2.38125	19/32	.59375	15.08125
7/64	.109375	2.77812	39/64	.609375	15.47812
1/8	.125	3.1750	5/8	.625	15.87500
9/64	.140625	3.57187	41/64	.640625	16.27187
5/32	.15625	3.96875	21/32	.65625	16.66875
11/64	.171875	4.36562	43/64	.671875	17.06562
3/16	.1875	4.76250	11/16	.6875	17.46250
13/64	.203125	5.15937	45/64	.703125	17.85937
7/32	.21875	5.55625	23/32	.71875	18.25625
15/64	.234375	5.95312	47/64	.734375	18.65312
1/4	.250	6.35000	3/4	.750	19.05000
17/64	.265625	6.74687	49/64	.765625	19.44687
9/32	.28125	7.14375	25/32	.78125	19.84375
19/64	.296875	7.54062	51/64	.796875	20.24062
5/16	.3125	7.93750	13/16	.8125	20.63750
21/64	.328125	8.33437	53/64	.828125	21.03437
11/32	.34375	8.73125	27/32	.84375	21.43125
23/64	.359375	9.12812	55/64	.859375	21.82812
3/8	.375	9.52500	7/8	.875	22.22500
25/64	.390625	9.92187	57/64	.890625	22.62187
13/32	.40625	10.31875	29/32	.90625	23.01875
27/64	.421875	10.71562	59/64	.921875	23.41562
7/16	.4375	11.11250	15/16	.9375	23.81250
29/64	.453125	11.50937	61/64	.953125	24.20937
15/32	.46875	11.90625	31/32	.96875	24.60625
31/64	.484375	12.30312	63/64	.984375	25.00312
1/2	.500	12.70000	1	1.00	25.40000


FIGURE 17: CONVERSION CHART

00006


**MULTIPLEX MODULES DISCONNECTION PROCEDURE PRIOR TO
WELDING****PROCEDURE NO: PR060034****REVISION 4
2007-05-31****Material :** N/A**Equipment(s) :**
Phillips-head screwdriver
Ratchet handle
3/8" socket
Electric tape
Long nose pliers**Reference schematics:** N/A**Safety rules :**
- Wear safety goggles
- Set the battery master switch to the OFF position first**Recommendations:** **This procedure should be performed by qualified personnel only.**

	Effective
Revision 0 : Issued with multiplex	
Revision 1 : Modified for Fire Protection System and also for VIP with multiplex	
Revision 2 : Step 5 modified for introduction of VIP with multiplex	-0436
Revision 3 : Step 1.15 added C397 Addition of SECTION 2 for X3 Coaches Addition of SECTION 3 for XLII MTH	
Revision 4 : Modified for introduction of CPC module for VIP,H3 Coach, X3	7-0942VIP 8-1037 H3 8-9282 X3

SECTION 1 H3 Coaches & VIP

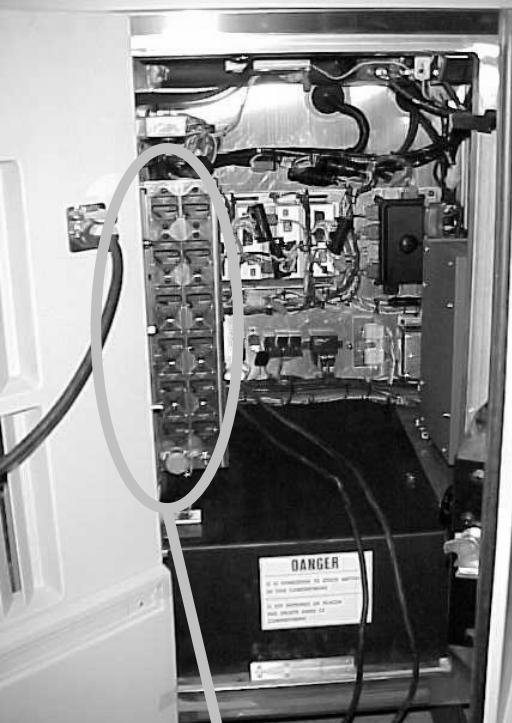1.00	<p>Location: Main power compartment and dashboard</p> <p>Set the battery master switch to the OFF position.</p> <p>Place the ignition switch to the OFF position.</p>	 
1.05	<p>Location: Main power compartment</p> <p>Trip circuit breakers CB2, CB4, CB6</p>	

1.10	<p>Location: Main power compartment</p> <p>Remove the protective cover</p> <p>Disconnect the electronic ground terminals from the stud</p> <p>Using electric tape, insulate the 2 largest gage wires. Make sure the ring terminals do not touch each others and the vehicle body.</p> <p>NOTE</p> <p><i>With disconnection of the electronic ground terminals, disconnecting the engine ECM, transmission TCM and the dashboard electronic components (telltale module, HVAC module, radio, control head, ...) is not required.</i></p>	<p>The table contains three images illustrating the procedure:</p> <ul style="list-style-type: none">The top image shows a white protective cover being removed from a metal component.The middle image shows two black arrows pointing to two electrical terminals on a metal plate, with the text "This 12-volt terminal remains energized" above them.The bottom image shows a close-up of a metal plate with several electrical terminals, with a black arrow pointing to one of the terminals.
------	---	---

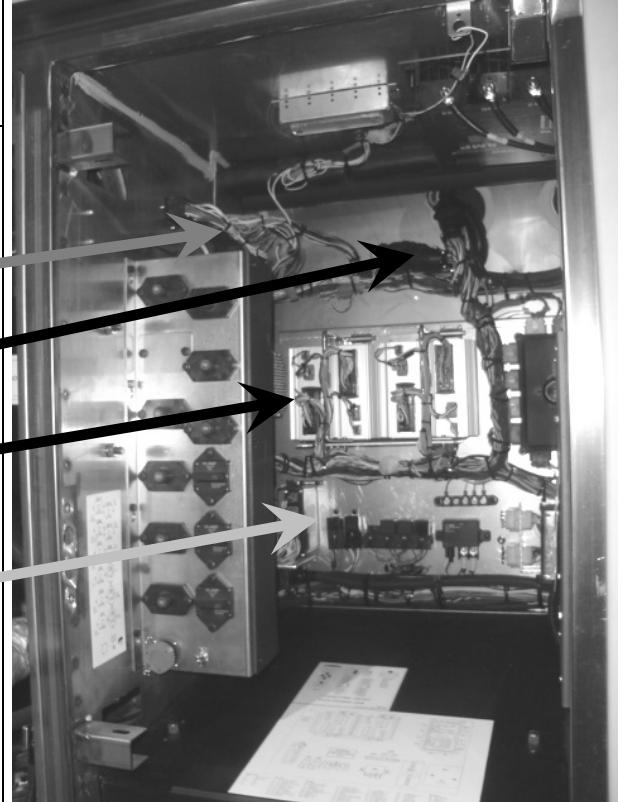1.15	Location: Main power compartment Disconnect the electronic modules :	 <p>Disconnect the I/O A and I/O B modules</p> <p>Disconnect C397</p> <p>Disconnect connector C717</p> <p>Unplug 3 connectors per I/O B modules</p> <p>Unplug 3 connectors on the I/O A module</p>
1.20	Location: Front electrical compartment VIP + COACH: Disconnect the I/O A, I/O B, ABS, master ID, CECM and CPC modules. Unplug connector C92	 <p>VIP: Disconnect all keyless module connectors.</p> <p>Unplug 3 connectors per I/O B modules and 3 connectors per I/O A modules.</p>  <p>Unplug 2 connectors from the ABS module</p>


Unplug 1 connector from the master ID




Disconnect CPC connectors




Unplug 3 connectors from the CECM

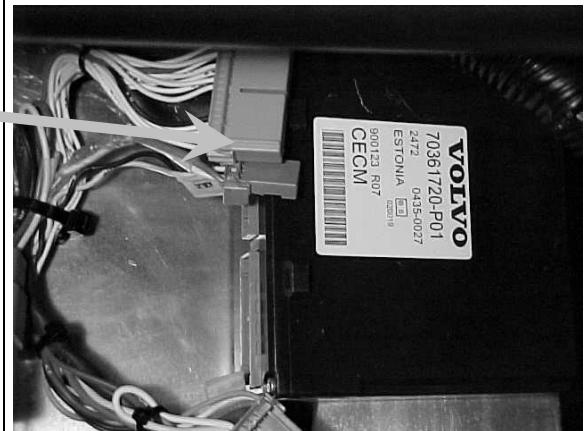

Unplug connector C92

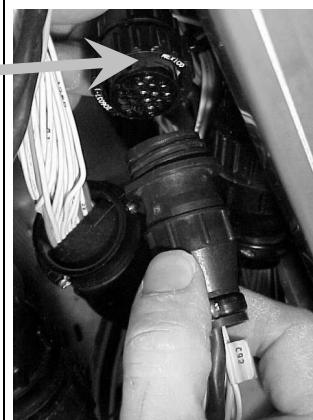


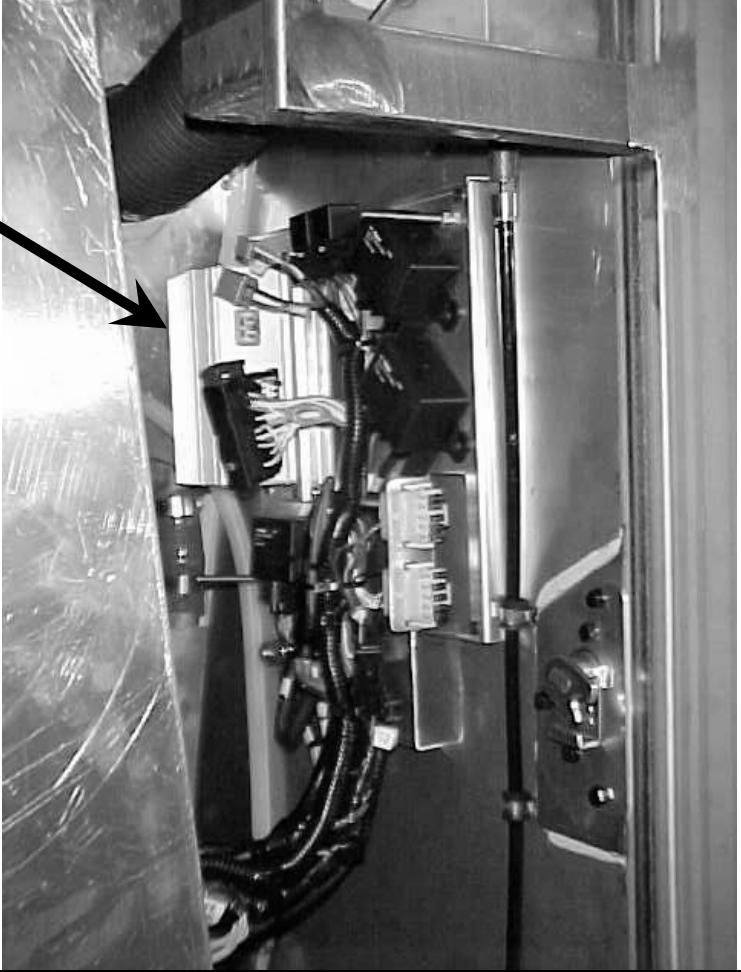
1.25	Location: pneumatic accessory panel inside right console Remove the access panel on the right console (R.H. side of dashboard) Disconnect both I/O B modules	
1.30	Location: Evaporator compartment Remove the protective cover and disconnect the I/O B module	


PROCEDURE NO: PR060034




REVISION 4



1.40	Kidde Automatic Fire Detection and Suppression System (optional) Disconnect C466 Kidde AFSS module is located on the lateral control panel.	
1.45	When all the previous steps are done, you can do welding on the vehicle	ENSURE THAT THE WELDING GROUND RETURN CLAMP IS WELL SECURED AND MAKES A GOOD ELECTRICAL CONTACT WITH A LARGE METALLIC AREA OF THE CHASSIS LOCATED NEAR THE WELDING POINT AS MUCH AS POSSIBLE.
1.50	When welding is completed, reconnect all the modules. Make sure that the connectors locking tab are well engaged	BE CAREFUL TO MAKE THE PROPER CONNECTIONS, IF NOT, SOME SYSTEMS OR COMPONENTS MAY NOT BE USABLE

SECTION 2 X3 Coaches

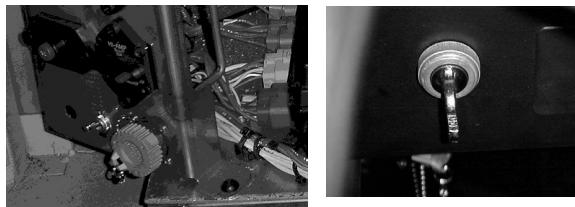
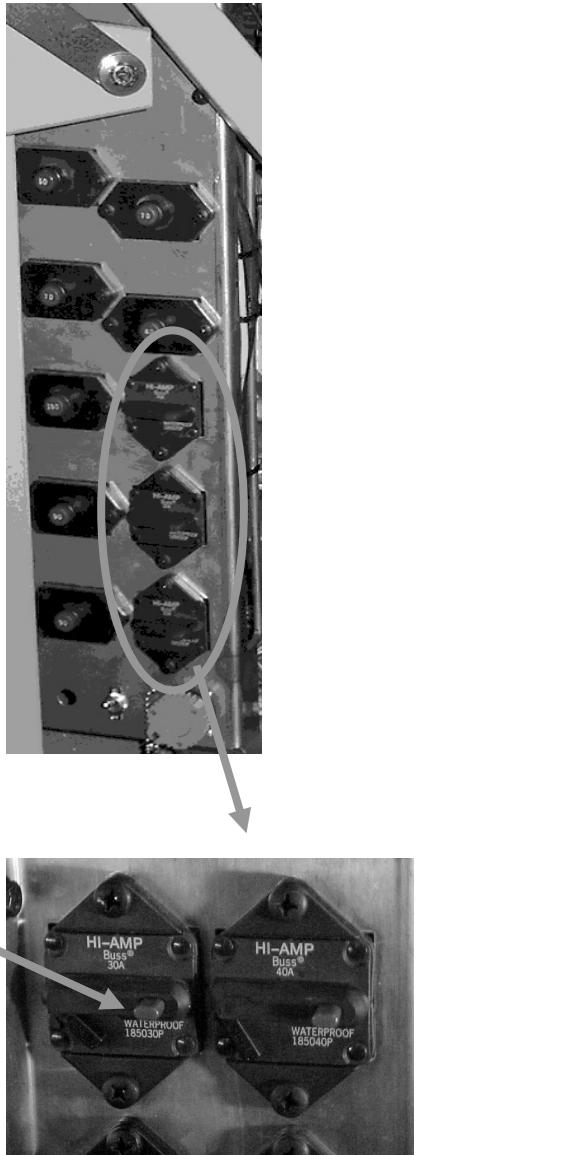
2.00	<p>Location: Rear electrical compartment and dashboard</p> <p>Set the battery master switch to the OFF position.</p> <p>Place the ignition switch to the OFF position.</p>	
2.05	<p>Location: Rear electrical compartment</p> <p>Trip circuit breakers CB2-CB4-CB6 located on rear junction panel</p> <p>Push the red button in to open the circuit</p>	



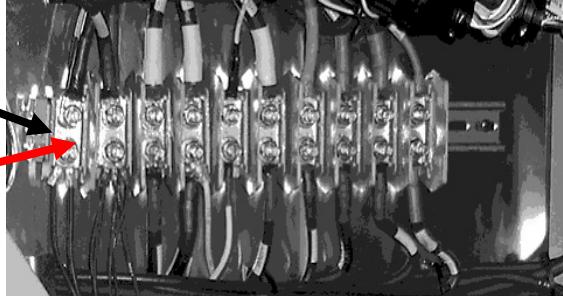
2.10	<p>Location: Rear electrical compartment</p> <p>Disconnect the electronic ground terminals from this stud</p> <p>Warning: The remaining terminals may still be energized</p> <p>Use electric tape; make sure that cables do not touch each others and the vehicle body.</p> <p><i>NOTE</i></p> <p><i>With disconnection of the electronic ground terminals, disconnecting the engine ECM, transmission TCM and the dashboard electronic components (telltale module, HVAC module, radio, control head, ...) is not required.</i></p>	
2.15	<p>Location: Rear electrical compartment</p> <p>Disconnect the electronic modules:</p> <p>Disconnect all I/O A and I/O B modules</p> <p>Disconnect C397 and C717</p> <p>Disconnect 3 connectors from each I/O B module</p> <p>Disconnect 3 connectors from each I/O A module</p>	

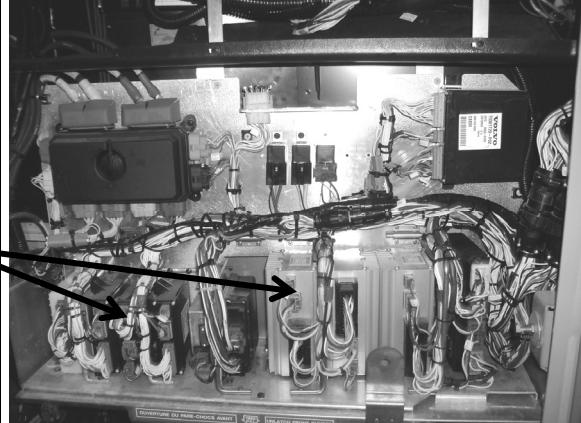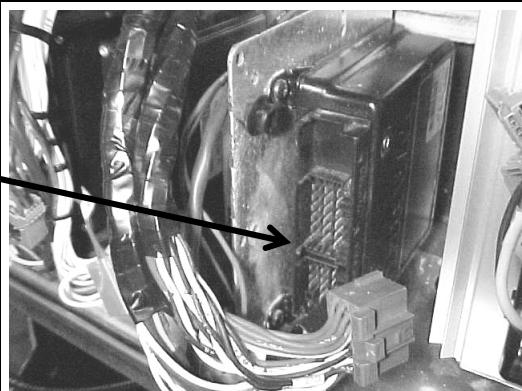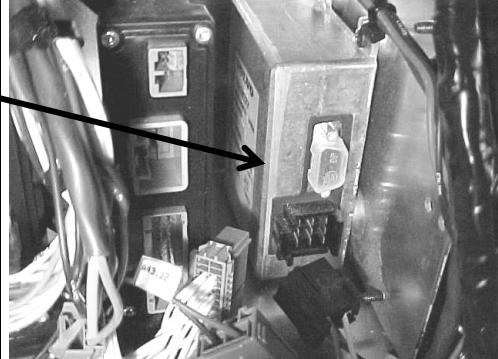2.20	<p>Location: front electrical compartment</p> <p>Disconnect I/O A, I/O B, ABS, master ID, CECM and CPC modules and also disconnect connector C92</p> <p>Disconnect the 3 connectors from the I/O B and I/O A modules</p>	 A photograph of the front electrical compartment showing various electronic modules and wiring. Two arrows point to specific connectors on the left side of the compartment.
	<p>Disconnect the 2 connectors from the ABS module</p>	 A close-up photograph of the ABS module within the front electrical compartment. Two arrows point to the two connectors that need to be disconnected.
	<p>Disconnect CPC connectors</p>	 A photograph of the front electrical compartment focusing on the CPC connectors. An arrow points to the group of connectors that need to be disconnected.
	<p>Disconnect connector from master ID</p>	 A photograph of the front electrical compartment focusing on the master ID connector. An arrow points directly to the connector that needs to be disconnected.

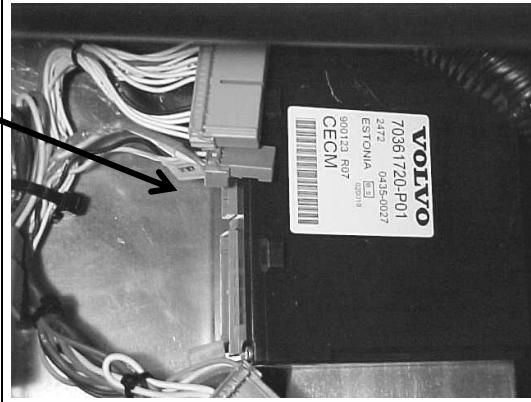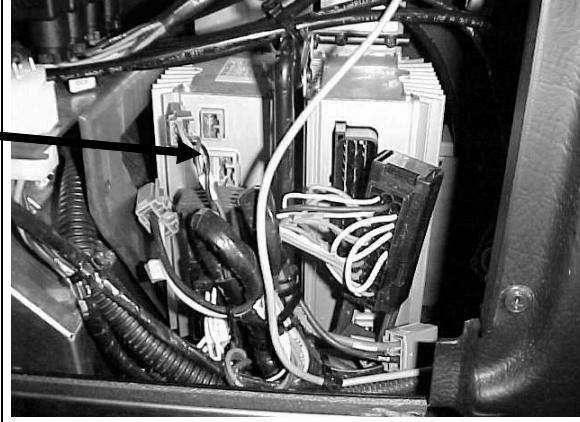	<p>Disconnect the 3 connectors from CECM</p> 	
	<p>Disconnect connector C92</p> 	
2.25	<p>Location: Entrance door & wiper control panel</p> <p>Remove windshield wiper motor access panel and disconnect both I/O B modules</p> 	
2.30	<p>When all the previous steps are done, you can do welding on the vehicle</p>	<p>ENSURE THAT THE WELDING GROUND RETURN CLAMP IS WELL SECURED AND MAKES A GOOD ELECTRICAL CONTACT WITH A LARGE METALLIC AREA OF THE CHASSIS LOCATED NEAR THE WELDING POINT AS MUCH AS POSSIBLE</p>
2.40	<p>When welding is completed, reconnect all the modules. Make sure that the connectors locking tab are well engaged!</p>	<p>BE CAREFUL TO MAKE THE PROPER CONNECTIONS, IF NOT, SOME SYSTEMS OR COMPONENTS MAY NOT BE USABLE</p>




SECTION 3 XLII MTH

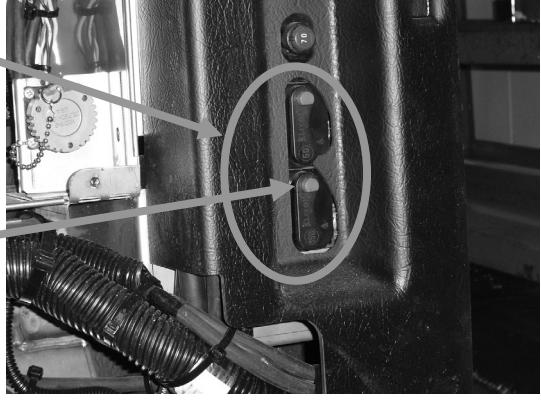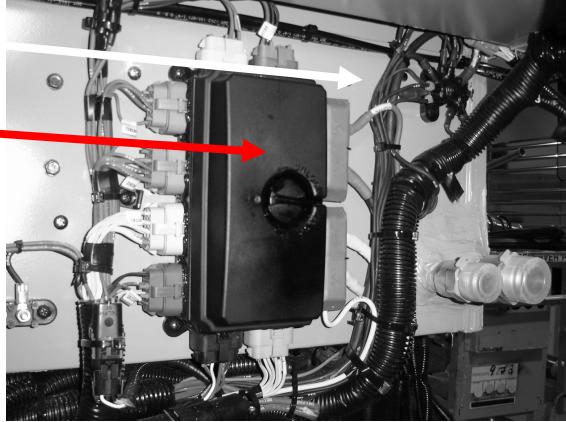2.00	<p>Location: Dashboard</p> <p>Place the ignition switch to the OFF position.</p>	
2.05	<p>Location: Engine compartment R. H. side area</p> <p>Trip circuit breakers CB1-CB2 located on circuit breaker panel.</p> <p>Push the blue button in to open the circuit</p>	
2.10	<p>Location: Rear Junction Box</p> <p>Disconnect the electronic ground terminals from this stud.</p> <p>Warning: The remaining terminals may still be energized.</p> <p>Use electric tape; make sure that cables do not touch each others and the vehicle body.</p> <p><i>NOTE</i></p> <p><i>With disconnection of the electronic ground terminals, disconnecting the engine ECM, transmission TCM and the dashboard electronic components (telltale module, HVAC module, radio, control head, ...) is not required.</i></p>	

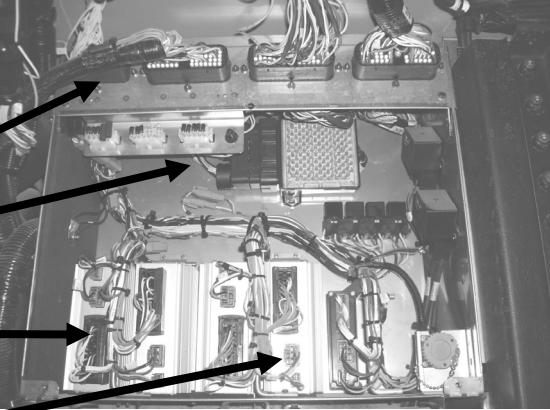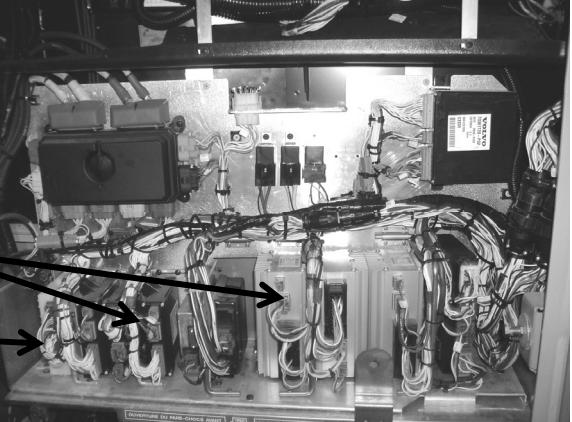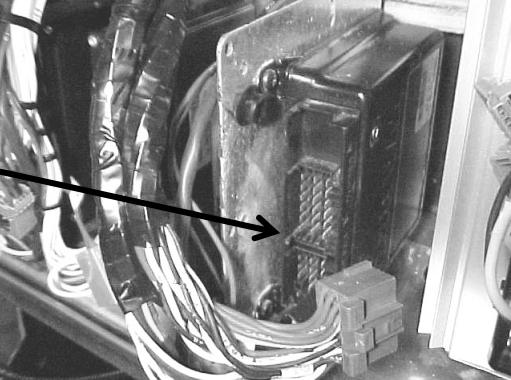2.15	<p>Location: Rear Junction Box</p> <p>Disconnect the electronic modules:</p> <p>Disconnect all I/O A and I/O B modules</p> <p>Disconnect C397</p> <p>Disconnect transmission module (A1)</p> <p>Disconnect 3 connectors from each I/O B</p> <p>Disconnect 3 connectors from each I/O A</p>	
2.20	<p>Location: Front Electrical Compartment</p> <p>Disconnect I/O A, I/O B, ABS, master ID, CECM, CPC, keyless modules and also disconnect connector C92.</p> <p>Disconnect 3 connectors from the I/O B and I/O A modules</p> <p>Disconnect connectors from Keyless module</p> <p>Disconnect 2 connectors from ABS module</p>	 

PROCEDURE NO: PR060034


REVISION 4

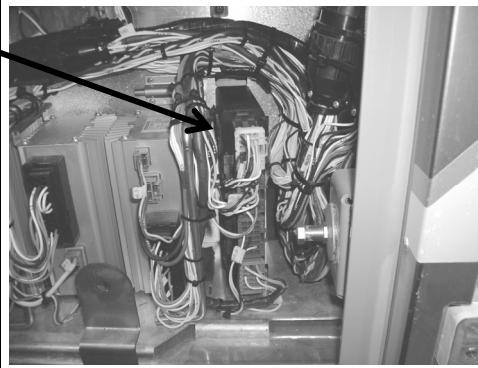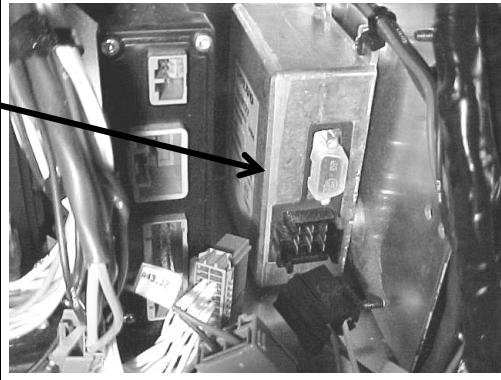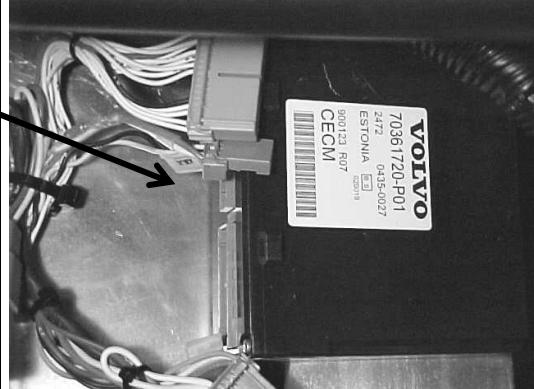	<p>Disconnect connectors from CPC</p> 
	<p>Disconnect connector from master ID</p> 
	<p>Disconnect 3 connectors from CECM</p> 
	<p>Disconnect connector C92</p> 

Location: Wiper Control Panel

Remove windshield wiper motor access panel

And disconnect I/O B modules

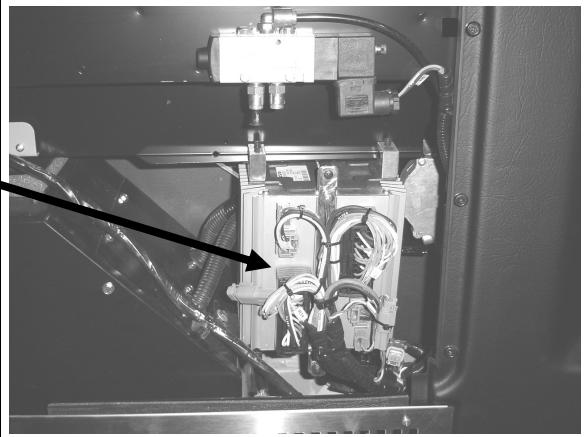

2.30	When all the previous steps are done, you can do welding on the vehicle	ENSURE THAT THE WELDING GROUND RETURN CLAMP IS WELL SECURED AND MAKES A GOOD ELECTRICAL CONTACT WITH A LARGE METALLIC AREA OF THE CHASSIS LOCATED NEAR THE WELDING POINT AS MUCH AS POSSIBLE
2.35	When welding is completed, reconnect all the modules. Make sure that the connectors locking tab are well engaged!	BE CAREFUL TO MAKE THE PROPER CONNECTIONS, IF NOT, SOME SYSTEMS OR COMPONENTS MAY NOT BE USABLE

