

# RELAYS LIST

No	Location	Part #	Function	Page				
R1	RJB	560843	MasterRelay	3.1				
R3	RJB	563348	12vIgn/Acc	3.1				
R12	Evap_cmpt.	563348	EvaporatorRelay	18.2				
R13	WCLPump	563332	WCLUpperDoorLOCK	36.1				
R14	WCLPump	563332	WCLUpperDoorLOCK	36.1				
R15	RJB	564350	BATT DISCONNECT	1.1				
R16	RJB	564350	BATT DISCONNECT	1.1				
R20	Evap_Cmpt	563332	Wat.Pump	18.2				
R21	FJB	560493	24vRelayLatching	3.2				
R22	FJB_VECF	563269	Eculgn	4.1				
R23	FJB_VECF	563269	Shutdown	4.1				
R24	FJB_VECF	563269	Spare12WUP	4.1				
R25	FJB_VECF	563269	24VIgn	4.2				
R26	Evap_Cmpt	563332	Pre-Heat	18.2				
R27	RHConsole	563332	Wipers	34.1				
R28	RJB	563348	ENGINE RUN	40.2				
R29	RJB	563348	Preheater	14.1				
R30	FJB	563332	12vENGRUN	4.1				
R31	FJB	563332	12vIGN	4.1				
R34	RJB	564218	12vEngEcu	3.2				
R36	FJB	563269	Fire_Extin	9.1				
R37	FJB	563269	Electhorn	9.1				
R44	Parcel_Rack_LH	563332	IVN/MOTOROLAAUDIO+RELAY	35.8				
R45	Parcel_Rack_LH	563332	IVN/MOTOROLAAUDIO-RELAY	35.8				
R47	WCLPump	563332	WCLDoorOpen	36.1				
R50	FJB	563332	StopRequest	22.2				
R51	Parcel_Rack_LH	563332	MOTOROLARELAY	35.8				
R52	Parcel_Rack_LH	563332	FAREBOXRELAY	35.8				
R55	FJB	563332	StairFanCtrl	18.2				
R57	Evap_Cmpt	563332	ProFuel	14.1				
R61	Parcel_Rack_VECPR	563269	*opt*	5.2				
R65	Parcel_Rack_LH	563269	12VWupRELAY	5.2				
R66	Parcel_Rack_LH	563269	12VDISMRELAY	5.2				
R210	Parcel_Rack_LH	560493	24vRelayLatching	5.2				
R_Starter	RJB	564095	StartCtrl	3.2				
RT34	FJB	563890	TimerOutsideDoorSw	29.1				