

# WIRING DIAGRAM PAGES LIST

| Information pages             |      | C                             |           | H                                  |          | S                             |           |
|-------------------------------|------|-------------------------------|-----------|------------------------------------|----------|-------------------------------|-----------|
| Multiplex output list         | B1   | Charging System               | 3.2       | Hazard                             | 26.1     | Service Brake Relay           | 12.1      |
| Multiplex input list          | B2   | Clearance lights rear & front | 26.1,26.2 | Head Lights                        | 26.1     | Slide out                     | 20.1      |
| Multiplex error messages list | B3   | Cluster                       | 10.1      | Horn                               | 9.1      | Spare Wires                   | 8.1       |
| Arrangement - Harness         | C1   | Cornering Lights (Optional)   | 26.3      | Hvac Defroster                     | 18.1     | Stop lights                   | 26.2      |
| Can Configuration             | C3   | Cruise control                | 14.1      | Hvac Passenger                     | 18.2     | Sun Visor                     | 30.1      |
| Glossary                      | D    | Converter interface           | 21.1      | Hvac Driver only                   | 18.3     | Steering Control ZF           | 37.1      |
| Circuit Number Listing        | E    |                               |           |                                    |          | Steering Wheel Control        | 32.1      |
| Circuit Breaker code          | F    | <b>D</b>                      |           | <b>J</b>                           |          |                               |           |
| Connectors code               | G    | Dash Lights                   | 19.1      | J1939 and 1587 Network             | 6.2      |                               |           |
| Diode Number Code             | H    | Differential lock             | 23.1      |                                    |          |                               |           |
| Resistors Number Code         | J    | Docking Lights                | 26.3      | <b>K</b>                           |          |                               |           |
| Fuses Code                    | L    | Driver's Light and Backlight  | 19.1      | Keyless keypad                     | 29.1     |                               |           |
| Relay Code                    | K    | Driver's Power Window         | 30.1      |                                    |          | <b>T</b>                      |           |
| Multiplex Output List         | B1   | Driver's seat                 | 17.1      | <b>L</b>                           |          | Tag                           | 28.1      |
| Multiplex Input List          | B2   |                               |           | Level low                          | 28.1     | Tail and Licence Lights       | 26.2      |
| Multiplex error Messages List | B3   | <b>E</b>                      |           | Luggage compt lighting             | 25.1     | Test Switch                   | 9.1       |
|                               |      | Engine brake and Retarder     | 12.1      | Luggage door Lock/Unlock           | 24.2     | Transmission ECU              | 15.1-15.2 |
|                               |      | Engine compt lighting         | 25.1      | Luggage door switches              | 24.1     | Trailer Package               | 26.4      |
|                               |      | Engine Start                  | 3.2       |                                    |          | Tire Pressure Monitoring Sys. | 33.1      |
|                               |      | Engine ECM                    | 14.1      | <b>M</b>                           |          |                               |           |
|                               |      | Engine Override               | 14.1      | Main Distribution Ignition & Batt. | 3.1      |                               |           |
| <b>A</b>                      |      | Entrance door                 | 29.1      | Main Distribution Wake-Up          | 3.3      |                               |           |
| Abs                           | 16.1 | Ether Switch                  | 13.1      | Marker Lights                      | 26.1,26. | <b>W</b>                      |           |
| Abs-Esp                       | 16.2 | Engine bloc heater            | 11.1      | Mirror Ramco                       | 22.1     | Window Ajar &Awning           | 27.1      |
|                               |      | Engine Volvo                  | 14.2      | Multiplexing Power                 | 7.1      | Wiper & Washer                | 31.1      |
| <b>B</b>                      |      |                               |           | Multiplexing Network               | 6.1      |                               |           |
| Back-up Camera                | 28.1 |                               |           |                                    |          |                               |           |
| Back-up lights and alarm      | 26.3 |                               |           | <b>P</b>                           |          |                               |           |
| Battery and Equalizer         | 1.1  | <b>F</b>                      |           | Park Brake Sensor                  | 12.1     |                               |           |
| Battery Charger               | 17.1 | Fast Idle                     | 14.1      | Trailer Brake Sensor               | 12.1     |                               |           |
| Brake Pedal Sensor            | 12.1 | Fire Alarm                    | 9.1       | Power Distribution FJB             | 4.1      |                               |           |
|                               |      | Flashers                      | 26.1,26.2 | Power Distribution RJB             | 5.1      |                               |           |
|                               |      | Fog lights                    | 26.3      | Power Outlet                       | 30.1     |                               |           |
|                               |      | Fuel Sender                   | 10.1      | Prime Pump                         | 13.1     |                               |           |
|                               |      | Fuel Prime Pump               | 13.1      | Prodriver                          | 11.1     |                               |           |
|                               |      | Fuel water Filter             | 13.1      | Pneumatic Cut-Out Acc sol          | 9.1      |                               |           |
|                               |      |                               |           |                                    |          |                               |           |
|                               |      | <b>G</b>                      |           | <b>R</b>                           |          |                               |           |
|                               |      | Grounds                       | 2.1       | Radiator Fan Clutch                | 13.1     |                               |           |
|                               |      |                               |           | Rear junction box door fan         | 11.1     |                               |           |
|                               |      |                               |           |                                    |          |                               |           |
|                               |      |                               |           |                                    |          |                               |           |
|                               |      |                               |           |                                    |          |                               |           |