

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
0	HVACpassengers	0SB	Cadec	402	Telematics_Gateway_Interface
0	GNDBatteries	0SB1	Cluster	403	Panic_Sw150
0A	12Voutlets	0SS	GNDStud	404	Panic_Sw150
00A	Entrancedoor	0SS1	VSS	900	Networks
00A1	Multiplexpower	0SS2	VSS	901	Networks
00A2	Indirectlights	0SS2W	Cadec		
0AItLL	GNDChassis	0SS3	VSS	A1.11	TransmissionAlisson
0AItR	GNDChassis	0SW	Indirectlights	A1.12	TransmissionAlisson
0B	GNDChassis	0SW1	Indirectlights	A1.15	TransmissionAlisson
0C	Ignition&enginestart	0TR-White	Trailerinterface	A1.16	TransmissionAlisson
0chgr	Preheat	00VA	RJBelectronicGND	A1.18	TransmissionAlisson
0COND	GND_condensor_fans	0W	GNDStud	A1.19	TransmissionAlisson
0ECU	EngineECUVolvo	4c	wcl_extra_switch	A1.24	TransmissionAlisson
0EV2	HVACpassengers	12Ecu	12VECU	A1.25	TransmissionAlisson
0EVAP1	HVACpassengers	12ISH	Pwrl_Shift	A1.31	TransmissionAlisson
0EVAP2	HVACpassengers	12VA	Batteries	A1.33	TransmissionAlisson
0F	GNDCustomer	12VD	Batteries	A1.36	TransmissionAlisson
00F	FJBelectronicGND	12VD1	12VD	A1.37	TransmissionAlisson
00F1	Multiplexpower	12VD4	UNICAN_power_option	A1.51	TransmissionAlisson
00F2	Multiplexpower	12VDG	Cadec	A1.52	TransmissionAlisson
00F3	Multiplexpower	12VDG1	Cadec	A1.54	TransmissionAlisson
00F6	Readinglamps&chime	12VDG1A	Cadec	A1.55	TransmissionAlisson
0FE	GNDstud	12VDG2	Cadec	A1.58	TransmissionAlisson
0FH	Wipers&washer	12VDG3	Cadec	A1.71	TransmissionAlisson
00FH	FJBelectronicGND	12VDG4	Cadec	A1.74	TransmissionAlisson
00FH1	HVACdefroster	12VIG	Cadec	A1.76	TransmissionAlisson
00FH2	Multiplexpower	12VIG1	Cadec	A1.77	TransmissionAlisson
00FR	FJB-RJBjunction	12VIG1A	Cadec	A2A.9	TransmissionAlisson
0Lav	wcl_extra_switch	12VIG2	Cadec	A2A.11	TransmissionAlisson
0P	120VACoutlets	12VIG3	Cadec	A3.1	TransmissionAlisson
0PA	GNDstud	12VIG4	Cadec	A3.2	TransmissionAlisson
0PR	120VACoutlets	12VIG5	Cadec	A3.3	TransmissionAlisson
0R	GNDChassis	24VA	Batteries	A3.5	TransmissionAlisson
00R	Networks	24VD	Batteries	A3.6	TransmissionAlisson
00R1	RJBelectronicGND	24VD2	Equalizer	A3.7	TransmissionAlisson
00R2	Multiplexpower	24VD3	Ignition&enginestart	A4B.8	TransmissionAlisson
00R3	Multiplexpower	24VI	24WUP	A5.B	TransmissionAlisson
00R4	Multiplexpower	73	wcl_extra_switch	A9CX1.2	Cluster
00R5	RJBelectronicGND	74A	wcl_extra_switch	A9CX1.4	ESP
00R7	Trailerinteface	74B	ReadingLampsLH	A9CX1.5	ESP
0RAD	GNDChassis	75	wcl_extra_switch	A9CX1.6	Cluster
0RAD2	Fansdriveelectric	400	Telematics_Gateway_Interface	A9CX2.1	ESP
0RFG	GND_refrigerator_option	401	Telematics_Gateway_Interface	A9CX2.2	ESP

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A9CX2.3	ESP	A34.D5	Fansdriveelectric	A42J1.1	Kneeling
A9CX2.4	ESP	A34.E5	Fansdriveelectric	A42J1.3	Kneeling
A9CX2.6	ESP	A34.F5	Fansdriveelectric	A42J1.4	Kneeling
A9CX2.7	ESP	A34.G5	Fansdriveelectric	A42J1.7	Kneeling
A9CX2.9	ESP	A34.H5	Fansdriveelectric	A42J1.10	Kneeling
A9CX2.10	ESP	A34J.E	Fansdriveelectric	A42J1.13	Kneeling
A9CX2.12	ESP	A34J.F	Fansdriveelectric	A42J1.16	Brake_Interlock
A9CX2.13	ESP	A34R.A3	Fansdriveelectric	A42J1.19	Brake_Interlock
A9CX2.16	ESP	A34R.B3	Fansdriveelectric	A42J2.15	Kneeling
A9CX2.17	ESP	A34R.C3	Fansdriveelectric	A42RJ2.14	Kneeling
A9CX3.2	ESP	A34R.D3	Fansdriveelectric	A42RJ2.18	Kneeling
A9CX3.3	ESP	A34R.E3	Fansdriveelectric	A43J1.1	Lugg_door_lock
A9CX3.5	ESP	A34R.F3	Fansdriveelectric	A43J1.3	Lugg_door_lock
A9CX3.7	ESP	A34R.G3	Fansdriveelectric	A43J1.7	TPMS
A9CX3.9	ESP	A34R.H3	Fansdriveelectric	A43J2.1	Lugg_door_lock
A9CX3.10	ESP	A36JA.11	Horn	A43J2.4	Lugg_door_lock
A9CX4.1	ESP	A36JA.15	Ignition&enginestart	A43J2.7	EngineECUVolvo
A9CX4.4	ESP	A36JA.17	Ignition&enginestart	A43J2.10	EngineECUVolvo
A9CX4.7	ESP	A36JA.25	Brake	A43RJ1.17	ACB
A9CX4.8	ESP	A36JB.2	Ignition	A44J1.1	Upperdefrost
A9CX4.10	ESP	A36JB.14	Firesuppression	A44J1.3	Upperdefrost
A9CX4.11	ESP	A39P101.1	Speakers	A44J1.4	Entrancedoor
A10X3.4	Preheat	A39P101.2	Speakers	A44J1.7	Wipers&washer
A10X3.6	preheat	A39P101.3	Speakers	A44J1.10	Wipers&washer
A11A.2	Preheat	A39P101.4	Speakers	A44J1.13	Upperdefrost
A14.A12	Cluster	A39P101.5	Speakers	A44J1.16	Horn
A14.B1	Cluster	A39P101.6	Speakers	A44J1.19	Engine&RJBcmpt.lights
A14.B18	Cluster	A39P101.8	Speakers	A44J2.1	Sunvisor
A14.B20	Cluster	A39P101.9	Speakers	A44J2.4	Sunvisor
A14.B21	Cluster	A39P901.1	Speakers	A44J2.7	Driverlights
A14C-3	Wip.WasherLevel	A39P901.4	Speakers	A44J2.10	Sunvisor
A16.5	Destinationsigns	A39P901.5	Speakers	A44J2.13	Sunvisor
A16.6	Destinationsigns	A39P901.6	Speakers	A44RJ1.17	Frfashers
A17.24V	Preheat	A41J1.1	Preheat	A44RJ1.18	Upperdefrost
A17.AC	Preheat	A41J1.7	Shutdown	A44RJ2.2	Entrancedoor
A20.3	Digitalclock	A41J1.10	Gateway_A32	A44RJ2.3	Wipers&washer
A27.30	ZFsteering	A41J1.13	Kneeling	A45J1.1	HVACdefroster
A27.87A	ZFsteering	A41J1.16	EngineECUVolvo	A45J1.3	HVACdefroster
A32J2.1	Digitalclock	A41J1.19	EngineECUVolvo	A45J1.4	ZFsteering
A32J2.10	Digitalclock	A41J2.11	Cadec	A45J1.7	12V_Ignition
A34.A5	Fansdriveelectric	A41J2.12	Cadec	A45J1.16	Mirrors
A34.B5	Fansdriveelectric	A41J2.13	Cadec	A45J2.1	HVACdefroster
A34.C5	Fansdriveelectric	A41RJ2.18	Kneeling	A45J2.4	HVACdefroster

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A45J2.7	Driverwindow	A49J2.13	Brake	A52RJ2.3	Ignition&enginestart
A45J2.13	Driverwindow	A49J2.15	Weightmonitoring	A53J1.1	ParcelrackA/Csystem
A45RJ1.17	Cornering&foglights	A49RJ1.6	Weightmonitoring	A53J1.3	ParcelrackA/Csystem
A46J1.1	Horn	A49RJ1.17	Kneeling	A53J1.4	Lavatory
A46J1.4	Frflashers	A49RJ1.18	Cadec	A53J1.13	Lavatory
A46J1.7	Cornering&foglights	A49RJ2.2	Fansdriveelectric	A53J2.1	Indirectlights
A46J1.10	Frflashers	A49RJ2.3	Starting_Aid	A53J2.4	Readinglamps&chime
A46J1.13	Frflashers	A50J1.4	Airdryer	A53J2.7	Lavatory
A46J1.17	Frflashers	A50J1.7	Back-upwarnings	A53J2.10	Readinglamps&chime
A46J2.4	Frflashers	A50J1.13	Rrflashers	A53J2.13	Emergency&aislelights
A46J2.7	Frflashers	A50J1.19	Rrflashers	A53RJ1.17	Lavatory
A46RJ1.17	Frflashers	A50J2.1	Rrflashers	A53RJ1.18	Emergency&aislelights
A46RJ1.18	Frflashers	A50J2.7	Rrflashers	A53RJ2.2	ParcelrackA/Csystem
A47J1.1	HVACdefroster	A50J2.10	Back-upwarnings	A53RJ2.3	Readinglamps&chime
A47J1.3	HVACdefroster	A50RJ1.17	Rrflashers	A54J1.1	HVACpassengers
A47J1.4	HVACdefroster	A50RJ1.18	Rrflashers	A54J1.3	HVACpassengers
A47J1.7	Wipers&washer	A50RJ2.2	Back-upwarnings	A54J1.4	Preheat
A47J1.10	Entrancedoor	A50RJ2.3	Airdryer	A54J1.7	HVACpassengers
A47J1.13	Entrancedoor	A51J1.4	Rrflashers	A54J1.10	Preheat
A47J1.16	Entrancedoor	A51J1.7	Rrstoplights	A54J1.16	HVACpassengers
A47J1.19	Entrancedoor	A51J1.10	Rrflashers	A54J1.19	HVACpassengers
A47J2.1	HVACdefroster	A51J1.13	Rrflashers	A54J2.1	ParcelrackA/Csystem
A47J2.7	Entrancedoor	A51J1.16	TransmissionAlisson	A54J2.4	HVACpassengers
A47RJ1.6	HVACdefroster	A51J1.19	WCL	A54J2.7	HVACpassengers
A47RJ1.17	HVACdefroster	A51J2.1	Rrflashers	A54J2.10	HVACpassengers
A47RJ1.18	Entrancedoor	A51J2.4	TransmissionAlisson	A54J2.13	HVACpassengers
A47RJ2.2	Entrancedoor	A51J2.7	Rrflashers	A54J2.15	HVACpassengers
A48J1.1	Cornering&foglights	A51J2.10	Rrflashers	A54RJ1.6	HVACpassengers
A48J1.4	Cornering&foglights	A51J2.15	Starting_Aid	A54RJ1.17	HVACpassengers
A48J1.7	Frflashers	A51RJ1.17	Rrflashers	A54RJ1.18	ParcelrackA/Csystem
A48J1.10	Frflashers	A51RJ1.18	WCL	A54RJ2.2	HVACpassengers
A48J2.1	Frflashers	A51RJ2.14	Starting_Aid	A54RJ2.3	HVACpassengers
A48J2.4	Frflashers	A52J1.1	Fansdriveelectric	A55J1.1	Driverlights
A48J2.13	Frflashers	A52J1.3	Fansdriveelectric	A55J1.3	Weightmonitoring
A48RJ1.17	Cornering&foglights	A52J1.4	Lavatory	A55J1.4	Cluster
A48RJ1.18	Frflashers	A52J1.7	Engine&RJBcmpt.lights	A55J1.7	Back-upcamera
A48RJ2.2	Frflashers	A52J1.10	Ignition&enginestart	A55J1.10	Entrancedoor
A49J1.1	Fansdriveelectric	A52J1.13	RJBFan	A55J2.15	Steering
A49J1.3	Fansdriveelectric	A52J2.1	Alternators	A55RJ1.18	Weightmonitoring
A49J1.4	Kneeling	A52J2.4	Alternators	A56J1.3	Cluster
A49J1.7	Cadec	A52J2.13	Ignition&enginestart	A56J1.4	Cluster
A49J1.16	Starting_Aid	A52RJ1.17	GNDMUXmodules	A56J1.7	Cluster
A49J2.1	Alternators	A52RJ1.18	Engine&RJBcmpt.lights	A56J1.10	Cluster

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
A56J1.13	Multiplexpower	A103.1	Steering	A131B.C	Firesuppression
A56J1.19	VSS	A103.3	Steering	A137A.4	Ureasyystem
A56J2.15	Lugg_door_lock	A103.5	Horn	A137A.7	Ureasyystem
A56RJ1.18	Windowsajar	A108.5	TransmissionI_Shift	A137A.8	Ureasyystem
A57J1.1	WCL	A108.7	TransmissionI_Shift	A137A.24	Ureasyystem
A57J1.3	WCL	A108.8	TransmissionI_Shift	A137A.28	Ureasyystem
A57J1.4	WCL	A108.9	TransmissionI_Shift	A137A.40	Ureasyystem
A57J1.10	WCL	A108.10	TransmissionI_Shift	A137A.44	Ureasyystem
A57RJ1.18	GNDMUXmodules	A109A.7	TransmissionI_Shift	A137A.49	Ureasyystem
A60.Gnd	VSS	A109A.8	TransmissionI_Shift	A137A.50	Ureasyystem
A60.L	VSS	A109A.9	TransmissionI_Shift	A137A.51	Ureasyystem
A60.R	VSS	A109A.10	TransmissionI_Shift	A137A.54	Ureasyystem
A77.A	Equalizer	A113.Gnd	VSS	A137A.56	Ureasyystem
A77.H	Equalizer	A113.L	VSS	A137A.59	Ureasyystem
A78.3	Equalizer	A113.R	VSS	A137A.62	Ureasyystem
A78.4	Equalizer	A113D.1	VSS	A138.3	Ureasyystem
A79.3	Equalizer	A113D.2	VSS	A138.12	Ureasyystem
A80.3	Equalizer	A113D.5	VSS	A150.4	Starting_Aid
A80.4	Equalizer	A120A.5	VSS	A150.GND	VSS
A81JB.4	EngineECUVolvo	A120B.1	VSS	A150.L	VSS
A81JB.6	ZFsteering	A120B.2	VSS	A150.R	VSS
A81JB.10	EngineECUVolvo	A120B.3	VSS	A151B.1	USB
A81JB.15	Ignition&enginestart	A120B.4	VSS	A151B.2	USB_Gnd
A81JB.16	EngineECUVolvo	A120B.5	VSS	A153A.5	VSS
A81JB.17	EngineECUVolvo	A120B.6	VSS	A160.12	12WUP
A81JB.19	EngineECUVolvo	A120B.7	VSS	Alt_LL.2	Alternators
A81JB.22	EngineECUVolvo	A120B.8	VSS	Alt_LR.2	Alternators
A81JB.23	EngineECUVolvo	A120C.4	VSS	Alt_UR.2	Alternators
A81JB.25	EngineECUVolvo	A121A.18	VSS	AltLL	Alternators
A81JB.26	EngineECUVolvo	A121B.16	VSS	AltLR	Alternators
A85.A	12WUP	A121B.17	VSS	AltUR	Alternators
A85.B	GND_Aux_Batteries	A121C.7	VSS	Aux24V	Starting_Aid
A86.3	Starting_Aid	A121C.11	VSS	AuxVideoGnd	VSS
A96.8.Black	TPMS	A121C.12	VSS	AuxVideoL	VSS
A96.23.Red	TPMS	A121C.13	VSS	AuxVideoR	VSS
A96.24.Black	TPMS	A121C.15	VSS	B85.2	Ureasyystem
A96.25.Red	TPMS	A130.3	Firesuppression	B97.2	Ureasyystem
A96.27.Black	TPMS	A130.4	Firesuppression	B98.2	Ureasyystem
A96.28.Red	TPMS	A130.6	Firesuppression	B115A.3	Ureasyystem
A100.3.White	TPMS	A130.8	Firesuppression	BatAux24V	24WUP
A101.3.White	TPMS	A130.11	Firesuppression	BATT	Spec_Option
A101.7.White	TPMS	A131A.C	Firesuppression	BLACK	120VACoutlets
A102.3.White	TPMS	A131B.A	Firesuppression	Black	Preheat

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
BLK1	VSS	DL0H	Spareswires	F34	Multiplexpower
BLK2	VSS	DL0HS	Spareswires	F35	Multiplexpower
Blue	Audio	DL0L	Spareswires	F36	Startswitch
BussBar	12VtoCB10	DL0LS	Spareswires	F37	Entrancedoor
C41.A	Preheat	DL1H	Networks	F39	24VDcustomer
CAN1-HI	Cadec	DL1L	Networks	F40	Firesuppression
CAN1-LO	Cadec	DL2H	Networks	F41	24VD_Vansco_Gateway
CanH2	Spareswires	DL2L	Networks	F42	TransmissionI_Shift
CanL2	Spareswires	DL3H	Networks	F43	TransmissionI_Shift
CB1	24WUP	DL3L	Networks	F44	Multiplexpower
CB2	Ignition&enginestart	DL7H	NetworksECU	F45	Multiplexpower
CB3	HVACpassengers	DL7L	NetworksECU	F46	Multiplexpower
CB5	24WUP	DL9H	NetworksECU	F47	Multiplexpower
CB6	24VD	DL9L	NetworksECU	F50	HVACdefroster
CB8	12WUP	DL10H	J1939_Gateway	F51	Destinationsigns
CB9	Preheat	DL10L	J1939_Gateway	F53	VSS
CB10	12WUP	Drain	Audio	F55	Back-upcamera
CB11	VSS	DVD_Gnd	VSS	F73	EngineECUVolvo
CB13	120VACoutlets	DVD_L+	VSS	F90	Ureasystem
CB48	Frfashers	DVD_R+	VSS	F91	EngineECUVolvo
CB128	24VD	EI.7	Cluster	F96	Ureasystem
CB201	Fansdriveelectric	EI.18	EngineECUVolvo	F99	EngineECUVolvo
CB202	Fansdriveelectric	EMS.EB29	Ignition&enginestart	F100	EngineECUVolvo
CB203	Fansdriveelectric	F4	TransmissionI_Shift	F101	R1toStarter
CB204	Fansdriveelectric	F10	Cluster	F103	24WUP
CB205	Fansdriveelectric	F11	Horn	F106	Multiplexpower
CB206	Fansdriveelectric	F13	12VDCustomer	F107	Multiplexpower
CB207	Fansdriveelectric	F15	TWG_Pwr	F108	Networks
CB208	Fansdriveelectric	F16	12VEng.run	F109	Engine&RJBcmpt.lights
Cd1	Networks	F17	Multiplexpower	F110	TransmissionAlisson
CTS	Networks	F18	Multiplexpower	F112	Trailerinterface
Cts	Networks	F19	Multiplexpower	F116	24WUP
D1	Starting_Aid	F20	Multiplexpower	F117	SparesVECR
D7	Entrancedoor	F21	Multiplexpower	F121	CCust
D9	Preheat	F22	Cadec	F122	SparesVECR
D12	Horn	F23	ESP	F123	Preheat
D13	Horn	F24	12VIgn	F124	Preheat
D45	Starting_Aid	F25	12Voutlets	F126	HVACpassengers
D45.B	Starting_Aid	F26	Entrancedoor	F127	Preheat
D46	Ignition&enginestart	F27	SparesVECF	F131	CCust
D55	Readinglamps&chime	F29	ECUignition	F132	Multiplexpower
D64.A	HVACpassengers	F30	Networks	F133	Multiplexpower
D64.B	HVACpassengers	F33	Multiplexpower	F134	Multiplexpower

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
F135	Multiplexpower	L207.GND	WCL	N26	Networks
F136	Multiplexpower	L350A.B2	EngineECUVolvo	N27	Networks
F137	Equalizer	L400.G	Engineheateroutlet	N28	Networks
F138	Readinglamps&chime	L400.L	Engineheateroutlet	N29	Networks
F139	Alternators	L400.N	Engineheateroutlet	N30	Networks
F141	HVACpassengers	LF+	VSS	N31	Networks
F142	HVACpassengers	LF-	VSS	N56-1	Networks
F143	HVACpassengers	LightGreen	USB	N56-2	Networks
F144	HVACpassengers	LR+	VSS	N57_1	Networks
F145	PWR_refrigerator_option	LR-	VSS	N57_2	Networks
F147	CCust	Mo65.3	Fansdriveelectric	Pink	VSS
F148	12VD	Mo67.3	Fansdriveelectric	Pot1	Driverlights
F152	SparesVECR	Mo68.3	Fansdriveelectric	R+	VSS
F156	UNICAN_power_option	Mo69.3	Fansdriveelectric	R+TV	VSS
F199	Fansdriveelectric	Mo70.3	Fansdriveelectric	R-	VSS
F200	VSS	Mo71.3	Fansdriveelectric	R4.85	Firesuppression
F201	VSS	Mo72.3	Fansdriveelectric	R4.87A	Preheat
F202	VSS	Mo73.3	Fansdriveelectric	R5.87	Preheat
F203	VSS	N1	Networks	R12	HVACpassengers
F243	HVACpassengers	N2	Networks	R12.2	HVACpassengers
GND-1	Spec_Option	N3	Networks	R12VISS	VSS
GND-2	Spec_Option	N4	Networks	R20.87	Preheat
gnd_1	Cantrack	N5	Networks	R21.87	Ignition&enginestart
Gnd_2	Cantrack	N6	Networks	R22.87	ECUignition
GndA	Networks	N7	Networks	R23.30	I_Shift
GndG	Cadec	N8	Networks	R25.87	24Vignition
GndG1	Cadec	N9	Networks	R26.30	HVACpassengers
GREEN	120VACoutlets	N10	Networks	R27.87A	Wipers&washer
Green	Preheat	N11	Networks	R29	EngineECUVolvo
Green/White	USB	N12	Networks	R30.87	12VEnguncustomer
GRN1	VSS	N13	Networks	R31.87	12Vlgncustomer
GRN2	VSS	N14	Networks	R34.30	12VECU
IGN	Spec_Option	N15	Networks	R36.87	Horn
IN1	UNICAN	N16	Networks	R37.30	Horn
IN2	UNICAN	N17	Networks	R38.87	12Voutlets
IN3	UNICAN	N18	Networks	R40.87	TransmissionI_Shift
L+	VSS	N19	Networks	R47.87	WCL
L+TV	VSS	N20	Networks	R140	Lavatory
L-	VSS	N21	Networks	R_Starter	Ignition&enginestart
L142.3	Lavatory	N22	Networks	Radio_Gnd	VSS
L207.1	WCL	N23	Networks	Radio_R+	VSS
L207.2	WCL	N24	Networks	Radoi_L+	VSS
L207.3	WCL	N25	Networks	RED1	VSS

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
RED2	VSS	Se40.1	ESP	spare22	Spareswires
RF+	VSS	Se40.2	ESP	spare23	Spareswires
RF-	VSS	Se45.2	Wipers&washer	spare24	Spareswires
RR+	VSS	Se46.B	Trailerparkbrake	spare25	Spareswires
RR-	VSS	Se53.C	Cluster	spare28	Spareswires
RTS	Networks	Se54.C	Cluster	spare29	Spareswires
Rts	Networks	Se55.C	Cluster	spare30	Spareswires
RX	TPMS	Se56.A	WCL	spare31	Spareswires
Rx	Cantrack	Se62.B	WCL	spare32	Spareswires
RxD	Networks	Se63.1	ESP	spare33	Spareswires
RxTx	Networks	Se63.2	ESP	spare34	Spareswires
Se4.1	Windowsajar	Se64.1	ESP	spare35	Spareswires
Se11.Sig	Cluster	Se64.2	ESP	spare39	Spareswires
Se11.Wrn	Cluster	Se67.C	ESP	spare40	Spareswires
Se13.B	EngineECUVolvo	Se69.C	ESP	spare41	Spareswires
Se14A.B	EngineECUVolvo	Se74.3	TransmissionAlisson	spare42	Spareswires
Se14B.C	EngineECUVolvo	Se75.C	Weightmonitoring	spare43	Spareswires
Se15.1	Entrancedoor	Se76.4	Entrancedoor	spare44	Spareswires
Se17.1	Entrancedoor	Se77.C	Entrancedoor	spare64	Spareswires
Se17.1/Se76.4	Entrancedoor	Se78.C	Entrancedoor	spare65	Spareswires
Se18.B	Brake	Se79.1	KneelingLevel	spare72	Spareswires
Se19_P.D	Brake	Se79.4	Kneeling	spare73	Spareswires
Se19_S.D	Brake	Se80.C	Weightmonitoring	spare210	Cadec
Se20.B	Cluster	Se100.4	WCL	spare212	Cadec
Se21.2	HVACdefroster	Shield_149	GNDstud	spare214	Cadec
Se23.C	HVACpassengers	Shield_149A	GNDstud	Spk1_L	Speakers
Se24.2	HVACpassengers	Shield_A16.7	Destinationsigns	Spk1_R	Speakers
Se24.3	HVACpassengers	SHL2	VSS	Spk2_L	Speakers
Se25.2	HVACpassengers	So9.B	HVACpassengers	Spk2_R	Speakers
Se30.A	Engine&RJBcmpt.lights	SpareWire	Spec_Option	Spk3_L	Speakers
Se32.A	TransmissionAlisson	spare1	Cadec	Spk3_R	Speakers
Se32.B	TransmissionAlisson	spare10	Spareswires	Spk4_L	Speakers
Se33.A	TransmissionAlisson	spare11	Spareswires	Spk4_R	Speakers
Se34.A	TransmissionAlisson	spare12	Spareswires	Spk5_L	Speakers
Se34.B	TransmissionAlisson	spare13	Spareswires	Spk5_R	Speakers
Se35.A	TransmissionAlisson	spare14	Spareswires	Spk6_L	Speakers
Se35.B	TransmissionAlisson	spare15	Spareswires	Spk6_R	Speakers
Se37.1	ESP	spare16	Spareswires	Spk9_L	Speakers
Se37.2	ESP	spare17	Spareswires	Spk9_R	Speakers
Se38.1	ESP	spare18	Spareswires	Spk10_L	Speakers
Se38.2	ESP	spare19	Spareswires	Spk10_R	Speakers
Se39.1	ESP	spare20	Spareswires	Spk11_L	Speakers
Se39.2	ESP	spare21	Spareswires	Spk11_R	Speakers

# CIRCUITS LIST

CircuitID	Description	CircuitID	Description	CircuitID	Description
Spk12_L	Speakers	Sw27.3	ParcelrackA/Csystem	Sw82.8	Starting_Aid
Spk12_R	Speakers	Sw27.8	ParcelrackA/Csystem	Sw82A.8	Starting_Aid
Spk13_L	Speakers	Sw29.2	Readinglamps&chime	Sw83.Acc	Ignition&enginestart
Spk13_R	Speakers	Sw29.3	Readinglamps&chime	Sw83.Ign	Ignition&enginestart
Spk14_L	Speakers	Sw29.8	Readinglamps&chime	Sw83.St	Ignition&enginestart
Spk14_R	Speakers	Sw31.A	WCL	Sw83A.4	Starting_Aid
STO-LOC	WCL	Sw32.3	Entrancedoor	Sw83A.6	Starting_Aid
Sw1.5	Frflashers	Sw33.3	Entrancedoor	Sw85.A1	Mirrors
Sw1C258.2	Wipers&washer	Sw34.1	Entrancedoor	Sw85.A3	Mirrors
Sw1C258.3	Wipers&washer	Sw34.4	Entrancedoor	Sw85.B1	Mirrors
Sw1C258.4	Wipers&washer	Sw35.3	EngineECUVolvo	Sw85.B2	Mirrors
Sw1C258.6	Wipers&washer	Sw35.8	EngineECUVolvo	Sw85.B4	Mirrors
Sw1C258.7	Wipers&washer	Sw38.2B	Driverwindow	Sw94	WCL
Sw1C258.8	Frflashers	Sw40.B	Trailerparkbrake	Sw96.N3	Readinglamps&chime
Sw1C259.1	Frflashers	Sw41.A1	Mirrors	Sw97.N1	Readinglamps&chime
Sw1C259.2	Frflashers	Sw41.A3	Mirrors	Sw100A.3	Cornering&foglights
Sw1C259.4	Frflashers	Sw41.B1	Mirrors	Sw109	Lugg_door_sw
Sw2.3	Frflashers	Sw41.B2	Mirrors	Sw110	Lugg_door_sw
Sw2.6	Frflashers	Sw41.B4	Mirrors	Sw111	Lugg_door_sw
Sw3.3	Cornering&foglights	Sw42.2	WCL	Sw112	Lugg_door_sw
Sw3.8	Cornering&foglights	Sw42.3	WCL	Sw113	Lugg_door_sw
Sw4.3	Frflashers	Sw42.4	WCL	Sw114	Lugg_door_sw
Sw4.8	Frflashers	Sw42.5	WCL	Sw115	Lugg_door_sw
Sw6.4	Wipers&washer	Sw42.6	WCL	Sw124.3	Destinationsigns
Sw10A.2B	Kneeling	Sw42.7	WCL	Sw125.B	Kneeling
Sw12.3	Destinationsigns	Sw43.B	Kneeling	Sw135.N3	Readinglamps&chime
Sw12.8	Destinationsigns	Sw44	Engine&RJBcmpt.lights	Sw140.B	Entrancedoor
Sw14.3	EngineECUVolvo	Sw46A	Engine&RJBcmpt.lights	Sw142.5	Entrancedoor
Sw14.8	EngineECUVolvo	Sw55.1	Lavatory	Sw149.2B	Readinglamps&chime
Sw16.3	Brake	Sw56.1	Lavatory	Sw149.3	Readinglamps&chime
Sw16.8	Brake	Sw57.A	WCL	Sw150.1	Cadec
Sw17.6	EngineECUVolvo	Sw58.2	Ignition&enginestart	Sw150.2	Cadec
Sw18A.2B	Lugg_door_lock	Sw58.3	Ignition&enginestart	Sw152.B	Firesuppression
Sw20.3	WCL	Sw58.5	Ignition&enginestart	Sw156.1	Mirrors
Sw20.8	WCL	Sw58.7	Ignition&enginestart	Sw156.6	Mirrors
Sw21.3	Upperdefrost	Sw59.3	Ignition&enginestart	Sw156.8	Mirrors
Sw21.8	Upperdefrost	Sw63A.3	Horn	Sw157.2B	Sunvisor
Sw24.3	Driverlights	Sw63A.4	Horn	Sw158.2B	Sunvisor
Sw24.6	Driverlights	Sw64	Kneeling	Sw313.N3	Readinglamps&chime
Sw25.3	Readinglamps&chime	Sw80.6	Starting_Aid	TR-Black	Trailerinteface
Sw25.6	Readinglamps&chime	Sw80A.6	Starting_Aid	TR-Blue	Trailerinteface
Sw26.3	Readinglamps&chime	Sw82.4	Masterrelay&12VIgn	TR-Brown	Trailerinteface
Sw26.8	Readinglamps&chime	Sw82.5	Masterrelay&12VIgn	TR-Green	Trailerinteface



# CIRCUITS LIST

CircuitID	Description				
TR-Red	Trailerinteface				
TR-Yellow	Trailerinteface				
Tv.Gnd	VSS				
TV.L	VSS				
TV.R	VSS				
TvGnd	VSS				
TWU.3	WCL				
TX	TPMS				
Tx	Cantrack				
TxD	Networks				
ve+	Cantrack				
WHITE	120VACoutlets				
White	Preheat				
WHT1	VSS				
WHT2	VSS				